

A
B
C

TM

SECTION

TRANSAXLE & TRANSMISSION

TM

CONTENTS

5MT: RS5F91R		E
PRECAUTION	11	
PRECAUTIONS	11	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	11	
General Precautions	11	
Precaution for Work	11	
PREPARATION	13	
PREPARATION	13	
Special Service Tools	13	
Commercial Service Tools	15	
SYSTEM DESCRIPTION	16	
STRUCTURE AND OPERATION	16	
Sectional View	16	
System Description	16	
DTC/CIRCUIT DIAGNOSIS	18	
POSITION SWITCH	18	
BACK-UP LAMP SWITCH	18	
BACK-UP LAMP SWITCH : Component Inspection	18	
PARK/NEUTRAL POSITION (PNP) SWITCH	18	
PARK/NEUTRAL POSITION (PNP) SWITCH : Component Inspection	18	
SYMPTOM DIAGNOSIS	19	
NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING	19	
NVH Troubleshooting Chart	19	
PERIODIC MAINTENANCE	20	
GEAR OIL	20	F
Inspection	20	
Draining	20	
Refilling	20	G
REMOVAL AND INSTALLATION	21	
SIDE OIL SEAL	21	H
Removal and Installation	21	
Inspection	21	
POSITION SWITCH	22	I
Removal and Installation	22	
Inspection	22	J
CONTROL LINKAGE	23	
Exploded View	23	
Removal and Installation	23	K
Inspection	24	
AIR BREATHER HOSE	25	L
Exploded View	25	
Removal and Installation	25	
5TH MAIN GEAR ASSEMBLY	26	M
Removal and Installation	26	
Inspection	26	
UNIT REMOVAL AND INSTALLATION	27	N
TRANSAXLE ASSEMBLY	27	
Exploded View	27	O
Removal and Installation	27	
Inspection	29	
UNIT DISASSEMBLY AND ASSEMBLY ...	30	P
TRANSAXLE ASSEMBLY	30	
Exploded View	30	
Disassembly	34	
Assembly	40	
Inspection	48	

INPUT SHAFT AND GEAR	49	A/T CONTROL SYSTEM : A/T Fluid Temperature Sensor	67
Exploded View	49	A/T CONTROL SYSTEM : Low Clutch Solenoid Valve	68
Disassembly	49	A/T CONTROL SYSTEM : 2-4 Brake Solenoid Valve	68
Assembly	49	A/T CONTROL SYSTEM : Select Switch On-Off Solenoid Valve	68
Inspection	49	A/T CONTROL SYSTEM : High Clutch/Low & Reverse Brake Solenoid Valve	69
MAINSHAFT AND GEAR	51	A/T CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve	69
Exploded View	51	A/T CONTROL SYSTEM : Line Pressure Solenoid Valve	69
Disassembly	51	A/T CONTROL SYSTEM : Accelerator Pedal Position Sensor	69
Assembly	53	A/T CONTROL SYSTEM : Overdrive Control Switch	69
Inspection	54	A/T CONTROL SYSTEM : O/D OFF Indicator Lamp	69
FINAL DRIVE	56	A/T SHIFT LOCK SYSTEM	70
Exploded View	56	A/T SHIFT LOCK SYSTEM : Component Parts Location	70
Disassembly	56	A/T SHIFT LOCK SYSTEM : Component Description	70
Assembly	56	STRUCTURE AND OPERATION	71
Inspection	56	TRANSAXLE	71
SERVICE DATA AND SPECIFICATIONS (SDS)	58	TRANSAXLE : Cross-Sectional View	71
SERVICE DATA AND SPECIFICATIONS (SDS)	58	TRANSAXLE : System Diagram	72
General Specifications	58	TRANSAXLE : System Description	72
4AT: RE4F03C		TRANSAXLE : Component Description	78
PRECAUTION	59	SHIFT LOCK SYSTEM	79
PRECAUTIONS	59	SHIFT LOCK SYSTEM : System Description	79
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	59	KEY LOCK SYSTEM	79
Precaution for Work	59	KEY LOCK SYSTEM : System Description	79
General Precautions	60	SYSTEM	80
On Board Diagnosis (OBD) System of A/T and Engine	60	A/T CONTROL SYSTEM	80
Removal and Installation Procedure for A/T Assembly Connector	61	A/T CONTROL SYSTEM : System Diagram	80
Service Notice or Precaution	62	A/T CONTROL SYSTEM : System Description	80
PREPARATION	63	A/T CONTROL SYSTEM : Fail-Safe	81
PREPARATION	63	A/T CONTROL SYSTEM : Protection Control	83
Special Service Tools	63	LINE PRESSURE CONTROL	84
Commercial Service Tools	63	LINE PRESSURE CONTROL : System Diagram ...	84
SYSTEM DESCRIPTION	65	LINE PRESSURE CONTROL : System Description	84
COMPONENT PARTS	65	SHIFT CHANGE CONTROL	86
A/T CONTROL SYSTEM	65	SHIFT CHANGE CONTROL : System Diagram ...	86
A/T CONTROL SYSTEM : Component Parts Location	65	SHIFT CHANGE CONTROL : System Description	86
A/T CONTROL SYSTEM : Component Description	65	SHIFT PATTERN CONTROL	87
A/T CONTROL SYSTEM : TCM	66	SHIFT PATTERN CONTROL : System Diagram ...	87
A/T CONTROL SYSTEM : Transmission Range Switch	66		
A/T CONTROL SYSTEM : Input Speed Sensor ...	66		
A/T CONTROL SYSTEM : Output Speed Sensor...	67		

SHIFT PATTERN CONTROL : System Description	87	LINE PRESSURE TEST	130	A
Work Procedure		Work Procedure	130	
LOCK-UP CONTROL	87	DTC/CIRCUIT DIAGNOSIS	132	B
LOCK-UP CONTROL : System Diagram	88	U0073 COMMUNICATION BUS A OFF	132	
LOCK-UP CONTROL : System Description	88	DTC Logic	132	
ON BOARD DIAGNOSTIC (OBD) SYSTEM	90	Diagnosis Procedure	132	C
Description	90	U0100 LOST COMMUNICATION (ECM A)	133	
OBD FUNCTION	90	DTC Logic	133	
DIAGNOSIS SYSTEM (TCM)	91	Diagnosis Procedure	133	TM
DIAGNOSIS DESCRIPTION	91	U0140 LOST COMMUNICATION (BCM)	134	
DIAGNOSIS DESCRIPTION : 1 Trip Detection Diagnosis and 2 Trip Detection Diagnosis	91	DTC Logic	134	E
DIAGNOSIS DESCRIPTION : DTC and DTC of 1st Trip	91	Diagnosis Procedure	134	
DIAGNOSIS DESCRIPTION : Malfunction Indicator Lamp (MIL)	91	U0155 LOST COMMUNICATION (IPC)	135	F
DIAGNOSIS DESCRIPTION : Counter System	91	DTC Logic	135	
CONSULT Function	93	Diagnosis Procedure	135	
ECU DIAGNOSIS INFORMATION	99	U0300 CAN COMMUNICATION DATA	136	G
TCM	99	Description	136	
Reference Value	99	DTC Logic	136	
Fail-Safe	105	Diagnosis Procedure	136	H
Protection Control	107	U1000 CAN COMM CIRCUIT	137	
DTC Inspection Priority Chart	108	Description	137	I
DTC Index	109	DTC Logic	137	
WIRING DIAGRAM	111	Diagnosis Procedure	137	J
A/T CONTROL SYSTEM	111	U1117 LOST COMMUNICATION (ABS)	138	
Wiring Diagram	111	DTC Logic	138	
A/T SHIFT LOCK SYSTEM	118	Diagnosis Procedure	138	K
Wiring Diagram	118	P062F EEPROM	139	
BASIC INSPECTION	120	Description	139	
DIAGNOSIS AND REPAIR WORK FLOW	120	DTC Logic	139	
Work Flow	120	Diagnosis Procedure	139	L
Diagnostic Work Sheet	121	P0705 TRANSMISSION RANGE SWITCH A .	140	
ADDITIONAL SERVICE WHEN REPLACING TCM	123	DTC Logic	140	
Description	123	Diagnosis Procedure	140	M
Work Procedure	123	Component Inspection (Transmission Range Switch)	145	
ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY	124	P0706 TRANSMISSION RANGE SENSOR A .	146	N
Description	124	DTC Logic	146	
Work Procedure	124	Diagnosis Procedure	146	
A/T FLUID COOLER	126	Component Inspection (Transmission Range Switch)	148	O
Cleaning	126	P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A	149	
STALL TEST	129	DTC Logic	149	
Work Procedure	129	Diagnosis Procedure	151	P
		Component Inspection (A/T Fluid Temperature Sensor)	151	
		P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A	152	
		DTC Logic	152	

Diagnosis Procedure	152	DTC Logic	177
Component Inspection (A/T Fluid Temperature Sensor)	152	Diagnosis Procedure	179
P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A	154	P0740 TORQUE CONVERTER	180
DTC Logic	154	DTC Logic	180
Diagnosis Procedure	154	Diagnosis Procedure	180
Component Inspection (A/T Fluid Temperature Sensor)	155	Component Inspection (Torque Converter Clutch Solenoid Valve)	181
P0717 INPUT SPEED SENSOR A	156	P0743 TORQUE CONVERTER	182
DTC Logic	156	DTC Logic	182
Diagnosis Procedure	156	Diagnosis Procedure	182
P0720 OUTPUT SPEED SENSOR	159	Component Inspection (Torque Converter Clutch Solenoid Valve)	183
DTC Logic	159	P0744 TORQUE CONVERTER	184
Diagnosis Procedure	159	Description	184
P072C STUCK IN 1GR	162	DTC Logic	184
DTC Logic	162	Diagnosis Procedure	184
Diagnosis Procedure	162	Component Inspection (Torque Converter Clutch Solenoid Valve)	185
P072D STUCK IN 2GR	163	P074A UNABLE TO ENGAGE 2GR	186
DTC Logic	163	Description	186
Diagnosis Procedure	163	DTC Logic	186
P072E STUCK IN 3GR	164	Diagnosis Procedure	187
DTC Logic	164	P074B UNABLE TO ENGAGE 3GR	188
Diagnosis Procedure	164	Description	188
P072F STUCK IN 4GR	165	DTC Logic	188
DTC Logic	165	Diagnosis Procedure	189
Diagnosis Procedure	165	P074C UNABLE TO ENGAGE 4GR	190
P0731 1GR INCORRECT RATIO	166	Description	190
Description	166	DTC Logic	190
DTC Logic	166	Diagnosis Procedure	191
Diagnosis Procedure	168	P0863 TCM COMMUNICATION	192
P0732 2GR INCORRECT RATIO	169	Description	192
Description	169	DTC Logic	192
DTC Logic	169	Diagnosis Procedure	192
Diagnosis Procedure	170	P0890 TCM	193
P0733 3GR INCORRECT RATIO	171	DTC Logic	193
Description	171	Diagnosis Procedure	193
DTC Logic	171	P0962 PRESSURE CONTROL SOLENOID A	194
Diagnosis Procedure	172	DTC Logic	194
P0734 4GR INCORRECT RATIO	173	Diagnosis Procedure	194
Description	173	Component Inspection (Line Pressure Solenoid Valve)	195
DTC Logic	173	P0963 PRESSURE CONTROL SOLENOID A	196
Diagnosis Procedure	174	DTC Logic	196
P073E UNABLE TO ENGAGE R RANGE	175	Diagnosis Procedure	196
Description	175	Component Inspection (Line Pressure Solenoid Valve)	197
DTC Logic	175	P0973 SHIFT SOLENOID A	198
Diagnosis Procedure	176	DTC Logic	198
P073F UNABLE TO ENGAGE 1GR	177	Diagnosis Procedure	198
Description	177		

Component Inspection (Select Switch ON-OFF Solenoid Valve)	199	OD OFF INDICATOR LAMP	220	A
P0974 SHIFT SOLENOID A	200	Component Function Check	220	
DTC Logic	200	Diagnosis Procedure	220	B
Diagnosis Procedure	200	SHIFT POSITION INDICATOR CIRCUIT	221	
Component Inspection (Select Switch ON-OFF Solenoid Valve)	201	Component Parts Function Inspection	221	
P0976 SHIFT SOLENOID B	202	Diagnosis Procedure	221	C
DTC Logic	202	SHIFT LOCK SYSTEM	222	
Diagnosis Procedure	202	Component Function Check	222	
Component Inspection (Low Clutch Solenoid Valve)	203	Diagnosis Procedure	222	TM
P0977 SHIFT SOLENOID B	204	SYMPTOM DIAGNOSIS	224	
DTC Logic	204	SYSTEM SYMPTOM	224	
Diagnosis Procedure	204	Symptom Table	224	E
Component Inspection (Low Clutch Solenoid Valve)	205	PERIODIC MAINTENANCE	230	
P0979 SHIFT SOLENOID C	206	A/T FLUID	230	F
DTC Logic	206	Inspection	230	
Diagnosis Procedure	206	Changing	230	
Component Inspection (2-4 Brake Solenoid Valve)	207	Adjustment	231	G
P0980 SHIFT SOLENOID C	208	REMOVAL AND INSTALLATION	233	
DTC Logic	208	A/T SHIFT SELECTOR	233	H
Diagnosis Procedure	208	Exploded View	233	
Component Inspection (2-4 Brake Solenoid Valve)	209	Removal and Installation	233	
P0982 SHIFT SOLENOID D	210	Disassembly and Assembly	234	I
DTC Logic	210	Inspection and Adjustment	235	
Diagnosis Procedure	210	CONTROL CABLE	236	J
Component Inspection (High Clutch Solenoid Valve)	211	Exploded View	236	
P0983 SHIFT SOLENOID D	212	Removal and Installation	236	
DTC Logic	212	Inspection	238	K
Diagnosis Procedure	212	KEY INTERLOCK CABLE	239	
Component Inspection (High Clutch Solenoid Valve)	213	Exploded View	239	
P2760 TORQUE CONVERTER	214	Removal and Installation	239	L
Description	214	Inspection	240	
DTC Logic	214	TCM	241	M
Diagnosis Procedure	214	Exploded View	241	
Component Inspection (Torque Converter Clutch Solenoid Valve)	215	Removal and Installation	241	
MAIN POWER SUPPLY AND GROUND CIRCUIT	216	Adjustment	241	N
Diagnosis Procedure	216	OIL PAN	242	
OVERDRIVE CONTROL SWITCH	218	Exploded View	242	
Component Function Check	218	Removal and Installation	242	
Diagnosis Procedure	218	Inspection and Adjustment	243	O
Component Inspection (Overdrive Control Switch) ..	219	OUTPUT SPEED SENSOR	244	
		Exploded View	244	
		Removal and Installation	244	P
		Inspection and Adjustment	244	
		DIFFERENTIAL SIDE OIL SEAL	245	
		Exploded View	245	
		Removal and Installation	245	
		Inspection and Adjustment	245	

FLUID COOLER TUBE	247	CVT CONTROL SYSTEM : TCM	262
Exploded View	247	CVT CONTROL SYSTEM : ROM Assembly	262
Removal and Installation	247	CVT CONTROL SYSTEM : Transmission Range	
Inspection and Adjustment	248	Switch	263
FLUID COOLER HOSE	249	CVT CONTROL SYSTEM : Primary Speed Sen-	
Exploded View	249	sor	263
Removal and Installation	249	CVT CONTROL SYSTEM : Secondary Speed	
Inspection and Adjustment	249	Sensor	263
UNIT REMOVAL AND INSTALLATION ...	250	CVT CONTROL SYSTEM : Output Speed Sensor	264
TRANSMISSION ASSEMBLY	250	CVT CONTROL SYSTEM : CVT Fluid Tempera-	
Exploded View	250	ture Sensor	264
Removal and Installation	250	CVT CONTROL SYSTEM : Secondary Pressure	
Inspection and Adjustment	252	Sensor	264
SERVICE DATA AND SPECIFICATIONS		CVT CONTROL SYSTEM : Primary Pressure So-	
(SDS)	254	lenoid Valve	265
SERVICE DATA AND SPECIFICATIONS		CVT CONTROL SYSTEM : Low Brake Solenoid	
(SDS)	254	Valve	265
General Specification	254	CVT CONTROL SYSTEM : High Clutch & Re-	
Vehicle Speed at Which Gear Shifting Occurs	254	verse Brake Solenoid Valve	265
Vehicle Speed at Which Lock-up Occurs/Releas-		CVT CONTROL SYSTEM : Torque Converter	
es	254	Clutch Solenoid Valve	265
Stall Speed	254	CVT CONTROL SYSTEM : Line Pressure Sole-	
Line Pressure	255	noid Valve	266
Torque Converter	255	CVT CONTROL SYSTEM : G Sensor	266
		CVT CONTROL SYSTEM : Overdrive Control	
		Switch	266
		CVT CONTROL SYSTEM : OD OFF Indicator	
		Lamp	266
		CVT CONTROL SYSTEM : Shift Position Indica-	
		tor	266
		CVT CONTROL SYSTEM : Malfunction Indicator	
		Lamp (MIL)	267
CVT: RE0F11A		SHIFT LOCK SYSTEM	267
PRECAUTION	256	SHIFT LOCK SYSTEM : Component Parts Loca-	
PRECAUTIONS	256	tion	267
Precaution for Supplemental Restraint System		STRUCTURE AND OPERATION	268
(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-		TRANSAXLE	268
SIONER"	256	TRANSAXLE : Cross-Sectional View	268
Precaution for Procedure without Cowl Top Cover	256	TRANSAXLE : Transaxle Mechanism	268
Precaution for TCM and Transaxle Assembly Re-		TRANSAXLE : Operation Status	270
placement	256	TRANSAXLE : Oil Pressure System	271
Precaution for G Sensor Removal/Installation or		TRANSAXLE : Component Description	271
Replacement	256	FLUID COOLER & FLUID WARMER SYSTEM	272
General Precautions	257	FLUID COOLER & FLUID WARMER SYSTEM :	
On Board Diagnosis (OBD) System of CVT and		System Description	272
Engine	257	SHIFT LOCK SYSTEM	273
Removal and Installation Procedure for CVT Unit		SHIFT LOCK SYSTEM : System Description	273
Connector	258	KEY LOCK SYSTEM	273
PREPARATION	260	KEY LOCK SYSTEM : System Description	273
PREPARATION	260	SYSTEM	274
Special Service Tools	260	CVT CONTROL SYSTEM	274
Commercial Service Tools	260	CVT CONTROL SYSTEM : System Description	274
SYSTEM DESCRIPTION	261	CVT CONTROL SYSTEM : Schematic	277
COMPONENT PARTS	261		
CVT CONTROL SYSTEM	261		
CVT CONTROL SYSTEM : Component Parts Lo-			
cation	261		

CVT CONTROL SYSTEM : Fail-safe	278	ADDITIONAL SERVICE WHEN REPLACING	
CVT CONTROL SYSTEM : Protection Control	281	TRANSAXLE ASSEMBLY	326
LINE PRESSURE CONTROL	281	Description	326
LINE PRESSURE CONTROL : System Description	282	Work Procedure	326
SHIFT CONTROL	282	CALIBRATION OF G SENSOR	328
SHIFT CONTROL : System Description	283	Description	328
SELECT CONTROL	284	Work Procedure	328
SELECT CONTROL : System Description	285	CVT FLUID COOLER SYSTEM	329
LOCK-UP CONTROL	285	Cleaning	329
LOCK-UP CONTROL : System Description	286	STALL TEST	332
IDLE NEUTRAL CONTROL	286	Work Procedure	332
IDLE NEUTRAL CONTROL : System Description	287	LINE PRESSURE TEST	333
ON BOARD DIAGNOSTIC (OBD) SYSTEM ...	290	Work Procedure	333
Description	290	DTC/CIRCUIT DIAGNOSIS	334
Function of OBD	290	U0073 COMMUNICATION BUS A OFF	334
DIAGNOSIS SYSTEM (TCM)	291	Description	334
DIAGNOSIS DESCRIPTION	291	DTC Logic	334
DIAGNOSIS DESCRIPTION : 1 Trip Detection Diagnosis and 2 Trip Detection Diagnosis	291	Diagnosis Procedure	334
DIAGNOSIS DESCRIPTION : DTC and DTC of 1st Trip	291	U0100 LOST COMMUNICATION (ECM A)	335
DIAGNOSIS DESCRIPTION : Malfunction Indicator Lamp (MIL)	291	Description	335
DIAGNOSIS DESCRIPTION : Counter System ...	291	DTC Logic	335
CONSULT Function	293	Diagnosis Procedure	335
ECU DIAGNOSIS INFORMATION	299	U0140 LOST COMMUNICATION (BCM)	336
TCM	299	Description	336
Reference Value	299	DTC Logic	336
Fail-safe	307	Diagnosis Procedure	336
Protection Control	309	U0141 LOST COMMUNICATION (BCM A)	337
DTC Inspection Priority Chart	310	Description	337
DTC Index	311	DTC Logic	337
Diagnosis Procedure	337	U0155 LOST COMMUNICATION (IPC)	338
WIRING DIAGRAM	313	Description	338
CVT CONTROL SYSTEM	313	DTC Logic	338
Wiring Diagram	313	Diagnosis Procedure	338
CVT SHIFT LOCK SYSTEM	320	U0300 CAN COMMUNICATION DATA	339
Wiring Diagram	320	Description	339
BASIC INSPECTION	322	DTC Logic	339
DIAGNOSIS AND REPAIR WORK FLOW	322	Diagnosis Procedure	339
Work Flow	322	U1000 CAN COMM CIRCUIT	340
Diagnostic Work Sheet	323	Description	340
ADDITIONAL SERVICE WHEN REPLACING		DTC Logic	340
TCM	325	Diagnosis Procedure	340
Description	325	U1117 LOST COMMUNICATION (ABS)	341
Work Procedure	325	Description	341
		DTC Logic	341
		Diagnosis Procedure	341
		P062F EEPROM	342
		Description	342

DTC Logic	342	P0746 PRESSURE CONTROL SOLENOID A	372
Diagnosis Procedure	342	DTC Logic	372
P0705 TRANSMISSION RANGE SENSOR A	343	Diagnosis Procedure	373
DTC Logic	343	Component Inspection (Line Pressure Solenoid Valve)	373
Diagnosis Procedure	343	P0846 TRANSMISSION FLUID PRESSURE SEN/SW B	374
Component Inspection (Transmission Range Switch)	347	DTC Logic	374
P0706 TRANSMISSION RANGE SENSOR A	349	Diagnosis Procedure	374
DTC Logic	349	P0847 TRANSMISSION FLUID PRESSURE SEN/SW B	376
Diagnosis Procedure	349	DTC Logic	376
Component Inspection (Transmission Range Switch)	351	Diagnosis Procedure	376
P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A	353	P0848 TRANSMISSION FLUID PRESSURE SEN/SW B	378
DTC Logic	353	DTC Logic	378
Diagnosis Procedure	354	Diagnosis Procedure	378
Component Inspection (CVT Fluid Temperature Sensor)	354	P0863 TCM COMMUNICATION	380
P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A	356	DTC Logic	380
DTC Logic	356	Diagnosis Procedure	380
Diagnosis Procedure	356	P0890 TCM	381
Component Inspection (CVT Fluid Temperature Sensor)	356	DTC Logic	381
P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A	358	Diagnosis Procedure	381
DTC Logic	358	P0962 PRESSURE CONTROL SOLENOID A	382
Diagnosis Procedure	358	DTC Logic	382
Component Inspection (CVT Fluid Temperature Sensor)	359	Diagnosis Procedure	382
P0715 INPUT SPEED SENSOR A	360	Component Inspection (Line Pressure Solenoid Valve)	382
DTC Logic	360	P0963 PRESSURE CONTROL SOLENOID A	384
Diagnosis Procedure	360	DTC Logic	384
P0720 OUTPUT SPEED SENSOR	363	Diagnosis Procedure	384
DTC Logic	363	Component Inspection (Line Pressure Solenoid Valve)	384
Diagnosis Procedure	363	P0965 PRESSURE CONTROL SOLENOID B	386
P0740 TORQUE CONVERTER	366	DTC Logic	386
DTC Logic	366	Diagnosis Procedure	386
Diagnosis Procedure	367	P0966 PRESSURE CONTROL SOLENOID B	387
Component Inspection (Torque Converter Clutch Solenoid Valve)	367	DTC Logic	387
P0743 TORQUE CONVERTER	368	Diagnosis Procedure	387
DTC Logic	368	Component Inspection (Primary Pressure Solenoid Valve)	387
Diagnosis Procedure	369	P0967 PRESSURE CONTROL SOLENOID B	389
Component Inspection (Torque Converter Clutch Solenoid Valve)	369	DTC Logic	389
P0744 TORQUE CONVERTER	370	Diagnosis Procedure	389
DTC Logic	370	Component Inspection (Primary Pressure Solenoid Valve)	389
Diagnosis Procedure	371	P0998 SHIFT SOLENOID F	391
Component Inspection (Torque Converter Clutch Solenoid Valve)	371	DTC Logic	391
		Diagnosis Procedure	391

Component Inspection (Low Brake Solenoid Valve)	391	
P0999 SHIFT SOLENOID F	393	
DTC Logic	393	
Diagnosis Procedure	393	
Component Inspection (Low Brake Solenoid Valve)	393	
P099B SHIFT SOLENOID G	395	
DTC Logic	395	
Diagnosis Procedure	395	
Component Inspection (High Clutch & Reverse Brake Solenoid Valve)	395	
P099C SHIFT SOLENOID G	397	
DTC Logic	397	
Diagnosis Procedure	397	
Component Inspection (High Clutch & Reverse Brake Solenoid Valve)	397	
P1586 G SENSOR	399	
DTC Logic	399	
Diagnosis Procedure	399	
P1588 G SENSOR	402	
DTC Logic	402	
Diagnosis Procedure	402	
P2765 CLUTCH B SPEED SENSOR	404	
DTC Logic	404	
Diagnosis Procedure	404	
P2857 CLUTCH A PRESSURE	407	
DTC Logic	407	
Diagnosis Procedure	407	
P2858 CLUTCH B PRESSURE	408	
DTC Logic	408	
Diagnosis Procedure	408	
P2859 CLUTCH A PRESSURE	409	
DTC Logic	409	
Diagnosis Procedure	410	
P285A CLUTCH B PRESSURE	411	
DTC Logic	411	
Diagnosis Procedure	412	
MAIN POWER SUPPLY AND GROUND CIRCUIT	413	
Diagnosis Procedure	413	
OVERDRIVE CONTROL SWITCH	415	
Component Function Check	415	
Diagnosis Procedure	415	
Component Inspection (Overdrive Control Switch) ..	416	
OD OFF INDICATOR LAMP	417	
Component Function Check	417	
Diagnosis Procedure	417	
SHIFT POSITION INDICATOR CIRCUIT	418	A
Component Parts Function Inspection	418	
Diagnosis Procedure	418	
SHIFT LOCK SYSTEM	419	B
Component Function Check	419	
Diagnosis Procedure	419	
SYMPTOM DIAGNOSIS	421	C
CVT CONTROL SYSTEM	421	
Symptom Table	421	
PERIODIC MAINTENANCE	426	TM
CVT FLUID	426	E
Inspection	426	
Replacement	426	
Adjustment	427	
REMOVAL AND INSTALLATION	429	F
CVT SHIFT SELECTOR	429	G
Exploded View	429	
Removal and Installation	429	
Disassembly and Assembly	430	
Inspection and Adjustment	430	H
CONTROL CABLE	432	I
Exploded View	432	
Removal and Installation	432	
Inspection	434	
KEY INTERLOCK CABLE	435	J
Exploded View	435	
Removal and Installation	435	
Inspection	436	K
TCM	437	L
Exploded View	437	
Removal and Installation	437	
Adjustment	437	
AIR BREATHER HOSE	438	M
Removal and Installation	438	
G SENSOR	439	N
Exploded View	439	
Removal and Installation	439	
Adjustment	439	
OIL PAN	440	O
Exploded View	440	
Removal and Installation	440	
Inspection and Adjustment	441	P
PRIMARY SPEED SENSOR	442	
Exploded View	442	
Removal and Installation	442	
Inspection and Adjustment	442	
SECONDARY SPEED SENSOR	443	

Exploded View	443	PLUG	451
Removal and Installation	443	Description	451
Inspection and Adjustment	443	Exploded View	451
OUTPUT SPEED SENSOR	444	Removal and Installation	451
Exploded View	444	Inspection and Adjustment	451
Removal and Installation	444	UNIT REMOVAL AND INSTALLATION ...	452
Inspection and Adjustment	444	TRANSMISSION ASSEMBLY	452
DIFFERENTIAL SIDE OIL SEAL	445	Exploded View	452
Exploded View	445	Removal and Installation	452
Removal and Installation	445	Inspection and Adjustment	454
Inspection and Adjustment	445	SERVICE DATA AND SPECIFICATIONS	
WATER HOSE	447	(SDS)	456
Exploded View	447	SERVICE DATA AND SPECIFICATIONS	
Removal and Installation	447	(SDS)	456
Inspection	449	General Specification	456
FLUID COOLER HOSE	450	Shift Characteristics	456
Exploded View	450	Stall Speed	456
Removal and Installation	450	Line Pressure	456
Inspection and Adjustment	450	Torque Converter	457
		Heater Thermostat	457

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009267769

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

General Precautions

INFOID:000000009267770

CAUTION:

- Do not reuse CSC (Concentric Slave Cylinder). CSC slides back to the original position every time when removing transaxle assembly. At this time, dust on the sliding parts may damage the seal of CSC and may cause clutch fluid leakage. Refer to [CL-16, "Removal and Installation"](#).
- Do not reuse transaxle gear oil, once it has been drained.
- Check oil level or replace gear oil with vehicle on level surface.
- During removal or installation, keep inside of transaxle clear of dust or dirt.
- Check for the correct installation alignment prior to removal or disassembly. If matching marks are required, be certain they do not interfere with the function of the parts marked.
- In principle, tighten bolts or nuts gradually in several steps working diagonally from inside to outside. If tightening sequence is specified, use it.
- Do not damage sliding surfaces and mating surfaces.

Precaution for Work

INFOID:000000009267771

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components:

A
B
C
TM

E
F
G
H
I
J

K
L
M
N

O
P

PRECAUTIONS

[5MT: RS5F91R]

< PRECAUTION >

- Water soluble dirt:
 - Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
 - Then rub with a soft, dry cloth.
- Oily dirt:
 - Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
 - Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
 - Then rub with a soft, dry cloth.
- Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

PREPARATION

< PREPARATION >

[5MT: RS5F91R]

PREPARATION






PREPARATION

Special Service Tools

INFOID:000000009267772

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.







Tool number (Kent-Moore No.) Tool name	Description
KV32500QAA (—) Drift set	Installing differential side oil seal 1. — Drift a: 54.3 mm (2.138 in) dia. b: 45 mm (1.77 in) dia. c: 26.6 mm (1.047 in) dia. 2. — Drift d: 54 mm (2.13 in) dia. e: 48.6 mm (1.913 in) dia. f: 26.6 mm (1.047 in) dia.
KV32300QAC (—) Puller	Removing 5th main gear
KV32300QAD (—) Puller	Removing 5th main gear
ST35300000 (—) Drift	<ul style="list-style-type: none"> Removing and installing input shaft rear bearing Removing and installing mainshaft rear bearing a: 45 mm (1.77 in) dia. b: 59 mm (2.32 in) dia.
KV111011S0 (—) Valve seat remover	Removing mainshaft front bearing

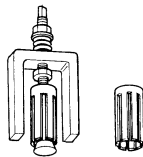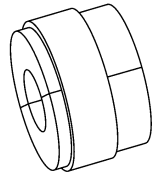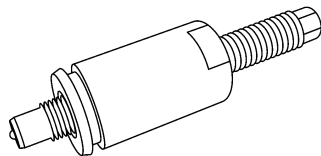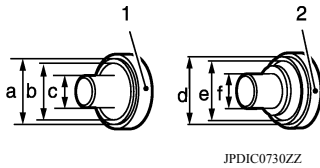

PREPARATION

< PREPARATION >

[5MT: RS5F91R]

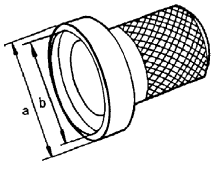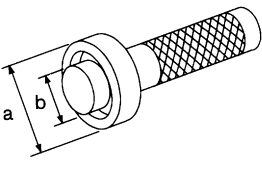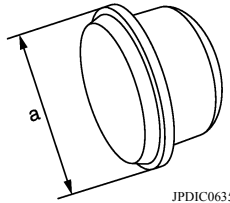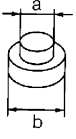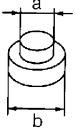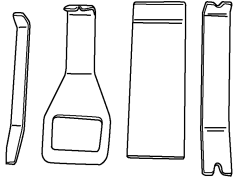Tool number (Kent-Moore No.) Tool name	Description
ST33400001 (—) Drift <div style="text-align: center;">  <p>ZZA0814D</p> </div>	Installing mainshaft front bearing a: 60 mm (2.36 in) dia. b: 47 mm (1.85 in) dia.
KV40100900 (—) Drift <div style="text-align: center;">  <p>NT084</p> </div>	Installing input shaft front bearing a: 52 mm (2.05 in) dia. b: 39.5 mm (1.555 in) dia.
KV32300QAE (—) Drift <div style="text-align: center;">  <p>JPDIC0635ZZ</p> </div>	Installing differential side bearing outer race a: 61.5 mm (2.421 in) dia.
ST33052000 (—) Drift <div style="text-align: center;">  <p>ZZA0969D</p> </div>	Removing differential side bearing a: 22 mm (0.87 in) dia. b: 28 mm (1.10 in) dia.
KV40104920 (—) Drift <div style="text-align: center;">  <p>ZZA0969D</p> </div>	Installing differential side bearing a: 21.7 mm (0.854 in) dia. b: 44.7 mm (1.760 in) dia.
— (J-46534) Trim Tool Set <div style="text-align: center;">  <p>AWJ1A0483ZZ</p> </div>	Removing trim components







PREPARATION

< PREPARATION >

[5MT: RS5F91R]

Commercial Service Tools

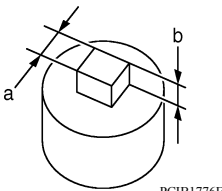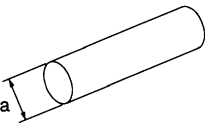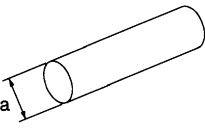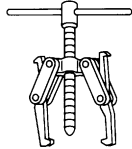INFOID:00000009267773

Tool name	Description
Socket  <small>PCIB1776E</small>	Removing and installing drain plug a: 8 mm (0.31 in) b: 5 mm (0.20 in)
Drift  <small>S-NT063</small>	Removing input shaft front bearing a: 38 mm (1.50 in) dia.
Drift  <small>S-NT063</small>	Installing bushing a: 14.5 mm (0.571 in) dia.
Puller  <small>NT077</small>	<ul style="list-style-type: none"> • Removing 5th-reverse synchronizer hub • Removing differential side bearing
Bearing remover  <small>S-NT134</small>	Removing bushing
Power tool  <small>PIIB1407E</small>	Loosening nuts, screws and bolts


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM DESCRIPTION

STRUCTURE AND OPERATION

Sectional View

INFOID:000000009267774

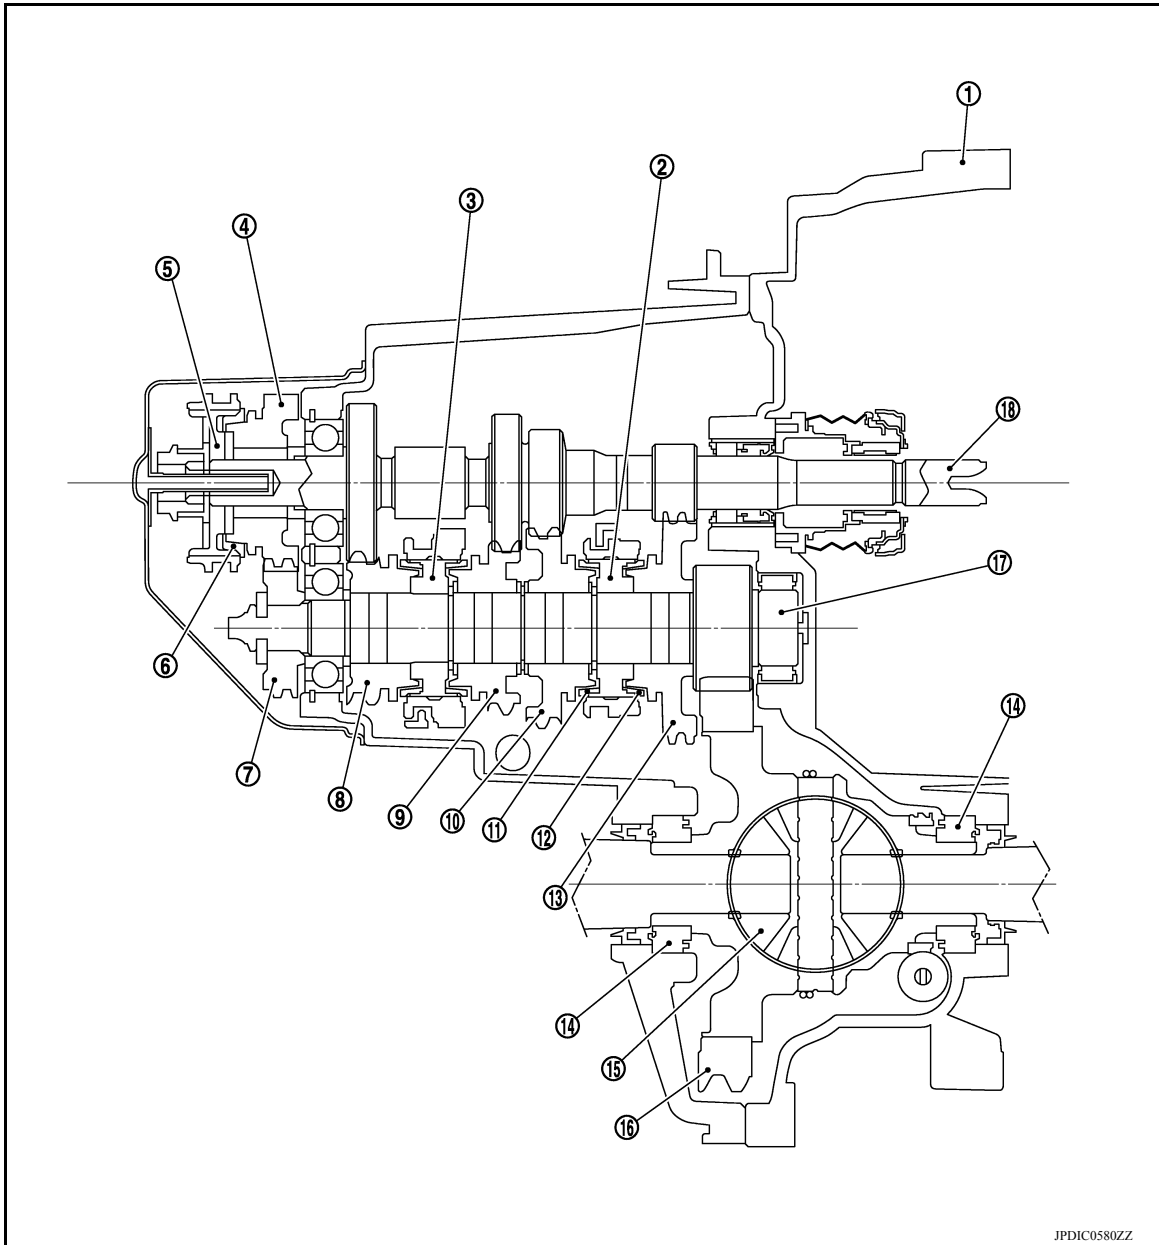

- | | | |
|-------------------|--|--------------------------------------|
| 1. Clutch housing | 2. 1st-2nd synchronizer hub assembly | 3. 3rd-4th synchronizer hub assembly |
| 4. 5th input gear | 5. 5th-reverse synchronizer hub assembly | 6. 5th-reverse baulk ring |
| 7. 5th main gear | 8. 4th main gear | 9. 3rd main gear |
| 10. 2nd main gear | 11. 2nd double-cone synchronizer | 12. 1st double-cone synchronizer |
| 13. 1st main gear | 14. Differential side bearing | 15. Differential |
| 16. Final gear | 17. Mainshaft | 18. Input shaft |

System Description

INFOID:000000009267775

DOUBLE-CONE SYNCHRONIZER


STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[5MT: RS5F91R]

Double-cone synchronizers are adopted for 1st and 2nd gears to reduce operating force of the shift selector.

- (1) : Outer baulk ring
- (2) : 2nd main gear
- (3) : Synchronizer cone
- (4) : Inner baulk ring
- (5) : 1st main gear
- (6) : 1st-2nd coupling sleeve

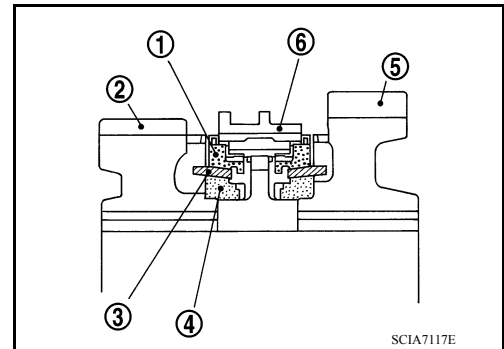


REVERSE GEAR NOISE PREVENTION FUNCTION (REVERSE BRAKE)

Description

Soon after the clutch is disengaged, the input shaft is still rotating due to inertia. This may cause a gear noise when the shift selector is moved to reverse position. The reverse gear noise prevention function stops the rotation of the input shaft and enables smooth gear shifting when the reverse gear is selected.

Operation Principle

1. When the shift selector is moved to reverse position, 5th-reverse coupling sleeve (1) slides in the reverse direction. (⇐)
- (5) : 5th input gear
2. Synchronizer levers (2) with support point (A) at 5th-reverse synchronizer hub (3) presses 5th-reverse baulk ring (4). (←)
3. Friction that is generated at 5-reverse baulk ring presses synchronizer lever on 5th-reverse coupling sleeve. (⇐)
4. 5th-reverse coupling sleeve that is pressed by synchronizer lever stops the rotation of input shaft.

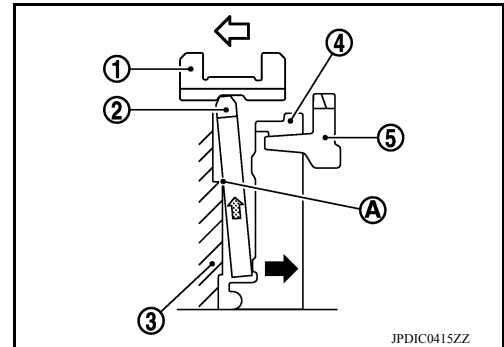

POSITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[5MT: RS5F91R]

DTC/CIRCUIT DIAGNOSIS

POSITION SWITCH

BACK-UP LAMP SWITCH

BACK-UP LAMP SWITCH : Component Inspection

INFOID:000000009267776

1. CHECK BACK-UP LAMP SWITCH


1. Disconnect position switch connector. Refer to [TM-22. "Removal and Installation"](#).
2. Check continuity between position switch terminals.

Terminals		Condition	Continuity
1	2	Reverse gear position	Yes
		Except reverse gear position	No

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace position switch. Refer to [TM-22. "Removal and Installation"](#).

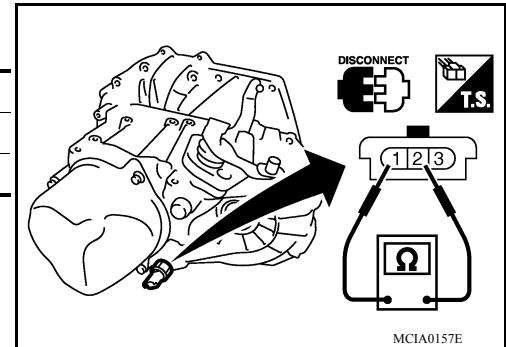

PARK/NEUTRAL POSITION (PNP) SWITCH

PARK/NEUTRAL POSITION (PNP) SWITCH : Component Inspection

INFOID:000000009267777

1. CHECK PARK/NEUTRAL POSITION (PNP) SWITCH


1. Disconnect position switch connector. Refer to [TM-22. "Removal and Installation"](#).
2. Check continuity between position switch terminals.

Terminals		Condition	Continuity
2	3	Neutral gear position	Yes
		Except neutral gear position	No

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace position switch. Refer to [TM-22. "Removal and Installation"](#).

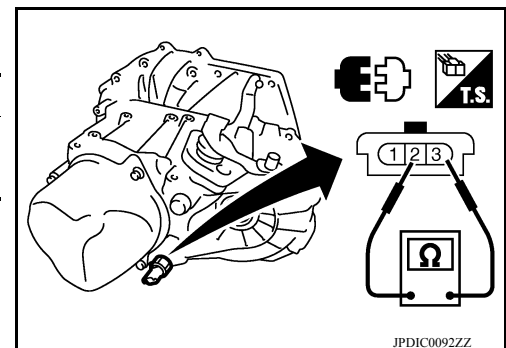

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

[5MT: RS5F91R]

SYMPTOM DIAGNOSIS

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:000000009267778

Use the chart below to find the cause of the symptom. The numbers indicate the order of the inspection. If necessary, repair or replace these parts.

Reference page		TM-20			TM-30			TM-24	TM-30				
SUSPECTED PARTS (Possible cause)		OIL (Oil level is low)	OIL (Wrong oil)	OIL (Oil level is high)	GASKET (Damaged)	OIL SEAL (Worn or damaged)	O-RING (Worn or damaged)	SHIFT CONTROL LINKAGE (Worn)	SHIFT FORK (Worn)	GEAR (Worn or damaged)	BEARING (Worn or damaged)	BAULK RING (Worn or damaged)	INSERT SPRING (Damaged)
Symptoms	Noise	1	2							3	3		
	Oil leakage		3	1	2	2	2						
	Hard to shift or will not shift		1	1				2				3	3
	Jumps out of gear							1	2	2			

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

PERIODIC MAINTENANCE

GEAR OIL

Inspection


INFOID:000000009267779

OIL LEAKAGE

Make sure that gear oil is not leaking from transaxle or around it.

OIL LEVEL

1. Remove filler plug (1) and gasket from transaxle case.
2. Check the oil level from filler plug hole as shown.
CAUTION:
Do not start engine while checking oil level.
3. Install a new gasket on filler plug and then install filler plug to transaxle case.
CAUTION:
Do not reuse gasket.
4. Tighten filler plug to the specified torque. Refer to [TM-30](#), "[Exploded View](#)".

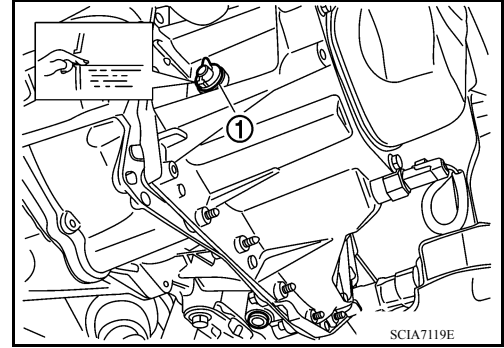


SCIA7119E

Draining

INFOID:000000009267780

1. Start engine and let it run to warm up transaxle.
2. Stop engine. Remove drain plug (1) and gasket, using suitable tool and then drain gear oil.
3. Install a new gasket on drain plug (1) and install drain plug to clutch housing, using suitable tool.
CAUTION:
Do not reuse gasket.
4. Tighten drain plug (1) to the specified torque. Refer to [TM-30](#), "[Exploded View](#)".

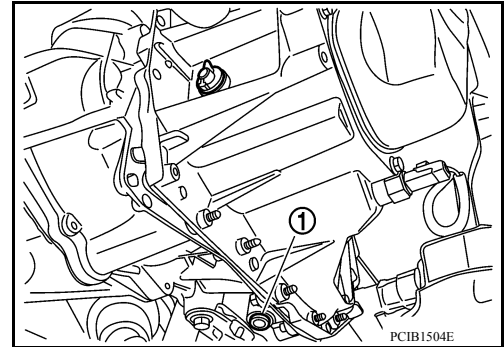

PCIB1504E


Refilling

INFOID:000000009267781

1. Remove filler plug (1) and gasket from transaxle case.
2. Fill with new gear oil until oil level reaches the specified limit at filler plug hole as shown.
CAUTION:
Do not start engine while checking oil level.

Oil capacity and viscosity : Refer to [MA-12](#), "[Fluids and Lubricants](#)".

3. Install a new gasket on filler plug and then install filler plug to transaxle case.
CAUTION:
Do not reuse gasket.
4. Tighten filler plug to the specified torque. Refer to [TM-30](#), "[Exploded View](#)".

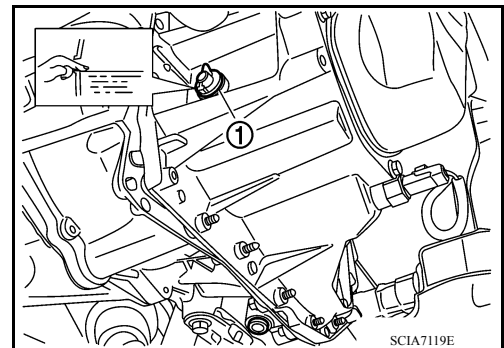

SCIA7119E

SIDE OIL SEAL

< REMOVAL AND INSTALLATION >

[5MT: RS5F91R]

REMOVAL AND INSTALLATION

SIDE OIL SEAL

Removal and Installation


INFOID:000000009267782

REMOVAL

1. Remove front drive shaft from transaxle assembly. Refer to [FAX-15, "Removal and Installation"](#).
2. Remove differential side oil seal (1) using suitable tool.

CAUTION:

Do not damage transaxle case and clutch housing.

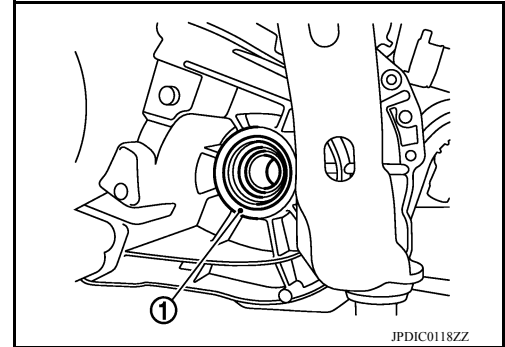

INSTALLATION

1. Install differential side oil seal (1) to transaxle case side (B) and clutch housing side (C) using Tool.


Dimension (L1) : 5.7 – 6.3 mm (0.224 – 0.248 in)

Dimension (L2) : 2.4 – 3.0 mm (0.094 – 0.118 in)

Tool number : KV32500QAA (—)

CAUTION:

- Do not reuse differential side oil seal.
- Do not tilt differential side oil seal.
- Do not damage clutch housing and transaxle case.

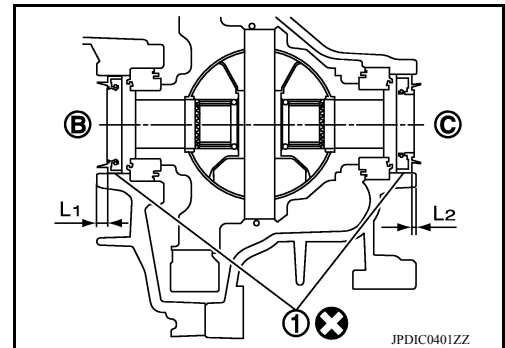

2. Install the front drive shaft. Refer to [FAX-15, "Removal and Installation"](#).

Inspection

INFOID:000000009267783

INSPECTION AFTER INSTALLATION

Check the oil level and for oil leaks. Refer to [TM-20, "Inspection"](#).

POSITION SWITCH

< REMOVAL AND INSTALLATION >

[5MT: RS5F91R]


POSITION SWITCH

Removal and Installation

INFOID:000000009267784

REMOVAL

1. Drain gear oil. Refer to [TM-20, "Draining"](#).
2. Disconnect the harness connector (A) from position switch.
3. Remove position switch from transaxle case.

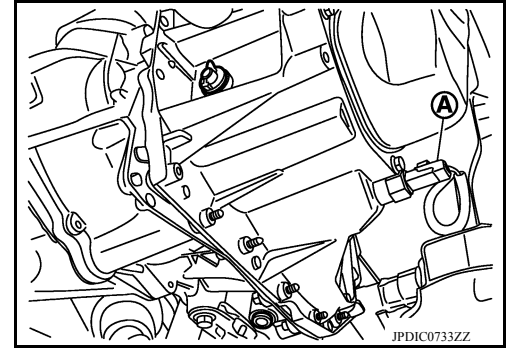

INSTALLATION

1. Apply recommended sealant to threads of position switch.
CAUTION:
 - Use Genuine Silicone RTV or equivalent. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).
 - Remove old sealant and oil adhering to threads.
2. Install position switch to transaxle case.
3. Tighten position switch to the specified torque. Refer to [TM-30, "Exploded View"](#).
4. Refill gear oil. Refer to [TM-20, "Refilling"](#).

Inspection

INFOID:000000009267785

INSPECTION AFTER INSTALLATION

- Check continuity between position switch terminals. Refer to [TM-18, "BACK-UP LAMP SWITCH : Component Inspection"](#) (Back-up lamp switch) and [TM-18, "PARK/NEUTRAL POSITION \(PNP\) SWITCH : Component Inspection"](#) (PNP switch).
- Check the oil level and for oil leakage. Refer to [TM-20, "Inspection"](#).

CONTROL LINKAGE


< REMOVAL AND INSTALLATION >

[5MT: RS5F91R]

CONTROL LINKAGE

Exploded View

INFOID:00000009267786

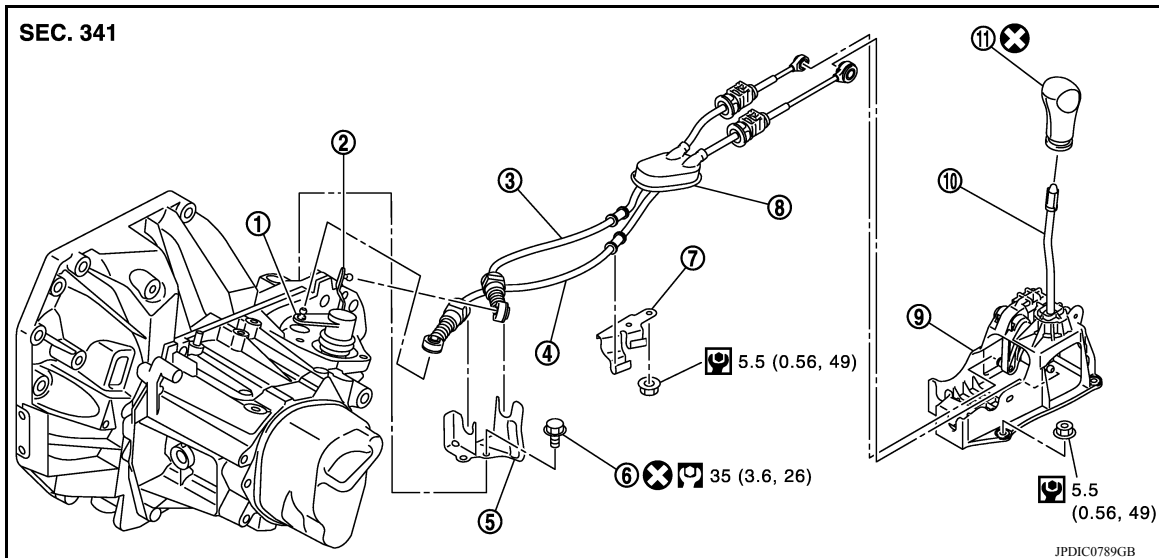


- | | | |
|--------------------|---------------------------|--------------------------------|
| 1. Shifter lever A | 2. Selector lever | 3. Selector cable |
| 4. Shifter cable | 5. Cable mounting bracket | 6. Tapping bolt |
| 7. Bracket | 8. Grommet | 9. M/T shift selector assembly |
| 10. Shift selector | 11. Shift selector handle | |

Removal and Installation

INFOID:00000009267787

REMOVAL

1. Move the shift selector to the neutral position.
2. Remove the battery tray. Refer to [PG-63. "Removal and Installation"](#).
3. Pull out and disconnect cables from shifter lever A and selector lever, using a suitable tool.
4. While pressing the lock of the selector cable in the direction of the arrows shown, remove the selector cable from the cable mounting bracket.
5. While pressing the lock of the shifter cable in the direction of the arrows shown, remove the shifter cable from the cable mounting bracket.
6. Remove cable mounting bracket from clutch housing.
7. Pull the shift selector handle upward to remove.
8. Remove center console assembly. Refer to [JP-23. "Removal and Installation"](#).
9. Pull out and disconnect each cable from the M/T shift selector assembly, using a suitable tool.

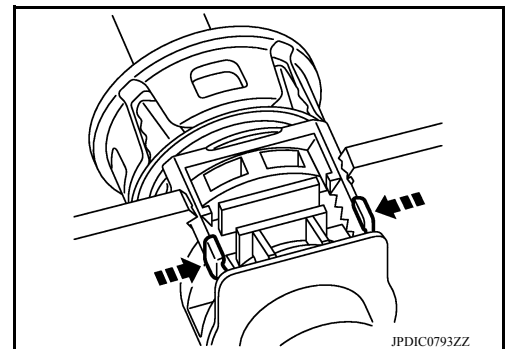


CONTROL LINKAGE

< REMOVAL AND INSTALLATION >

[5MT: RS5F91R]

- a. While pressing the lock of the selector cable in the direction of the arrows shown, remove the selector cable from the M/T shift selector assembly.
- b. While pressing the lock of the shifter cable in the direction of the arrows shown, remove the shifter cable from the M/T shift selector assembly.
10. Remove the M/T shift selector assembly.
11. Remove center muffler, exhaust front tube, and heat plate. Refer to [EX-5, "Removal and Installation"](#).
12. Remove the bracket from the vehicle.
13. Remove the grommet and then remove the shifter cable and selector cable from the vehicle.

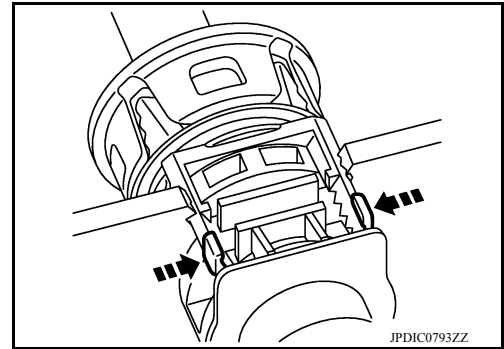

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Install each cable without causing interference with other parts. Do not allow cable to bend less than 120 mm (4.72 in), or exceed 180 degree twist.
- Install boot of each cable without causing interference with other parts. Do not exceed 90 degree twist.
- Fit boot to center console assembly and the groove on shift selector handle.
- To install the shift selector handle, press it onto the shift selector.

CAUTION:

- Do not reuse shift selector handle.
- Be careful with orientation of shift selector handle.
- Bolt hole is not threaded on new clutch housing. Self-tapping bolt is used to attach lock plate to clutch housing.

CAUTION:

- Do not reuse self-tapping bolt.
- Insert each cable until it reaches the cable mounting bracket and M/T shift selector assembly.
- Insert each cable until it reaches the shifter lever A and the selector lever.
- Move the shift selector to the neutral position.

Inspection

INFOID:000000009267788

INSPECTION AFTER INSTALLATION

Shift Selector Handle

Check that the shift selector handle is installed in the right position.

Shifter Cable and Selector Cable

- Pull each cable in the removal direction to check that it does not disconnect from the cable mounting bracket.
- Pull each cable in the removal direction to check that it does not disconnect from the M/T shift selector assembly.
- Pull grommet in the removal direction to check that it does not disconnect from the vehicle.

M/T Shift Selector Assembly and Shift Selector

- Check that there is no unusual noise, binding, bending, looseness, and interference when the shift selector is moved to each position. If there is a malfunction, then repair or replace the malfunctioning part.
- Check that the shift selector smoothly returns to the neutral position after moving the shift selector from 1st to 2nd gear and releasing it. If there is a malfunction, then repair or replace the malfunctioning part.
- Check that the shift selector smoothly returns to the neutral position after moving the shift selector from 5th to the reverse gear position and releasing it. If there is a malfunction, then repair or replace the malfunctioning part.

AIR BREATHER HOSE


< REMOVAL AND INSTALLATION >

[5MT: RS5F91R]

AIR BREATHER HOSE

Exploded View

INFOID:000000009267789

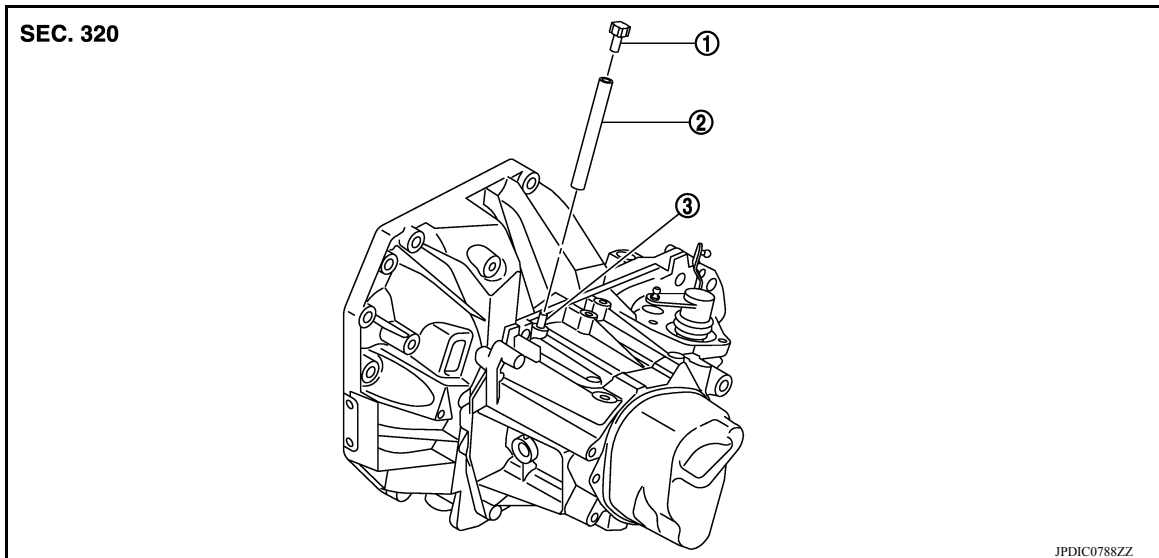

1. Cap

2. Air breather hose

3. 2-way connector

Removal and Installation

INFOID:000000009267790

REMOVAL

1. Remove air cleaner case. Refer to [EM-25, "Removal and Installation"](#).
2. Remove air breather hose from the 2-way connector.
CAUTION:
When removing air breather hose, be sure to hold 2-way connector securely.
3. Remove cap from air breather hose.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Install air breather hose. Do not bend hose tightly, which may result in pinching or clogging.
- Insert the air breather hose to the base of the 2-way connector.

5TH MAIN GEAR ASSEMBLY

< REMOVAL AND INSTALLATION >

[5MT: RS5F91R]

5TH MAIN GEAR ASSEMBLY

Removal and Installation

INFOID:000000009267791


REMOVAL

1. Move the shift selector to the 3rd gear position.
2. Disconnect the shifter cable and the selector cable from shifter lever A and selector lever. Refer to [TM-23, "Removal and Installation"](#).

CAUTION:

Do not move shifter lever A and selector lever to disconnect each cable.

3. Drain gear oil. Refer to [TM-20, "Draining"](#).
4. Remove fender protector (LH). Refer to [EXT-26, "Removal and Installation"](#).
5. Remove the harness clamp (A) from rear housing (1).

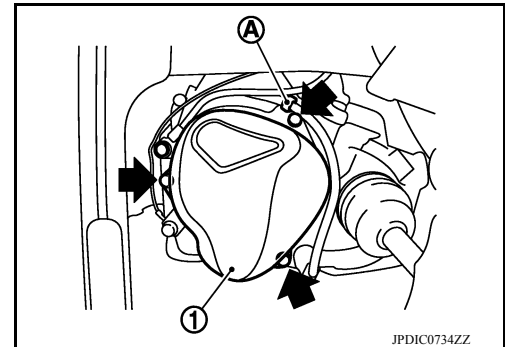


6. Remove rear housing and O-ring.

CAUTION:

Remove in direction of input shaft (←) as shown. Rear housing oil channel is inserted to input shaft center hole.

7. Remove 5th main gear assembly. Refer to step 5 through 8 of "Disassembly of TRANSAXLE ASSEMBLY". Refer to [TM-34, "Disassembly"](#).

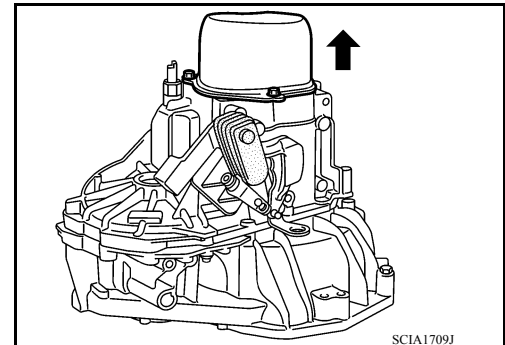

INSTALLATION

Installation is in the reverse order of removal.

- Shift into 3rd with shifter lever to install the 5th main gear assembly, referring to Step 36 to 39 of "Assembly of TRANSAXLE ASSEMBLY" Refer to [TM-40, "Assembly"](#).
- Install O-ring and the rear housing to the transaxle case and tighten the bolts to the specified torque. Refer to [TM-30, "Exploded View"](#).

CAUTION:

- Do not reuse O-ring.
 - Do not pinch O-ring when installing rear housing.
- Refill gear oil. Refer to [TM-20, "Refilling"](#).

Inspection

INFOID:000000009267792

INSPECTION AFTER INSTALLATION


- Check the operation of the control linkage. Refer to [TM-24, "Inspection"](#).
- Check the oil level and for oil leakage. Refer to [TM-20, "Inspection"](#).

UNIT REMOVAL AND INSTALLATION

TRANSAXLE ASSEMBLY

Exploded View

INFOID:000000009267793

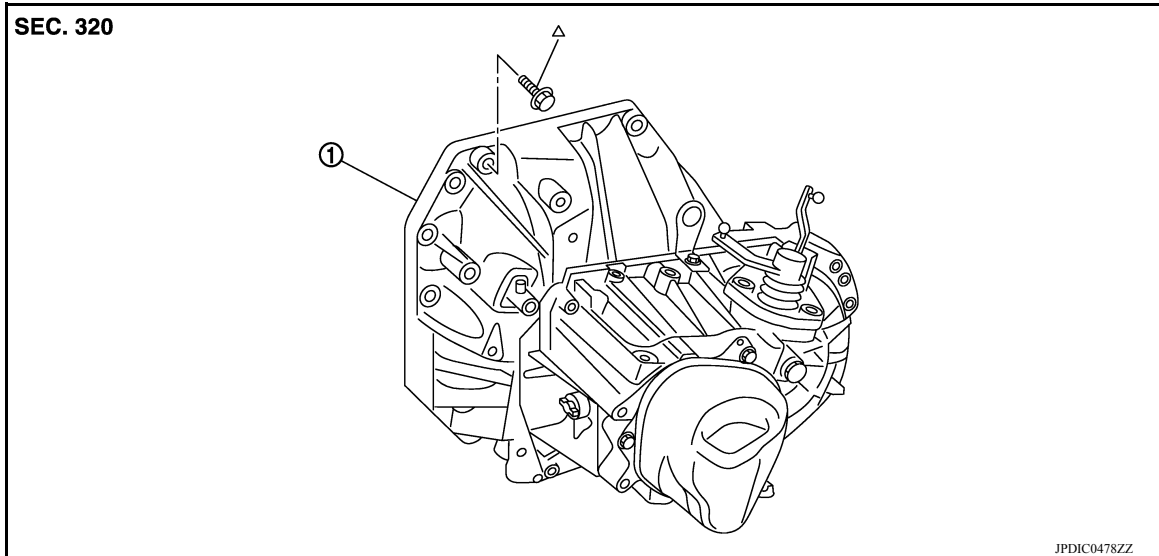

1. Transaxle assembly

△: Refer to "INSTALLATION" in [TM-27, "Removal and Installation"](#) for the locations and tightening torque.

Removal and Installation

INFOID:000000009267794

CAUTION:

Do not reuse CSC (concentric slave cylinder). CSC slides back to the original position every time transaxle assembly is removed. Dust on the sliding parts may damage the seal of CSC and may cause clutch fluid leakage. Refer to [CL-16, "Removal and Installation"](#).

NOTE:


When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

REMOVAL

1. Move the shift selector to the neutral position.
2. Remove battery. Refer to [PG-63, "Removal and Installation"](#).
3. Remove air cleaner case. Refer to [EM-25, "Removal and Installation"](#).
4. Remove IPDM E/R bracket bolts (A) and nut (B).

← : Front

5. Remove IPDM E/R bracket (1).
6. Remove air breather hose. Refer to [TM-25, "Removal and Installation"](#).
7. Disconnect selector cable and shifter cable from transaxle assembly. Refer to [TM-23, "Removal and Installation"](#).
8. Remove drive shaft heat insulator.
9. Remove crankshaft position sensor. Refer to [EM-94, "Exploded View"](#).
10. Remove clutch tube clip from engine mounting bracket (LH).
11. Remove clutch tube from CSC and then temporarily position it aside. Refer to [CL-14, "Removal and Installation"](#).

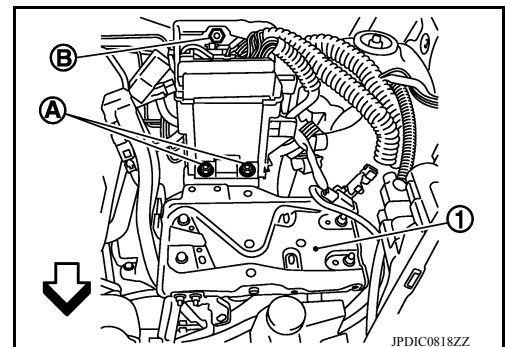

TRANSAXLE ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[5MT: RS5F91R]

CAUTION:

- Keep painted surface on the body or other parts free of clutch fluid. If it spills, wipe up immediately and wash the affected area with water.
- Do not depress clutch pedal during removal procedure.

12. Remove fender protector (LH). Refer to [EXT-26, "Removal and Installation"](#).
13. Disconnect ground cable.
14. Disconnect harness connector (A) from position switch.
15. Remove the harness clamp from rear housing.
16. Remove the engine harness clamp and then position it aside.
17. Remove starter motor. Refer to [STR-31, "Removal and Installation"](#).
18. Remove front drive shafts. Refer to [FAX-15, "Removal and Installation"](#).
19. Set a suitable jack to transaxle assembly and then set a suitable jack to engine assembly.

CAUTION:

When setting a suitable jack, be careful that it does not contact the position switch.

20. Remove engine mounting frame support (LH) bolts.
 - a. Remove bolt (A).

⇐ : Front

- b. Release clutch damper (1) from bracket. Refer to [CL-14, "Removal and Installation"](#).
 - c. Remove bolt (B).
 - d. Remove engine mounting bracket (LH) bolts from vehicle. Refer to [EM-82, "Exploded View"](#).
21. Remove rear engine mounting bracket and rear torque rod. Refer to [EM-82, "Exploded View"](#).
 22. Remove transaxle assembly bolts and nuts.
 23. Remove transaxle assembly from the engine.

CAUTION:

- Secure transaxle assembly to a suitable jack.
- The transaxle assembly must not interfere with the wire harnesses and clutch tube.



24. Remove engine mounting bracket (LH) from transaxle assembly. Refer to [EM-82, "Exploded View"](#).
25. Remove CSC. Refer to [CL-16, "Removal and Installation"](#).

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Secure transaxle assembly to a suitable jack.
- The transaxle assembly must not interfere with the wire harnesses and clutch tube.
- When installing transaxle assembly, do not bring input shaft into contact with clutch cover.
- Bolt hole is not threaded on new clutch housing. Self-tapping bolt is used to attach lock plate to clutch housing.
- Do not reuse self-tapping bolt.

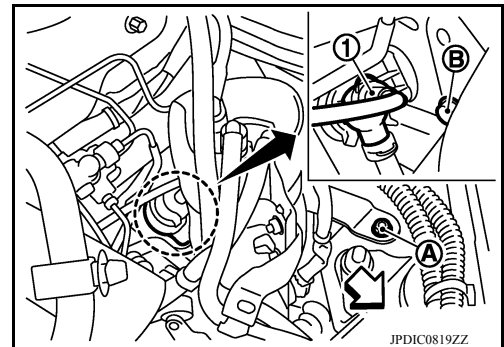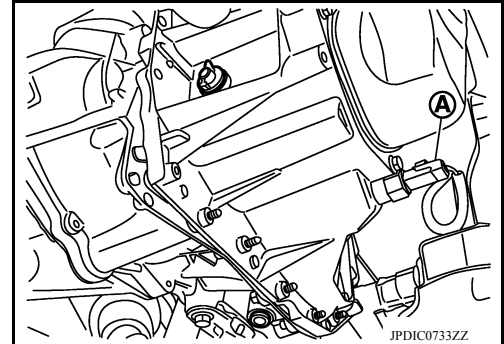


TRANSAXLE ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[5MT: RS5F91R]

- Tighten transaxle assembly bolts to the specified torque. The illustration is the view from the engine.

Bolt symbol	A	B	C	D
Insertion direction	Transaxle to engine	Engine to transaxle		
Quantity	2	3	2	1
Bolt length (ℓ) mm (in)	55 (2.17)		49 (1.93)	69 (2.72)
Tightening torque N·m (kg-m, ft-lb)	48.0 (4.9, 35)			

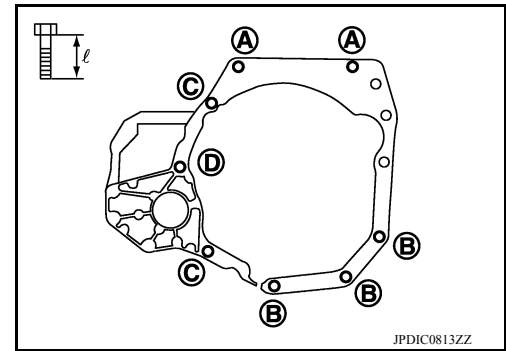

Inspection

INFOID:000000009267795

INSPECTION AFTER INSTALLATION

- Check the operation of the control linkage. Refer to [TM-24, "Inspection"](#).
- Before starting engine, check oil/fluid levels including engine coolant and engine oil. If less than required quantity, fill to the specified level. Refer to [MA-12, "Fluids and Lubricants"](#).
- Use procedure below to check for fuel leakage.
- Turn ignition switch ON (with engine stopped). With fuel pressure applied to fuel piping, check for fuel leakage at connection points.
- Start engine. With engine speed increased, check again for fuel leakage at connection points.
- Run engine to check for unusual noise and vibration.

NOTE:

If hydraulic pressure inside timing chain tensioner drops after removal and installation, slack in the guide may generate a pounding noise during and just after engine start. However, this is normal. Noise will stop after hydraulic pressure rises.

- Warm up engine thoroughly to make sure there is no leakage of fuel, exhaust gas, or any oils/fluids including engine oil and engine coolant.
- Bleed air from passages in lines and hoses, such as in cooling system.
- After cooling down engine, again check oil/fluid levels including engine oil and engine coolant. Refill to specified level, if necessary.
- Summary of the inspection items:

Item		Before starting engine	Engine running	After engine stopped
Engine coolant		Level	Leakage	Level
Engine oil		Level	Leakage	Level
Transmission/transaxle fluid	A/T and CVT Models	Leakage	Level/Leakage	Leakage
	M/T Models	Level/Leakage	Leakage	Level/Leakage
Other oils and fluids*		Level	Leakage	Level
Fuel		Leakage	Leakage	Leakage
Exhaust gas		—	Leakage	—

*Power steering fluid, brake fluid, etc.

TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]


UNIT DISASSEMBLY AND ASSEMBLY

TRANSAXLE ASSEMBLY

Exploded View

INFOID:000000009267796

CASE AND HOUSING

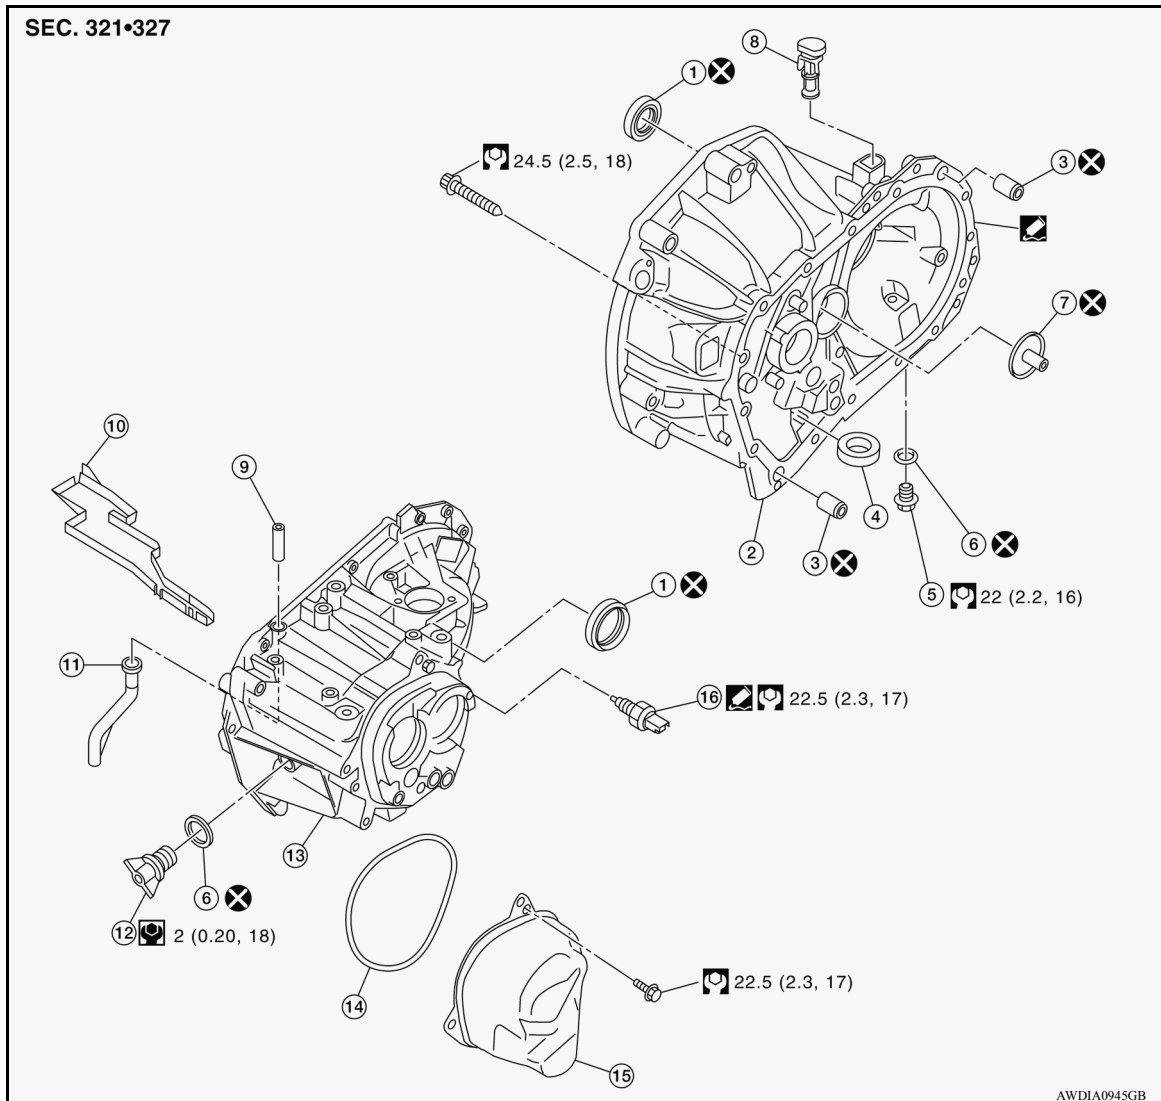

- | | | |
|-------------------------------|-----------------------------|--------------------|
| 1. Differential side oil seal | 2. Clutch housing | 3. Dowel pin |
| 4. Magnet | 5. Drain plug | 6. Gasket |
| 7. Oil channel | 8. Plug | 9. 2-way connector |
| 10. Oil gutter | 11. Air breather inner tube | 12. Filler plug |
| 13. Transaxle case | 14. O-ring | 15. Rear housing |
| 16. Position switch | | |


 Apply Genuine Silicone RTV or equivalent. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).

INPUT SHAFT AND GEAR

TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

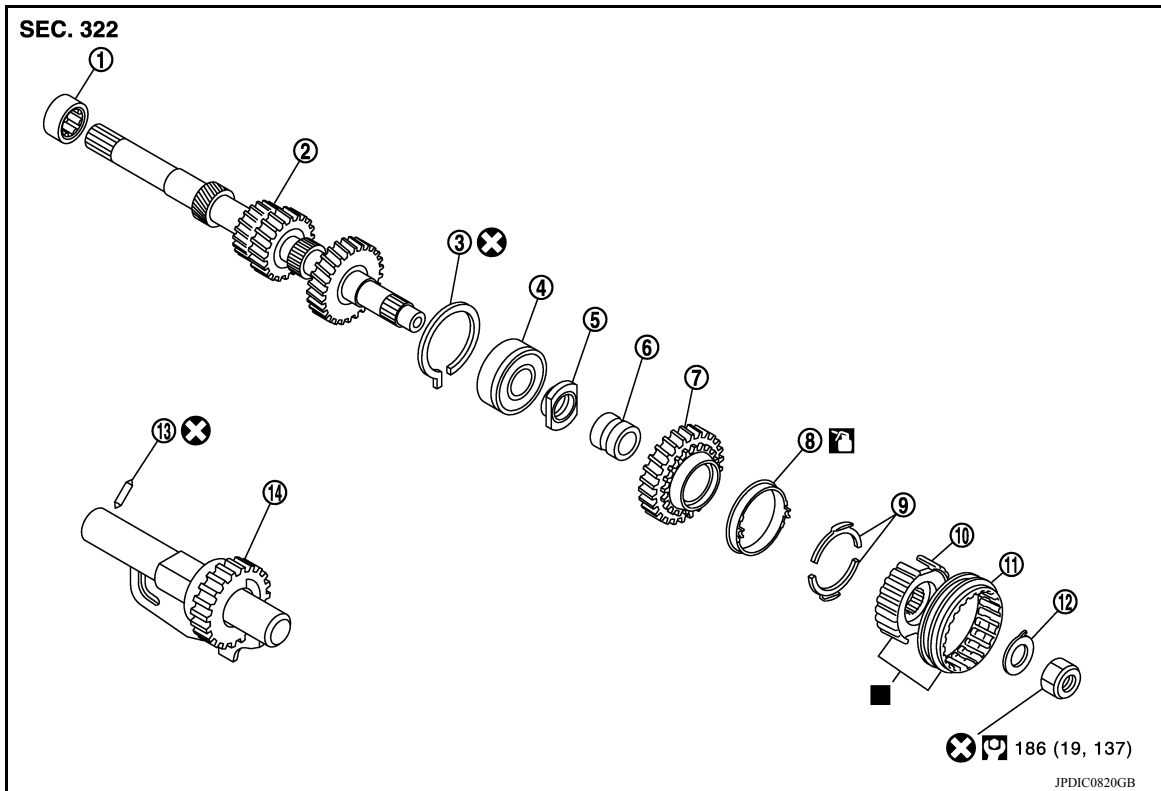

- | | | |
|----------------------------------|---------------------------------|-----------------------|
| 1. Input shaft front bearing | 2. Input shaft | 3. Snap ring |
| 4. Input shaft rear bearing | 5. Adapter plate | 6. Bushing |
| 7. 5th input gear | 8. 5th-reverse baulk ring | 9. Synchronizer lever |
| 10. 5th-reverse synchronizer hub | 11. 5th-reverse coupling sleeve | 12. Lock washer |
| 13. Retaining pin | 14. Reverse gear | |

: Apply gear oil.

: Replace the parts as a set.


MAINSHAFT AND GEAR

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P


TRANSAXLE ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

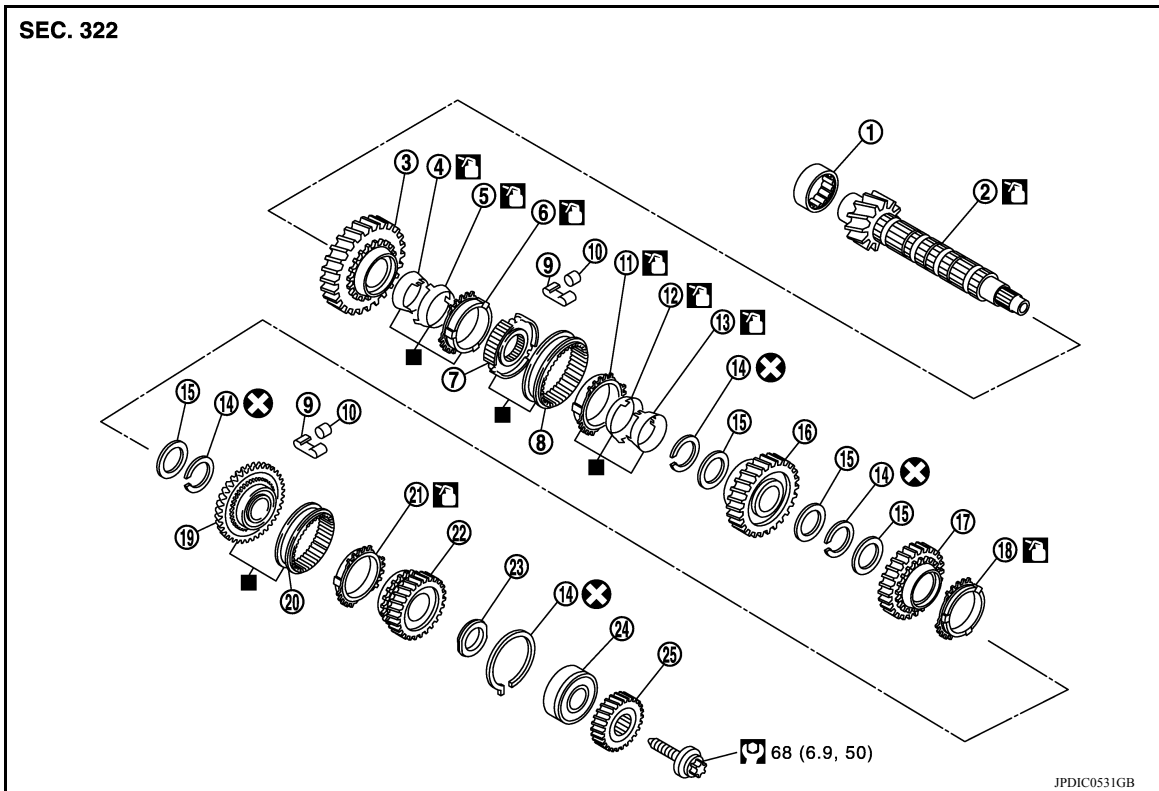

- | | | |
|------------------------------|-----------------------------|----------------------------|
| 1. Mainshaft front bearing | 2. Mainshaft | 3. 1st main gear |
| 4. 1st inner baulk ring | 5. 1st synchronizer cone | 6. 1st outer baulk ring |
| 7. 1st-2nd synchronizer hub | 8. 1st-2nd coupling sleeve | 9. Spring |
| 10. Insert key | 11. 2nd outer baulk ring | 12. 2nd synchronizer cone |
| 13. 2nd inner baulk ring | 14. Snap ring | 15. Thrust washer |
| 16. 2nd main gear | 17. 3rd main gear | 18. 3rd baulk ring |
| 19. 3rd-4th synchronizer hub | 20. 3rd-4th coupling sleeve | 21. 4th baulk ring |
| 22. 4th main gear | 23. Spacer | 24. Mainshaft rear bearing |
| 25. 5th main gear | | |

: Apply gear oil.


: Replace the parts as a set.

SHIFT FORK AND FORK ROD

TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

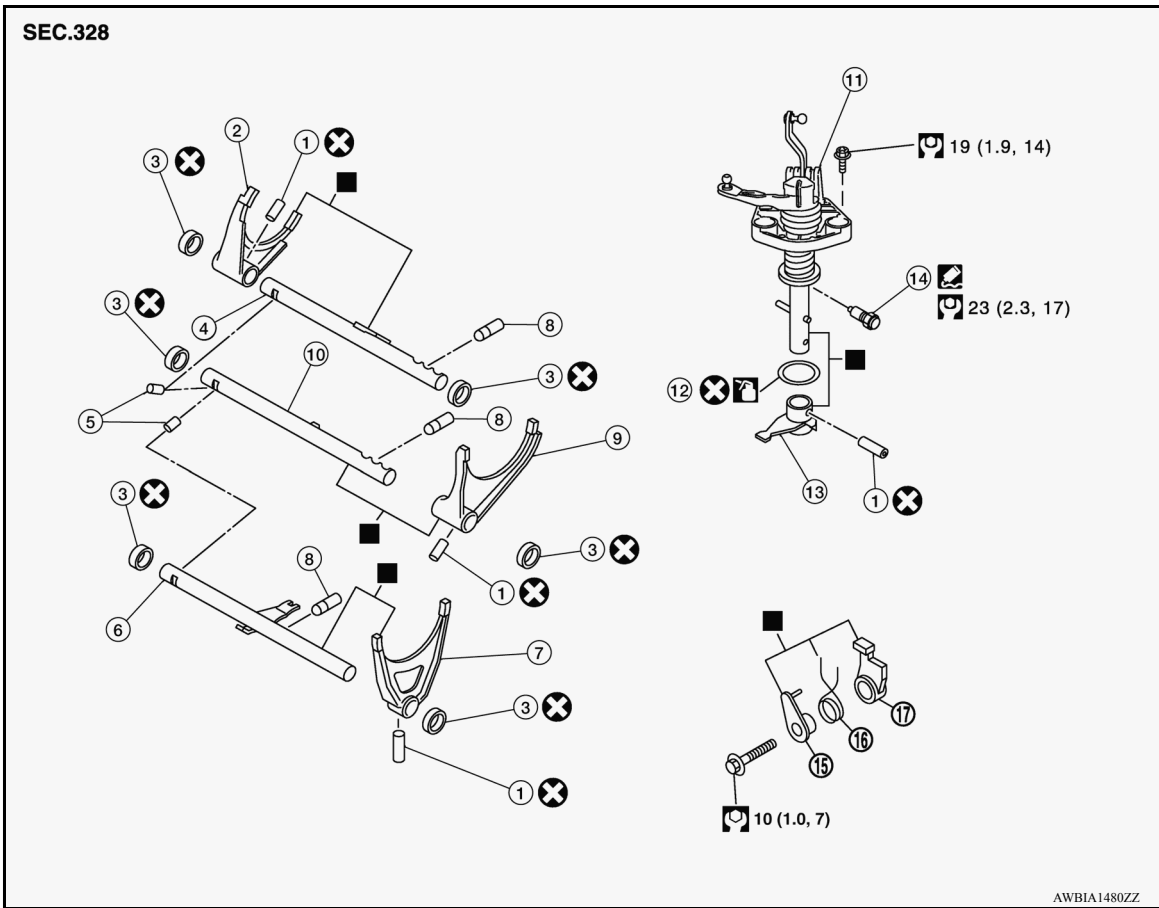

- | | | |
|---------------------------|-----------------------|-------------------------|
| 1. Retaining pin | 2. 1st-2nd shift fork | 3. Bushing |
| 4. 1st-2nd fork rod | 5. Lock pin | 6. 5th-reverse fork rod |
| 7. 5th-reverse shift fork | 8. Check ball | 9. 3rd-4th shift fork |
| 10. 3rd-4th fork rod | 11. Control shaft | 12. O-ring |
| 13. Selector | 14. Check ball plug | 15. Bushing |
| 16. Spring | 17. Gear catch | |

Apply gear oil.

Apply Genuine Silicone RTV or equivalent. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).

Replace the parts as a set.


FINAL DRIVE

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

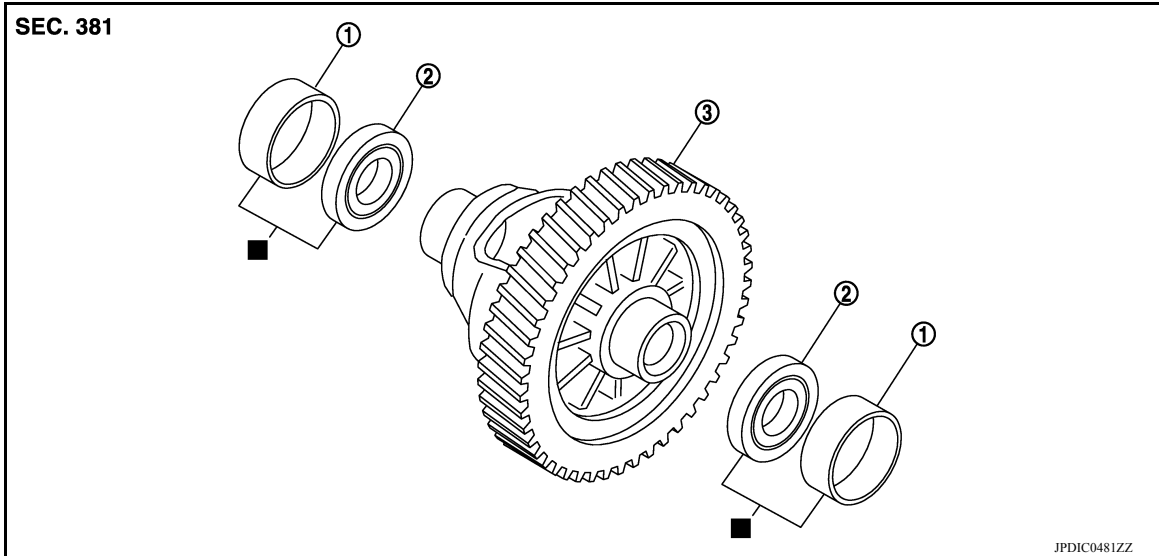

1. Differential side bearing outer race 2. Differential side bearing 3. Final drive

■: Replace the parts as a set.


Disassembly

INFOID:000000009267797

1. Remove drain plug and gasket from clutch housing using suitable tool, and drain gear oil.
2. Remove filler plug and gasket from transaxle case.
3. Remove rear housing and O-ring.

CAUTION:


Remove in direction of input shaft (←) as shown. Rear housing oil channel is inserted to input shaft center hole.

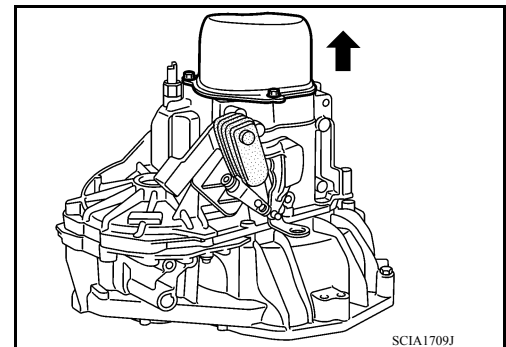

4. Move the shifter lever A (1) to the 3rd gear position.

NOTE:

- If it is not moved to the 3rd gear position, transaxle case cannot be removed from clutch housing.
- The 3rd gear position means that shifter lever A is fully rotated clockwise and it is returned approximately 10 degrees.

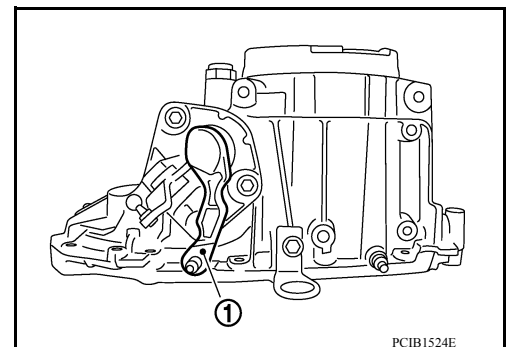

TRANSAXLE ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

5. Remove 5th-reverse shift fork (1) and 5th-reverse coupling sleeve.
- a. Remove retaining pin from 5th-reverse shift fork, using a suitable tool (A).
- b. Press 5th-reverse shift fork, shift to 5th, and then engage it with 3rd gear.
- c. Remove bolt (B).
- d. Remove nut (C) and lock washer.

CAUTION:

- Do not reuse nut.
- Do not use an impact wrench for removal. Gears may be damaged.

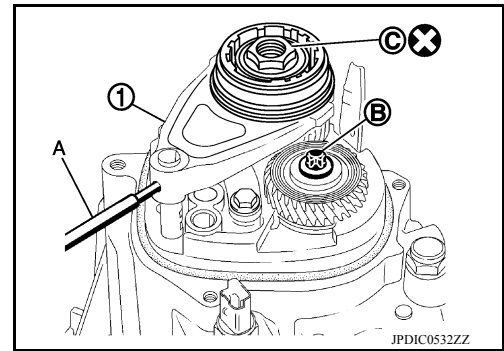


- e. Remove 5th-reverse shift fork and 5th-reverse coupling sleeve from 5th-reverse synchronizer hub.
6. Remove 5th-reverse synchronizer hub from input shaft, using a suitable tool.

CAUTION:

Set claw of suitable tool to the wider side of the hub when setting the suitable tool in 5th-reverse synchronizer hub.


7. Remove synchronizer levers, 5th-reverse baulk ring, 5th input gear, bushing, and adapter plate from input shaft.

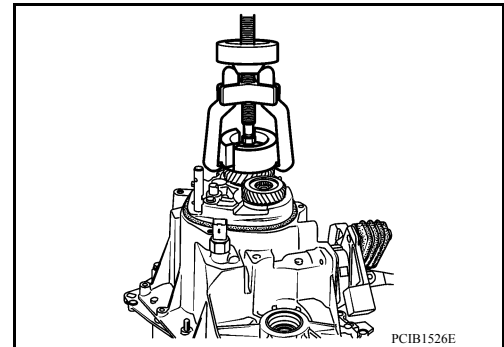


8. Remove 5th main gear from mainshaft, using Tools.

Tool number (A): KV32300QAC (—)

(B): KV32300QAD (—)

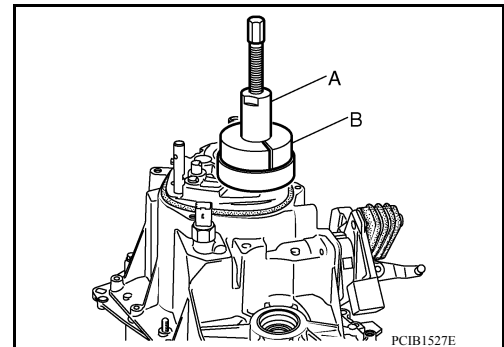

9. Remove position switch from transaxle case.

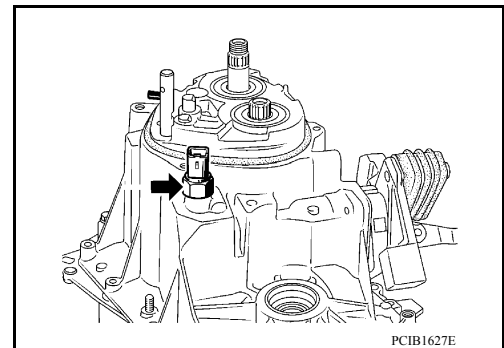


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSAXLE ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]


10. Remove transaxle case bolts (←).
11. Remove transaxle case from clutch housing.

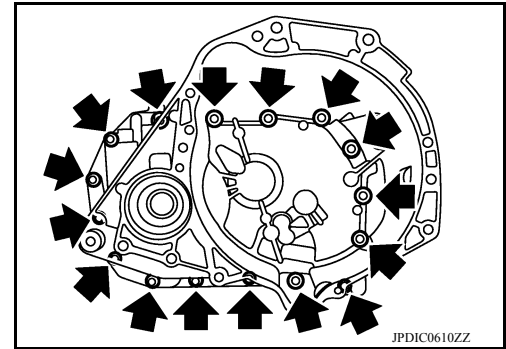



12. Remove spacer (1) and 4th main gear (2) from mainshaft.

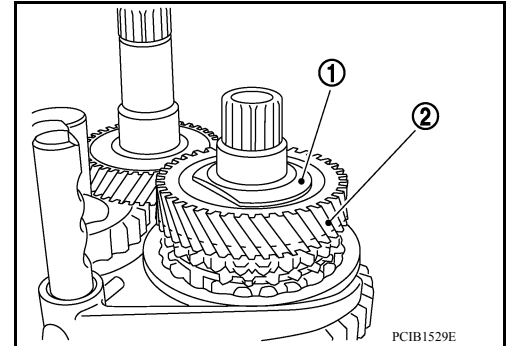

13. Remove 5th-reverse fork rod (1).
 - a. Pull 5th-reverse fork rod up until it contacts claw (⊖) of reverse gear (2).
 - b. Press gear portion of reverse gear down, and then remove 5th-reverse fork rod from clutch housing.

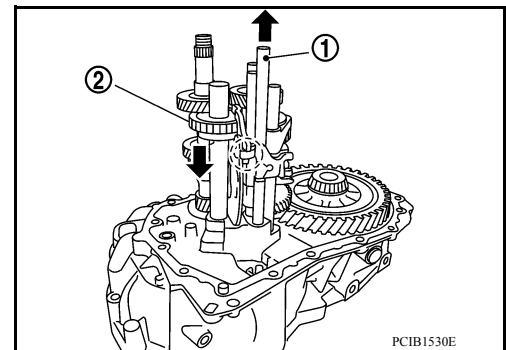

14. Remove 3rd-4th fork rod assembly (1), 3rd-4th coupling sleeve (2), and input shaft assembly (3).
 - a. Remove 4th baulk ring, insert keys, and springs from mainshaft.
 - b. Pull gear of reverse gear (4) up.
 - c. Pull 1st-2nd fork rod (5) up, and then maintain the neutral position.
 - d. Remove 3rd-4th fork rod assembly, 3rd-4th coupling sleeve, and input shaft assembly from clutch housing at the same time.
15. Remove retaining pin from 3rd-4th shift fork, using a pin punch.
16. Remove 3rd-4th shift fork from 3rd-4th shift fork rod.
17. Remove lock pins (←) from clutch housing.

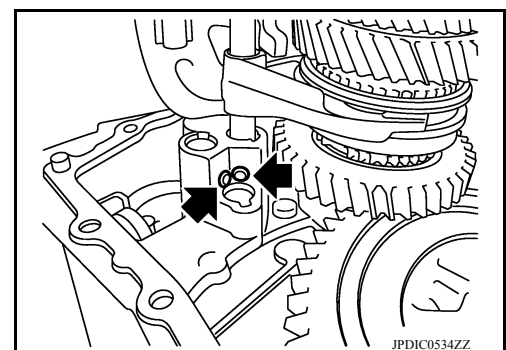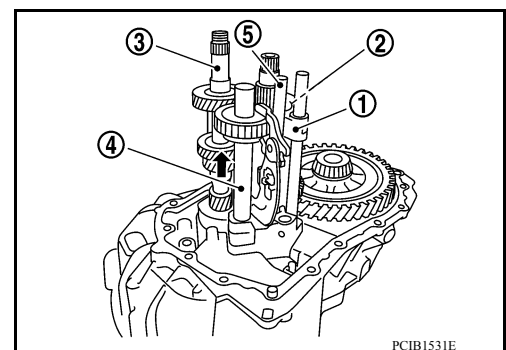


TRANSAXLE ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]


18. Remove 1st-2nd fork rod assembly (1) and mainshaft assembly (2) from clutch housing at the same time.
19. Remove retaining pin from 1st-2nd shift fork, using suitable tool.
20. Remove 1st-2nd shift fork from 1st-2nd shift fork rod.

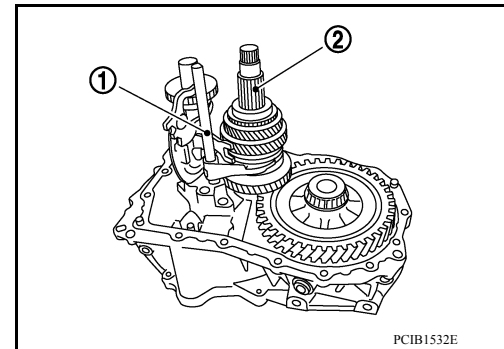


21. Remove retaining pin from reverse gear, using suitable tool.
22. Remove reverse gear from clutch housing.

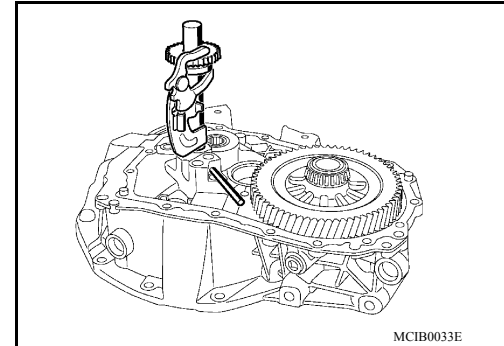

23. Remove final drive (1) from clutch housing.
24. Remove magnet and dowel pins (2) from clutch housing.

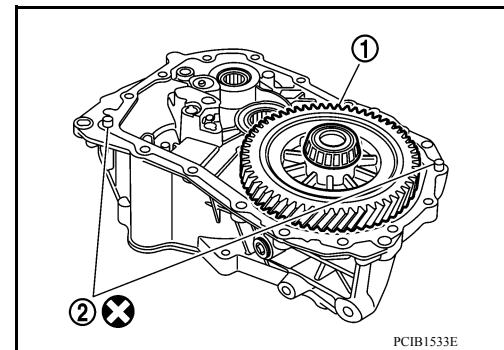

25. Remove plug (1) from clutch housing (2).
 - (C): Plug
 - (D): 15 mm (0.59 in)
 - (E): 45 mm (1.77 in)
 - (F): 95 mm (3.74 in) or more
 - (G): 4 mm (0.16 in)
- a. Install suitable tool (A) and (B) to the holes of clutch housing as shown.
- b. While pressing the suitable tool (A) and (B) in the direction of the arrows shown, remove plug from clutch housing.

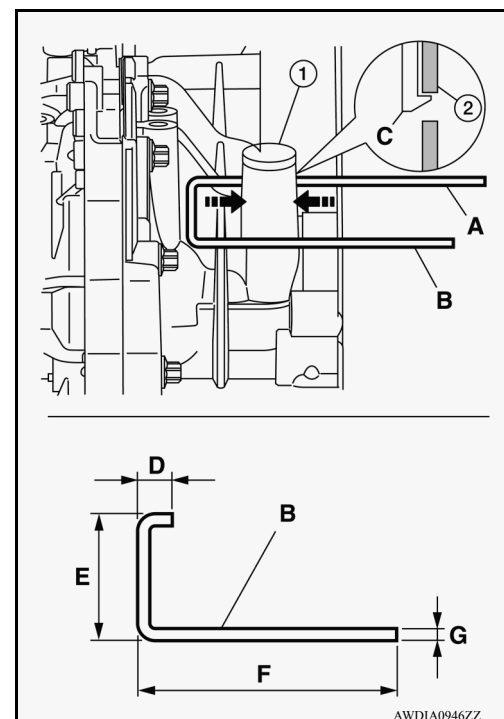


TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

26. Remove input shaft front bearing from clutch housing, using suitable tool.

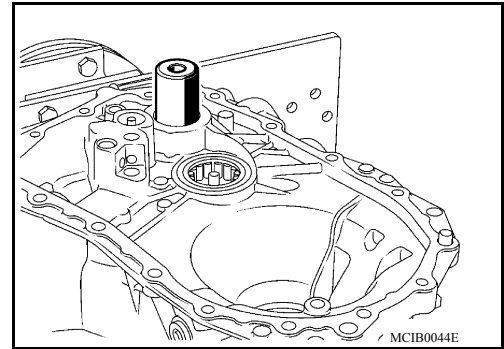

27. Cut oil channel tube at the base.

CAUTION:


Do not reuse oil channel.

NOTE:


Oil channel will be removed with the mainshaft front bearing.

28. Remove mainshaft front bearing and oil channel from clutch housing, using Tool (A).

Tool number : KV111011S0 (—)

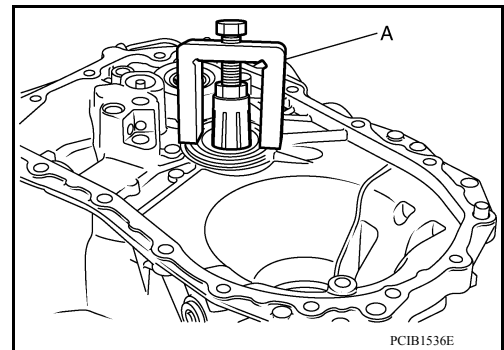


29. Remove bushings (1) from clutch housing, using suitable tool.

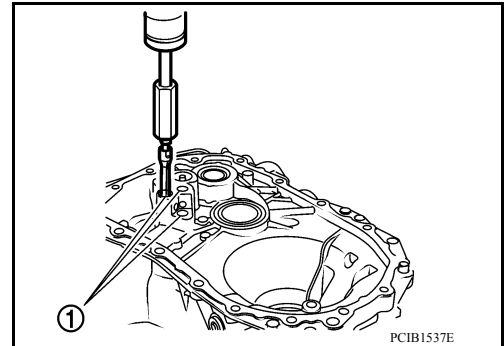

30. Remove differential side oil seals (1) from clutch housing and transaxle case, using suitable tool.

CAUTION:

Do not damage transaxle case and clutch housing.

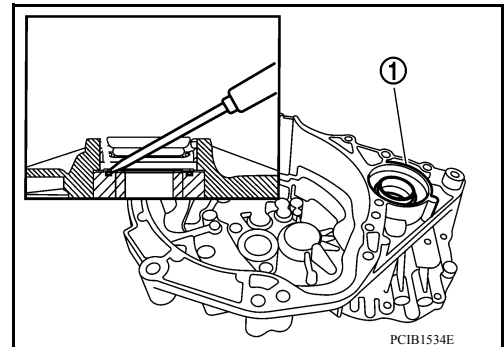

TRANSAXLE ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

31. Remove differential side bearing outer races (1) from clutch housing and transaxle case, using suitable tool.


CAUTION:

Do not damage transaxle case and clutch housing.

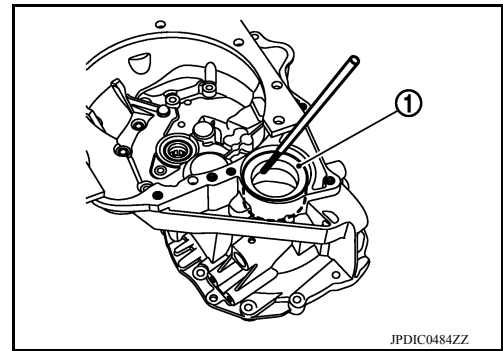

32. Pull 2-way connector (1) straight out to remove it from air breather inner tube (2).

33. Remove air breather inner tube from transaxle case.

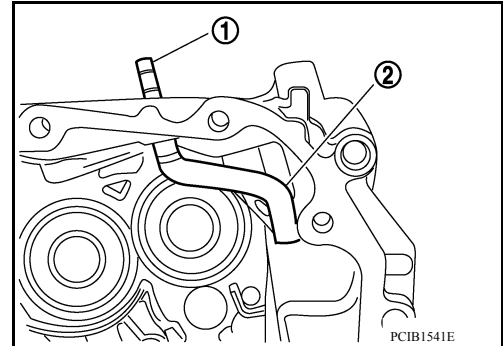


34. Remove bushings (1) from transaxle case, using suitable tool.

35. Remove retaining pin (←) from selector, using suitable tool.


36. Remove selector from control shaft.

37. Remove oil gutter from transaxle case.

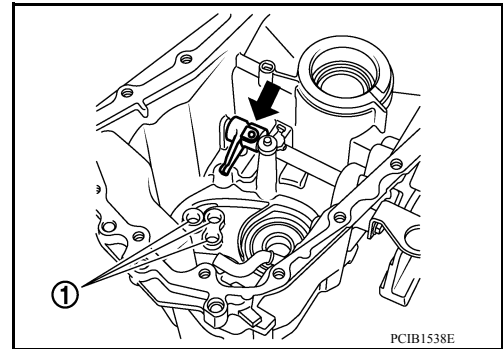


38. Remove bolt (←), and then remove bushing, spring, and gear catch from transaxle case.

39. Remove check ball plug from transaxle case.

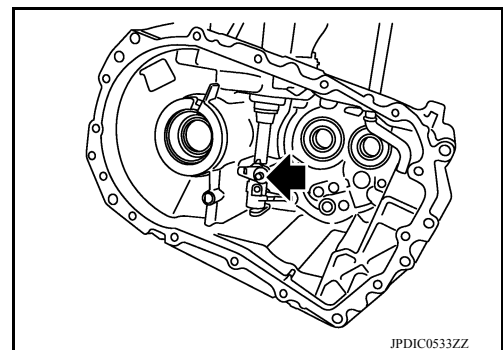

40. Remove bolts (←), and then remove control shaft (1) from transaxle case.

41. Remove O-ring from control shaft.

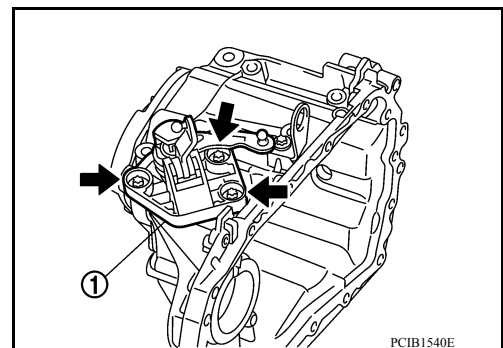

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSAXLE ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

42. Expand snap rings (1) and remove input shaft rear bearing and mainshaft rear bearing from transaxle case, using Tool (A).

Tool number : ST35300000 (—)

43. Remove snap rings from transaxle case.
44. Remove check balls (2) from transaxle case.

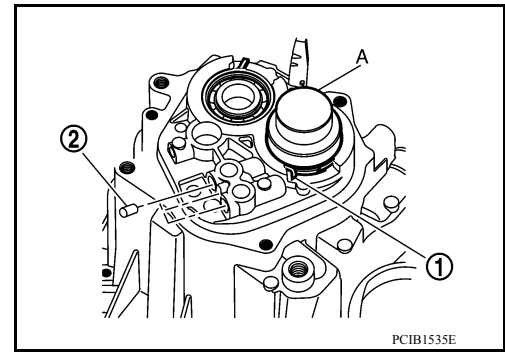


Assembly

INFOID:000000009267798

1. Install snap rings (1) along transaxle case groove so that notch mates with housing as shown.

CAUTION:

- Do not reuse snap rings.
- Check snap ring installation direction.
- Be sure to align notch with housing.

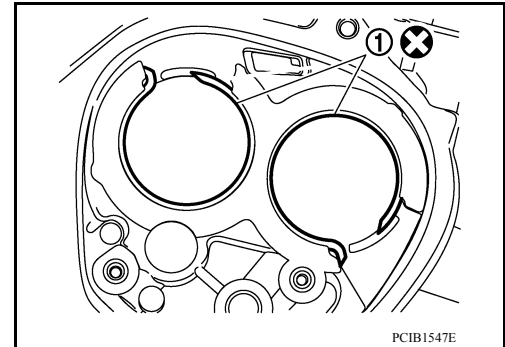


2. Expand snap rings (1) and install input shaft rear bearing and mainshaft rear bearing to transaxle case, using Tool (A).

CAUTION:

- Check that snap ring is correctly installed within bearing groove.

Tool number : ST35300000 (—)

3. Install check balls (2) to transaxle case.

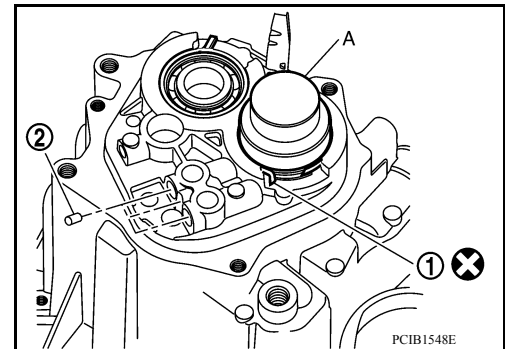

4. Install bushings (1) until they reach transaxle case, using suitable tool (A).


CAUTION:

- Do not reuse bushings.

5. Apply gear oil to O-ring, and then install it to control shaft.

CAUTION:

- Do not reuse O-ring.

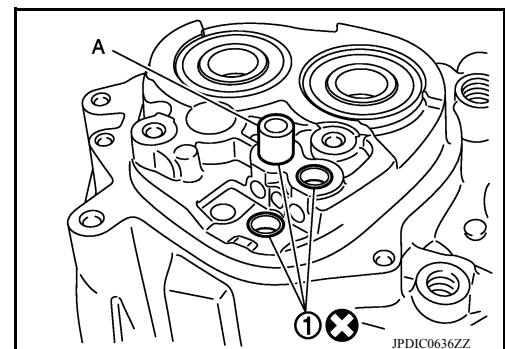

TRANSAXLE ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

6. Install control shaft (1) to transaxle case, and tighten bolts (←) to the specified torque.

CAUTION:


Replace control shaft and selector as a set.

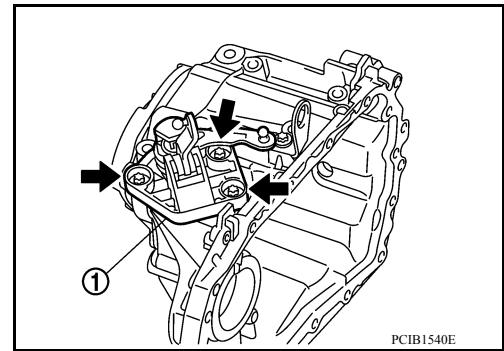

7. Install selector to control shaft, and then install retaining pin (←) to selector, using suitable tool.

CAUTION:

- Be careful with the orientation of selector.
- Replace control shaft and selector as a set.
- Do not reuse retaining pin.

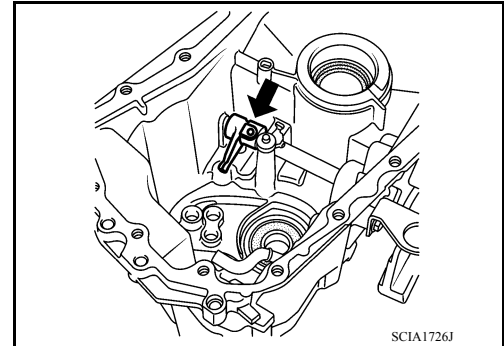


8. Install gear catch, spring, and bushing to transaxle case, and then tighten bolt (←) to the specified torque.

CAUTION:

Replace gear catch, spring, and bushing as a set.

9. Install oil gutter to transaxle case.

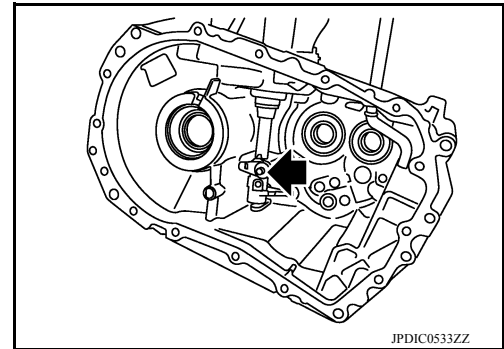

10. Install air breather inner tube (2) to transaxle case.

CAUTION:

Do not damage air breather inner tube.


NOTE:

It is easier to install when air breather inner tube end is wrapped and narrowed by tape. Remove tape after installation.

11. Insert 2-way connector (1) straight, and then install it to air breather inner tube.

CAUTION:

Check air breather inner tube for twists after installing.

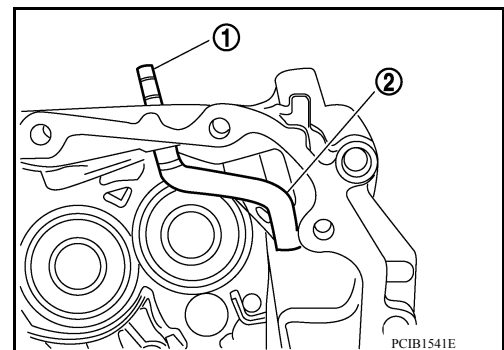

12. Install differential side oil seals (1) to clutch housing and transaxle case, using Tool.


(B) : Transaxle case side

(C) : Clutch housing side

Dimension (L1) : 5.7 – 6.3 mm (0.224 – 0.248 in)

Dimension (L2) : 2.4 – 3.0 mm (0.094 – 0.118 in)

Tool number : KV32500QAA (—)

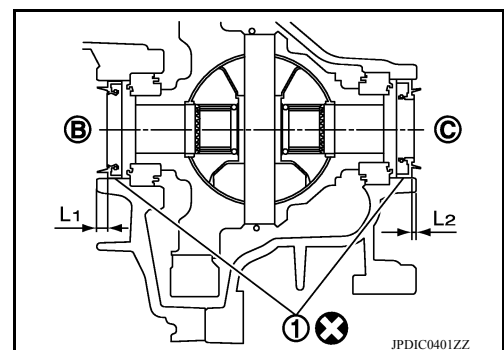

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

CAUTION:


- Do not reuse differential side oil seal.
- Do not tilt differential side oil seal.
- Do not damage clutch housing and transaxle case.

13. Install differential side bearing outer races until they reach clutch housing and transaxle case, using Tool (A).

CAUTION:

Replace differential side bearing outer race and differential side bearing as a set.

Tool number : KV32300QAE (—)

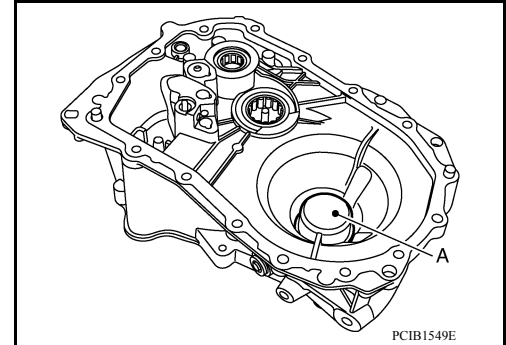

14. Install bushings (1) until they reach clutch housing, using suitable tool (A).


CAUTION:

Do not reuse bushings.

15. Install oil channel to clutch housing.


CAUTION:

Do not reuse oil channel.

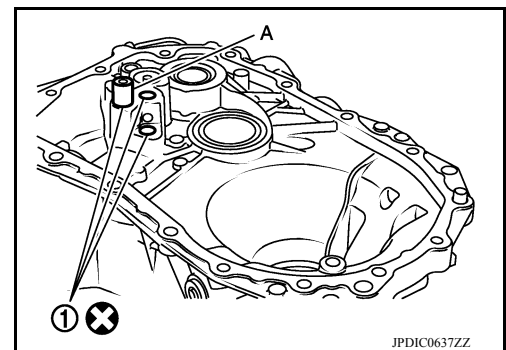

16. Install mainshaft front bearing so that it becomes even with clutch housing surface, using Tool (A).


Tool number : ST33400001 (—)

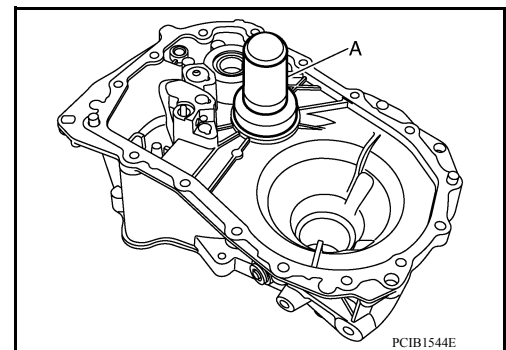

17. Install input shaft front bearing so that it becomes even with clutch housing surface, using Tool (A).

Tool number : KV40100900 (—)

18. Install pinion gear, pinion shaft, and plug to clutch housing.

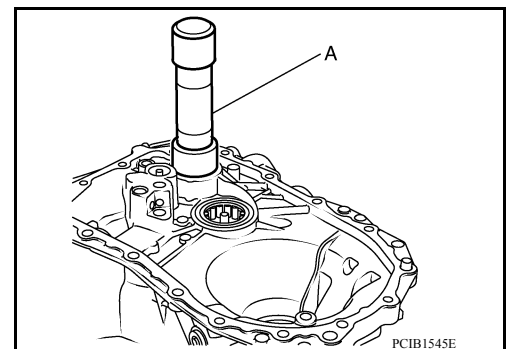

TRANSAXLE ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

19. Install final drive (1) to clutch housing.
20. Install dowel pins (2) and magnet to clutch housing.

CAUTION:

Do not reuse dowel pins.

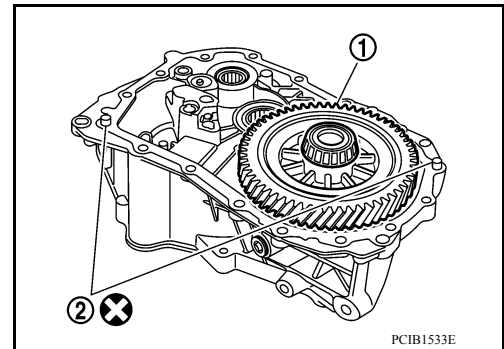

21. Install reverse gear to clutch housing, and then install retaining pin to clutch housing, using suitable tool.


CAUTION:

Do not reuse retaining pin.


22. Install 1st-2nd shift fork to 1st-2nd fork rod, and then install retaining pin to 1st-2nd shift fork.

CAUTION:

- Do not reuse retaining pin.
- Replace 1st-2nd fork rod and 1st-2nd shift fork as a set.

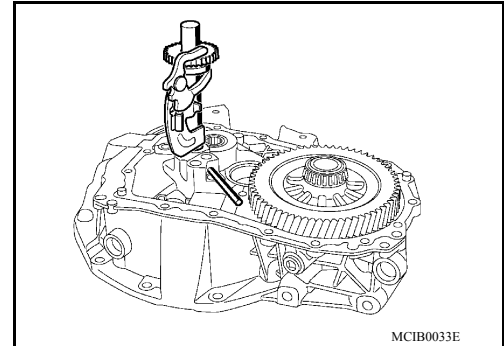


23. Set 1st-2nd fork rod assembly (1) onto mainshaft assembly (2), and then install them to clutch housing.

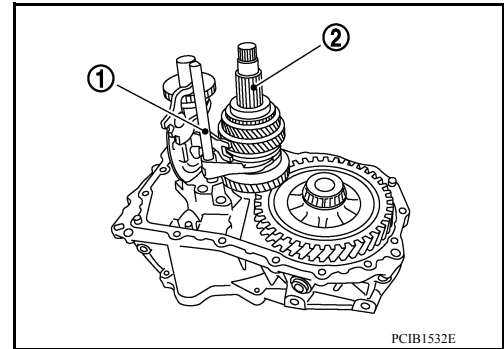

24. Install lock pins (←) to clutch housing.
25. Install 3rd-4th shift fork to 3rd-4th fork rod, and then install retaining pin to 3rd-4th shift fork.

CAUTION:

- Do not reuse retaining pin.
- Replace 3rd-4th fork rod and 3rd-4th shift fork as a set.

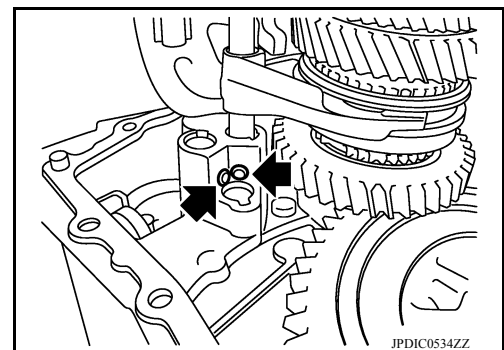


26. Install 3rd-4th fork rod assembly (1), 3rd-4th coupling sleeve (2), and input shaft assembly (3) to clutch housing.

- a. Pull 1st-2nd fork rod (4) up, and then maintain the neutral position.
- b. Set 3rd-4th fork rod assembly onto 3rd-4th coupling sleeve, and then install them together with input shaft assembly to clutch housing.

CAUTION:

- Set lock pin (3rd-4th fork rod side) onto 1st-2nd fork rod groove and then install 3rd-4th fork rod assembly.

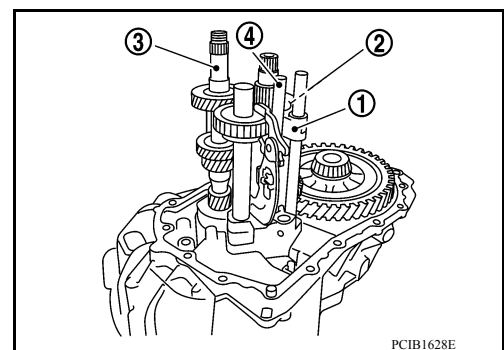

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[5MT: RS5F91R]

- Be careful with the orientation of 3rd-4th coupling sleeve.


(A) : 4th main gear side

(B) : 3rd main gear side

- Install 3rd input gear of input shaft assembly so that it is set under reverse main gear of 3rd-4th coupling sleeve.
- Replace 3rd-4th coupling sleeve and 3rd-4th synchronizer hub as a set.

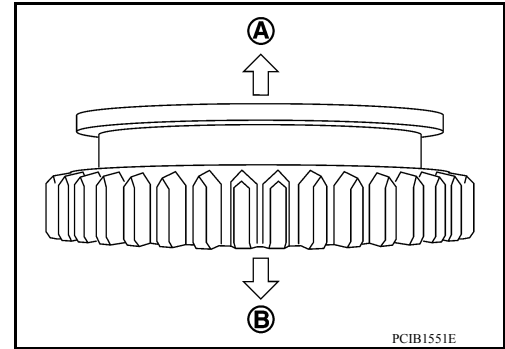

- c. Install springs and insert keys to 3rd-4th synchronizer hub.
- d. Apply gear oil to 4th baulk ring.
- e. Install 4th baulk ring.

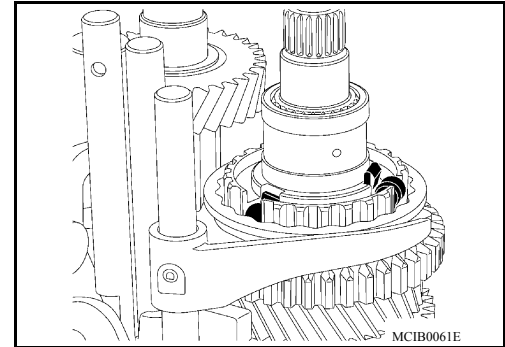


27. Install 5th-reverse fork rod (1) to clutch housing.

CAUTION:

Replace 5th-reverse fork rod and 5th-reverse shift fork as a set.


- a. Pull gear of reverse gear (2) up.
- b. Temporarily install 5th-reverse fork rod to clutch housing.

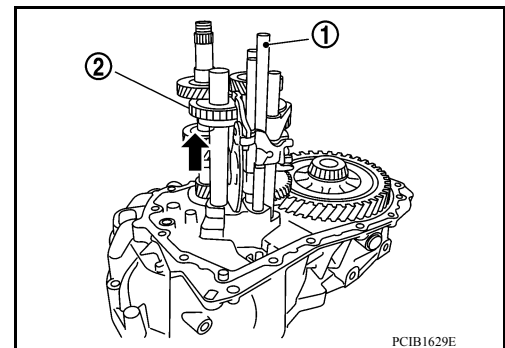

- c. Press gear of reverse gear (1) down and then install 5th-reverse fork rod (2) to clutch housing.

CAUTION:

Set levers of 5th-reverse fork rod so as to align with reverse gear groove (☐).

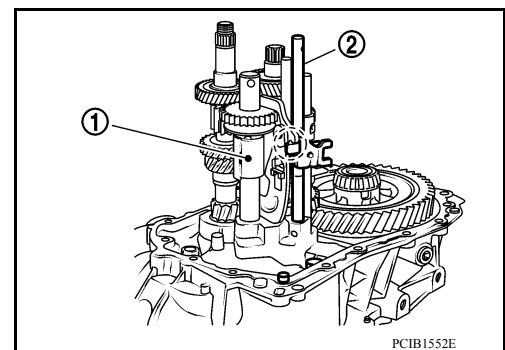


28. Install 4th main gear (2) and spacer (1) to mainshaft.

CAUTION:

Install spacer so that spacer protrusion faces rear side of transaxle.

29. Press 3rd-4th shift fork down and then shift 3rd-4th coupling sleeve to 3rd gear side.

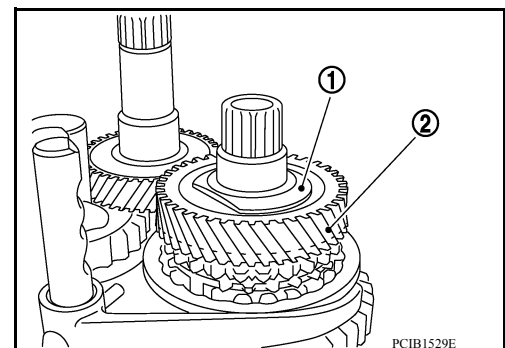

TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

30. Move the shifter lever A (1) to the 3rd gear position.


NOTE:

- If it is not moved to the 3rd gear position, transaxle case cannot be installed to clutch housing.
- The 3rd gear position means that shifter lever A is fully rotated clockwise and it is returned approximately 10 degrees.

31. Apply recommended sealant to transaxle case mating surface of clutch housing.

CAUTION:

- Use Genuine Silicone RTV or equivalent. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).
- Do not allow old Silicone RTV, moisture, oil, or foreign matter to remain on mating surface.
- Check that mating surface is not damaged.
- Apply a continuous bead of Silicone RTV to the mating surface.

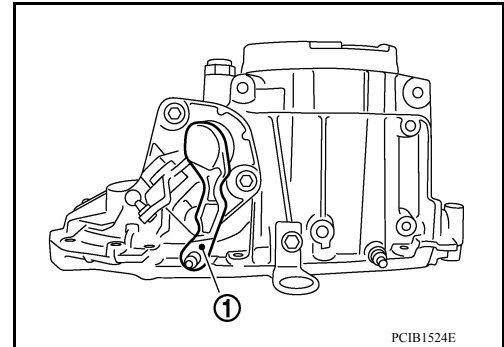


32. Install transaxle case to clutch housing. If it is difficult to install, slightly rotate shifter lever A counterclockwise, and then install.

- (1) : Selector
(2) : Shift fork

CAUTION:

- Do not damage Silicone RTV bead with transaxle case or other objects during installation.
- Be careful to align the lever of 5th-reverse fork rod with reverse gear groove.

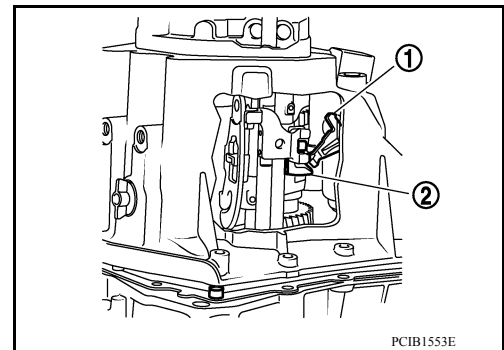

33. Rotate input shaft so that bearing and shaft fit each other, and then tighten transaxle bolts (←) to the specified torque.



34. Apply recommended sealant to position switch thread and check ball plug thread. Install to transaxle case and tighten to specified torque.

CAUTION:

- Use Genuine Silicone RTV or equivalent. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).
- Do not allow old Silicone RTV, moisture, oil, or foreign matter to remain on thread.

35. Apply gear oil to mainshaft spline.

36. Install 5th main gear (1) to mainshaft, using a suitable bolt (A) [M10 x 1.0] and a suitable nut (B).

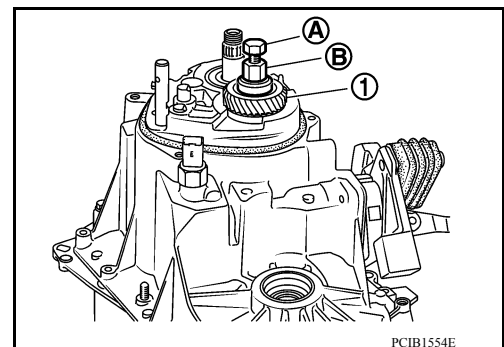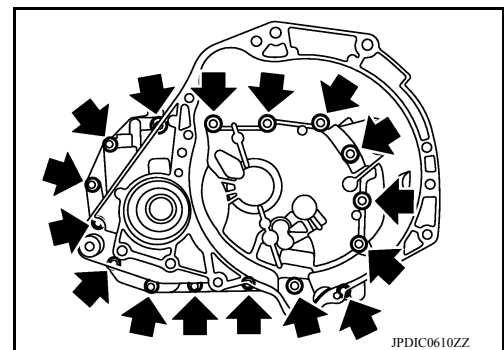

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[5MT: RS5F91R]

37. Install adapter plate (1), bushing (2), and 5th input gear (3) to input shaft.

CAUTION:

Be careful with the orientation of adapter plate.

⇐ : Transaxle case side

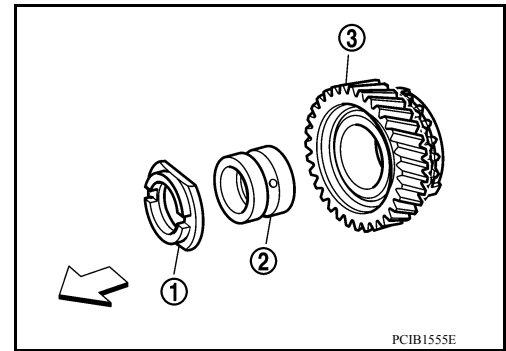

38. Install 5th-reverse synchronizer hub, 5th-reverse coupling sleeve, and 5th-reverse shift fork.

a. Apply gear oil to 5th-reverse baulk ring.

b. Install 5th-reverse baulk ring (1) to 5th input gear.

⇐ : 5th-reverse synchronizer hub side

CAUTION:

Be careful with the orientation of 5th-reverse baulk ring.

c. Install synchronizer levers (2) to 5th-reverse synchronizer hub (3).

CAUTION:



- Replace 5th-reverse synchronizer hub and 5th-reverse coupling sleeve as a set.
- Be careful with the orientation of synchronizer lever.

d. Install 5th-reverse synchronizer hub assembly and lock washer to input shaft.

CAUTION:

- Be careful with the orientation of 5th-reverse synchronizer hub.


⇐ : 5th input gear side

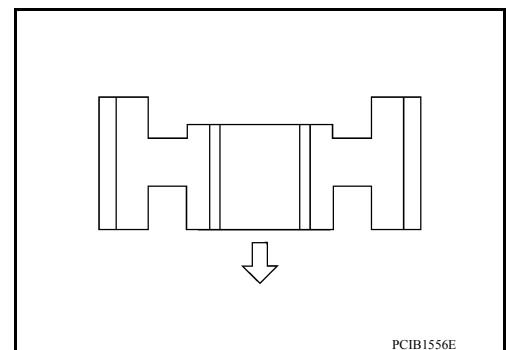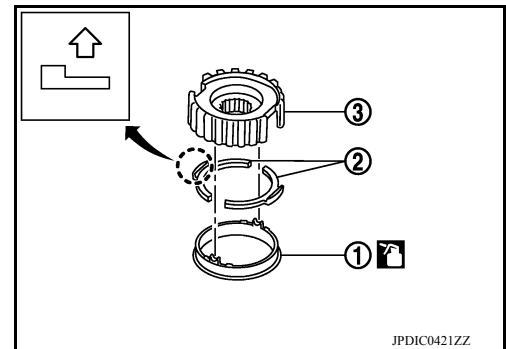

- Do not allow synchronizer lever (1) to overlap 5th-reverse baulk ring protrusion (A).

(2) : 5th-reverse baulk ring

(3) : 5th-reverse synchronizer hub

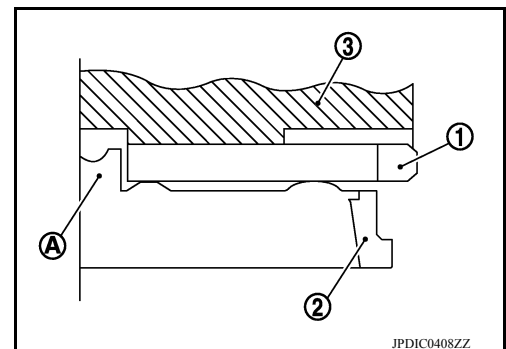

TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[5MT: RS5F91R]

- e. Set 5th-reverse shift fork (1) to 5th-reverse coupling sleeve, and then install them to 5th-reverse fork rod and input shaft.

CAUTION:

Do not reuse nut.

- (A) : Suitable tool
(B) : Bolt
(C) : Nut

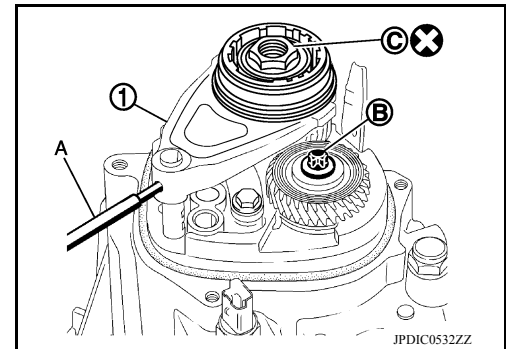


CAUTION:

- Be careful with the orientation of 5th-reverse coupling sleeve.

← : 5th input gear side

- Replace 5th-reverse synchronizer hub and 5th-reverse coupling sleeve as a set.
- Replace 5th-reverse shift fork and 5th-reverse fork rod as a set.

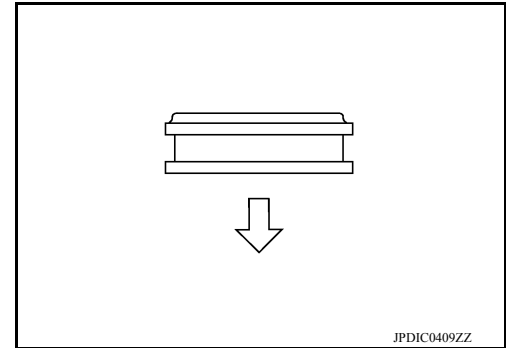

- f. Check that the shifter lever A is in the 3rd position. Press 5th-reverse shift fork (1) and move shifter lever A to 5th gear.

(A) : Suitable tool

- g. Tighten bolt (B) to the specified torque.
h. Tighten nut (C) to the specified torque.

CAUTION:

Do not reuse nut.

- i. Install retaining pin to 5th-reverse shift fork, using suitable tool.

CAUTION:



Do not reuse retaining pin.

39. Move shifter lever A (1) to the neutral position.

40. Install O-ring to rear housing.

CAUTION:

Do not reuse O-ring.

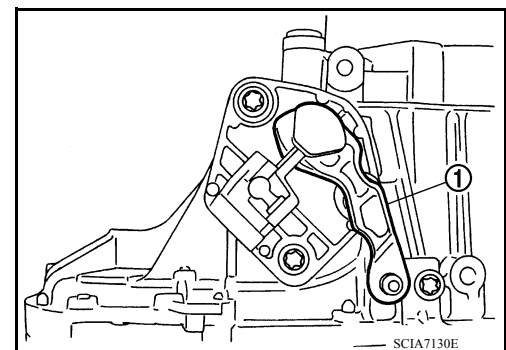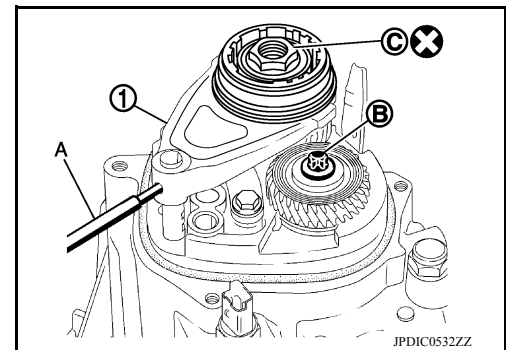

TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

41. Install rear housing to transaxle case, and tighten bolts (←) to the specified torque.

CAUTION:

- Do not reuse O-ring.
- Do not pinch O-ring when installing rear housing.

42. Install drain plug.

a. Install gasket to drain plug.

CAUTION:

Do not reuse gasket.

b. Install drain plug to clutch housing, using suitable tool.

c. Tighten drain plug to the specified torque.

43. Install filler plug.

a. Install gasket to filler plug, and then install filler plug to transaxle case.


CAUTION:

Do not reuse gasket.

b. Tighten filler plug to the specified torque.

CAUTION:

Fill with gear oil before tightening filler plug to the specified torque.

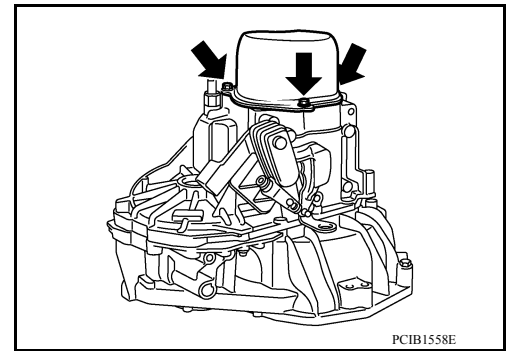


Inspection

INFOID:000000009267799

INSPECTION AFTER DISASSEMBLY

Check contact surface and sliding surface of fork rod and shift fork for excessive wear, uneven wear, and damage. Replace if necessary.

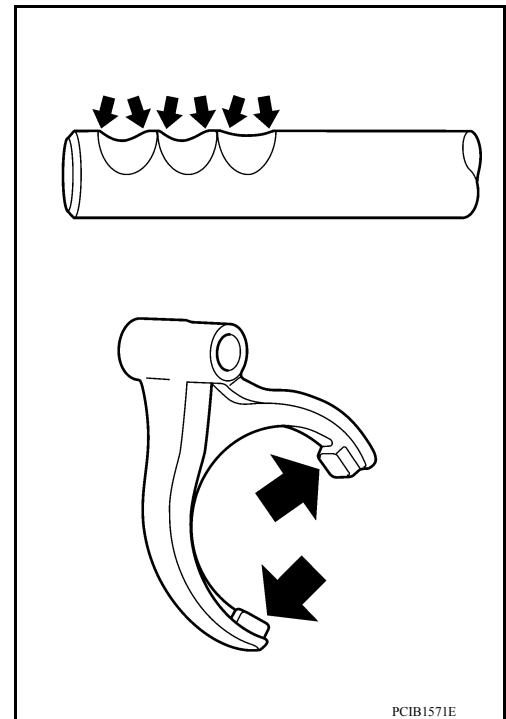

INPUT SHAFT AND GEAR


< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

INPUT SHAFT AND GEAR

Exploded View

INFOID:000000009267800

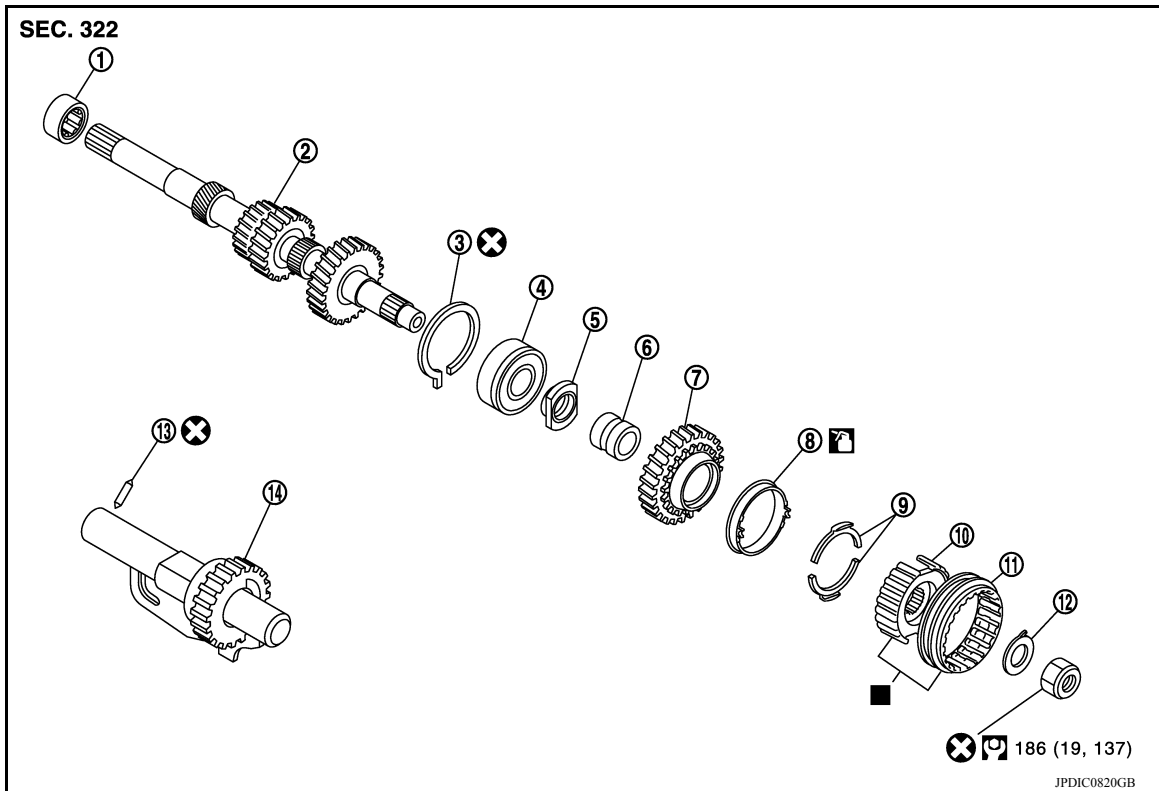

- | | | |
|----------------------------------|---------------------------------|-----------------------|
| 1. Input shaft front bearing | 2. Input shaft | 3. Snap ring |
| 4. Input shaft rear bearing | 5. Adapter plate | 6. Bushing |
| 7. 5th input gear | 8. 5th-reverse baulk ring | 9. Synchronizer lever |
| 10. 5th-reverse synchronizer hub | 11. 5th-reverse coupling sleeve | 12. Lock washer |
| 13. Retaining pin | 14. Reverse gear | |

: Apply gear oil.

: Replace the parts as a set.

Disassembly

INFOID:000000009267801

Refer to [TM-34, "Disassembly"](#) for disassembly procedure.

Assembly

INFOID:000000009267802

Refer to [TM-40, "Assembly"](#) for assembly procedure.

Inspection

INFOID:000000009267803

INSPECTION AFTER DISASSEMBLY

Input Shaft and Gear


INPUT SHAFT AND GEAR

< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

Check the following items and replace if necessary.


- Damage, peeling, uneven wear, and distortion of shaft.
- Excessive wear, damage, and peeling of gear.

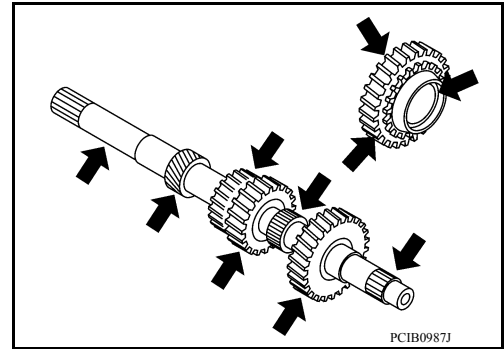


Synchronizer

Check for the following and replace if necessary.

- Contact surface breakage, damage, and unusual wear of coupling sleeve, synchronizer hub, and synchronizer lever.
- Coupling sleeve and synchronizer hub move smoothly.

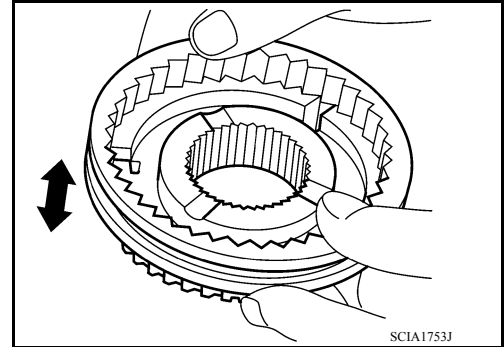


- Breakage, damage, and excessive wear of baulk ring cam surface and synchronizer lever contact surface.

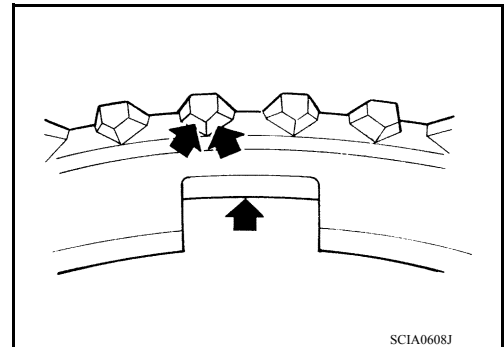

Bearing

Check bearing for damage and rough rotation. Replace if necessary.

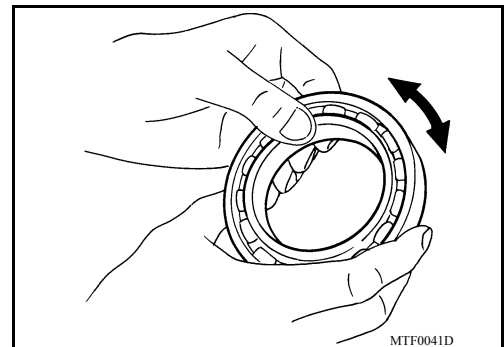

MAINSHAFT AND GEAR


< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]


MAINSHAFT AND GEAR


Exploded View

INFOID:000000009267804

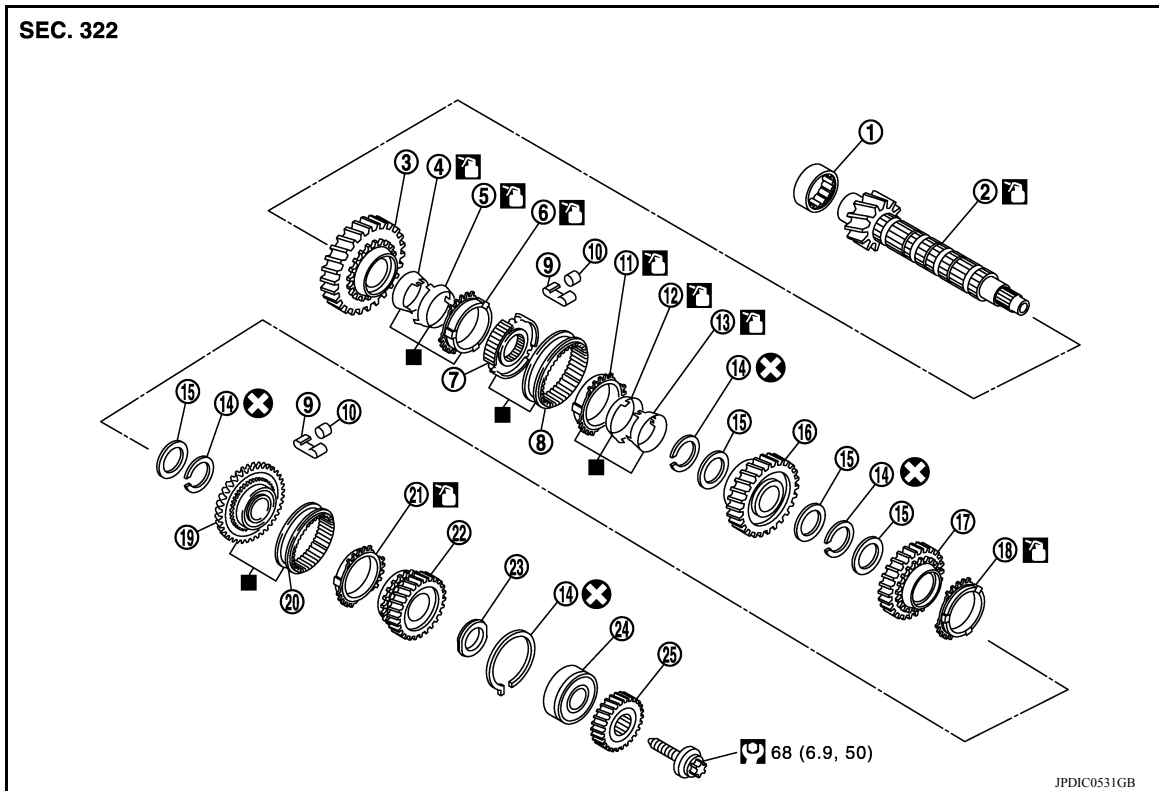

- | | | |
|------------------------------|-----------------------------|----------------------------|
| 1. Mainshaft front bearing | 2. Mainshaft | 3. 1st main gear |
| 4. 1st inner baulk ring | 5. 1st synchronizer cone | 6. 1st outer baulk ring |
| 7. 1st-2nd synchronizer hub | 8. 1st-2nd coupling sleeve | 9. Spring |
| 10. Insert key | 11. 2nd outer baulk ring | 12. 2nd synchronizer cone |
| 13. 2nd inner baulk ring | 14. Snap ring | 15. Thrust washer |
| 16. 2nd main gear | 17. 3rd main gear | 18. 3rd baulk ring |
| 19. 3rd-4th synchronizer hub | 20. 3rd-4th coupling sleeve | 21. 4th baulk ring |
| 22. 4th main gear | 23. Spacer | 24. Mainshaft rear bearing |
| 25. 5th main gear | | |

: Apply gear oil.

: Replace the parts as a set.

Disassembly

INFOID:000000009267805

CAUTION:

- Secure mainshaft in a vise using blocks of wood to prevent damage, and then remove gears and snap rings.


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

MAINSHAFT AND GEAR

< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]


- For removal of snap ring, set snap ring pliers and flat pliers at both sides of snap ring. While expanding snap ring with snap ring pliers, remove snap ring with flat pliers.
- Mark gear component direction for assembly without damaging component contact locations.

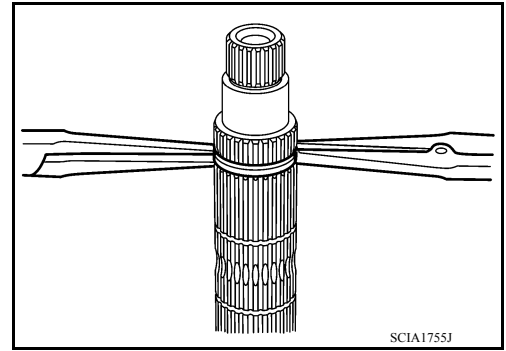


1. Remove 3rd-4th synchronizer hub and 3rd baulk ring.
2. Remove snap ring (1) and thrust washer (2).

CAUTION:

Do not reuse snap ring.

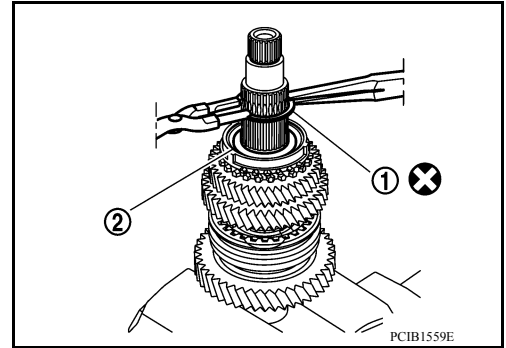


3. Remove 3rd main gear (1) and thrust washer (2).

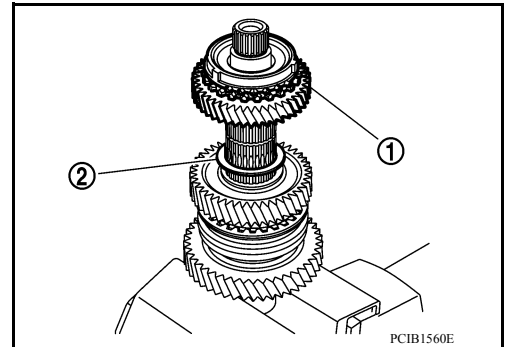

4. Remove snap ring (1) and thrust washer (2).

CAUTION:

Do not reuse snap ring.

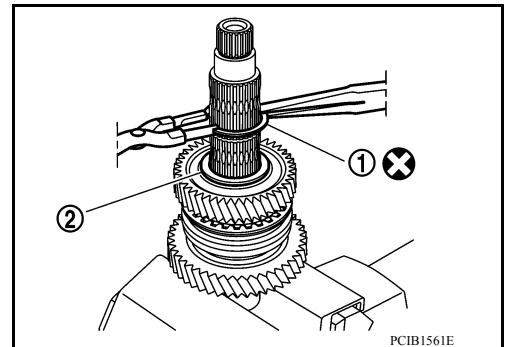


MAINSHAFT AND GEAR


< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

5. Remove 2nd main gear (1) and thrust washer (2).

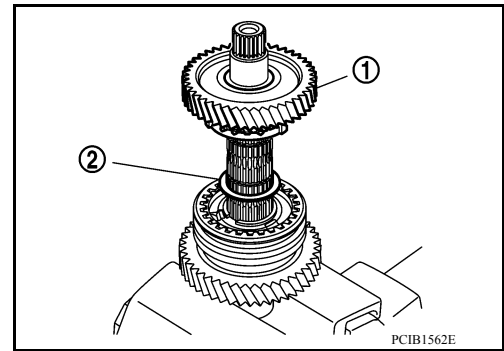

6. Remove snap ring (1), and then remove 2nd inner baulk ring, 2nd synchronizer cone, and 2nd outer baulk ring.
7. Remove 1st-2nd coupling sleeve, insert keys, springs, and 1st-2nd synchronizer hub.
8. Remove 1st outer baulk ring, 1st synchronizer cone, 1st inner baulk ring, and 1st main gear (2).

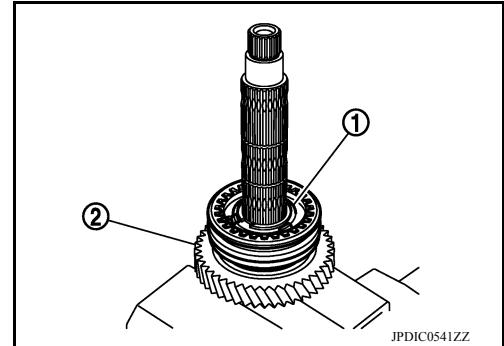


INFOID:000000009267806

Assembly

Assembly is in the reverse order of disassembly.

CAUTION:


- Do not reuse snap ring.
- For installation of snap ring, set snap ring pliers and flat pliers at both sides of snap ring. While expanding snap ring with snap ring pliers, remove snap ring with flat pliers.
- Check that snap ring is securely installed to the groove.
- Apply gear oil to 1st outer baulk ring, 1st synchronizer cone, 1st inner baulk ring, 2nd outer baulk ring, 2nd synchronizer cone, 2nd inner baulk ring, and 3rd baulk ring.
- Replace 1st outer baulk ring, 1st synchronizer cone, and 1st inner baulk ring as a set.
- Replace 2nd outer baulk ring, 2nd synchronizer cone, and 2nd inner baulk ring as a set.

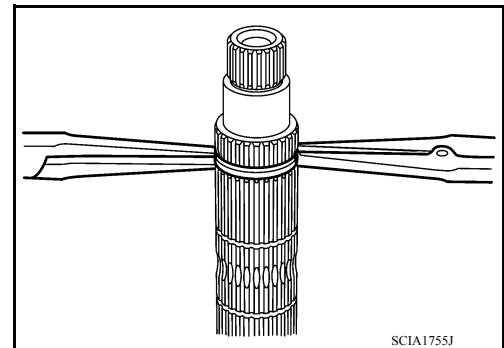

- Be careful with the orientation of 1st-2nd synchronizer hub.

- (A) : 1st main gear side
- (B) : 2nd main gear side

- Replace 1st-2nd synchronizer hub and 1st-2nd coupling sleeve as a set.

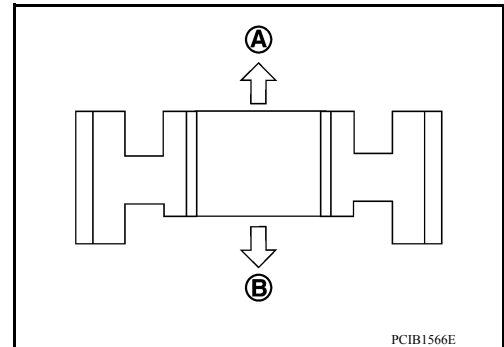


MAINSHAFT AND GEAR

< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

- Be careful with the orientation of 1st-2nd coupling sleeve.


- (A) : 2nd main gear side
- (B) : 1st main gear side

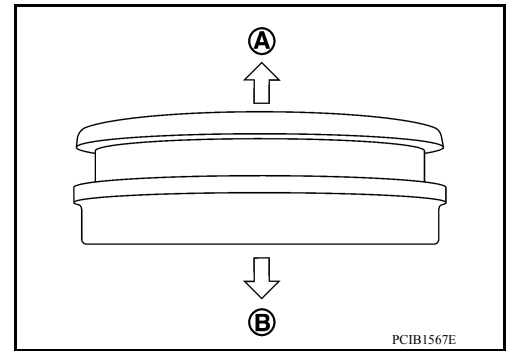


- Be careful with the orientation of 3rd-4th synchronizer hub.

- (A) : 4th main gear side
- (B) : 3rd main gear side

- Replace 3rd-4th synchronizer hub and 3rd-4th coupling sleeve as a set.

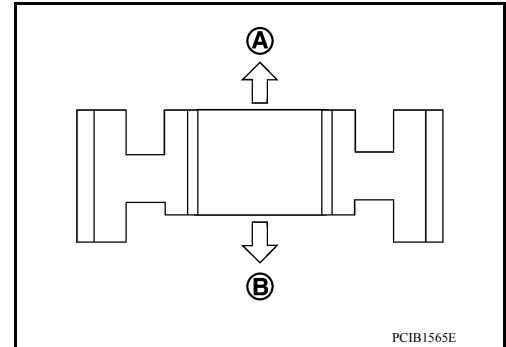

- Be careful with the orientation of insert key (1) and spring (2).

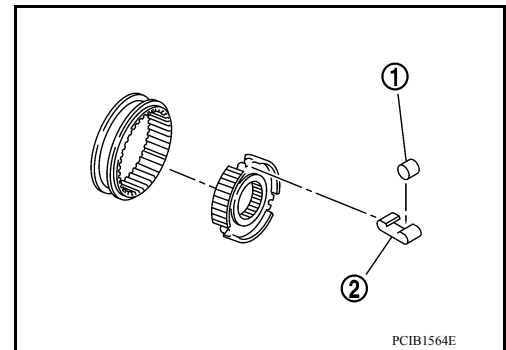


Inspection

INSPECTION AFTER DISASSEMBLY

Mainshaft and Gear

Check the following items and replace if necessary.

- Damage, peeling, uneven wear, and distortion of shaft.
- Excessive wear, damage, and peeling of gear.

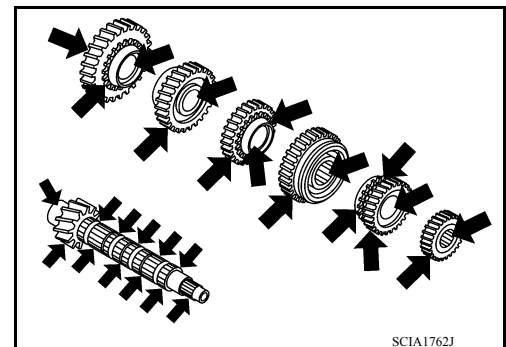

Synchronizer


Check the following items and replace if necessary.

MAINSHAFT AND GEAR

< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

- Contact surface breakage, damage, and unusual wear of coupling sleeve, synchronizer hub, insert key, and spring.
- Coupling sleeve and synchronizer hub move smoothly.

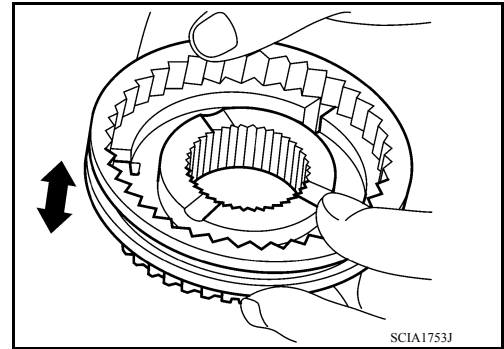


A

B

C

TM

- Breakage, damage, and excessive wear of baulk ring cam surface and insert contact surface.

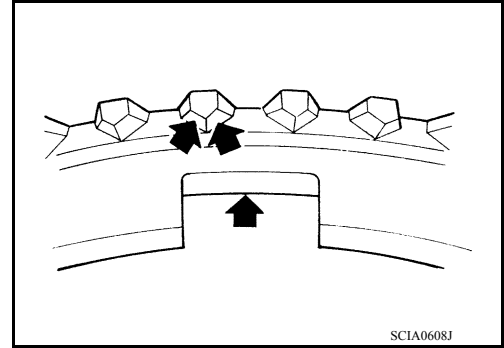


E

F

G

Bearing

Check bearing for damage and rough rotation. Replace if necessary.

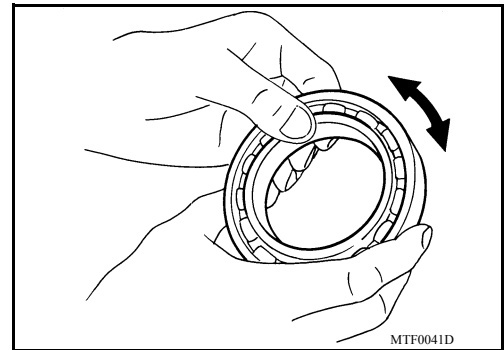

H

I

J

K

L

M

N

O

P

FINAL DRIVE


< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

FINAL DRIVE

Exploded View

INFOID:000000009267808

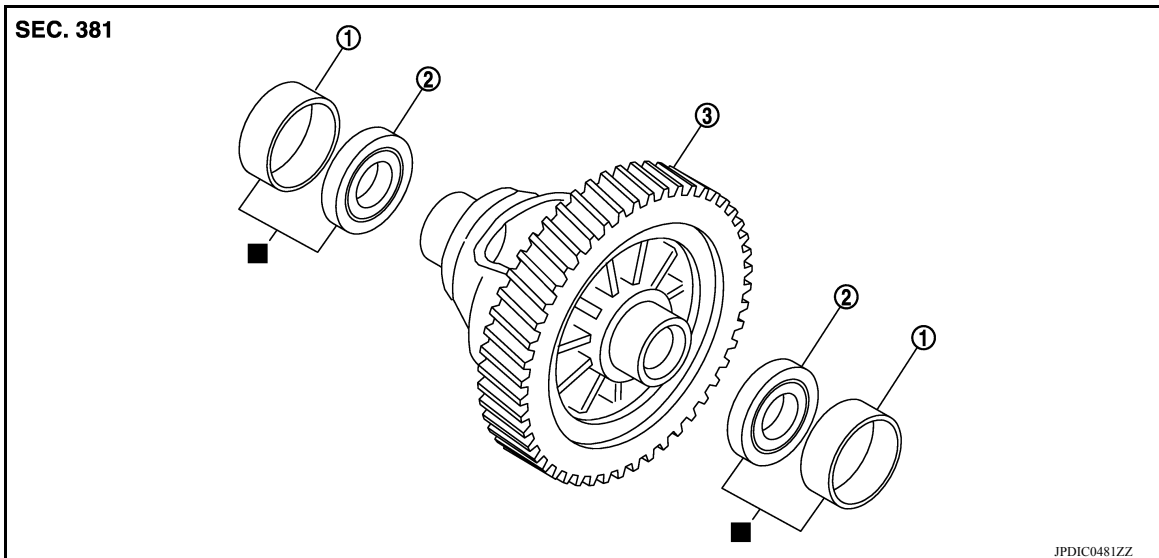

1. Differential side bearing outer race 2. Differential side bearing 3. Final drive


■: Replace the parts as a set.

Disassembly

INFOID:000000009267809

- Remove differential side bearings, using Tool (A) and suitable tool.

Tool number : ST33052000 (—)

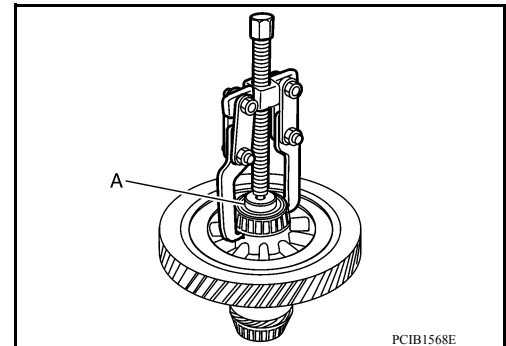

Assembly


INFOID:000000009267810

- Install differential side bearings, using Tool (A).

CAUTION:

Replace differential side bearing outer race and differential side bearing as a set.

Tool number : KV40104920 (—)

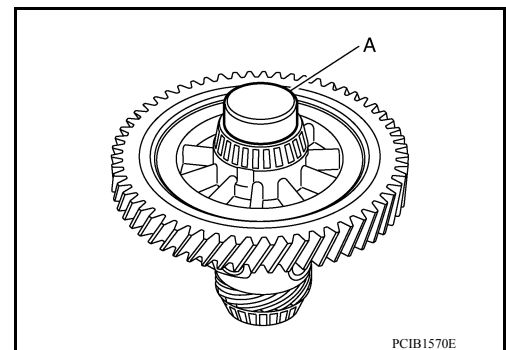

Inspection

INFOID:000000009267811

INSPECTION AFTER DISASSEMBLY

Gear and Final Drive

FINAL DRIVE


< UNIT DISASSEMBLY AND ASSEMBLY >

[5MT: RS5F91R]

Check the sliding surfaces for wear, crack, or damage. Replace if necessary.

Bearing

Check bearing for damage and rough rotation. Replace if necessary.

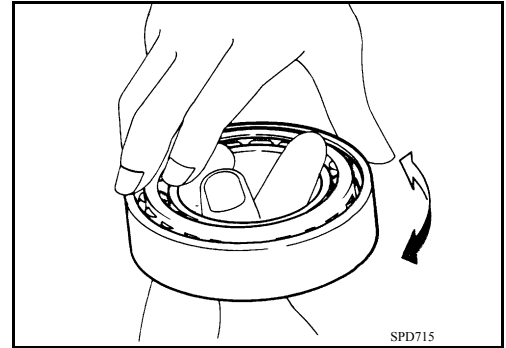

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)


[5MT: RS5F91R]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specifications

INFOID:000000009267812

Transaxle type		RS5F91R		
Engine type		HR16DE		
Model code number		3AM0C		
Number of speed		5		
Synchronesh type		Warner		
Shift pattern		 <p style="text-align: center;">SCIA0821E</p>		
Gear ratio	1st	3.7273		
	2nd	2.0476		
	3rd	1.3929		
	4th	1.0294		
	5th	0.8205		
	Reverse	3.5455		
	Final gear	4.0667		
Number of teeth	Input gear	1st	11	
		2nd	21	
		3rd	28	
		4th	34	
		5th	39	
		Reverse	11	
	Main gear	1st	41	
		2nd	43	
		3rd	39	
		4th	35	
		5th	32	
		Reverse	39	
	Reverse idler gear		26	
	Final gear	Final gear/Pinion	61/15	
		Side gear/Pinion mate gear	13/9	
	Oil capacity (Reference) ℓ (US pt, Imp pt)		Approx. 2.67 (5-5/8, 4-3/4)	
	Remarks	Reverse brake	Installed	
Double-cone synchronizer		1st and 2nd		
Speedometer drive gear		Not installed		

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009267813

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Work

INFOID:000000009267814

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components:
 - Water soluble dirt:
 - Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
 - Then rub with a soft, dry cloth.
 - Oily dirt:
 - Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
 - Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
 - Then rub with a soft, dry cloth.
 - Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
 - For genuine leather seats, use a genuine leather seat cleaner.

PRECAUTIONS


< PRECAUTION >

[4AT: RE4F03C]


INFOID:000000009267815

General Precautions


- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal before connecting or disconnecting the A/T assembly harness connector. Because battery voltage is applied to TCM even if ignition switch is turned OFF.

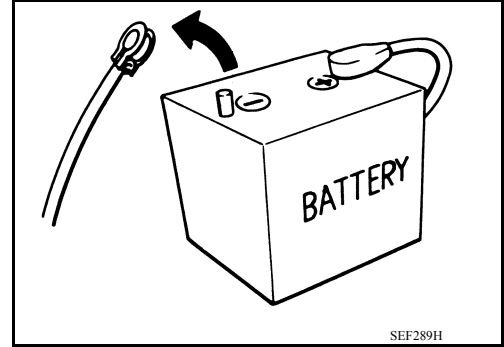


- When connecting or disconnecting pin connectors into or from TCM, do not damage pin terminals (bend or break). Check that there are not any bends or breaks on TCM pin terminal, when connecting pin connectors.

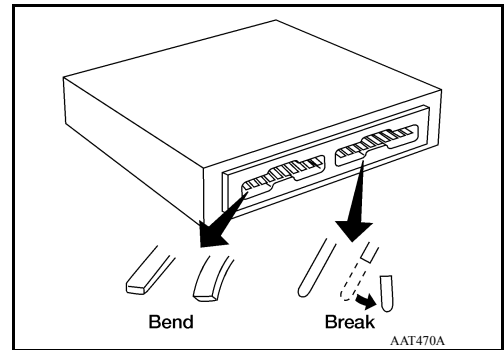

- Perform TCM input/output signal inspection and check whether TCM functions normally or not before replacing TCM. Refer to [TM-99, "Reference Value"](#).

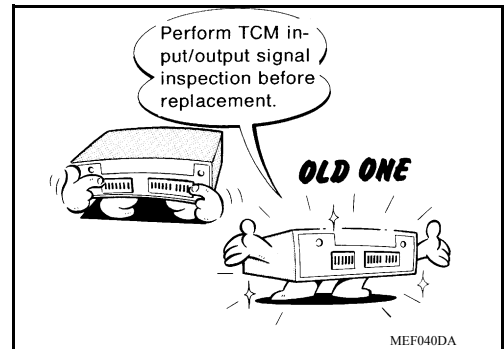

- Perform "DTC (Diagnostic Trouble Code) CONFIRMATION PROCEDURE". If the repair is completed DTC should not be displayed in the "DTC CONFIRMATION PROCEDURE".

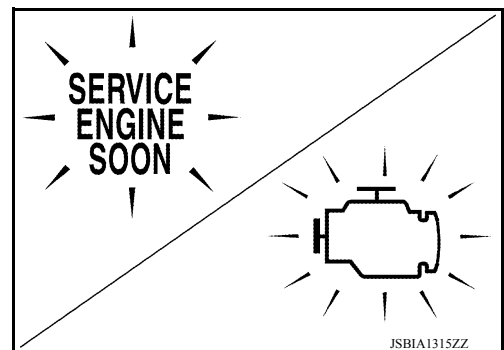

- Always use the specified brand of ATF. Refer to [MA-12, "Fluids and Lubricants"](#).
- Use lint-free paper not cloth rags during work.
- Dispose of the waste oil using the methods prescribed by law, ordinance, etc. after replacing the ATF.

On Board Diagnosis (OBD) System of A/T and Engine

INFOID:000000009267816

The ECM has an on board diagnostic system. It will light up the malfunction indicator (MI) to warn the driver of a malfunction causing emission deterioration.

PRECAUTIONS

< PRECAUTION >

[4AT: RE4F03C]

CAUTION:


- Be sure to turn the ignition switch OFF and disconnect the battery cable from the negative terminal before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MI to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MI to light up due to an open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Be sure to route and secure the harnesses properly after work. Interference of the harness with a bracket, etc. may cause the MI to light up due to a short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MI to light up due to a malfunction of the EGR system or fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the TCM and ECM before returning the vehicle to the customer.

Removal and Installation Procedure for A/T Assembly Connector

INFOID:000000009267817



REMOVAL

Rotate bayonet ring (A) counterclockwise. Pull out A/T assembly harness connector (B) upward and remove it.

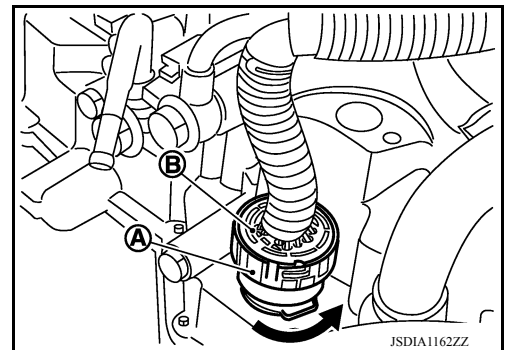

INSTALLATION

1. Align marking (A) on A/T assembly harness connector terminal body with marking (B) on bayonet ring. Insert A/T assembly harness connector. Then rotate bayonet ring clockwise.
2. Rotate bayonet ring clockwise until marking (A) on A/T assembly harness connector terminal body is aligned with the slit (B) on bayonet ring as shown in the figure (correctly fitting condition). Install A/T assembly harness connector to A/T assembly harness connector terminal body.

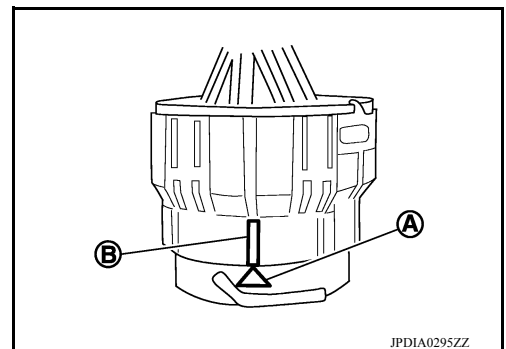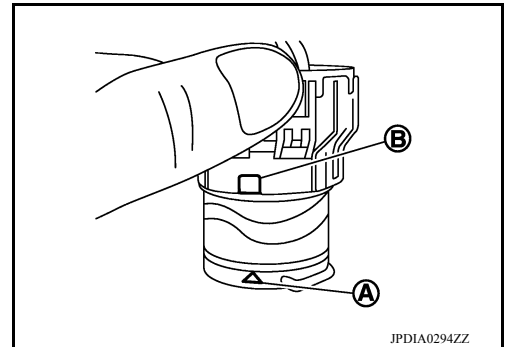


CAUTION:

PRECAUTIONS

[4AT: RE4F03C]

< PRECAUTION >

- Securely align marking (A) on A/T assembly harness connector terminal body with bayonet ring slit (B). Then, be careful not to make a half fit condition as shown in the figure.
- Do not mistake the slit of bayonet ring for other dent portion.

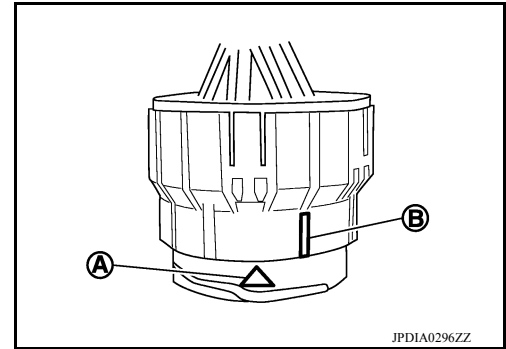

Service Notice or Precaution

INFOID:000000009267818

OBD SELF-DIAGNOSIS

- A/T self-diagnosis is performed by the TCM in combination with the ECM. The results can be read through the blinking pattern of the A/T CHECK indicator or the malfunction indicator Lamp (MIL). Refer to the table on "SELF-DIAGNOSTIC RESULTS" for the indicator used to display each self-diagnostic result. Refer to [TM-93, "CONSULT Function"](#).
 - The self-diagnostic results indicated by the MI are automatically stored in both the ECM and TCM memories. **Always perform the procedure on "How to Erase DTC" to complete the repair and avoid unnecessary blinking of the MI. Refer to [TM-90, "Description"](#).**
- For details of OBD, refer to [TM-91, "DIAGNOSIS DESCRIPTION : 1 Trip Detection Diagnosis and 2 Trip Detection Diagnosis"](#).
- **Certain systems and components, especially those related to OBD, may use the new style slide-locking type harness connector. For description and how to disconnect, refer to [GI-53, "Description"](#).**

PREPARATION

< PREPARATION >

[4AT: RE4F03C]

PREPARATION





PREPARATION

Special Service Tools

INFOID:000000009267819

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

Tool number (Kent-Moore No.) Tool name	Description
1. KV311039S0 (—) Charging pipe set 2. KV31103920* (—) O-ring	A/T fluid changing and adjustment
ST2505S001 (J-34301) Oil pressure gauge set 1. ST25051001 (J-34301) Oil pressure gauge 2. ST25052000 (J-34301) Hose 3. ST25053000 (J-25695-3) Joint pipe 4. ST25054000 (J-25695-4) Adapter 5. ST25055000 (J-25695-5) Adapter	Measuring line pressure
KV31103600 (—) Joint pipe adapter (With ST25054000)	Measuring line pressure
KV38107900 (—) Protector a: 32 mm (1.26 in) dia.	Installing drive shaft

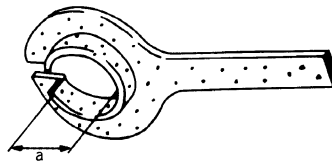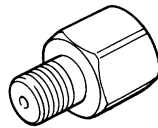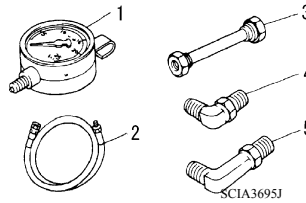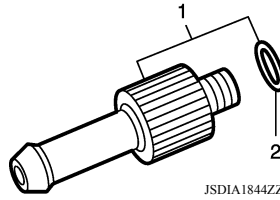

*: The O-ring is a unit part and is set as a SST.

Commercial Service Tools




INFOID:000000009267820

PREPARATION

< PREPARATION >

[4AT: RE4F03C]

Tool number Tool name	Description
Oil pressure gauge set 1. Oil pressure gauge 2. Hose 3. Joint pipe	Measuring line pressure
31197EU50A Drive plate location guide a: 25 mm (0.98in) dia.	Installing transaxle assembly
Drift a: 56 mm (2.20 in) dia. b: 50 mm (1.97 in) dia.	Installing differential side oil seal

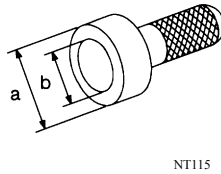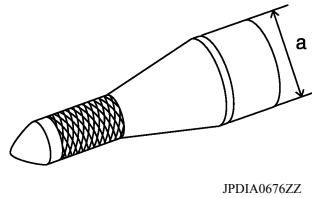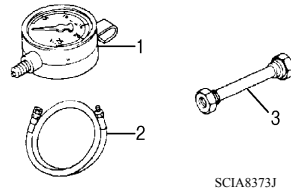

COMPONENT PARTS

< SYSTEM DESCRIPTION >


[4AT: RE4F03C]

SYSTEM DESCRIPTION

COMPONENT PARTS A/T CONTROL SYSTEM

A/T CONTROL SYSTEM : Component Parts Location

INFOID:000000009267821

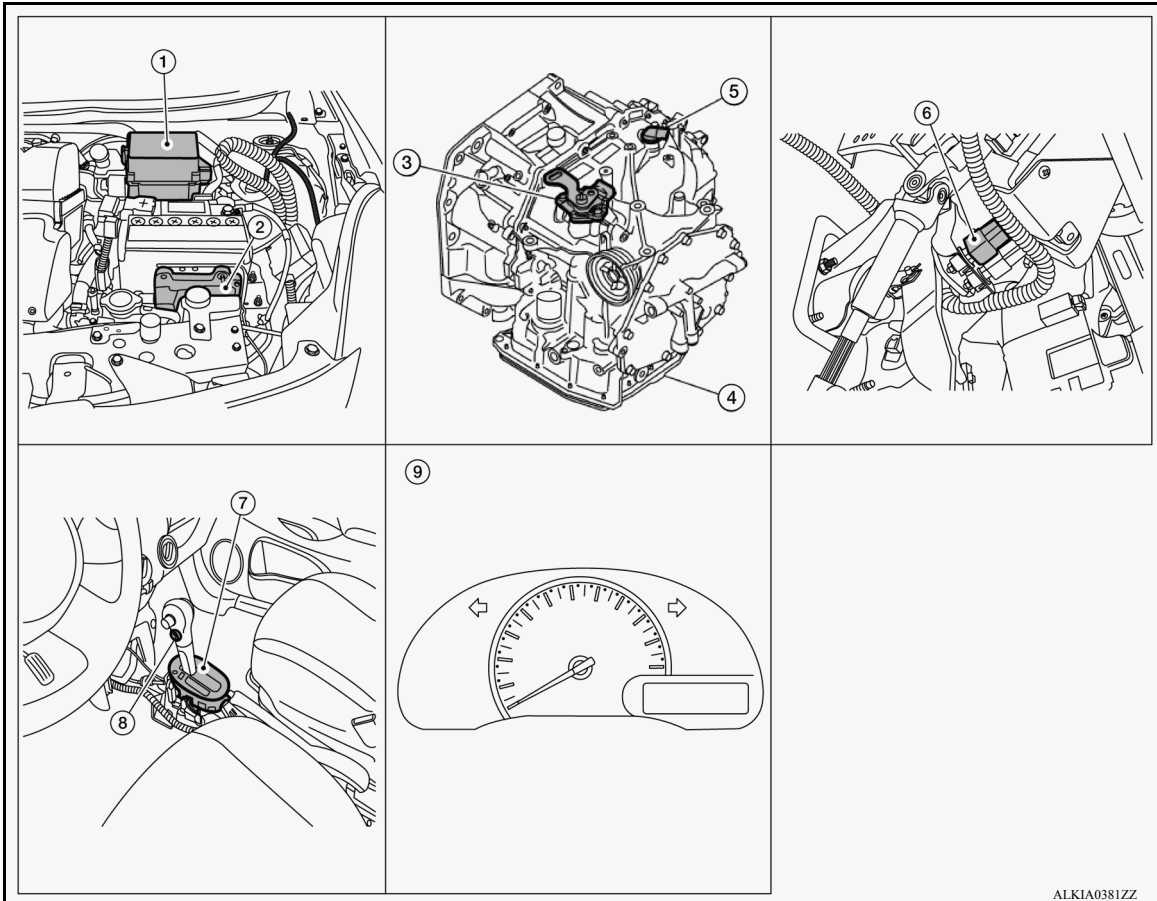

- | | | |
|-----------------------|-----------------------------|-------------------------------|
| 1. IPDM E/R | 2. TCM | 3. Transmission range switch |
| 4. A/T unit | 5. Output speed sensor | 6. Stop lamp switch |
| 7. A/T shift selector | 8. Overdrive control switch | 9. Combination meter (type B) |

ALKIA0381ZZ

A/T CONTROL SYSTEM : Component Description

INFOID:000000009267822

Name	Function
TCM	TM-66. "A/T CONTROL SYSTEM : TCM"
Transmission range switch	TM-66. "A/T CONTROL SYSTEM : Transmission Range Switch"
Input speed sensor	TM-66. "A/T CONTROL SYSTEM : Input Speed Sensor"
Output speed sensor	TM-67. "A/T CONTROL SYSTEM : Output Speed Sensor"
A/T fluid temperature sensor	TM-67. "A/T CONTROL SYSTEM : A/T Fluid Temperature Sensor"
Low clutch solenoid valve	TM-68. "A/T CONTROL SYSTEM : Low Clutch Solenoid Valve"
2-4 brake solenoid valve	TM-68. "A/T CONTROL SYSTEM : 2-4 Brake Solenoid Valve"
Select ON-OFF solenoid valve	TM-68. "A/T CONTROL SYSTEM : Select Switch On-Off Solenoid Valve"

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

Name	Function
High clutch/low & reverse brake solenoid valve	TM-69, "A/T CONTROL SYSTEM : High Clutch/Low & Reverse Brake Solenoid Valve"
Torque converter clutch solenoid valve	TM-69, "A/T CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve"
Line pressure solenoid valve	TM-69, "A/T CONTROL SYSTEM : Line Pressure Solenoid Valve"
Accelerator pedal position sensor	TM-69, "A/T CONTROL SYSTEM : Accelerator Pedal Position Sensor"
Overdrive control switch	TM-69, "A/T CONTROL SYSTEM : Overdrive Control Switch"
O/D OFF indicator lamp	TM-69, "A/T CONTROL SYSTEM : O/D OFF Indicator Lamp"
Stop lamp switch	Stop lamp switch detects the operation status of brake pedal.
ECM	<ul style="list-style-type: none"> For purposes including improving the feeling when shifting speeds and preventing drops in engine speed, control signals are exchanged between the ECM and TCM, and real-time cooperative control is performed according to the vehicle driving conditions. (Integrated control for engine and A/T) Engine and A/T integrated control signal <p>NOTE: General term for the communication (torque-down permission, torque-down request, etc.) exchanged between the ECM and TCM.</p> <ul style="list-style-type: none"> The TCM receives the following signal via CAN communications from the ECM for judging the vehicle driving conditions. <ul style="list-style-type: none"> Engine speed signal Accelerator pedal position signal Closed throttle position signal
BCM	<p>The TCM receives the following signal via CAN communications from the BCM for judging the vehicle driving conditions.</p> <ul style="list-style-type: none"> Stop lamp switch signal
ABS actuator and electric unit (control unit)	<p>The TCM receives the following signal via CAN communications from the ABS actuator and electric unit (control unit) for judging the vehicle driving conditions.</p> <ul style="list-style-type: none"> Vehicle speed signal (ABS) ABS operation signal
Combination meter	<p>The TCM receives the following signal via CAN communications from the combination meter for judging the driving request from the driver.</p> <ul style="list-style-type: none"> Overdrive control switch signal

A/T CONTROL SYSTEM : TCM

INFOID:000000009267823

- The vehicle driving status is judged based on the signals from the sensors, switches, and other control units, and the optimal transaxle control is performed.
- The primary control consists of the following 8 control types.
 - Line pressure control
 - Gear shift control
 - Shift control
 - Lock-up control
 - Control between each control unit and the A/T (CAN communications control)
 - Self-diagnosis function
 - Fail-safe function
 - Communications control with CONSULT

A/T CONTROL SYSTEM : Transmission Range Switch

INFOID:000000009267824

- The transmission range switch is installed to upper part of transaxle case.
- The transmission range switch detects the selector lever position.

A/T CONTROL SYSTEM : Input Speed Sensor

INFOID:000000009267825


- The input speed sensor is installed to control valve.
- The input speed sensor detects input shaft speed.

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]


- The input speed sensor generates ON-OFF pulses (short waveform signal) in proportion to the rotating speed, such that the changing cycle is shorter when the rotating speed increases. The TCM judges the rotating speed from the changing cycle of this pulse signal.

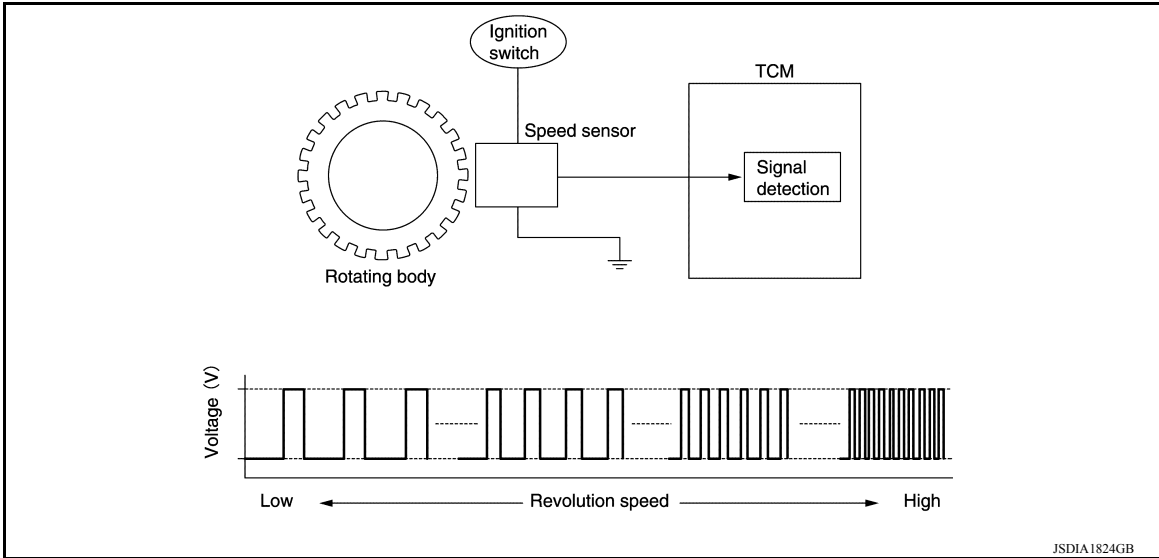

A/T CONTROL SYSTEM : Output Speed Sensor

INFOID:000000009267826

- The output speed sensor is installed to the back side of transaxle case.
- The output speed sensor detects output gear speed. The TCM judges the vehicle speed from the rotating speed of the output gear.
- The output speed sensor generates ON-OFF pulses (short waveform signal) in proportion to the rotating speed, such that the changing cycle is shorter when the rotating speed increases. The TCM judges the rotating speed from the changing cycle of this pulse signal.

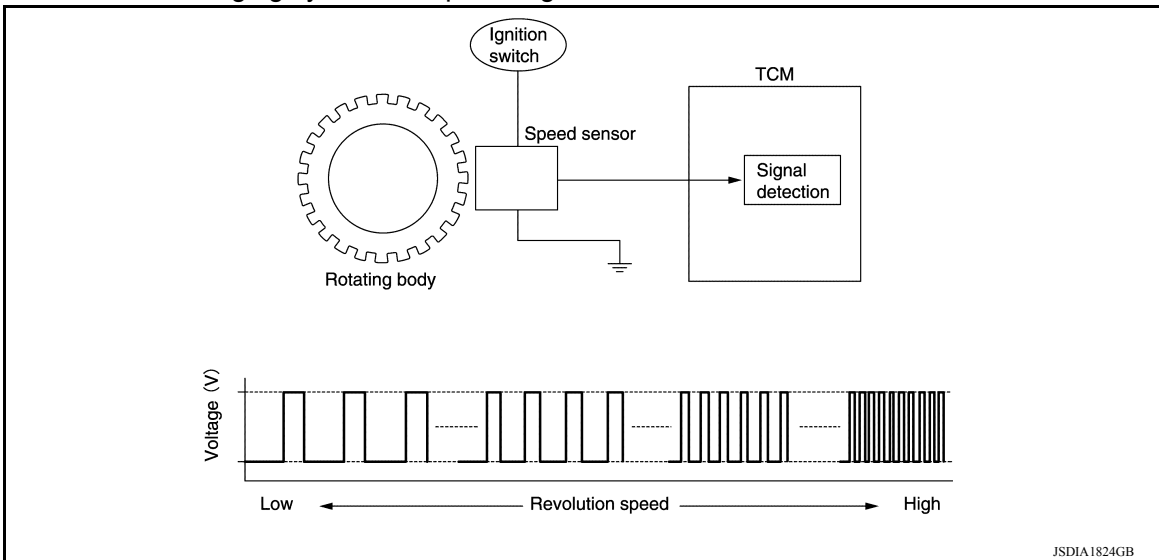

A/T CONTROL SYSTEM : A/T Fluid Temperature Sensor

INFOID:000000009267827


- A/T fluid temperature sensor is installed to control valve.
- A/T fluid temperature sensor detects A/T fluid temperature in oil pan.

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

- The fluid temperature sensor uses a thermistor, and changes the signal voltage by converting changes in the A/T fluid temperature to a resistance value. The TCM judges the A/T fluid temperature based on that signal voltage.

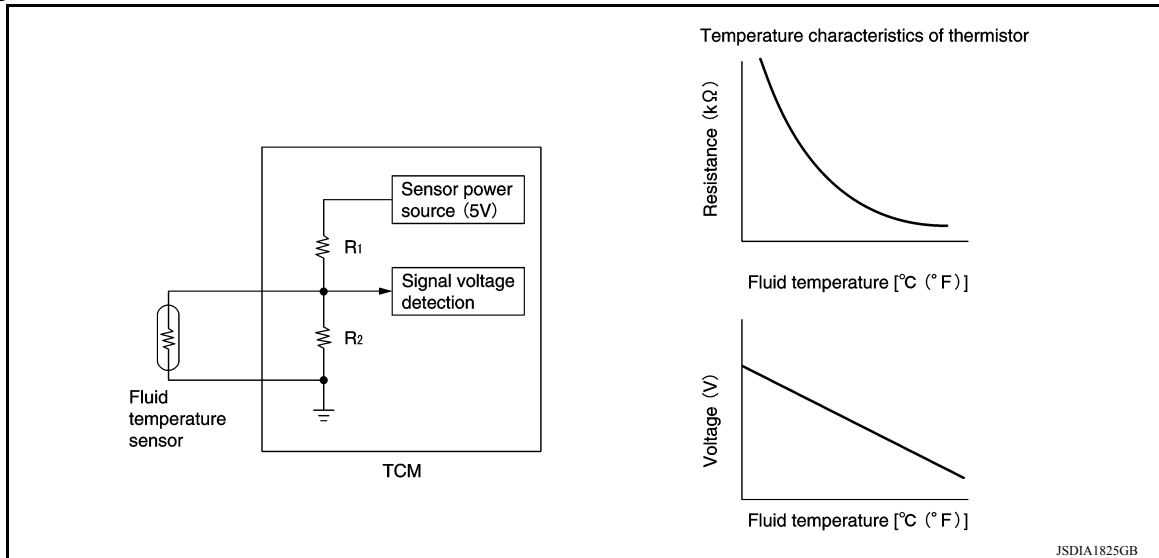

A/T CONTROL SYSTEM : Low Clutch Solenoid Valve

INFOID:000000009267828

- The low clutch solenoid valve is installed to control valve.
- The low clutch solenoid valve adjusts the pressure to the low clutch engage pressure and disengage pressure. For information about the low clutch, refer to [TM-65, "A/T CONTROL SYSTEM : Component Description"](#).
- The low clutch solenoid valve utilizes a linear solenoid valve [N/H (normal high) type].

NOTE:

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces oil pressure when the coil is not energized.

A/T CONTROL SYSTEM : 2-4 Brake Solenoid Valve

INFOID:000000009267829

- 2-4 brake solenoid valve is installed to control valve.
- The 2-4 brake solenoid valve adjusts the pressure of the 2-4 brake band engage and disengage pressures. For information about the 2-4 brake band, refer to [TM-65, "A/T CONTROL SYSTEM : Component Description"](#).
- The 2-4 brake solenoid valve utilizes a linear solenoid valve [N/L (normal low) type].

NOTE:

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/L (normal low) produces oil pressure when the coil is not energized.

A/T CONTROL SYSTEM : Select Switch On-Off Solenoid Valve

INFOID:000000009267830

- The select switch ON-OFF solenoid valve is installed to control valve.
- The selector switch ON-OFF solenoid valve controls the switch valve that switches the oil pressure applied to the low & reverse brake and the reverse clutch.
- The selector switch ON-OFF solenoid valve utilizes an ON-OFF solenoid valve.

NOTE:

- The only operations of the valve spool installed inside the coil are pressing or not pressing the ball which seals the hydraulic supply section into the seat. This A/T uses N/L (normal low) type.
- When voltage is not applied to the coil, the force of the pilot pressure presses the ball against the seat, stopping the pilot pressure at that point.
- When voltage is applied to the coil, the valve is pulled in the direction of the coil, disengaging the hydraulic seal which the ball creates. This supplies pilot pressure to the operating locations.

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

A/T CONTROL SYSTEM : High Clutch/Low & Reverse Brake Solenoid Valve

INFOID:000000009267831

- The high clutch/low & reverse brake solenoid valve is installed to control valve.
- The high clutch/low & reverse brake solenoid valve adjusts the pressure to the high clutch and low & reverse brake engage pressure and disengage pressure.
- The high clutch/low & reverse brake solenoid valve utilizes a linear solenoid valve [N/H (normal high) type].

NOTE:

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces oil pressure when the coil is not energized.

A/T CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve

INFOID:000000009267832

- The torque converter solenoid valve is installed to control valve.
- The torque converter solenoid valve controls the lock-up control valve. For information about the lock-up control valve, refer to [TM-65. "A/T CONTROL SYSTEM : Component Description"](#).
- The high clutch solenoid valve utilizes a linear solenoid valve [N/H (normal low) type].

NOTE:

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/L (normal low) type does not produce oil pressure when the coil is not energized.

A/T CONTROL SYSTEM : Line Pressure Solenoid Valve

INFOID:000000009267833

- The line pressure solenoid valve is installed to control valve.
- The line pressure solenoid valve controls the line pressure control valve. For information about the line pressure control valve, refer to [TM-65. "A/T CONTROL SYSTEM : Component Description"](#).
- The line pressure solenoid valve utilizes a linear solenoid valve [N/H (normal high) type].

NOTE:

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces oil pressure when the coil is not energized.

A/T CONTROL SYSTEM : Accelerator Pedal Position Sensor

INFOID:000000009267834

- The accelerator pedal position sensor is installed above the accelerator pedal.
- The accelerator pedal position sensor detects the amount that the accelerator pedal is depressed.
- The accelerator pedal position sensor converts the amount of accelerator pedal depression into a voltage signal. The ECM judges the throttle position based on this voltage signal, and sends it via CAN communication to the TCM.

A/T CONTROL SYSTEM : Overdrive Control Switch

INFOID:000000009267835

- The overdrive control switch is installed on the selector lever knob.
- If the overdrive control switch is pressed when the O/D OFF indicator lamp on the combination meter is not lit, the status changes to overdrive OFF and the O/D OFF indicator lamp illuminates.
- If the overdrive control switch is pressed when the O/D OFF indicator lamp on the combination meter is lit, the overdrive OFF status is canceled and the O/D OFF indicator lamp turns off.

A/T CONTROL SYSTEM : O/D OFF Indicator Lamp

INFOID:000000009267836

- The O/D OFF indicator lamp is positioned on the combination meter.
- The O/D OFF indicator lamp illuminates when the overdrive function is deactivated (O/D OFF).
- For checking the bulb, this lamp turns on for a certain period of time when the ignition switch turns ON, and then turns off.

COMPONENT PARTS

< SYSTEM DESCRIPTION >


[4AT: RE4F03C]

Condition (status)	O/D OFF indicator lamp
Ignition switch OFF.	OFF
Ignition switch ON.	ON (Approx. 2 seconds)
Overdrive control switch is pressed when the selector lever is in the "D" position and the O/D OFF indicator lamp is OFF (when system is normal).	ON
Overdrive control switch is pressed when the selector lever is in the "D" position and the O/D OFF indicator lamp is ON.	OFF
Selector lever is shifted from the "D" position to another position when the O/D OFF indicator lamp is ON.	OFF

A/T SHIFT LOCK SYSTEM

A/T SHIFT LOCK SYSTEM : Component Parts Location

INFOID:000000009267837

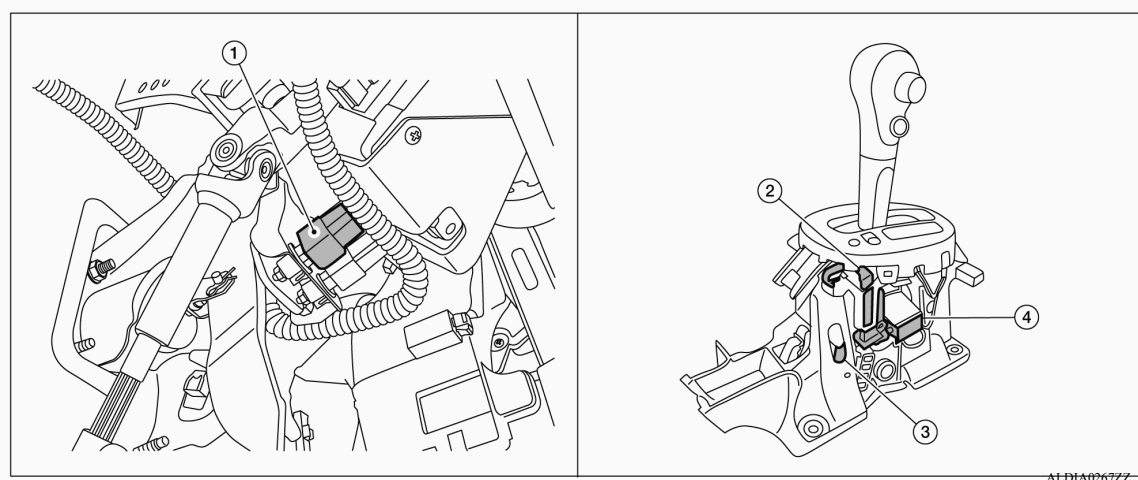

- 1 Stop lamp switch. 2 Shift lock release lever. 3 Park position switch.
 4 Shift lock solenoid.

A/T SHIFT LOCK SYSTEM : Component Description

INFOID:000000009267838

Component	Function
Shift lock solenoid	It operates according to the signal from the stop lamp switch and moves the lock lever.
Lock lever	<ul style="list-style-type: none"> Rotates according to shift lock solenoid activation and releases the shift lock. If shift lock solenoid does not activate, lock lever can be rotated when shift lock release button is pressed and shift lock is released.
Detent rod	It links with the selector button and restricts the selector lever movement.
Park position switch	It detects that the selector lever is in "P" position.
Shift lock release button	Forcibly releases the shift lock when pressed.
Stop lamp switch	<ul style="list-style-type: none"> The stop lamp switch turns ON when the brake pedal is depressed. When the stop lamp switch turns ON, the shift lock solenoid is energized.

STRUCTURE AND OPERATION


< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

STRUCTURE AND OPERATION TRANSAXLE

TRANSAXLE : Cross-Sectional View

INFOID:000000009267839

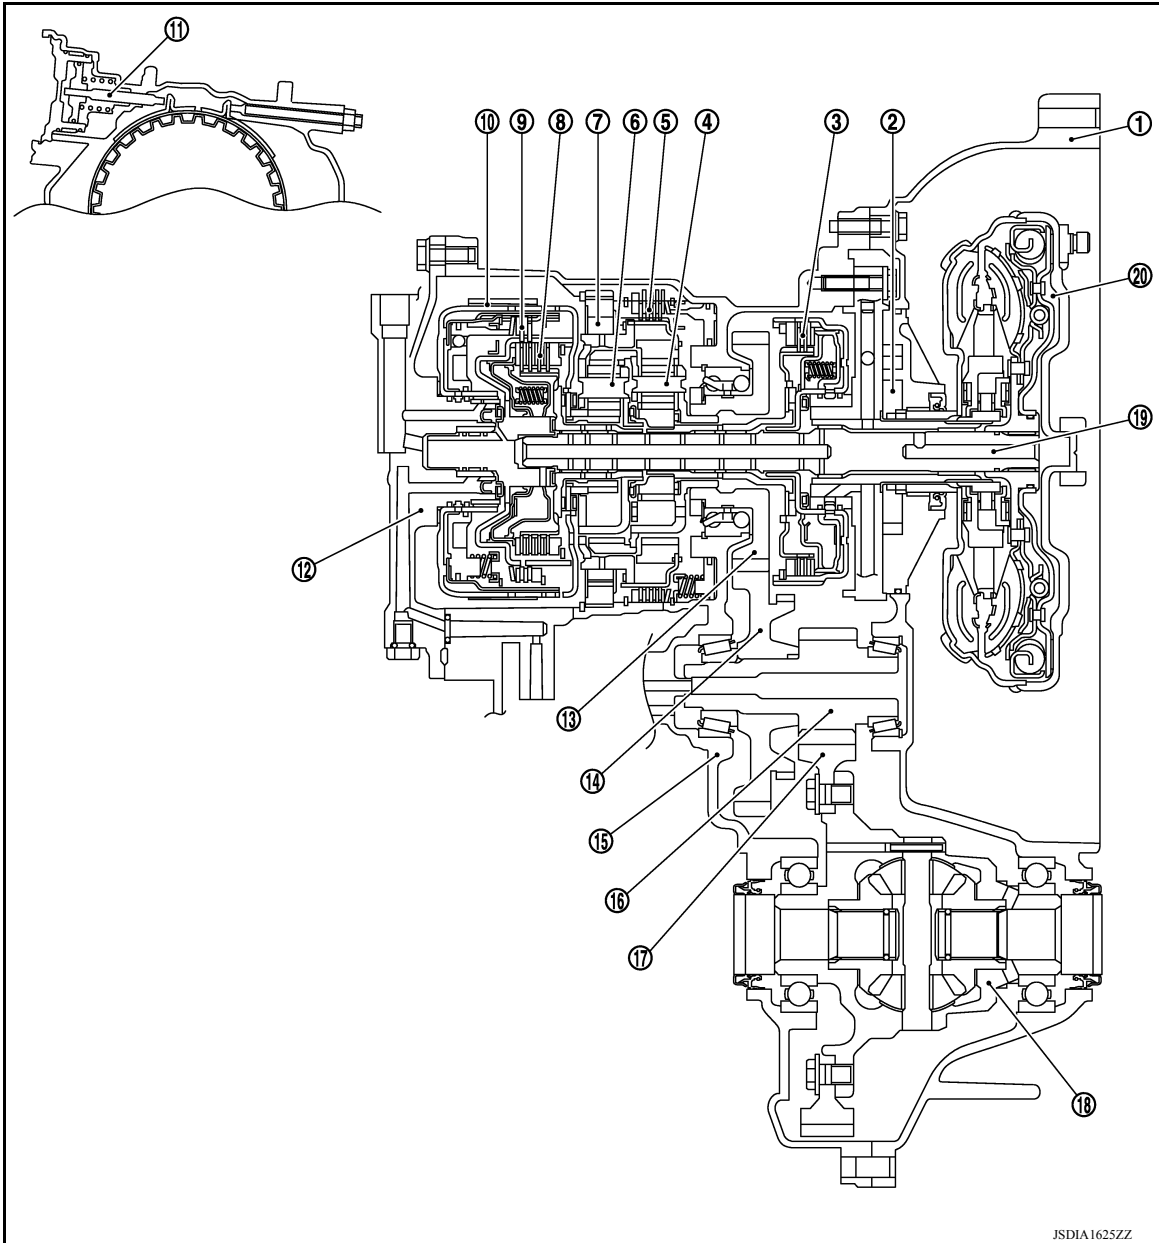

- | | | |
|---------------------------------|------------------------|-------------------------|
| 1. Converter housing | 2. Oil pump | 3. Low clutch |
| 4. Rear planetary gear | 5. Low & reverse brake | 6. Front planetary gear |
| 7. Low one-way clutch | 8. High clutch | 9. Reverse clutch |
| 10. 2-4 brake band (Brake band) | 11. Band servo piston | 12. Side cover |
| 13. Output gear | 14. Idler gear | 15. Transaxle case |
| 16. Reduction pinion gear | 17. Final gear | 18. Differential case |
| 19. Input shaft | 20. Torque converter | |

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P


STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

TRANSAXLE : System Diagram

INFOID:000000009267840

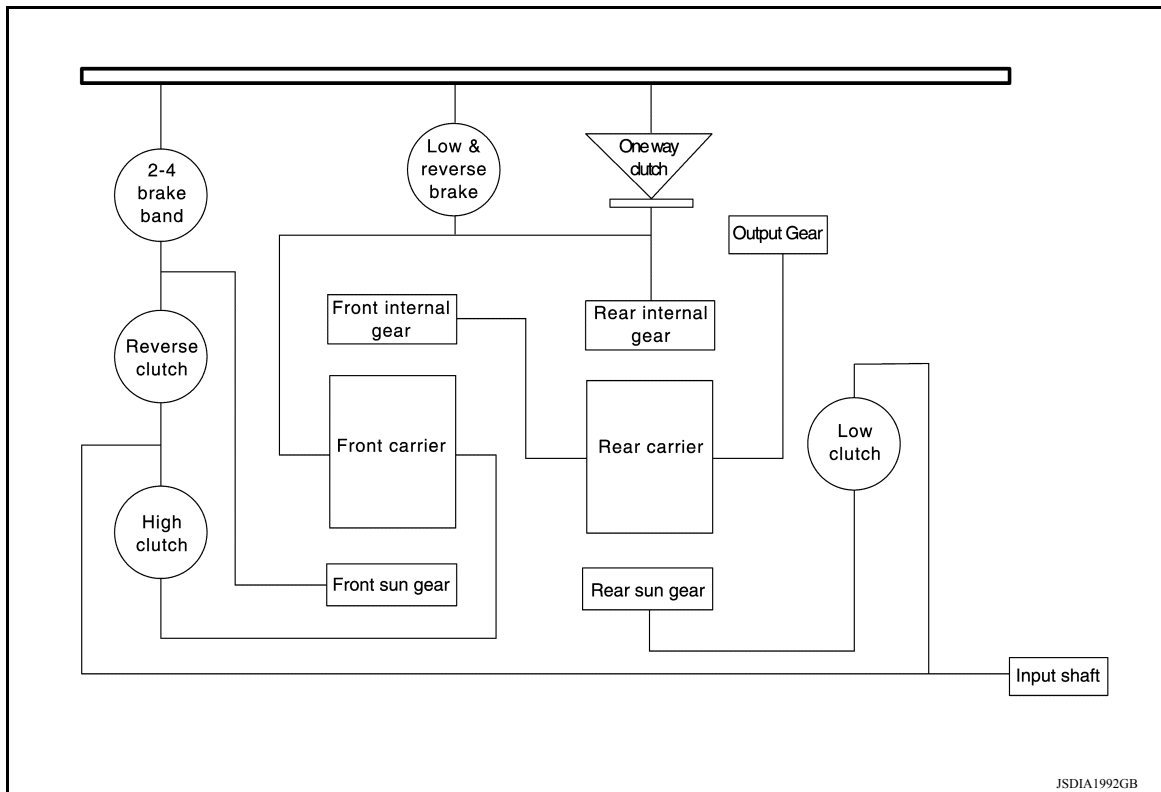

TRANSAXLE : System Description

INFOID:000000009267841

DESCRIPTION

With the use of 2 sets of planetary gears, A/T enables 4-speed transmission for forward and 1-speed transmission for backward, depending on the combination of 3 sets of multiple-disc clutches, a set of multiple-disc brakes, a set of one-way clutches and a set of brake bands.

CLUTCH/BRAKE AND BAND CHART

x: Operated

Shift position	Clutch/brake					
	L/C	L&R/B	2-4/B (B/B)	H/C	R/C	O/WC
P						
R		x			x	
N						
D	1GR	x				x*
	2GR	x	x			
	3GR	x		x		
	4GR			x	x	
2	x					x*
1	x		x			

*: Operates during "progressive" acceleration.

P POSITION (PARKING MECHANISM)

When the selector lever is shifted to the "P" position, the parking pole engages with the parking gear (integrated with the idler gear), fixing the output shaft in place.


STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]


TRACTION TRANSMISSION OF EACH RANGE

“P” position, “N” position

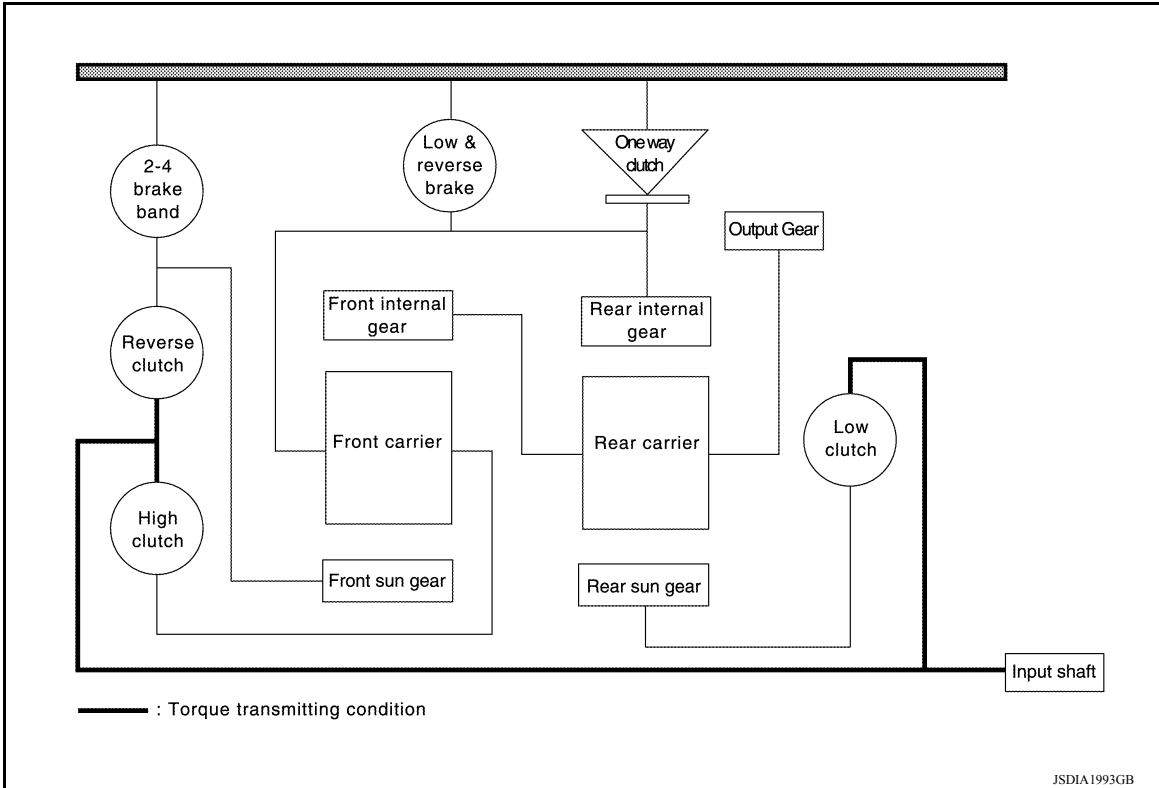

The drive force from the input shaft is not transmitted because all clutches and bands are released.

“1” position, “D1” position

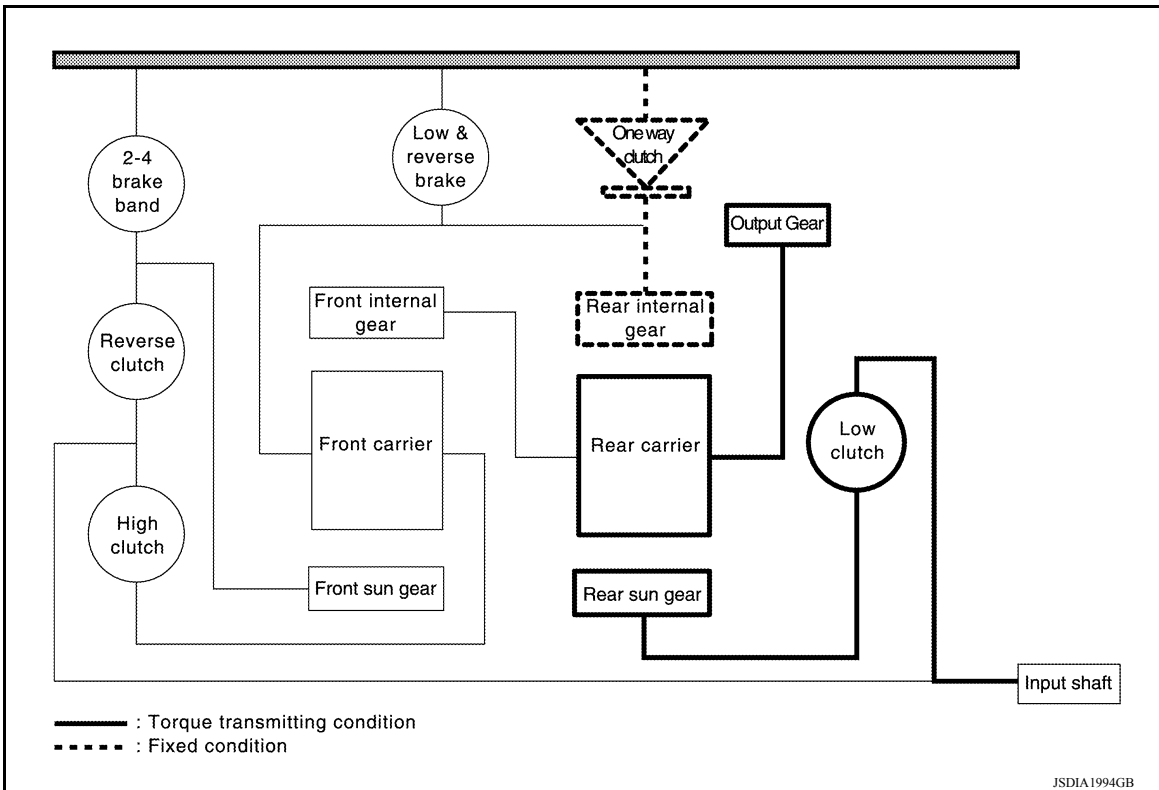

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

- The drive force from the input shaft is transmitted via the engaged low clutch and turns the rear sun gear forwards. This causes the rear internal gear to turn backwards, however it is stopped by the one-way clutch. The rear gear turns forward and the force is transmitted to the output gear after being slowed down.

NOTE:

When coasting, because the front carrier is able to turn forward, engine braking does not occur.

- The status of each planetary gear is as shown below.


Front planetary gear

Name	Front sun gear	Front carrier	Front internal gear
Condition	—	Fixed	—
Rotating direction	Reverse	Stopped	Forward
Speed	—	—	—

Rear planetary gear

Name	Rear sun gear	Rear carrier	Rear internal gear
Condition	Input	Output	Fixed
Rotating direction	Forward	Forward	Stopped
Speed	Same speed as input shaft	Slower than rear sun gear	—

“1” position, “D1” position, engine brake

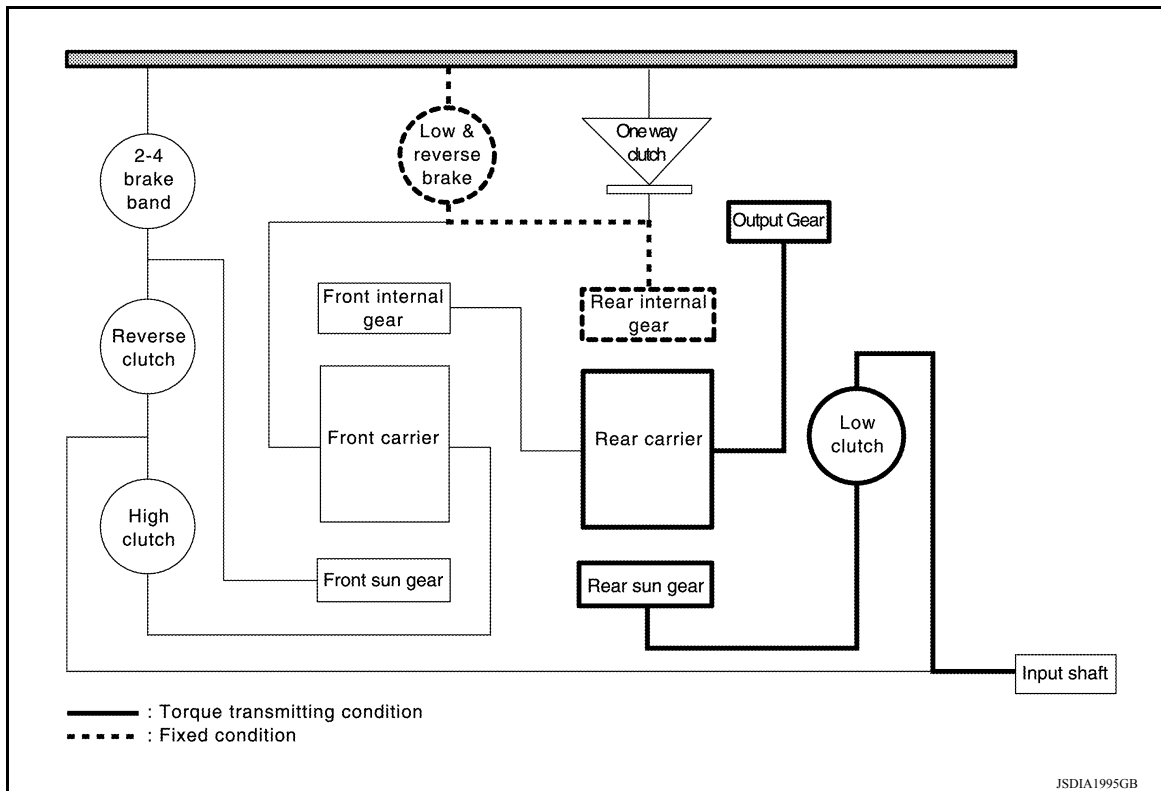

- The drive force from the input shaft is transmitted via the engaged low clutch and turns the rear sun gear forwards. This causes the rear internal gear to turn backwards, however it is stopped by the one-way clutch. The rear carrier turns forward and the force is transmitted to the output gear after being slowed down.
- The status of each planetary gear is as shown below.

Front planetary gear

Name	Front sun gear	Front carrier	Front internal gear
Condition	—	Fixed	—
Rotating direction	Reverse	Stopped	Forward
Speed	—	—	—

STRUCTURE AND OPERATION


< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

Rear planetary gear

Name	Rear sun gear	Rear carrier	Rear internal gear
Condition	Input	Output	Fixed
Rotating direction	Forward	Forward	Stopped
Speed	Same speed as input shaft	Slower than rear sun gear	—

“2” position, “D2” position

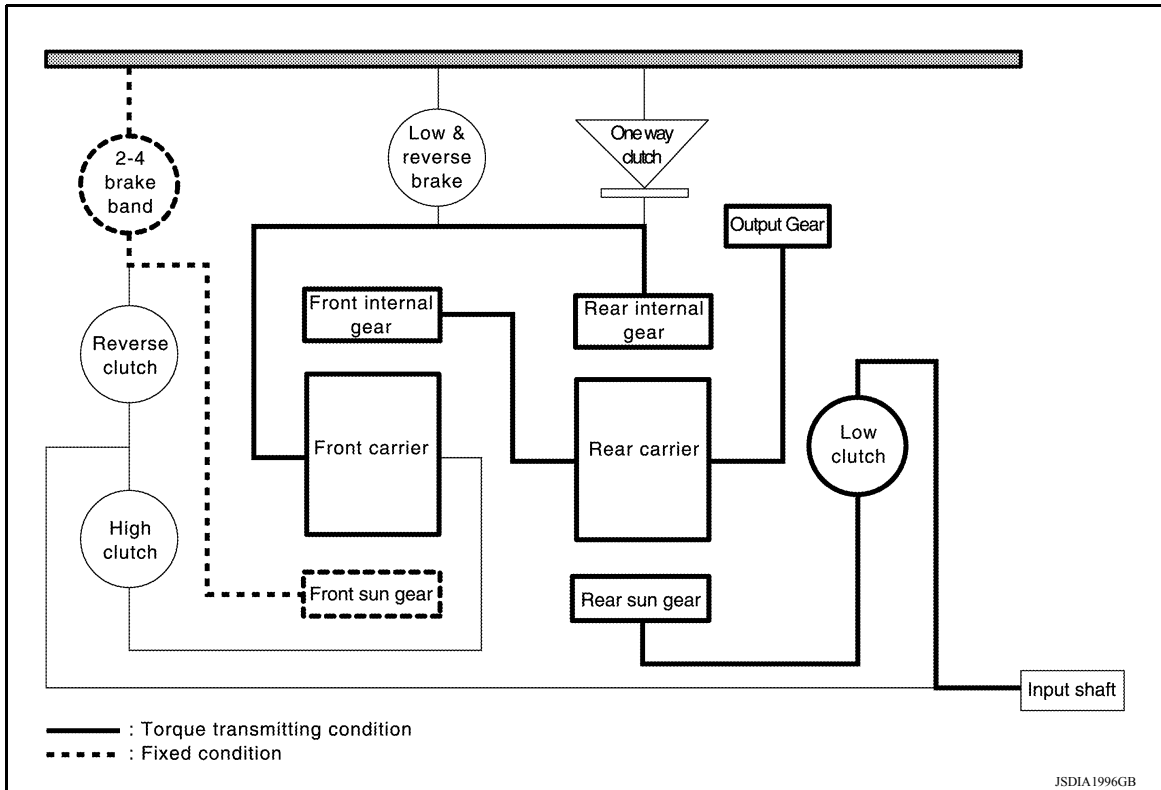

- In 1st gear, the front sun gear is turning in reverse. However the 2-4 brake operates and fixes the front sun gear in place. When this happens, the front carrier turns in the forward direction. As a result, when the front internal gear transmits force to the output gear, it turns forward at a faster speed than when in 1st gear.
- Because the rear internal gear and front carrier are turning forward, the one-way clutch turns freely.
- The status of each planetary gear is as shown below.

Front planetary gear

Name	Front sun gear	Front carrier	Front internal gear
Condition	Fixed	Output	Input
Rotating direction	Stopped	Forward	Forward
Speed	—	Slower than front internal gear	Same speed as rear carrier

Rear planetary gear


Name	Rear sun gear	Rear carrier	Rear internal gear
Condition	Input	Output	Input
Rotating direction	Forward	Forward	Forward
Speed	Same speed as input shaft	Slower than rear sun gear	Slower than rear carrier

“D3” position

STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

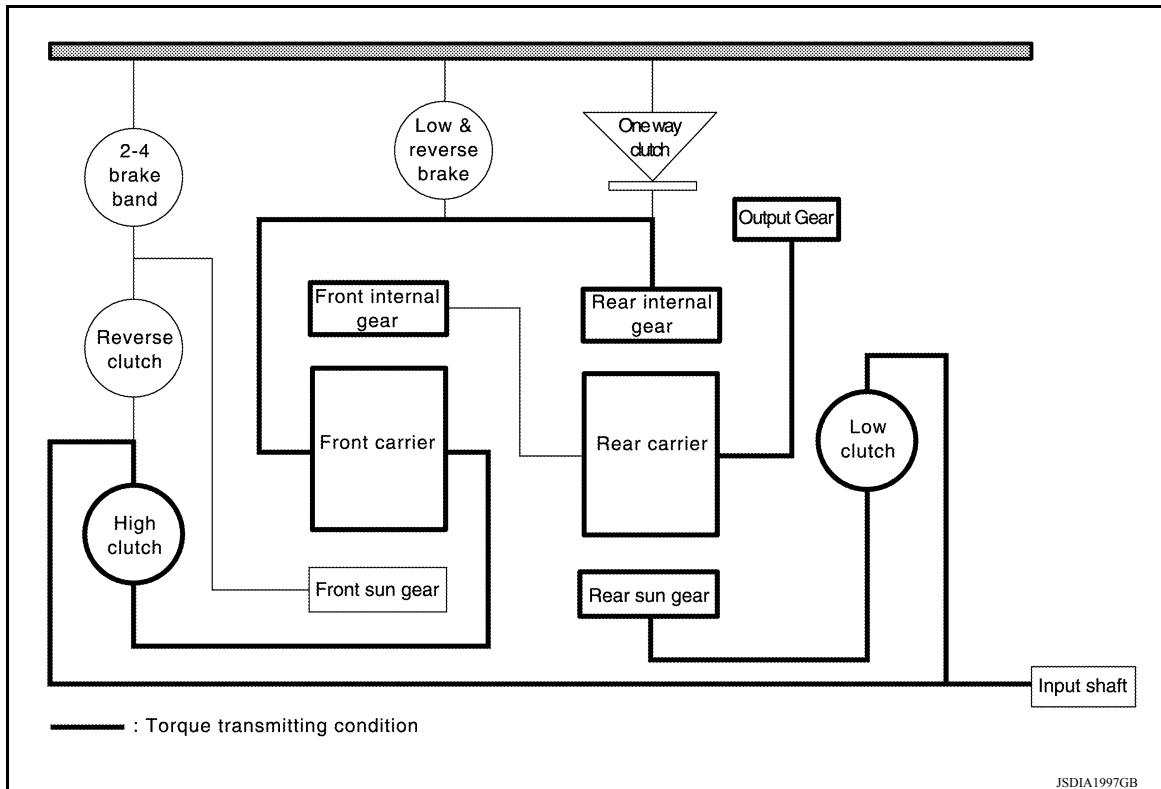

- The low clutch and high clutch that are connected to the input shaft are engaged, creating a single power transmitting mechanism and rotating while engaged.
- The status of each planetary gear is as shown below.

Front planetary gear

Name	Front sun gear	Front carrier	Front internal gear
Condition	—	Input	—
Rotating direction	Forward	Forward	Forward
Speed	Same speed as input shaft	Same speed as input shaft	Same speed as input shaft

Rear planetary gear


Name	Rear sun gear	Rear carrier	Rear internal gear
Condition	Input	Output	—
Rotating direction	Forward	Forward	Forward
Speed	Same speed as input shaft	Same speed as input shaft	Same speed as input shaft

“D4” position

STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

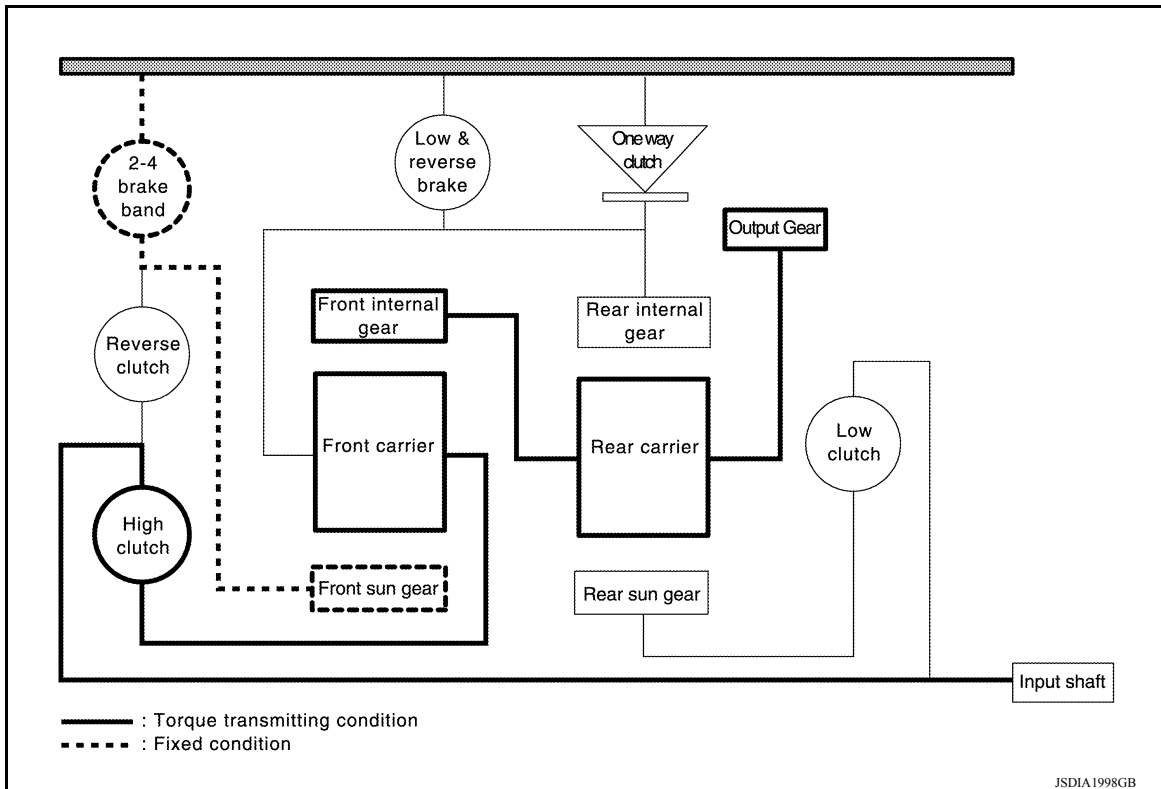

- The drive force input from the input shaft is transmitted by forward rotation of the engaged high clutch to the front carrier. Operation of the 2-4 brake fastens the front sun gear in place, causing the front carrier to turn forward. As a result, the front internal gear turns faster, the rear carrier turns forward, and force is transmitted to the output gear.
- The status of each planetary gear is as shown below.

Front planetary gear

Name	Front sun gear	Front carrier	Front internal gear
Condition	Fixed	Input	Output
Rotating direction	Stopped	Forward	Forward
Speed	—	Same speed as input shaft	Faster than front carrier

Rear planetary gear

Name	Rear sun gear	Rear carrier	Rear internal gear
Condition	—	Output	Input
Rotating direction	Forward	Forward	Forward
Speed	Faster than input shaft	Faster than input shaft	Same speed as input shaft


“R” position

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

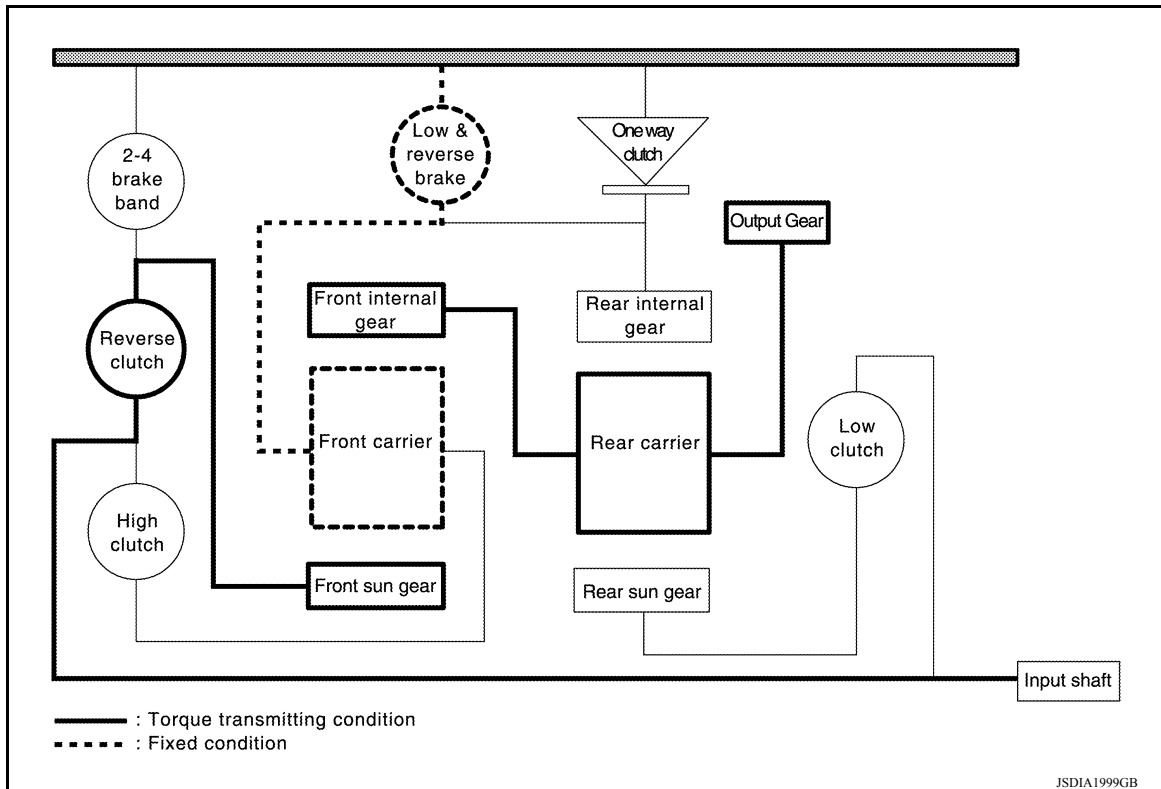

- The drive force from the input shaft is transmitted by forward rotation of the engaged reverse clutch to the front sun gear. Engagement of the low & reverse brake fastens the front carrier in place, causing the front internal gear to turn in reverse and transmitting force by reverse rotation to the output gear.
- The status of each planetary gear is as shown below.

Front planetary gear

Name	Front sun gear	Front carrier	Front internal gear
Condition	Input	Fixed	Output
Rotating direction	Forward	Stopped	Reverse
Speed	Same speed as input shaft	—	Slower than input shaft

Rear planetary gear

Name	Rear sun gear	Rear carrier	Rear internal gear
Condition	—	Fixed	Fixed
Rotating direction	Reverse	Reverse	Stopped
Speed	Faster than input shaft	Slower than input shaft	—

TRANSAXLE : Component Description

INFOID:000000009267842

Name (abbreviation)	FUNCTION
Torque converter	Amplifies the drive force from the engine and transmits it to the transmission input shaft.
Oil pump	Driven by the engine, this component supplies oil to the torque converter, control valve assembly, and lubricated parts.
4-point gear	Transmits drive force from the transmission mechanism to the output gear, idler gear, reduction gear, and final gear.
Low clutch (L/C)	Connects the rear sun gear and input shaft
High clutch (H/C)	Connects the front carrier and input shaft
Reverse clutch (R/C)	Connects the front sun gear and input shaft
Low & reverse brake (L&R/B)	Fastens the rear internal gear and front carrier in place.
2-4 brake (2-4/B)	Brake band that fastens the front sun gear in place.

STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

Name (abbreviation)	FUNCTION
One-way clutch (OWC)	This clutch prevents reverse turning of the front carrier and rear internal gear. It operates not hydraulically but mechanically.
Planetary gear	Transmits drive force to various positions by engagement and release of the clutches and bands.

SHIFT LOCK SYSTEM

SHIFT LOCK SYSTEM : System Description

INFOID:000000009267855

The selector lever cannot be shifted from “P” position to any other position unless the ignition switch is in the ON position and the brake pedal is depressed.

KEY LOCK SYSTEM

KEY LOCK SYSTEM : System Description

INFOID:000000009267856


- The key lock mechanism also operates as a shift lock:
 - With the ignition switch turned to ON, selector lever cannot be shifted from “P” position to any other position unless brake pedal is depressed.
 - With the key removed, selector lever cannot be shifted from “P” position to any other position.
 - The key cannot be removed unless selector lever is placed in “P” position.
- The shift lock and key lock mechanisms are controlled by the ON-OFF operation of the shift lock solenoid and by the operation of the rotator and slider located inside key cylinder, respectively.

SYSTEM

A/T CONTROL SYSTEM

A/T CONTROL SYSTEM : System Diagram

INFOID:000000009267843

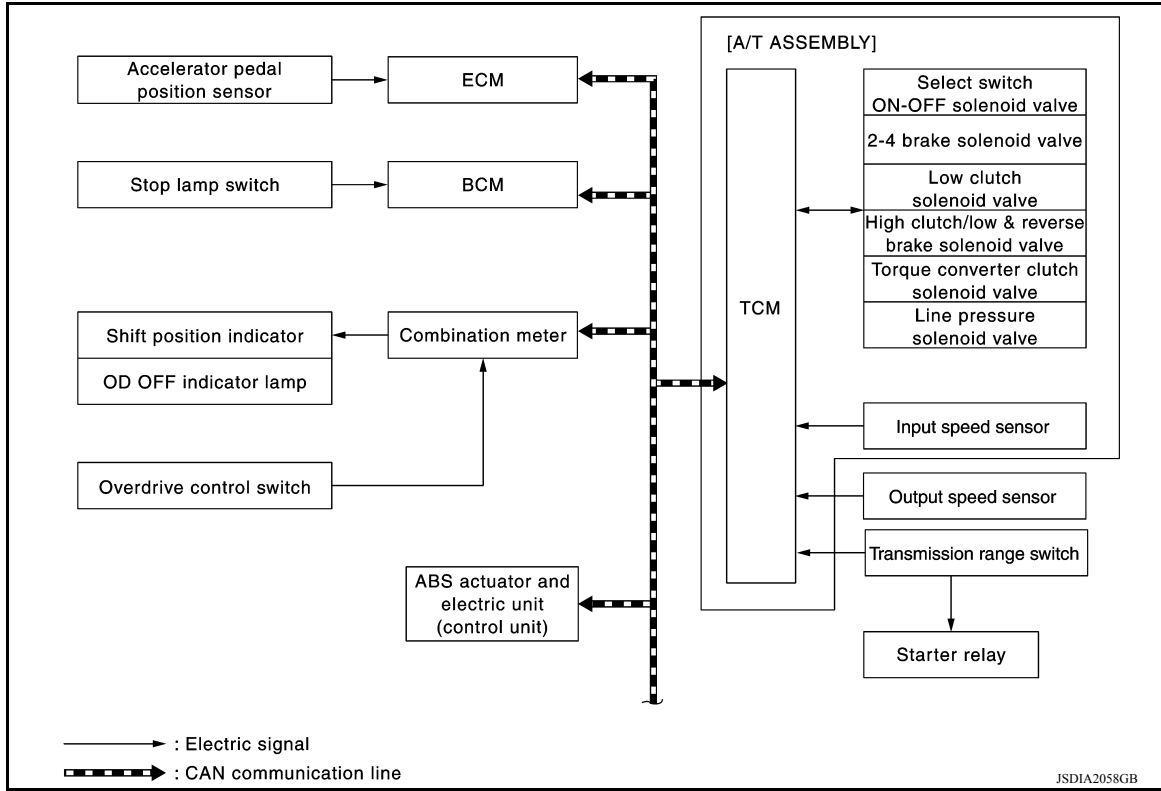

A/T CONTROL SYSTEM : System Description

INFOID:000000009267844

SYSTEM DESCRIPTION

- The A/T senses vehicle operating conditions through various sensors or signals. It always controls the optimum shift position and reduces shifting and lock-up shocks.
- Receives input signals transmitted from various switches and sensors.
- Determines required line pressure, shifting point, lock-up operation, etc.
- Transmits required output signals to the respective solenoids.

INPUT/OUTPUT SIGNAL CHART

Sensor (or signal)	TCM function	Actuator
Engine speed signal Engine torque signal Accelerator pedal position signal Closed throttle position signal Stop lamp switch signal Transmission range switch O/D switch signal A/T fluid temperature sensor Input speed sensor Output speed sensor Vehicle speed signal	Line pressure control (TM-84) Shift change control (TM-86) Shift pattern control (TM-87) Lock-up control (TM-88) Fail-safe control (TM-81) Self-diagnosis (TM-93) CONSULT communication line (TM-93) CAN communication line (TM-137)	Line pressure solenoid valve Torque converter clutch solenoid valve Low clutch solenoid valve 2-4 brake solenoid valve High clutch/low & reverse brake solenoid valve Select switch ON-OFF solenoid valve Shift position indicator O/D OFF indicator lamp

INPUT/OUTPUT SIGNAL OF TCM

SYSTEM

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

	Control item	Line pressure control	Shift change control	Shift pattern control	Lock-up control	Fail-safe function*	
	Engine speed signal (CAN communication line)	X	X	X	X	X	A
	Engine torque signal (CAN communication line)	X	X				B
	Accelerator pedal position signal (CAN communication line)	X	X	X	X	X	C
	Closed throttle position signal (CAN communication line)	X		X	X	X	TM
Input	Stop lamp switch signal (CAN communication line)	X	X		X	X	
	Transmission range switch	X	X	X	X	X	E
	O/D switch signal (CAN communication line)		X				
	A/T fluid temperature sensor	X	X	X	X	X	F
	Input speed sensor	X	X		X	X	
	Output pressure sensor	X	X	X	X	X	G
	Line pressure solenoid valve	X		X		X	
	Torque converter clutch solenoid valve			X	X	X	H
	Low clutch solenoid valve		X			X	
	2-4 brake solenoid valve		X			X	I
Output	High clutch/low & reverse brake solenoid valve		X			X	
	Select switch ON-OFF solenoid valve		X			X	J
	Shift position indicator (CAN communication line)		X				
	O/D OFF indicator lamp (CAN communication line)			X			K

*: If these input and output signals are different, the TCM triggers the fail-safe function.

A/T CONTROL SYSTEM : Fail-Safe

INFOID:000000009267845

TCM is equipped with an electrical fail-safe mode. The operation can be continued even if the signal circuit of the main electronically controlled input/output parts are damaged.

If the vehicle shows following behaviors including "poor acceleration", a malfunction of the applicable system is detected by TCM and the vehicle may be in a fail-safe mode. At this time, check the DTC code and perform inspection and repair according to the malfunction diagnosis procedures.

FAIL-SAFE FUNCTION

DTC	Vehicle behavior	Vehicle condition
P0705 P0706	<ul style="list-style-type: none"> "D" position (The shifting can be performed) "R" position can be performed Back-up lamp is OFF Large shift shock Lock-up is prohibited Slip lock-up is prohibited 	—
P0713	The gear is fixed in a position of error detection	During driving
	Locks in 3GR	Other than the above

SYSTEM

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

DTC	Vehicle behavior	Vehicle condition
P0717 P0720	<ul style="list-style-type: none"> • The gear is fixed in a position of error detection • Lock-up is prohibited • Slip lock-up is prohibited 	During driving
	<ul style="list-style-type: none"> • Locks in 3GR • Lock-up is prohibited • Slip lock-up is prohibited 	Other than the above
P072C	Locks in 2GR	—
P072D	Locks in 3GR	—
P072E P072F	The gear is fixed in neutral until vehicle speed decreases to below 5 km/h (3 MPH) and in 2GR when reaching 5 km/h (3 MPH) or more	—
P0731	<ul style="list-style-type: none"> • Locks in 2GR or 3GR • Lock-up is prohibited 	—
P0732	<ul style="list-style-type: none"> • Locks in 3GR • Lock-up is prohibited 	—
P0733 P0734	<ul style="list-style-type: none"> • The gear is fixed in neutral until vehicle speed decreases to below 5 km/h (3 MPH) and in 2GR when reaching 5 km/h (3 MPH) or more • Lock-up is prohibited 	—
P073F	<ul style="list-style-type: none"> • Locks in 4GR • Lock-up is prohibited 	—
P0740 P0743 P0744	Lock-up is prohibited	—
P074A P074B	<ul style="list-style-type: none"> • Locks in 4GR • Lock-up is prohibited 	—
P074C	<ul style="list-style-type: none"> • The gear is fixed in neutral until vehicle speed decreases to below 5 km/h (3 MPH) and in 2GR or 3GR when reaching 5 km/h (3 MPH) or more • Lock-up is prohibited 	—
P0973 P0974	<ul style="list-style-type: none"> • The gear is fixed in neutral until vehicle speed decreases to below 5 km/h (3 MPH) and in 2GR when reaching 5 km/h (3 MPH) or more • Lock-up is prohibited 	—
P0976 P0977	<ul style="list-style-type: none"> • Locks in 3GR • Lock-up is prohibited 	—
P0979 P0980	<ul style="list-style-type: none"> • The gear is fixed in neutral until vehicle speed decreases to below 5 km/h (3 MPH) and in 3GR when reaching 5 km/h (3 MPH) or more • Lock-up is prohibited 	—
P0982 P0983	<ul style="list-style-type: none"> • Locks in 3GR • Lock-up is prohibited 	—
P2760	Slip lock-up is prohibited	—
U0073	<ul style="list-style-type: none"> • The gear is fixed in 3GR until vehicle speed decreases to below 5 km/h (3 MPH) and in 2GR when reaching 5 km/h (3 MPH) or more • Lock-up is prohibited • Slip lock-up is prohibited 	—
U0100	<ul style="list-style-type: none"> • Locks in 3GR • Lock-up is prohibited • Slip lock-up is prohibited 	During driving
	<ul style="list-style-type: none"> • Locks in 2GR • Lock-up is prohibited • Slip lock-up is prohibited 	Other than the above
U0155	O/D OFF prohibited	—

SYSTEM

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

DTC	Vehicle behavior	Vehicle condition
U0300	<ul style="list-style-type: none"> • Locks in 3GR • Lock-up is prohibited • Slip lock-up is prohibited 	During driving
	<ul style="list-style-type: none"> • Locks in 2GR • Lock-up is prohibited • Slip lock-up is prohibited 	Other than the above

A/T CONTROL SYSTEM : Protection Control

INFOID:000000009267846

The TCM becomes the protection control status temporarily to protect the safety when the safety of TCM and transmission is lost. It automatically returns to the normal status if the safety is secured.
The TCM is equipped with the following protection control.

REVERSE INHIBIT CONTROL

Intercepts the torque transmission and shifts to the neutral status if the selector lever is shifted to “R” position while the vehicle moves forward at the vehicle speed 10 km/h (7 MPH) or more.

Operation detection conditions	<ul style="list-style-type: none"> • Vehicle speed: 10 km/h (7 MPH) or more (when driving forward) • Selector lever is shifted to “R” position.
Control when activated	Neutral
Recovery condition	<ul style="list-style-type: none"> • Vehicle speed: 7 km/h (4 MPH) or less and • Engine speed: 2,800 rpm or less
Vehicle behavior	<ul style="list-style-type: none"> • The torque transmission cannot be performed • There is a shock just before a vehicle stop

TCM HIGH TEMPERATURE PROTECTION CONTROL

When the ATF becomes hot, the shifting pattern is changed for preventing fluid temperature rise.

Operation detection conditions	ATF temp.: 125°C (257°F) or more
Control when activated	Change the shift pattern so that higher upshift may be achieved.
Recovery condition	<ul style="list-style-type: none"> • ATF temp.: 119°C (246°F) or less
Vehicle behavior	Upshifts at a higher vehicle speed than usual.

TORQUE-DOWN CONTROL WHEN CONTINUOUS STALL OCCURS IN D POSITION

If the accelerator pedal is continually depressed for a certain length of time when the selector lever is in the “D” position and the vehicle is parked, the engine output is limited for protecting the transaxle.

Operation detection conditions	The following conditions continue for 20 seconds or more <ul style="list-style-type: none"> • Selector lever is in the “D” position or “R” position and the vehicle is stopped and • Engine speed: 2,300 – 2,850 rpm
Control when activated	Limits engine output
Recovery condition	<ul style="list-style-type: none"> • Selector lever is shifted to a position other than “D” or “R” or • The accelerator pedal is released
Vehicle behavior	<ul style="list-style-type: none"> • Decreased starting performance • Engine speed hunching when the accelerator pedal is depressed

O/D PROHIBIT CONTROL AT LOW TEMPERATURES

When the ATF temperature is low immediately after engine start, shifting to 4GR is prohibited for protecting the transaxle and allowing the exhaust gas characteristics to warm up quickly.

SYSTEM

< SYSTEM DESCRIPTION >


[4AT: RE4F03C]

Operation detection conditions	<ul style="list-style-type: none"> • ATF temp.: 0°C (32°F) or less or • ATF temp.: less than 40°C (104°F) (when IGN is ON) • Vehicle speed: 65 km/h (40 MPH) or less • 3GR
Control when activated	4GR prohibited
Recovery condition	<p>Less than 130 seconds following IGN ON</p> <ul style="list-style-type: none"> • ATF temp.: 40°C (104°F) or more or • Vehicle speed: 65 km/h (40 MPH) or higher <p>After 130 seconds following IGN ON</p> <ul style="list-style-type: none"> • ATF temp.: 0°C (32°F) or more
Vehicle behavior	Shifts up only as far as 3GR.

LINE PRESSURE CONTROL

LINE PRESSURE CONTROL : System Diagram

INFOID:000000009267847

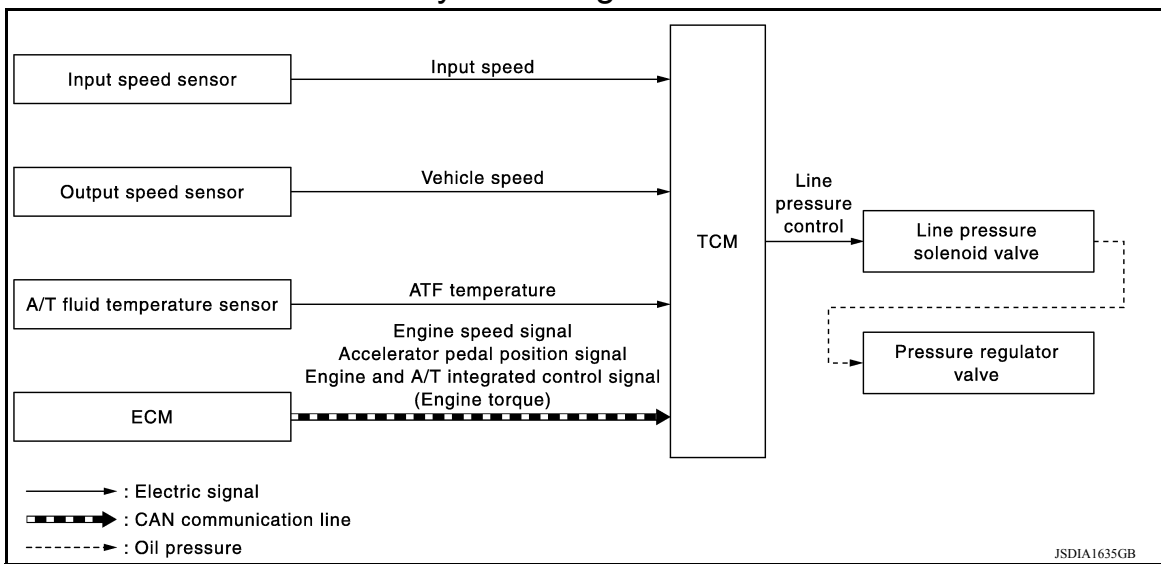

LINE PRESSURE CONTROL : System Description

INFOID:000000009267848

- When an engine and A/T integrated control signal (engine torque) equivalent to the engine drive force is transmitted from the ECM to the TCM, the TCM controls the line pressure solenoid valve. This line pressure solenoid controls the pressure regulator valve as the signal pressure and adjusts the pressure of the operating oil discharged from the oil pump to the line pressure most appropriate to the driving state.
- The TCM has stored in memory a number of patterns for the optimum line pressure characteristic for the driving state.
- In order to obtain the most appropriate line pressure characteristic to meet the current driving state, the TCM controls the line pressure solenoid current value and thus controls the line pressure.


Normal Control

SYSTEM

< SYSTEM DESCRIPTION >


[4AT: RE4F03C]

Each clutch is adjusted to the necessary pressure to match the engine drive force.

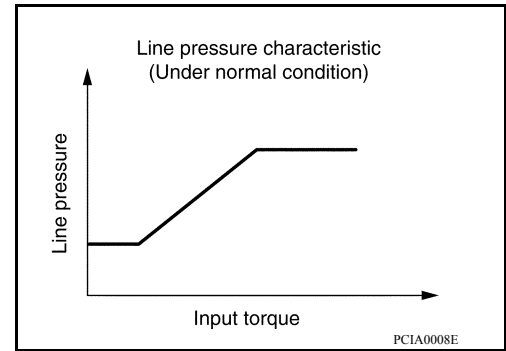


Back-up Control (Engine Brake)

When the select operation is performed during driving and the A/T is shifted down, the line pressure is set according to the vehicle speed.

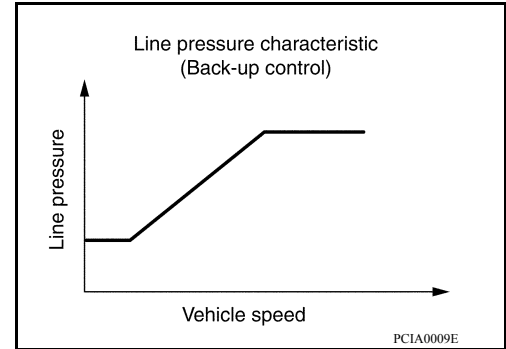

During Shift Change

The necessary and adequate line pressure for shift change is set. For this reason, line pressure pattern setting corresponds to engine torque and gearshift selection. Also, line pressure characteristic corresponds to engine speed, during engine brake operation.

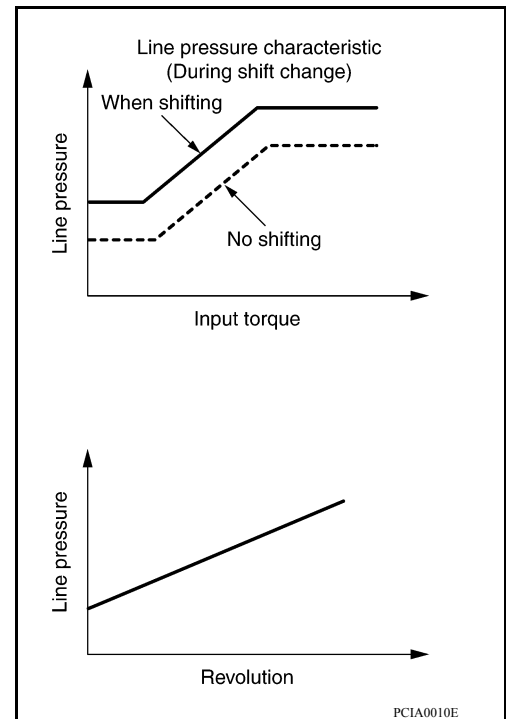

At Low Fluid Temperature


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]


When the A/T fluid temperature drops below the prescribed temperature, in order to speed up the action of each friction element, the line pressure is set higher than the normal line pressure characteristic.

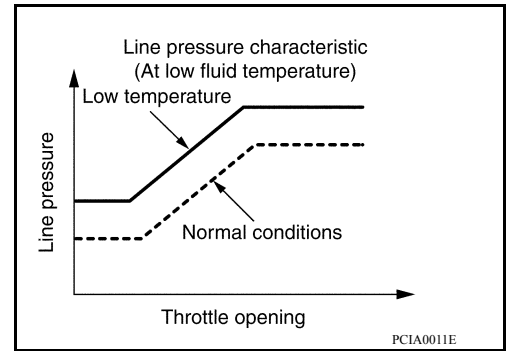

SHIFT CHANGE CONTROL

SHIFT CHANGE CONTROL : System Diagram


INFOID:000000009267849

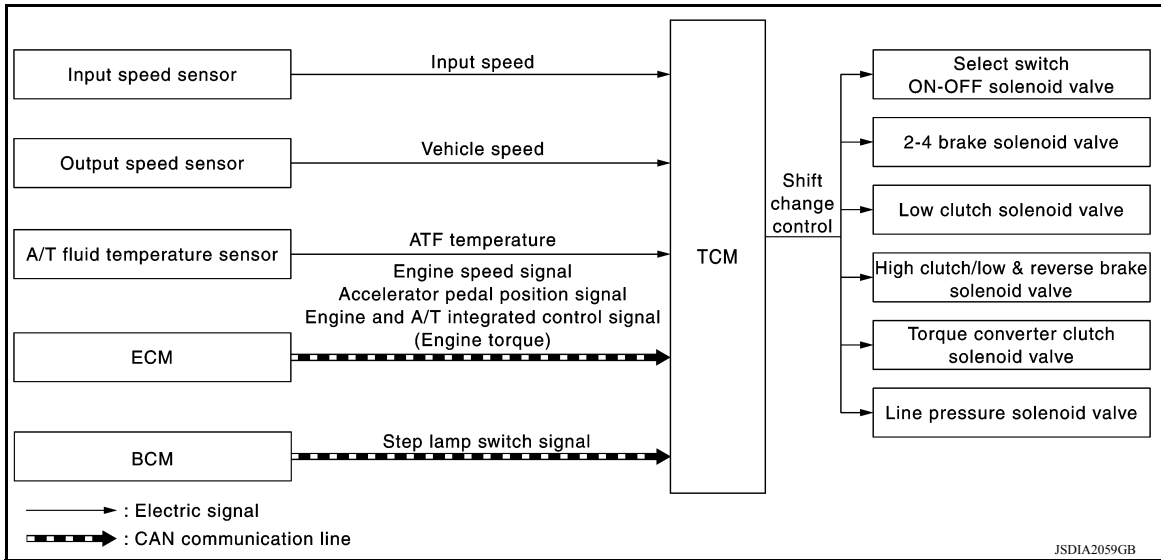

SHIFT CHANGE CONTROL : System Description


INFOID:000000009267850

The clutch pressure control solenoid is controlled by the signals from the switches and sensors. Thus, the clutch pressure is adjusted to be appropriate to the engine load state and vehicle driving state. It becomes possible to finely control the clutch hydraulic pressure with high precision and a smoother shift change characteristic is attained.

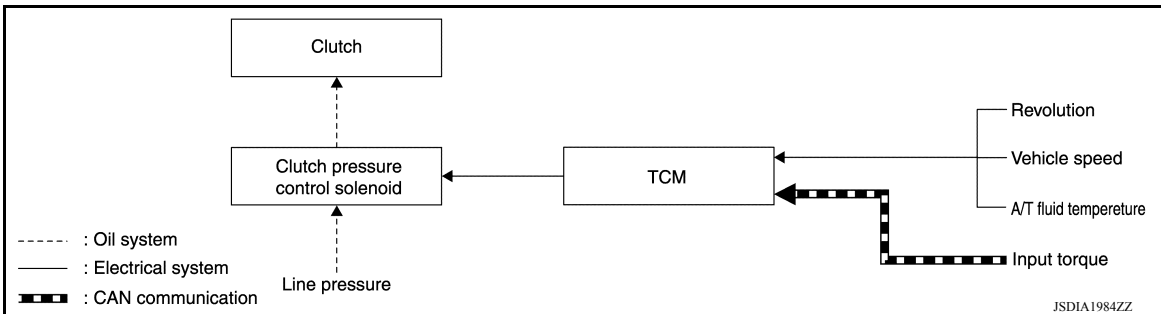

The clutch is controlled with the optimum timing and oil pressure by the engine speed, engine torque information, etc.

Shift Change System Diagram

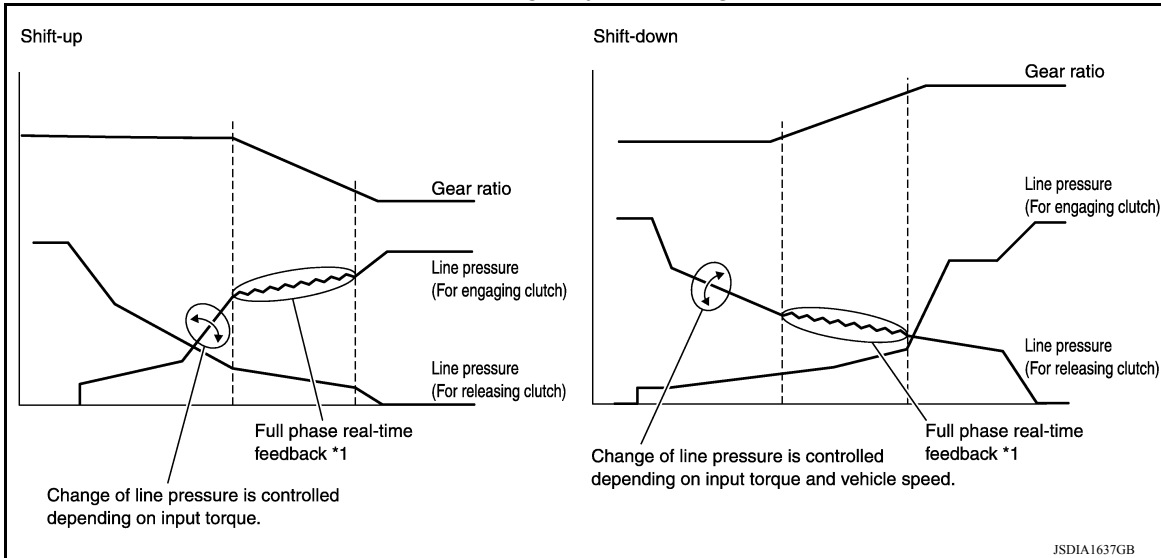


*1: Full phase real-time feedback control monitors movement of gear ratio at gear change, and controls oil pressure in real-time to achieve the best gear ratio.

SHIFT PATTERN CONTROL

SHIFT PATTERN CONTROL : System Diagram

INFOID:000000009267851

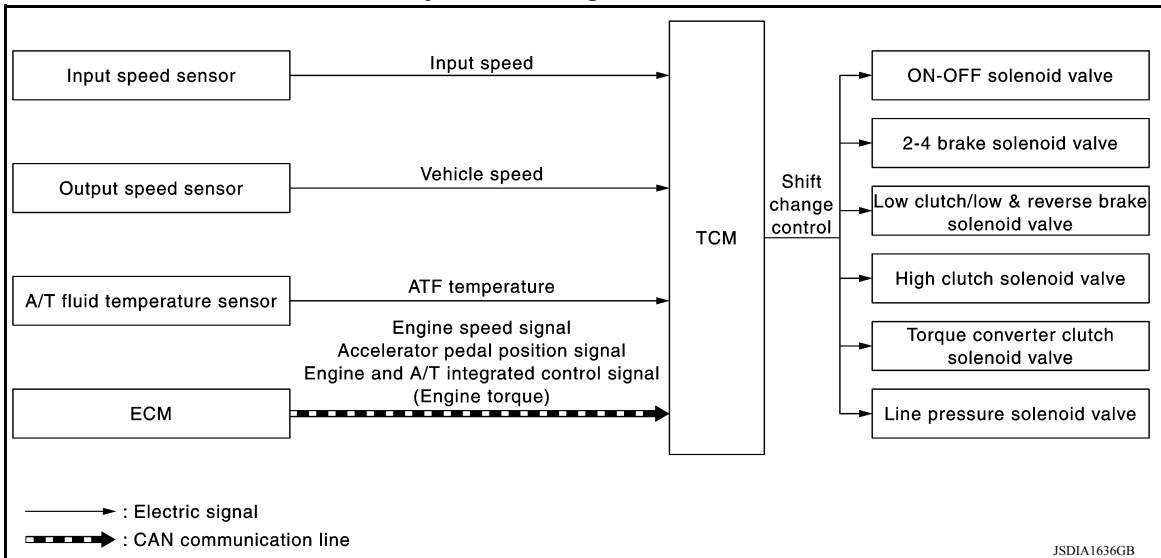

SHIFT PATTERN CONTROL : System Description


INFOID:000000009267852

Shift pattern control automatically selects the shift pattern (such as road environment and driving style) suitable for the various situations so as to allow the vehicle to be driven efficiently and smoothly.

LOCK-UP CONTROL

LOCK-UP CONTROL : System Diagram


INFOID:00000009267853

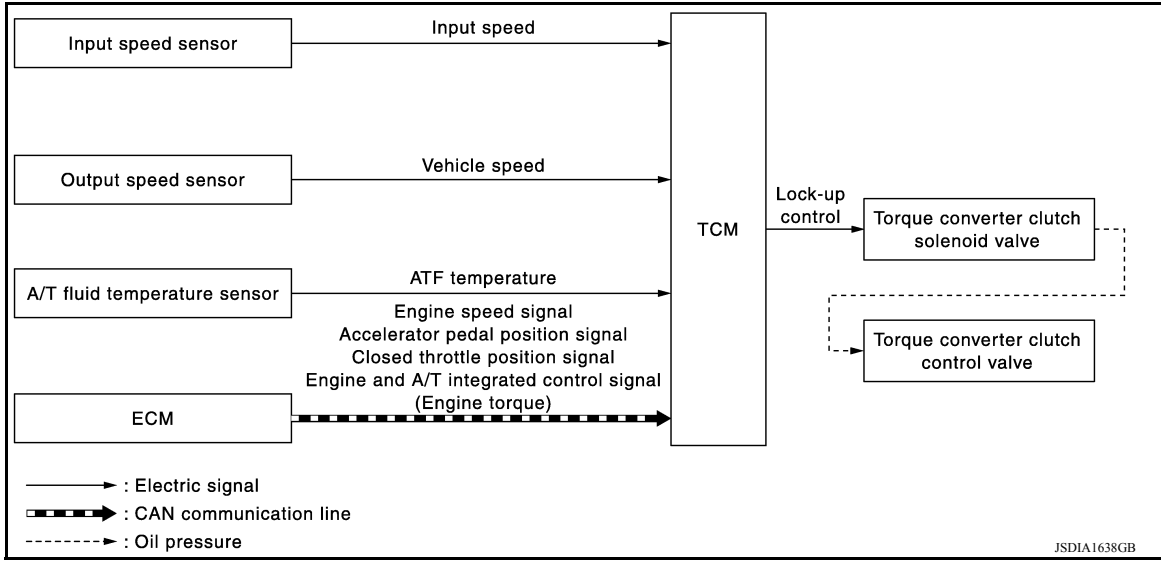

LOCK-UP CONTROL : System Description

INFOID:00000009267854

- The torque converter clutch piston in the torque converter is engaged to eliminate torque converter slip to increase power transmission efficiency.
- The torque converter clutch control valve operation is controlled by the torque converter clutch solenoid valve, which is controlled by a signal from TCM, and the torque converter clutch control valve engages or releases the torque converter clutch piston.

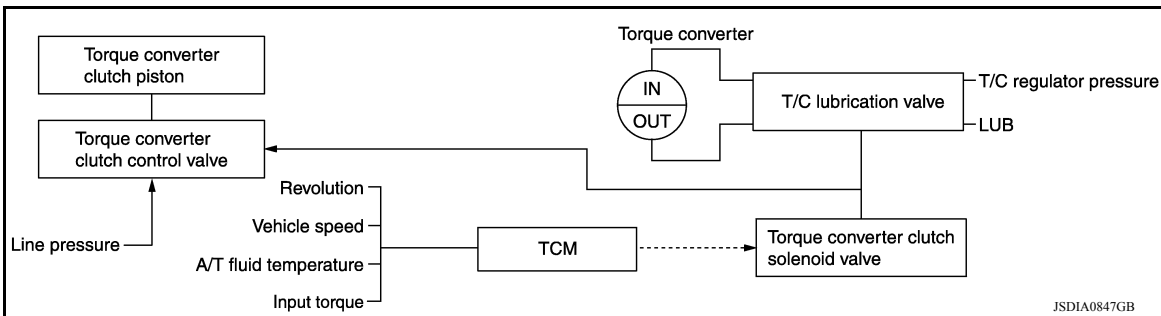

Lock-up Operation Condition Table

Selector lever	"D" position		
Gear position	4	3	2
Lock-up	×	×	-
Slip lock-up	×	×	×

Lock-up released

- In the lock-up released state, the torque converter clutch control valve is set into the unlocked state by the torque converter clutch solenoid and the lock-up apply pressure is drained. In this way, the torque converter clutch piston is not coupled.

Lock-up Applied

- In the lock-up applied state, the torque converter clutch control valve is set into the locked state by the torque converter clutch solenoid and lock-up apply pressure is generated. In this way, the torque converter clutch piston is pressed and coupled.

Smooth Lock-up Control

When shifting from the lock-up released state to the lock-up applied state, the current output to the torque converter clutch solenoid is controlled with the TCM. In this way, when shifting to the lock-up applied state, the torque converter clutch is temporarily set to the half-clutched state to reduce the shock.

Half-clutched State

SYSTEM

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

- The current output from the TCM to the torque converter clutch solenoid is varied to steadily increase the torque converter clutch solenoid pressure.
In this way, the lock-up apply pressure gradually rises and while the torque converter clutch piston is put into half-clutched states, the torque converter clutch piston operating pressure is increased and the coupling is completed smoothly.

A

B

Slip Lock-up Control

- In the slip region, the torque converter clutch solenoid current is controlled with the TCM to put it into the half-clutched state. This absorbs the engine torque fluctuation and lock-up operates from low speed. This raises the fuel efficiency for 2GR, 3GR, and 4GR.

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

ON BOARD DIAGNOSTIC (OBD) SYSTEM

Description

INFOID:000000009267857

This system is an on board diagnostic system that records exhaust emission-related diagnostic information and detects a sensors/actuator-related malfunction. A malfunction is indicated by the malfunction indicator lamp (MIL) and stored in ECU memory as a DTC. The diagnostic information can be obtained with the diagnostic tool (GST: Generic Scan Tool).

OBD FUNCTION

INFOID:000000009267858

When GST is connected with a data link connector equipped on the vehicle side, it will communicate with the control unit equipped in the vehicle and then enable various kinds of diagnostic tests. Refer to [TM-90](#), "[Description](#)".

NOTE:

Service \$0A is not applied for regions where it is not mandated.

DIAGNOSIS SYSTEM (TCM)

DIAGNOSIS DESCRIPTION

DIAGNOSIS DESCRIPTION : 1 Trip Detection Diagnosis and 2 Trip Detection Diagnosis

INFOID:000000009267859

NOTE:

"Start the engine and turn OFF the ignition switch after warm-up." This is defined as 1 trip.

1 TRIP DETECTION DIAGNOSIS

When initial malfunction is detected, TCM memorizes DTC. In these diagnoses, some illuminate MIL and some do not. Refer to [TM-109, "DTC Index"](#).

2 TRIP DETECTION DIAGNOSIS

When initial malfunction is detected, TCM memorizes DTC of the 1st trip. MIL does not light at this stage. <1 trip>

If the same malfunction is detected again in next driving, TCM memorizes DTC. When DTC is memorized, MIL lights. <2 trip>

"Trip" of the "2 trip detection diagnosis" indicates the driving mode that executes self-diagnosis during driving.

×: Check possible —: Check not possible

Item	DTC at the 1st trip		DTC		MIL	
	Display at the 1st trip	Display at the 2nd trip	Display at the 1st trip	Display at the 2nd trip	Illumination at the 1st trip	Illumination at the 2nd trip
1 trip detection diagnosis (Refer to TM-109, "DTC Index")	—	—	×	—	×	—
2 trip detection diagnosis (Refer to TM-109, "DTC Index")	×	—	—	×	—	×

DIAGNOSIS DESCRIPTION : DTC and DTC of 1st Trip

INFOID:000000009267860

2 TRIP DETECTION DIAGNOSIS THAT ILLUMINATES MIL

- The DTC number of the 1st trip is the same as the DTC number.
- When a malfunction is detected at the 1st trip, TCM memorizes DTC of the 1st trip. MIL does not light at this stage. If the same malfunction is not detected at the 2nd trip (conforming to necessary driving conditions), DTC at the 1st trip is erased from TCM. If the same malfunction is detected at the 2nd trip, TCM memorizes DTC and MIL lights at the same time.
- The DTC of the 1st trip is specified in Service \$01 of SAE J1979/ISO 15031-5. Since detection of DTC at the 1st trip does not illuminate MIL, warning for a problem is not given to a driver.
- For procedure to delete DTC and 1st trip DTC from TCM, refer to [TM-93, "CONSULT Function"](#).
- If DTC of the 1st trip is detected, it is necessary to check the cause according to the "Diagnosis flow". Refer to [TM-120, "Work Flow"](#).

DIAGNOSIS DESCRIPTION : Malfunction Indicator Lamp (MIL)

INFOID:000000009267861

- TCM not only detects DTC, but also sends the MIL signal to ECM through CAN communication. ECM sends the MIL signal to the combination meter through CAN communication according to the signal, and illuminates MIL.
- For malfunction indicator lamp (MIL) description, refer to [EC-26, "Malfunction Indicator Lamp \(MIL\)"](#).

DIAGNOSIS DESCRIPTION : Counter System

INFOID:000000009267862

RELATION BETWEEN DTC AT 1ST TRIP/DTC/MI AND DRIVING CONDITIONS (FOR 2 TRIP DETECTION DIAGNOSIS THAT ILLUMINATES MIL)

- When initial malfunction is detected, TCM memorizes DTC of the 1st trip. MIL does not light at this stage.
- If the same malfunction is detected at the 2nd trip, TCM memorizes DTC and MIL lights at the same time.
- Then, MIL goes after driving the vehicle for 3 trips under "Driving Pattern B" without malfunction.
- DTC is displayed until 40 trips of "Driving Pattern A" are satisfied without detecting the same malfunction. DTC is erased when 40 trips are satisfied.

DIAGNOSIS SYSTEM (TCM)

[4AT: RE4F03C]

< SYSTEM DESCRIPTION >

- When the self-diagnosis result is acceptable at the 2nd trip (conforming to driving pattern B), DTC of the 1st trip is erased.

COUNTER SYSTEM LIST

Item	Driving pattern	Trip
MIL (OFF)	B	3
DTC (clear)	A	40
DTC at 1st trip (clear)	B	1

DRIVING CONDITION

Driving Pattern A

Driving pattern A is the driving condition that provides warm-up.

In specific, count-up is performed when all of the following conditions are satisfied.

- Engine speed reaches 400 rpm or more.
- Engine coolant temperature rises by 20°C (36°F) or more after starting the engine.
- Engine coolant temperature reaches 70°C (158°F) or more.
- The ignition switch is turned from ON to OFF.

NOTE:

- If the same malfunction is detected regardless of the driving condition, reset the A counter.
- When the above is satisfied without detecting the same malfunction, count up the A counter.
- When MIL goes off due to the malfunction and the A counter reaches 40, the DTC is erased.

Driving Pattern B

Driving pattern B is the driving condition that performs all diagnoses once.

In specific, count-up is performed when all of the following conditions are satisfied.

- Engine speed reaches 400 rpm or more.
- Engine coolant temperature reaches 70°C (158°F) or more.
- Vehicle speed of 70 – 120 km/h (44 – 75 MPH) is maintained for 60 seconds or more under the control of closed loop.
- Vehicle speed of 30 – 60 km/h (19 – 37 MPH) is maintained for 10 seconds or more under the control of closed loop.
- Under the closed loop control condition, the following state reaches 12 seconds or more in total: Vehicle speed of 4 km/h (2 MPH) or less with idling condition.
- A lapse of 22 minutes or more after engine start.
- The state of driving at 10km/h (6 MPH) or more reaches 10 minutes or more in total.
- The ignition switch was changed from ON to OFF.

NOTE:


- If the same malfunction is detected regardless of the driving condition, reset the B counter.
- When the above is satisfied without detecting the same malfunction, count up the B counter.
- When the B counter reaches 3 without malfunction, MIL goes off.
- When the B counter is counted once without detecting the same malfunction after TCM memorizes DTC of the 1st trip, DTC of the 1st trip is erased.

DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

TIME CHART

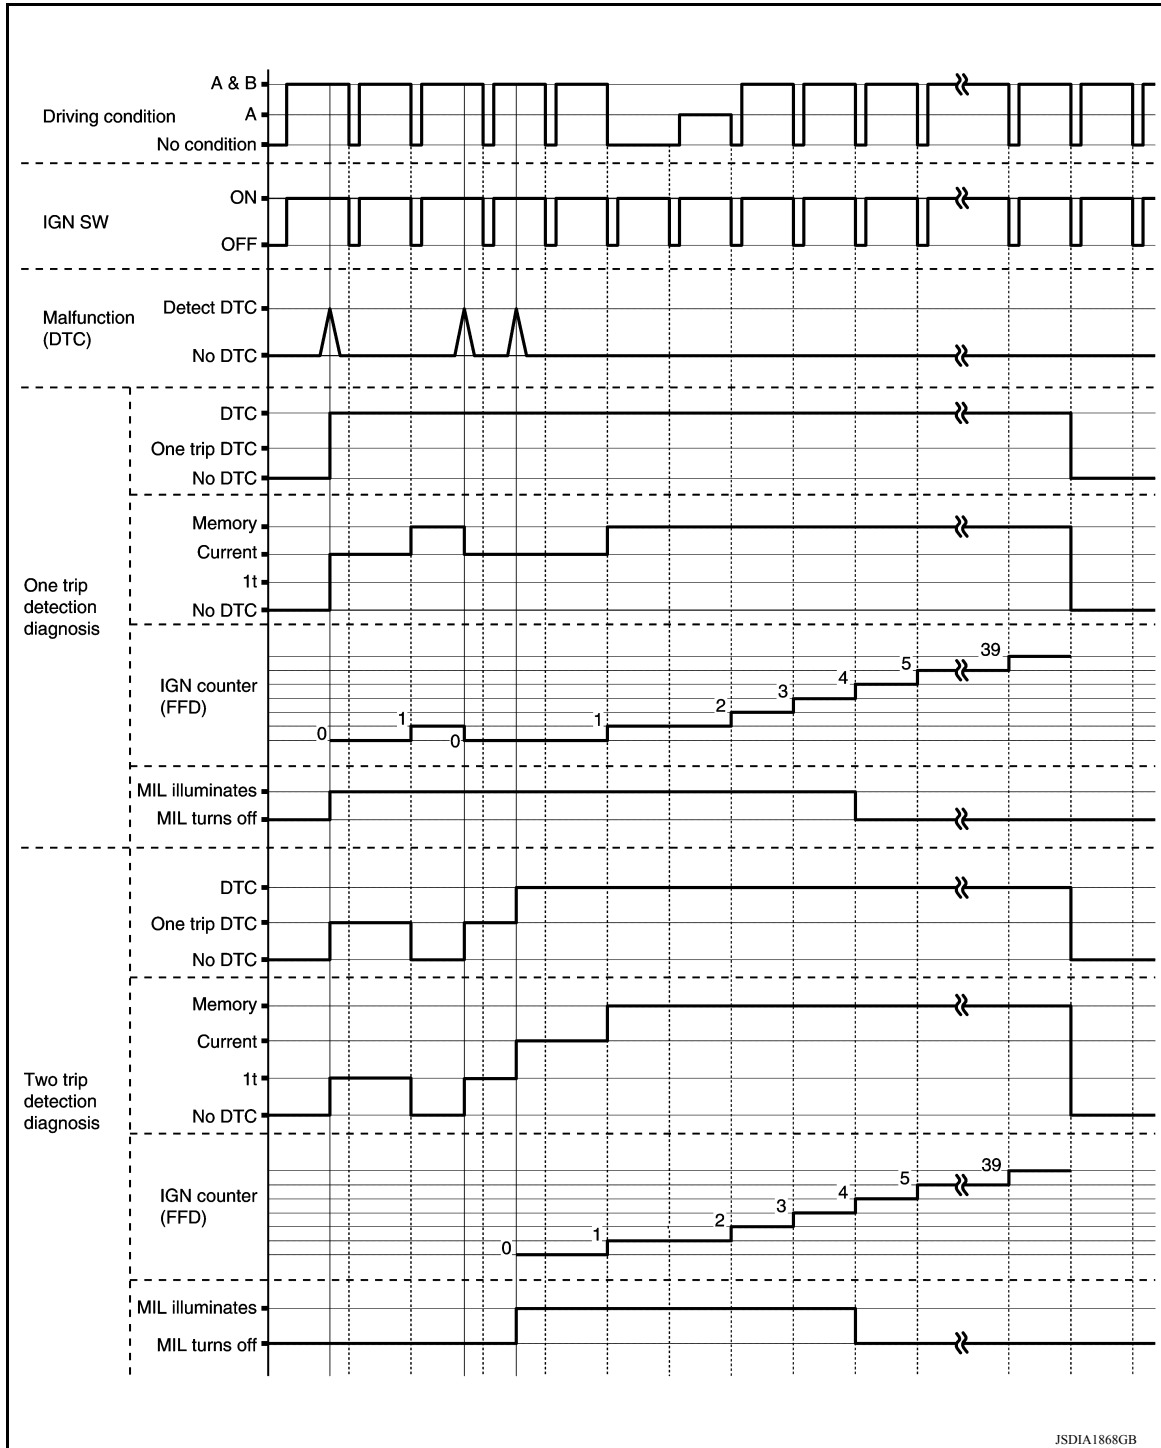

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

CONSULT Function

INFOID:000000009267863

APPLICATION ITEMS

Diagnostic test mode	Function
Work Support	This mode enables a technician to adjust some devices faster and more accurately.
Self Diagnostic Results	Retrieve DTC from ECU and display diagnostic items.
Data Monitor	Monitor the input/output signal of the control unit in real time.
CAN Diagnosis	This mode displays a network diagnosis result about CAN by a diagram.

DIAGNOSIS SYSTEM (TCM)

[4AT: RE4F03C]

< SYSTEM DESCRIPTION >

Diagnostic test mode	Function
CAN Diagnostic Support Monitor	It monitors the starts of CAN communication.
DTC Work Support	DTC reproduction procedure can be performed speedily and precisely.
ECU Identification	Display the ECU identification number (part number etc.) of the selected system.
CALIB DATA	The calibration data status of TCM can be checked.

WORK SUPPORT

Item name	Description
ERASE CALIBRATION DATA	Erases the "CALIBRATION DATA" stored by the TCM.
ERASE LEARNING VALUE	Erases the "LEARNING VALUE" stored by the TCM.
ERASE MEMORY DATA	Erases both the "CALIBRATION DATA" and "LEARNING VALUE".

SELF DIAGNOSTIC RESULTS

Refer to [TM-109, "DTC Index"](#).

DTC at 1st trip and method to read DTC

- DTC (P0705, P0711, P0720, etc.) is specified by SAE J2012/ISO 15031-6.
- DTC and DTC at 1st trip are displayed on "Self Diagnostic results" of CONSULT. "Timing" shows current malfunction or malfunction in the past.
If current DTC is detected, "timing" is "present". If the "timing" is "memorized", it is the malfunction occurred in the past. According to "ignition counter" in "FFD", the number (trip) of operation without malfunction of the DTC can be checked.
- When the DTC at the 1st trip is detected, the "timing" is displayed as "1t".

DTC deletion method

NOTE:

If the ignition switch is left ON after repair, turn OFF the ignition switch and wait for 10 seconds or more. Then, turn ignition ON again. (Engine stop)

1. Touch "TRANSMISSION" of CONSULT.
2. Touch "Self Diagnostic Result".
3. Touch "Erase". (DTC memorized in TCM is erased.)

IGN counter

The ignition counter is displayed in "FFD" and the number of times of satisfied "Driving Pattern A" is displayed after normal recovery of DTC. Refer to [TM-91, "DIAGNOSIS DESCRIPTION : Counter System"](#).

- If malfunction (DTC) is currently detected, "0" is displayed.
- After normal recovery, every time "Driving Pattern A" is satisfied, the display value increases from 1 → 2 → 3...38 → 39.
- When MIL turns OFF due to the malfunction and the counter reaches 40, the DTC is erased.

NOTE:

The counter display of "40" cannot be checked.

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

X: Standard, —: Not applicable, ▼: Option

Monitored item (Unit)	Monitor Item Selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM ITEM	
VHCL/S SE-A/T (km/h or mph)	X	X	▼	Displays the vehicle speed calculated by the TCM from the output shaft revolution.
ESTM VSP SIG (km/h or mph)	X	—	▼	Displays the vehicle speed signal received via CAN communication.

DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

Monitored item (Unit)	Monitor Item Selection			Remarks
	ECU IN-PUT SIG-NALS	MAIN SIG-NALS	SELEC-TION FROM ITEM	
THROTTLE POSI (0.0/8)	X	—	▼	Displays the throttle position received via CAN communication.
ACCELE POSI (0.0/8)	X	X	▼	Displays the accelerator position estimated value received via CAN communication.
CLSD THL POS (On/Off)	X	—	▼	Displays the reception status of idle switch signal received via CAN communication.
W/O THL POS (On/Off)	X	—	▼	Displays the kick down condition signal status received via CAN communication.
BRAKESW (On/Off)	X	—	▼	Displays the reception status of stop lamp switch signal received via CAN communication.
ENGINE SPEED (rpm)	X	X	▼	Displays the engine speed received via CAN communication.
INPUT SPEED (rpm)	X	X	▼	Displays the input speed calculated from low clutch drum revolution.
OUTPUT REV (rpm)	X	X	▼	Displays the output speed calculated from the pulse signal of output speed sensor.
FLUID TEMP (°C or °F)	X	X	▼	Displays the ATF temperature of oil pan calculated from the signal voltage of A/T fluid temperature sensor.
BATTERY VOLT (V)	X	—	▼	Displays the power supply voltage of TCM.
RANGE SW 1 (On/Off)	X	—	▼	Displays the operation status of transmission range switch.
RANGE SW 2 (On/Off)	X	—	▼	
RANGE SW D (On/Off)	X	—	▼	
RANGE SW N (On/Off)	X	—	▼	
RANGE SW R (On/Off)	X	—	▼	
RANGE SW P (On/Off)	X	—	▼	
OD CONT SW (On/Off)	X	—	▼	Displays the reception status of overdrive control switch signal received via CAN communication.
POWERSHIFT SW (On/Off)	X	—	▼	<ul style="list-style-type: none"> • Displays the reception status of POWER mode signal received via CAN communication. • Not mounted but displayed.
ABS SIGNAL (On/Off)	X	—	▼	Displays the reception status of ABS operation signal received via CAN communication.
GEAR	—	X	▼	Displays the current transmission gear position recognized by TCM.
TC SLIP SPEED (rpm)	—	X	▼	Displays the revolution difference between input speed and engine speed.
GEAR RATIO	—	X	▼	Displays the gear ratio calculated from input speed and output speed.
SLCT LVR POSI	—	X	▼	Displays the shift positions recognized by TCM.
LINE PRES SOL (A)	—	X	▼	Displays the command current from TCM to the line pressure solenoid.
TCC SOLENOID (A)	—	X	▼	Displays the command current from TCM to the torque converter clutch solenoid.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

Monitored item (Unit)	Monitor Item Selection			Remarks
	ECU IN-PUT SIGNALS	MAIN SIGNALS	SELECTION FROM ITEM	
L/C SOLENOID (A)	—	X	▼	Displays the command current from TCM to the low clutch solenoid.
H/C SOLENOID (A)	—	X	▼	Displays the command current from TCM to the high clutch/low & reverse brake solenoid.
24/B SOLENOID (A)	—	X	▼	Displays the command current from TCM to the 2-4 brake solenoid.
LR/B SOLENOID (A)	—	X	▼	Displays the command current from TCM to the low & reverse brake solenoid.
THL REVERSAL SIN (0.0/8)	—	—	▼	Displays the accelerator position estimated value that reversed a bit received via CAN communication.
ATF TEMP SEN (V)	—	—	▼	Displays the signal voltage of A/T fluid temperature sensor.
L/P SOL MON (A)	—	—	▼	Monitors the command current from TCM to the line pressure solenoid, and displays the monitor value.
TCC SOL MON (A)	—	—	▼	Monitors the command current from TCM to the torque converter clutch solenoid, and displays the monitor value.
L/C SOL MON (A)	—	—	▼	Monitors the command current from TCM to the low clutch solenoid, and displays the monitor value.
H/C SOL MON (A)	—	—	▼	Monitors the command current from TCM to the high clutch/low & reverse brake solenoid, and displays the monitor value.
24/B SOL MON (A)	—	—	▼	Monitors the command current from TCM to the 2-4 brake solenoid, and displays the monitor value.
LR/B SOL MON (A)	—	—	▼	Monitors the command current from TCM to the low & reverse brake solenoid, and displays the monitor value.
ENGINE TORQUE (Nm)	—	—	▼	Displays the engine torque estimated value received via CAN communication.
ENG TORQUE D (Nm)	—	—	▼	Displays the engine torque estimated value reflected the requested torque of each control unit received via CAN communication.
INPUT TRQ S (Nm)	—	—	▼	Displays the input torque using for the oil pressure calculation process of shift change control.
INPUT TRQ L/P (Nm)	—	—	▼	Displays the input torque using for the oil pressure calculation process of line pressure control.
TRGT PRES L/P (kPa, kg/cm ² or psi)	—	—	▼	Displays the target oil pressure value of torque converter clutch solenoid valve calculated by the oil pressure calculation process of lock-up control.
TRGT PRES TCC (kPa, kg/cm ² or psi)	—	—	▼	Displays the target oil pressure value of torque converter clutch solenoid valve calculated by the oil pressure calculation process of lock-up control.
TRGT PRES L/C (kPa, kg/cm ² or psi)	—	—	▼	Displays the target oil pressure value of low clutch solenoid valve calculated by the oil pressure calculation process of shift change control.

DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

Monitored item (Unit)	Monitor Item Selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM ITEM	
TRGT PRES H/C (kPa, kg/cm ² or psi)	—	—	▼	Displays the target oil pressure value of high clutch/low & reverse brake solenoid valve calculated by the oil pressure calculation process of shift change control.
TRG PRES 24/B (kPa, kg/cm ² or psi)	—	—	▼	Displays the target oil pressure value of 2-4 brake solenoid valve calculated by the oil pressure calculation process of shift change control.
TRGT PRES LR/B (kPa, kg/cm ² or psi)	—	—	▼	Displays the target oil pressure value of low & reverse brake solenoid valve calculated by the oil pressure calculation process of shift change control.
SHIFT PATTERN	—	—	▼	Displays the gear change data using the shift pattern control.
VEHICLE SPEED (km/h or mph)	—	—	▼	Displays the vehicle speed for control using the control of TCM.
DRV CST JUDGE (DRIVE/COAST)	—	—	▼	Displays the judgment results of “driving” or “coasting” judged by TCM.
SHIFT IND SIGNAL	—	—	▼	Displays the transmission value of shift position signal transmitted via CAN communication.
F-SAFE IND/L (On/Off)	—	—	▼	Displays the transmission status of A/T CHECK indicator lamp signal transmitted via CAN communication.
ATF WARN LAMP (On/Off)	—	—	▼	<ul style="list-style-type: none"> • Displays the transmission status of ATF temperature signal transmitted via CAN communication. • Not mounted but displayed.
ON OFF SOL (On/Off)	—	—	▼	Displays the command status from TCM to select switch ON-OFF solenoid.
ON OFF SOL MON (On/Off)	—	—	▼	Monitors the command value from TCM to the select switch ON-OFF solenoid, and displays the monitor status.
NEXT GR POSI	—	—	▼	Displays the target gear position of gear change that is calculated based on the vehicle speed information and throttle information.
SHIFT MODE	—	—	▼	Displays the transmission driving mode recognized by TCM.
LOCK-UP PATTERN	—	—	▼	Displays the status of lock-up.
THROTTLE FAIL (On/Off)	—	—	▼	Displays the reception status of engine torque signal received via CAN communication.
MIL (On/Off)	—	—	▼	Displays the status of malfunctioning indicator.
PRESS SEN (BRAKE) (bar)	—	—	▼	Not mounted but displayed.
G SEN CALIBRATION (COMP/INCOMP)	—	—	▼	<ul style="list-style-type: none"> • Displays the status of “Work Support” “G SENSOR CALIBRATION”. • Not mounted but displayed.
N IDLE LEARNING (COMP/INCOMP)	—	—	▼	<ul style="list-style-type: none"> • Displays the status of “N IDLE LEARNING”. • Not mounted but displayed.
N IDLE STATUS (On/Off)	—	—	▼	<ul style="list-style-type: none"> • Displays the control status of idle neutral control. • Not mounted but displayed.

DTC WORK SUPPORT

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[4AT: RE4F03C]

Item name	Description	Check item
1ST GR FNCTN P0731	Following items for "1GR function ratio" can be confirmed. • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG)	<ul style="list-style-type: none"> • Low clutch solenoid valve • 2-4 brake solenoid valve
2ND GR FNCTN P0732	Following items for "2GR function ratio" can be confirmed. • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG)	<ul style="list-style-type: none"> • High clutch/low & reverse brake solenoid valve
3RD GR FNCTN P0733	Following items for "3GR function ratio" can be confirmed. • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG)	<ul style="list-style-type: none"> • Select switch ON-OFF solenoid valve • Line pressure solenoid valve
4TH GR FNCTN P0734	Following items for "4GR function ratio" can be confirmed. • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG)	<ul style="list-style-type: none"> • Output speed sensor • Input speed sensor • Each clutch and brake • Hydraulic control circuit
R POSITION FNCTN	Following items for "Reverse position function" can be confirmed. • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG)	<ul style="list-style-type: none"> • High clutch/low & reverse brake solenoid valve • Select switch ON-OFF solenoid valve • Line pressure solenoid valve • Output speed sensor • Input speed sensor • Each clutch and brake • Hydraulic control circuit • Control valve assembly
TCC SOL FUNCTN CHECK	Following items for "TCC solenoid function" can be confirmed. • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG)	<ul style="list-style-type: none"> • Harness or connectors • Torque converter clutch solenoid valve • Torque converter • Input speed sensor • Hydraulic control circuit

ECU DIAGNOSIS INFORMATION

TCM

Reference Value

INFOID:000000009267864

VALUES ON DIAGNOSIS TOOL

- The CONSULT electrically displays shift timing and lock-up timing (that is, operation timing of each solenoid).
Check for time difference between actual shift timing and the CONSULT display. If the difference is noticeable, mechanical parts (except solenoids, sensors, etc.) may be malfunctioning. Check mechanical parts in accordance with the specified diagnostic procedures.
- Shift schedule (that implies gear position) on CONSULT may slightly differ from that described in Service Manual. This occurs for the following reasons:
 - Actual shift schedule has more or less tolerance or allowance
 - Shift schedule in Service Manual refers to the point where shifting starts
 - Gear position on CONSULT indicates the point where shifting completes
- Display of solenoid valves on CONSULT changes at the start of shifting, while gear position is displayed upon completion of shifting (which is computed by TCM).

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Item name	Condition	Value / Status (Approx.)
VHCL/S SE-A/T	During driving	Approximately equals the speedometer reading.
ESTM VSP SIG	During driving	Approximately equals the speedometer reading.
THROTTLE POSI	Accelerator pedal is released	0.0/8
	Accelerator pedal is fully depressed	8.0/8
ACCELE POSI	Accelerator pedal is released	0.0/8
	Accelerator pedal is fully depressed	8.0/8
CLSD THL POS	Accelerator pedal is released	On
	Accelerator pedal is fully depressed	Off
W/O THL POS	Accelerator pedal is fully depressed	On
	Accelerator pedal is released	Off
BRAKESW	Brake pedal is depressed	On
	Brake pedal is released	Off
ENGINE SPEED	Engine running	Closely equals the tachometer reading.
INPUT SPEED	During driving (lock-up ON)	Approximately equals the engine speed.
OUTPUT REV	During driving (lock-up ON)	Tachometer / Gear ratio
TC SLIP SPEED	During driving	Engine speed – Input speed
FLUID TEMP	Ignition switch is ON	Temperature of ATF in the transaxle is indicated.
BATTERY VOLT	Ignition switch is ON	Battery voltage (11 V – 14 V)
RANGE SW 1	Selector lever in "1" position	On
	Other than the above	Off
RANGE SW 2	Selector lever in "2" position	On
	Other than the above	Off

TCM

< ECU DIAGNOSIS INFORMATION >

[4AT: RE4F03C]

Item name	Condition	Value / Status (Approx.)
RANGE SW D	Selector lever in "D" position	On
	Other than the above	Off
RANGE SW R	Selector lever in "R" position	On
	Other than the above	Off
RANGE SW P	Selector lever in "P" position	On
	Other than the above	Off
OD CONT SW	When overdrive control switch is depressed	On
	When overdrive control switch is released	Off
POWERSHIFT SW	Always	Off
ABS SIGNAL	ABS operates	On
	Other than the above	Off
GEAR	During driving	1st, 2nd, 3rd, 4th
TC SLIP SPEED	Slip lock-up is active	90 rpm
GEAR RATIO	Driving with 1GR	2.861
	Driving with 2GR	1.562
	Driving with 3GR	1.000
	Driving with 4GR	0.697
LINE PRES SOL	During driving	0 – 0.8 A
TCC SOLENOID	Slip lock-up is active	0.2 – 0.4 A
	Lock-up is active	0.8 A
	Other than the above	0 A
L/C SOLENOID	Low clutch is disengaged	1.0 A
	Low clutch is engaged	0 A
H/C SOLENOID	High clutch is disengaged	1.0 A
	High clutch is engaged	0 A
24/B SOLENOID	2-4 brake is engaged	1.0 A
	2-4 brake is disengaged	0 A
LR/B SOLENOID	Low&reverse brake is engaged	0 A
	Low&reverse brake is disengaged	1.0 A
THL REVERSAL SIN	Accelerator pedal is released	8.0/8
	Accelerator pedal is fully depressed	0.0/8
ATF TEMP SEN	0°C (32°F) – 20°C (68°F) – 80°C (176°F)	3.3 – 2.7 – 0.9 V
L/P SOL MON	During driving	0 – 0.8 A
TCC SOL MON	Slip lock-up is active	0.2 – 0.4 A
	Lock-up is active	1.0 A
	Other than the above	0 A
L/C SOL MON	Low clutch is disengaged	1.0 A
	Low clutch is engaged	0 A
H/C SOL MON	High clutch is disengaged	1.0 A
	High clutch is engaged	0 A
24/B SOL MON	2-4 brake is engaged	1.0 A
	2-4 brake is disengaged	0 A
LR/B SOL MON	Low&reverse brake is engaged	0 A
	Low&reverse brake is disengaged	1.0 A

TCM

< ECU DIAGNOSIS INFORMATION >

[4AT: RE4F03C]

Item name	Condition	Value / Status (Approx.)	
ENGINE TORQUE	During driving	Changes the value according to the acceleration or deceleration.	A
ENG TORQUE D	During driving	Changes the value according to the acceleration or deceleration.	B
INPUT TRQ S	During driving	Changes the value according to the acceleration or deceleration.	C
INPUT TRQ L/P	During driving	Changes the value according to the acceleration or deceleration.	C
TRGT PRES L/P	Selector lever in "P", "R" and "N" positions	646 – 2,000 kPa	TM
	Selector lever in "D" position	420 – 1,300 kPa	
	Other than the above	0 kPa	
TRGT PRES TCC	Slip lock-up is active	0 – 250 kPa	E
	Lock-up is active	1,279 kPa	
	Other than the above	-500 kPa	
TRGT PRES L/C	Low clutch is engaged	1,300 kPa	F
	Low clutch is disengaged	0 kPa	
TRGT PRES H/C	High clutch is disengaged	1,300 kPa	G
	High clutch is engaged	0 kPa	
TRGT PRES 24/B	2-4 brake is engaged	1,300 kPa	H
	2-4 brake is disengaged	0 kPa	H
TRGT PRES LR/B	Low&reverse brake is engaged ("D" position)	1,300 kPa	I
	Low&reverse brake is engaged ("R" position)	2,000 kPa	I
	Low&reverse brake is disengaged	0 kPa	I
SHIFT PATTERN	During normal driving (without shift changes)	0xFF	
VEHICLE SPEED	During driving	Approximately equals the speedometer reading.	J
DRV CST JUDGE	Accelerator pedal is depressed	DRIVE	K
	Accelerator pedal is released	COAST	K
SHIFT IND SIGNAL	When the selector lever is positioned in between each position.	Off	L
	Selector lever in "P" position	P	L
	Selector lever in "R" position	R	L
	Selector lever in "N" position	N	M
	Selector lever in "D" position	D	M
	Selector lever in "D" position: 3GR	3	N
	Selector lever in "D" and "2" positions: 2GR	2	N
Selector lever in "D" and "1" positions: 1GR	1	N	
F-SAFE IND/L	For 2 seconds after the ignition switch is turned ON	On	O
	Other than the above	Off	O
ATF WARN LAMP	When TCM transmits the ATF indicator lamp signal	On	P
	Other than the above	Off	P
ON/OFF SOL	Selector lever in "P" and "N" positions	On	
	Other than the above	Off	
ON OFF SOL MON	Selector lever in "P", "N", "D1" and "1" positions	On	
	Other than the above	Off	
NEXT GR POSI	During driving	1st, 2nd, 3rd, 4th	


TCM

< ECU DIAGNOSIS INFORMATION >

[4AT: RE4F03C]

Item name	Condition	Value / Status (Approx.)
SHIFT MODE	<ul style="list-style-type: none"> Engine warming up TSC, VDC operations 	1
	<ul style="list-style-type: none"> Engine cold TSC, VDC operations 	2
	ATF temperature: approx. 130 °C (266 °F)	3
	Other than the above	0
LOCK-UP PATTERN	Lock-up is active	2
	Other than the above	0
THROTTLE FAIL	When TCM receives unusual engine torque signal	On
	Other than the above	Off

TERMINAL LAYOUT

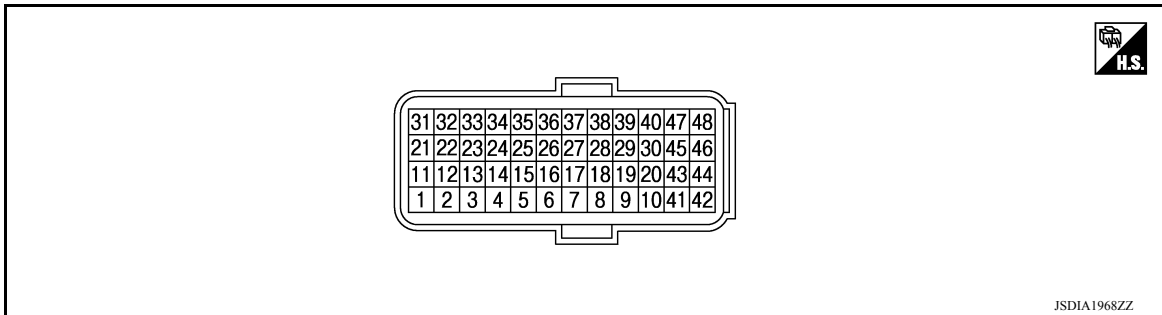





INPUT/OUTPUT SIGNAL STANDARD

Terminal No. (Wire color)		Conditions		Operation or operation conditions		Standard
+	-	Signal	Input/ Output			
1 (L/R)	Ground	Select switch ON-OFF solenoid valve	Output	Ignition switch ON	Selector lever: "P", "N" "D1" and "1" positions	10 – 16 V
					Other than the above	Approx. 0 V
2 (W)	Ground	1 position switch	Input	Ignition switch ON	Selector lever: "1" position	10 – 16 V
					Other than the above	Approx. 0 V
3 (R/B)	Ground	2 position switch	Input		Selector lever: "2" position	10 – 16 V
					Other than the above	Approx. 0 V
4 (W/B)	Ground	D position switch	Input		Selector lever: "D" position	10 – 16 V
					Other than the above	Approx. 0 V
5 (L/B)	Ground	N position switch	Input		Selector lever: "N" position	10 – 16 V
					Other than the above	Approx. 0 V
6 (O)	Ground	R position switch	Input	Selector lever: "R" position	10 – 16 V	
				Other than the above	Approx. 0 V	
7 (Y)	Ground	P position switch	Input	Ignition switch ON	Selector lever: "P" position	10 – 16 V
				Other than the above	Approx. 0 V	
11 (B)	Ground	Sensor ground	Input	Always		Approx. 0 V

TCM

< ECU DIAGNOSIS INFORMATION >

[4AT: RE4F03C]


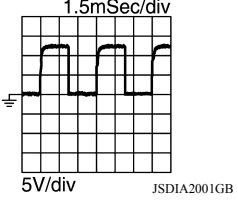
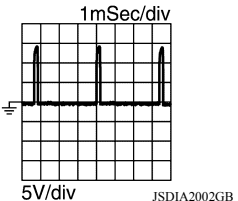
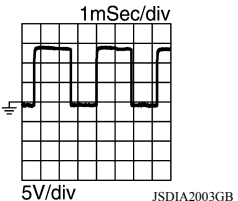
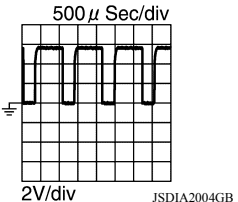
Terminal No. (Wire color)		Conditions		Operation or operation conditions	Standard	
+	-	Signal	Input/ Output			
12 (G/W)	Ground	A/T fluid temperature sensor	Output	Ignition switch ON	A/T fluid temperature: Approx. 20°C (68°F)	Approx. 2.01 – 2.05 V
					A/T fluid temperature: Approx. 50°C (122°F)	Approx. 1.45 – 1.50 V
					A/T fluid temperature: Approx. 80°C (176°F)	Approx. 0.90 – 0.94 V
21 (R/W)	—	ROM ASSY (CHIP SELECT)	—	—	—	
22 (V)	—	ROM ASSY (DATA I/O)	—	—	—	
23 (P)	—	CAN-L	Input/ Output	—	—	
24 (BR)	Ground	Output speed sensor	Input	<ul style="list-style-type: none"> • Selector lever: "1" position • While driving at 20 km/h (12 MPH) 	Approx. 640 Hz 	
26 (LG)	Ground	Sensor power supply	Output	Ignition switch: ON	Approx. 5.0 V	
				Ignition switch: OFF	Approx. 0 V	
30 (BR/B)	Ground	Low clutch solenoid valve	Output	Vehicle is running with the selector lever in the "1" position.		
				<ul style="list-style-type: none"> • Engine started • Vehicle is stopped • Selector lever: "P" position 		
31 (L/W)	—	ROM ASSY (CLOCK)	—	—	—	
33 (L)	—	CAN-H	Input/ Output	—	—	
35 (SB)	Ground	Input speed sensor	Input	<ul style="list-style-type: none"> • Selector lever: "1" position • While driving at 20 km/h (12 MPH) 	Approx. 880 Hz 	

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TCM

< ECU DIAGNOSIS INFORMATION >



[4AT: RE4F03C]

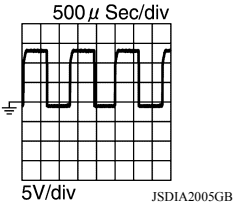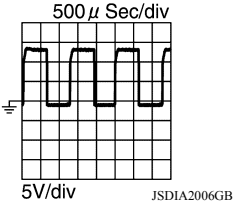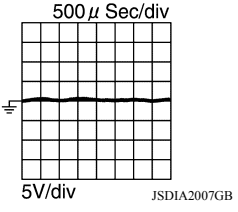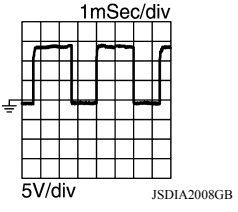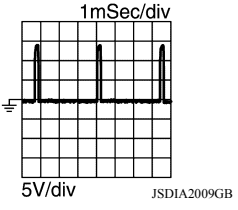Terminal No. (Wire color)		Conditions		Operation or operation conditions	Standard
+	-	Signal	Input/ Output		
37 (BR/W)	Ground	Line pressure solenoid valve	Output	<ul style="list-style-type: none"> • Selector lever: "1" position • While driving at 20 km/h (12 MPH) 	
38 (G)	Ground	Lock-up solenoid valve	Output	<ol style="list-style-type: none"> 1. Selector lever: "D" position 2. accelerate to more than 60 km/h (37 MPH) 3. Throttle position:0.0/8 4. Check the pulse in 60 km/h (37 MPH) 	
				<ul style="list-style-type: none"> • Engine started • Vehicle is stopped • Selector lever: "P" position 	
39 (G/B)	Ground	2-4 brake solenoid valve	Output	<ol style="list-style-type: none"> 1. Selector lever: "D" position 2. accelerate to more than 20 km/h (12 MPH) 3. Throttle position:0.0/8 4. Check the pulse in 20 km/h (12 MPH) 	
				<ul style="list-style-type: none"> • Engine started • Vehicle is stopped • Selector lever: "P" position 	

TCM

< ECU DIAGNOSIS INFORMATION >

[4AT: RE4F03C]

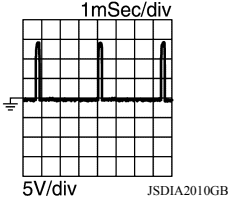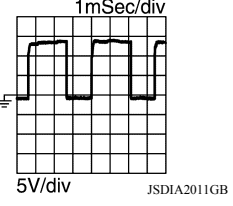Terminal No. (Wire color)		Conditions		Operation or operation conditions	Standard
+	-	Signal	Input/ Output		
40 (Y/B)	Ground	High clutch/low & reverse brake solenoid valve	Output	<ol style="list-style-type: none"> 1. Selector lever: "D" position 2. accelerate to more than 40 km/h (25 MPH) 3. Throttle position:0.0/8 4. Check the pulse in 40 km/h (25 MPH) 	
				<ul style="list-style-type: none"> • Engine started • Vehicle is stopped • Selector lever: "P" position 	
41 (B)	Ground	Ground	Output	Always	Approx. 0 V
42 (B)	Ground	Ground	Output	Always	Approx. 0 V
45 (LG)	Ground	Power (backup)	Input	Always	10 – 16 V
47 (R)	Ground	Power supply	Input	Ignition switch: ON	10 – 16 V
				Ignition switch: OFF	Approx. 0 V
48 (R)	Ground	Power supply	Input	Ignition switch: ON	10 – 16 V
				Ignition switch: OFF	Approx. 0 V

Fail-Safe

INFOID:000000009267865

TCM is equipped with an electrical fail-safe mode. The operation can be continued even if the signal circuit of the main electronically controlled input/output parts are damaged.

If the vehicle shows following behaviors including "poor acceleration", a malfunction of the applicable system is detected by TCM and the vehicle may be in a fail-safe mode. At this time, check the DTC code and perform inspection and repair according to the malfunction diagnosis procedures.

FAIL-SAFE FUNCTION

DTC	Vehicle behavior	Vehicle condition
P0705 P0706	<ul style="list-style-type: none"> • "D" position (The shifting can be performed) • "R" position can be performed • Back-up lamp is OFF • Large shift shock • Lock-up is prohibited • Slip lock-up is prohibited 	—
P0713	The gear is fixed in a position of error detection	During driving
	Locks in 3GR	Other than the above
P0717 P0720	<ul style="list-style-type: none"> • The gear is fixed in a position of error detection • Lock-up is prohibited • Slip lock-up is prohibited 	During driving
	<ul style="list-style-type: none"> • Locks in 3GR • Lock-up is prohibited • Slip lock-up is prohibited 	Other than the above
P072C	Locks in 2GR	—

TCM

< ECU DIAGNOSIS INFORMATION >

[4AT: RE4F03C]

DTC	Vehicle behavior	Vehicle condition
P072D	Locks in 3GR	—
P072E P072F	The gear is fixed in neutral until vehicle speed decreases to below 5 km/h (3 MPH) and in 2GR when reaching 5 km/h (3 MPH) or more	—
P0731	<ul style="list-style-type: none"> • Locks in 2GR or 3GR • Lock-up is prohibited 	—
P0732	<ul style="list-style-type: none"> • Locks in 3GR • Lock-up is prohibited 	—
P0733 P0734	<ul style="list-style-type: none"> • The gear is fixed in neutral until vehicle speed decreases to below 5 km/h (3 MPH) and in 2GR when reaching 5 km/h (3 MPH) or more • Lock-up is prohibited 	—
P073F	<ul style="list-style-type: none"> • Locks in 4GR • Lock-up is prohibited 	—
P0740 P0743 P0744	Lock-up is prohibited	—
P074A P074B	<ul style="list-style-type: none"> • Locks in 4GR • Lock-up is prohibited 	—
P074C	<ul style="list-style-type: none"> • The gear is fixed in neutral until vehicle speed decreases to below 5 km/h (3 MPH) and in 2GR or 3GR when reaching 5 km/h (3 MPH) or more • Lock-up is prohibited 	—
P0973 P0974	<ul style="list-style-type: none"> • The gear is fixed in neutral until vehicle speed decreases to below 5 km/h (3 MPH) and in 2GR when reaching 5 km/h (3 MPH) or more • Lock-up is prohibited 	—
P0976 P0977	<ul style="list-style-type: none"> • Locks in 3GR • Lock-up is prohibited 	—
P0979 P0980	<ul style="list-style-type: none"> • The gear is fixed in neutral until vehicle speed decreases to below 5 km/h (3 MPH) and in 3GR when reaching 5 km/h (3 MPH) or more • Lock-up is prohibited 	—
P0982 P0983	<ul style="list-style-type: none"> • Locks in 3GR • Lock-up is prohibited 	—
P2760	Slip lock-up is prohibited	—
U0073	<ul style="list-style-type: none"> • The gear is fixed in 3GR until vehicle speed decreases to below 5 km/h (3 MPH) and in 2GR when reaching 5 km/h (3 MPH) or more • Lock-up is prohibited • Slip lock-up is prohibited 	—
U0100	<ul style="list-style-type: none"> • Locks in 3GR • Lock-up is prohibited • Slip lock-up is prohibited 	During driving
	<ul style="list-style-type: none"> • Locks in 2GR • Lock-up is prohibited • Slip lock-up is prohibited 	Other than the above
U0155	O/D OFF prohibited	—
U0300	<ul style="list-style-type: none"> • Locks in 3GR • Lock-up is prohibited • Slip lock-up is prohibited 	During driving
	<ul style="list-style-type: none"> • Locks in 2GR • Lock-up is prohibited • Slip lock-up is prohibited 	Other than the above

Protection Control

The TCM becomes the protection control status temporarily to protect the safety when the safety of TCM and transmission is lost. It automatically returns to the normal status if the safety is secured. The TCM is equipped with the following protection control.

REVERSE INHIBIT CONTROL

Intercepts the torque transmission and shifts to the neutral status if the selector lever is shifted to “R” position while the vehicle moves forward at the vehicle speed 10 km/h (7 MPH) or more.

Operation detection conditions	<ul style="list-style-type: none"> Vehicle speed: 10 km/h (7 MPH) or more (when driving forward) Selector lever is shifted to “R” position.
Control when activated	Neutral
Recovery condition	<ul style="list-style-type: none"> Vehicle speed: 7 km/h (4 MPH) or less and Engine speed: 2,800 rpm or less
Vehicle behavior	<ul style="list-style-type: none"> The torque transmission cannot be performed There is a shock just before a vehicle stop

TCM HIGH TEMPERATURE PROTECTION CONTROL

When the ATF becomes hot, the shifting pattern is changed for preventing fluid temperature rise.

Operation detection conditions	ATF temp.: 125°C (257°F) or more
Control when activated	Change the shift pattern so that higher upshift may be achieved.
Recovery condition	<ul style="list-style-type: none"> ATF temp.: 119°C (246°F) or less
Vehicle behavior	Upshifts at a higher vehicle speed than usual.

TORQUE-DOWN CONTROL WHEN CONTINUOUS STALL OCCURS IN D POSITION

If the accelerator pedal is continually depressed for a certain length of time when the selector lever is in the “D” position and the vehicle is parked, the engine output is limited for protecting the transaxle.

Operation detection conditions	<p>The following conditions continue for 20 seconds or more</p> <ul style="list-style-type: none"> Selector lever is in the “D” position or “R” position and the vehicle is stopped and Engine speed: 2,300 – 2,850 rpm
Control when activated	Limits engine output
Recovery condition	<ul style="list-style-type: none"> Selector lever is shifted to a position other than “D” or “R” or The accelerator pedal is released
Vehicle behavior	<ul style="list-style-type: none"> Decreased starting performance Engine speed hunching when the accelerator pedal is depressed

O/D PROHIBIT CONTROL AT LOW TEMPERATURES

When the ATF temperature is low immediately after engine start, shifting to 4GR is prohibited for protecting the transaxle and allowing the exhaust gas characteristics to warm up quickly.

Operation detection conditions	<ul style="list-style-type: none"> ATF temp.: 0°C (32°F) or less or ATF temp.: less than 40°C (104°F) (when IGN is ON) Vehicle speed: 65 km/h (40 MPH) or less 3GR
Control when activated	4GR prohibited
Recovery condition	<p>Less than 130 seconds following IGN ON</p> <ul style="list-style-type: none"> ATF temp.: 40°C (104°F) or more or Vehicle speed: 65 km/h (40 MPH) or higher <p>After 130 seconds following IGN ON</p> <ul style="list-style-type: none"> ATF temp.: 0°C (32°F) or more
Vehicle behavior	Shifts up only as far as 3GR.

A
B
C
E
F
G
H
I
J
K
L
M
N
O
P

TM

DTC Inspection Priority Chart

INFOID:000000009267867

If some DTCs are displayed at the same time, perform inspections one by one based on the priority as per the following list.

Priority	Detected items (DTC)	Reference
1	U0073 COMMUNICATION BUS A OFF	TM-132, "DTC Logic"
	U0100 LOST COMMUNICATION (ECM A)	TM-133, "DTC Logic"
	U0140 LOST COMMUNICATION (BCM)	TM-132, "DTC Logic"
	U0155 LOST COMMUNICATION (IPC)	TM-135, "DTC Logic"
	U0300 CAN COMM DATA	TM-136, "DTC Logic"
	U1000 CAN COMM CIRCUIT	TM-137, "DTC Logic"
	U1117 LOST COMMUNICATION (ABS)	TM-138, "DTC Logic"
	P0863 CONTROL UNIT (CAN)	TM-133, "DTC Logic"
2	P0740 TORQUE CONVERTER	TM-180, "DTC Logic"
	P0743 TORQUE CONVERTER	TM-182, "DTC Logic"
	P0962 PRESSURE CONTROL SOLENOID A	TM-194, "DTC Logic"
	P0963 PRESSURE CONTROL SOLENOID A	TM-196, "DTC Logic"
	P0973 SHIFT SOLENOID A	TM-198, "DTC Logic"
	P0974 SHIFT SOLENOID A	TM-200, "DTC Logic"
	P0976 SHIFT SOLENOID B	TM-202, "DTC Logic"
	P0977 SHIFT SOLENOID B	TM-204, "DTC Logic"
	P0979 SHIFT SOLENOID C	TM-206, "DTC Logic"
	P0980 SHIFT SOLENOID C	TM-208, "DTC Logic"
	P0982 SHIFT SOLENOID D	TM-210, "DTC Logic"
	P0983 SHIFT SOLENOID D	TM-212, "DTC Logic"
3	P062F EEPROM	TM-139, "DTC Logic"
	P0705 TRANSMISSION RANGE SENSOR A	TM-139, "DTC Logic"
	P0706 TRANSMISSION RANGE SENSOR A	TM-146, "DTC Logic"
	P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A	TM-149, "DTC Logic"
	P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A	TM-152, "DTC Logic"
	P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A	TM-154, "DTC Logic"
	P0717 INPUT SPEED SENSOR A	TM-156, "DTC Logic"
	P0720 OUTPUT SPEED SENSOR	TM-159, "DTC Logic"
P0890 TCM	TM-193, "DTC Logic"	

TCM

< ECU DIAGNOSIS INFORMATION >

[4AT: RE4F03C]

Priority	Detected items (DTC)	Reference
4	P072C STUCK IN 1GR	TM-162, "DTC Logic"
	P072D STUCK IN 2GR	TM-163, "DTC Logic"
	P072E STUCK IN 3GR	TM-164, "DTC Logic"
	P072F STUCK IN 4GR	TM-165, "DTC Logic"
	P0731 1GR INCORRECT RATIO	TM-166, "DTC Logic"
	P0732 2GR INCORRECT RATIO	TM-169, "DTC Logic"
	P0733 3GR INCORRECT RATIO	TM-171, "DTC Logic"
	P0734 4GR INCORRECT RATIO	TM-173, "DTC Logic"
	P073E UNABLE TO ENGAGE R RANGE	TM-175, "DTC Logic"
	P073F UNABLE TO ENGAGE 1GR	TM-177, "DTC Logic"
	P0744 TORQUE CONVERTER	TM-184, "DTC Logic"
	P074A UNABLE TO ENGAGE 2GR	TM-186, "DTC Logic"
	P074B UNABLE TO ENGAGE 3GR	TM-188, "DTC Logic"
	P074C UNABLE TO ENGAGE 4GR	TM-190, "DTC Logic"
	P2760 TORQUE CONVERTER	TM-214, "DTC Logic"

DTC Index

INFOID:000000009267868

NOTE:

- If some DTCs are displayed at the same time, perform inspections one by one based on the priority as per the following list. Refer to [TM-108, "DTC Inspection Priority Chart"](#).
- The IGN counter is indicated in Freeze frame data (FFD). Refer to [TM-93, "CONSULT Function"](#).

×: Applicable —: Not Applicable

DTC*1, *2		Items (CONSULT screen terms)	Trip	MIL	Reference
GST	CONSULT only "TRANSMISSION"				
P062F	P062F	EEPROM	1	×	TM-139
P0705	P0705	TRANSMISSION RANGE SENSOR A	2	×	TM-140
P0706	P0706	TRANSMISSION RANGE SENSOR A	2	×	TM-146
P0711	P0711	TRANSMISSION FLUID TEMPERATURE SENSOR A	2	×	TM-149
P0712	P0712	TRANSMISSION FLUID TEMPERATURE SENSOR A	2	×	TM-152
P0713	P0713	TRANSMISSION FLUID TEMPERATURE SENSOR A	2	×	TM-154
P0717	P0717	INPUT SPEED SENSOR A	2	×	TM-156
P0720	P0720	OUTPUT SPEED SENSOR	2	×	TM-159
P072C	P072C	STUCK IN 1GR	2	×	TM-162
P072D	P072D	STUCK IN 2GR	2	×	TM-163
P072E	P072E	STUCK IN 3GR	2	×	TM-164
P072F	P072F	STUCK IN 4GR	2	×	TM-165
P0731	P0731	1GR INCORRECT RATIO	2	×	TM-166
P0732	P0732	2GR INCORRECT RATIO	2	×	TM-169
P0733	P0733	3GR INCORRECT RATIO	2	×	TM-171
P0734	P0734	4GR INCORRECT RATIO	2	×	TM-173
—	P073E	UNABLE TO ENGAGE R RANGE	2	—	TM-175
P073F	P073F	UNABLE TO ENGAGE 1GR	2	×	TM-177
P0740	P0740	TORQUE CONVERTER	2	×	TM-180

TCM

< ECU DIAGNOSIS INFORMATION >

[4AT: RE4F03C]

DTC*1, *2		Items (CONSULT screen terms)	Trip	MIL	Reference
GST	CONSULT only "TRANSMISSION"				
P0743	P0743	TORQUE CONVERTER	2	×	TM-182
P0744	P0744	TORQUE CONVERTER	2	×	TM-184
P074A	P074A	UNABLE TO ENGAGE 2GR	2	×	TM-186
P074B	P074B	UNABLE TO ENGAGE 3GR	2	×	TM-188
P074C	P074C	UNABLE TO ENGAGE 4GR	2	×	TM-190
—	P0863	CONTROL UNIT (CAN)	1	—	TM-192
P0890	P0890	TCM	1	×	TM-193
P0962	P0962	PRESSURE CONTROL SOLENOID A	2	×	TM-194
P0963	P0963	PRESSURE CONTROL SOLENOID A	2	×	TM-196
P0973	P0973	SHIFT SOLENOID A	2	×	TM-198
P0974	P0974	SHIFT SOLENOID A	2	×	TM-200
P0976	P0976	SHIFT SOLENOID B	2	×	TM-202
P0977	P0977	SHIFT SOLENOID B	2	×	TM-204
P0979	P0979	SHIFT SOLENOID C	2	×	TM-206
P0980	P0980	SHIFT SOLENOID C	2	×	TM-208
P0982	P0982	SHIFT SOLENOID D	2	×	TM-210
P0983	P0983	SHIFT SOLENOID D	2	×	TM-212
P2760	P2760	TORQUE CONVERTER	2	×	TM-214
U0073	U0073	COMMUNICATION BUS A OFF	1	×	TM-132
U0100	U0100	LOST COMMUNICATION (ECM A)	2	×	TM-133
—	U0140	LOST COMMUNICATION (BCM)	1	—	TM-134
—	U0155	LOST COMMUNICATION (IPC)	1	—	TM-135
U0300	U0300	CAN COMM DATA	1	×	TM-136
—	U1000	CAN COMM CIRCUIT	1	—	TM-137
—	U1117	LOST COMMUNICATION (ABS)	1	—	TM-138

*1: These numbers are prescribed by SAE J2012/ISO 15031-6.

*2: The items are the same as those of 1st trip freeze frame data.


WIRING DIAGRAM

A/T CONTROL SYSTEM

Wiring Diagram

INFOID:000000009267869

A/T CONTROL SYSTEM

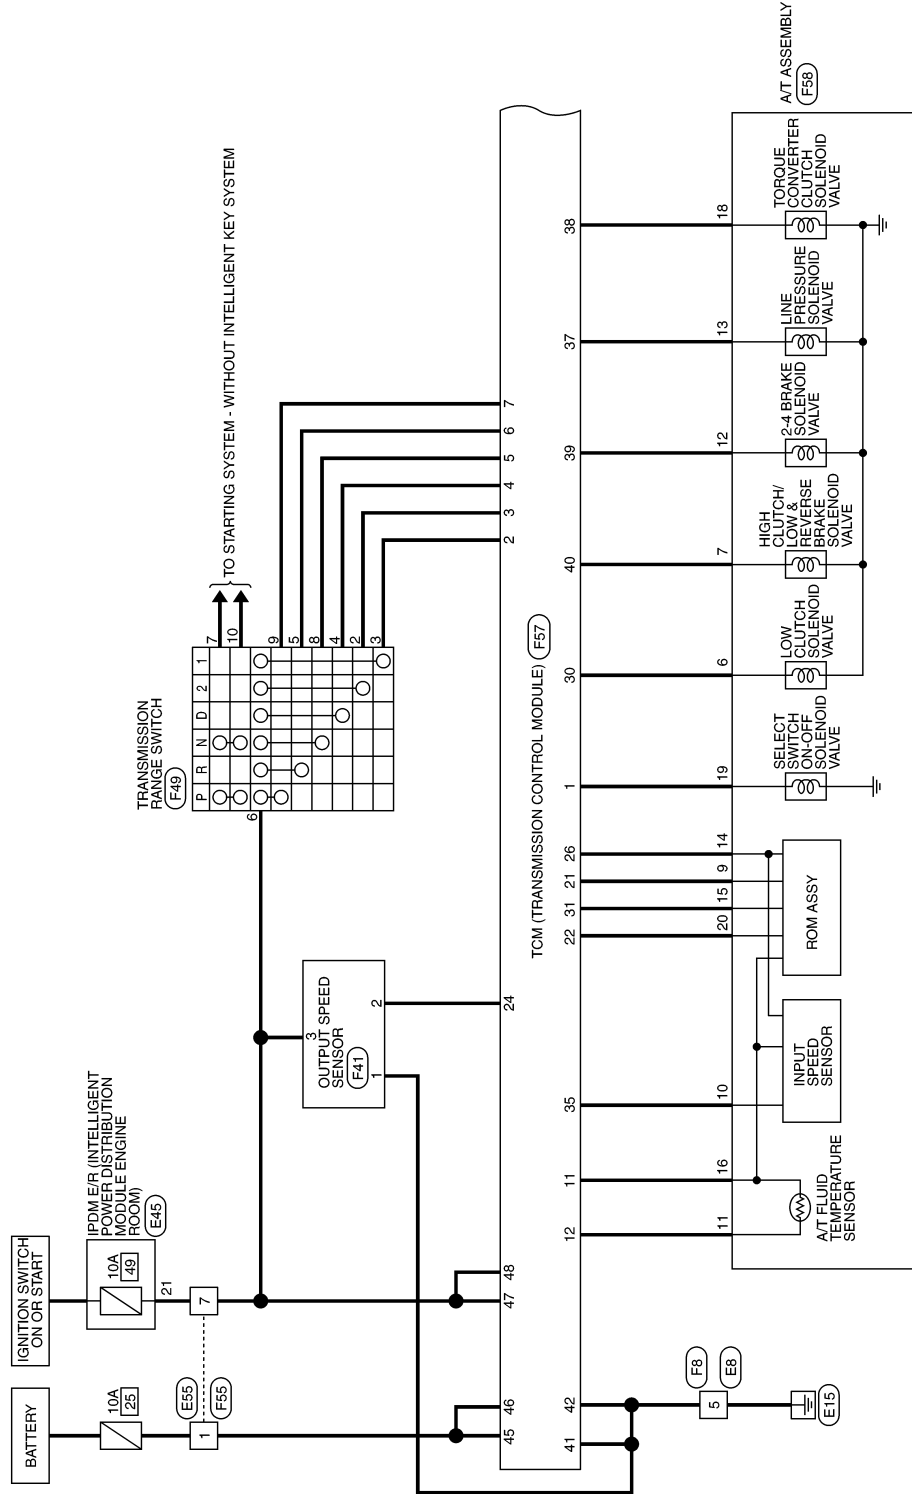


ABDWA0674GB

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

A/T CONTROL SYSTEM

< WIRING DIAGRAM >

[4AT: RE4F03C]

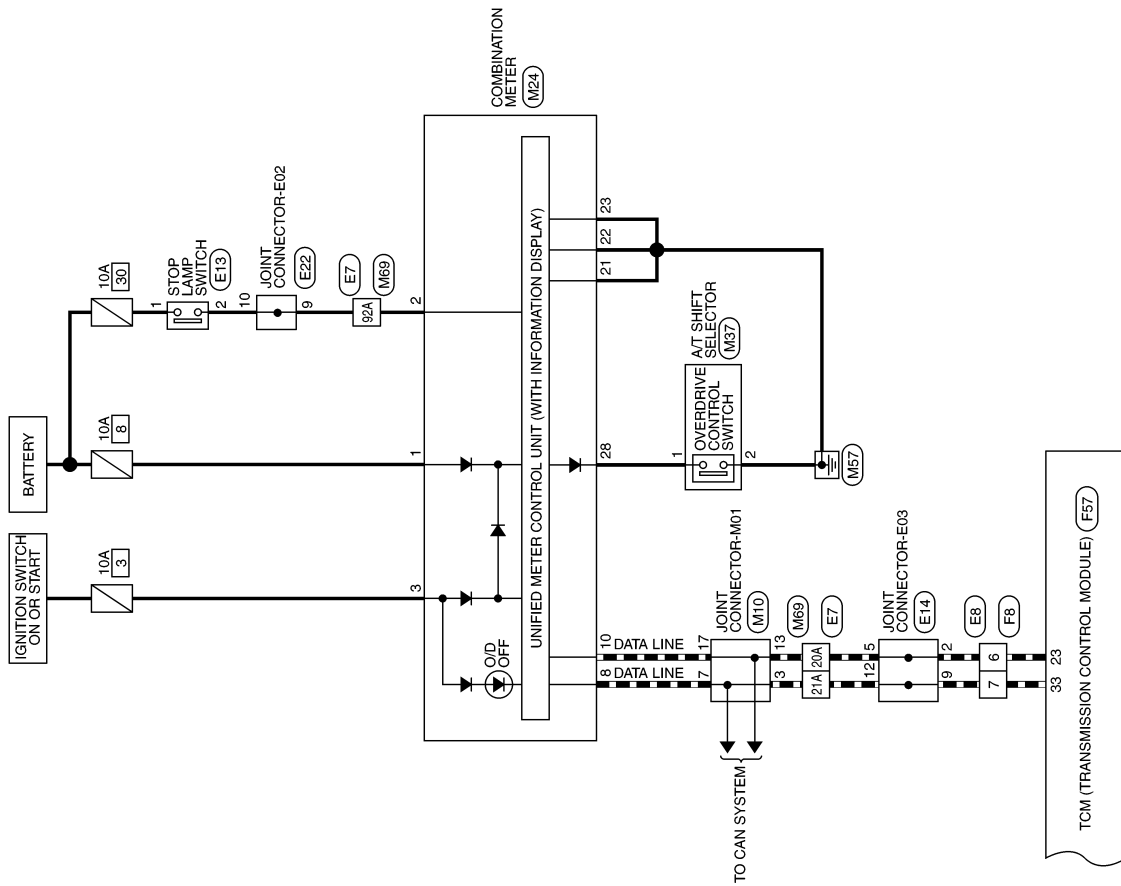

ABDWA0675GB


A/T CONTROL SYSTEM CONNECTORS

Connector No.	M10
Connector Name	JOINT CONNECTOR-M01
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
3	L	-
7	L	-
13	P	-
17	P	-


Connector No.	M24
Connector Name	COMBINATION METER (WITH TYPE A)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R	BAT
2	LG	BRAKE SW
3	GR	IGN


Terminal No.	Color of Wire	Signal Name
8	L	CAN-H
10	P	CAN-L
21	B	GND (POWER)
22	B	GND (CIRCUIT)
23	B/W	GND (ILL)
28	P	O/D OFF/SPORT SW

Connector No.	M37
Connector Name	A/T SHIFT SELECTOR
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	B/W	-

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

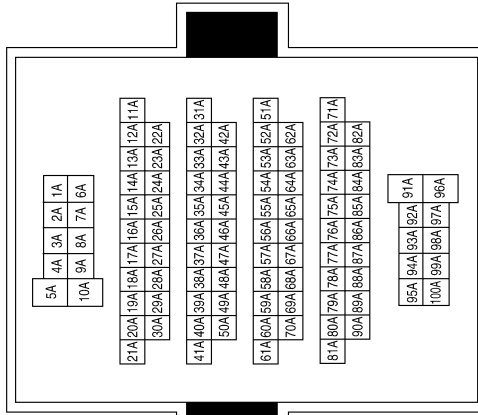

Terminal No.	Color of Wire	Signal Name
20A	P	-
21A	L	-
92A	LG	-


ABDIA1048GB

A/T CONTROL SYSTEM

< WIRING DIAGRAM >

[4AT: RE4F03C]


Connector No.	E8
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5	B	-
6	P	-
7	L	-

Terminal No.	Color of Wire	Signal Name
20A	P	-
21A	L	-
92A	LG	-

Connector No.	E7
Connector Name	WIRE TO WIRE
Connector Color	WHITE

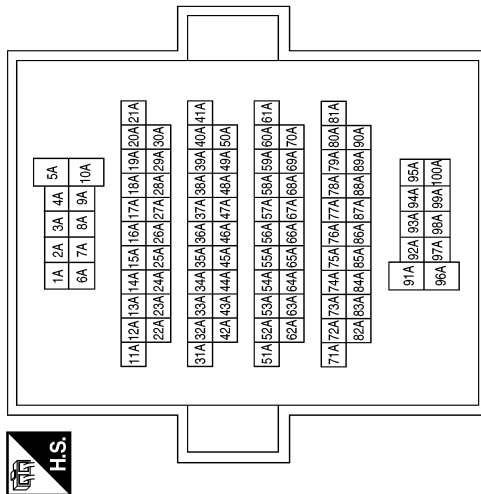

Connector No.	E22
Connector Name	JOINT CONNECTOR-E02
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
9	LG	-
10	LG	-

Connector No.	E14
Connector Name	JOINT CONNECTOR-E03
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
2	P	-
5	P	-
9	L	-
12	L	-

Connector No.	E13
Connector Name	STOP LAMP SWITCH (WITH A/T OR CVT)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	LG	-


ABDIA1049GB

A/T CONTROL SYSTEM

< WIRING DIAGRAM >


[4AT: RE4F03C]

Connector No.	F8
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5	B	-
6	P	-
7	L	-

Connector No.	E55
Connector Name	WIRE TO WIRE
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	P	-
7	R	-

Connector No.	E45
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
21	R	AT ECU (WITH A/T OR CVT)

Connector No.	F55
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	LG	-
7	R	-

Connector No.	F49
Connector Name	TRANSMISSION RANGE SWITCH (WITH A/T)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
2	R/B	-
3	W	-
4	W/B	-
5	O	-
6	R	-
7	R	-
8	L/B	-
9	Y	-
10	BR	-

Connector No.	F41
Connector Name	OUTPUT SPEED SENSOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	B	-
2	BR	-
3	R	-

ABDIA1071GB

A/T CONTROL SYSTEM


< WIRING DIAGRAM >

[4AT: RE4F03C]

Terminal No.	Color of Wire	Signal Name
33	L	CAN-H
34	-	-
35	SB	INPUT SPEED SENSOR
36	-	-
37	B/W	LINE PRESSURE SOLENOID VALVE
38	G	TORQUE CONVERTER CLUTCH SOLENOID VALVE
39	G/B	2-4 BRAKR SOLENOID VALVE
40	Y/B	HIGH CLUTCH/LOW & REVERSE BRAKE SOLENOID VALVE
41	B	GROUND
42	B	GROUND
43	-	-
44	-	-
45	LG	POWER SUPPLY (BACKUP)
46	LG	POWER SUPPLY (BACKUP)
47	R	POWER SUPPLY
48	R	POWER SUPPLY

Terminal No.	Color of Wire	Signal Name
13	-	-
14	-	-
15	-	-
16	-	-
17	-	-
18	-	-
19	-	-
20	-	-
21	R/W	ROM ASSY (CHIP SELECT)
22	V	ROM ASSY (DATA I/O)
23	P	CAN-L
24	BR	OUTPUT SPEED SENSOR
25	-	-
26	LG	SENSOR POWER SUPPLY
27	-	-
28	-	-
29	-	-
30	BR/B	LOW CLUTCH SOLENOID VALVE
31	L/W	ROM ASSY (CLOCK)
32	-	-

Connector No.	F57
Connector Name	TCM (TRANSMISSION CONTROL MODULE) (WITH A/T)
Connector Color	BLACK

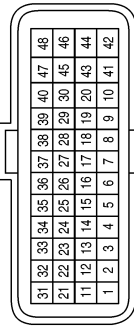

Terminal No.	Color of Wire	Signal Name
1	L/R	SELECT SWITCH ON-OFF SOLENOID VALVE
2	W	1 RANGE SWITCH
3	R/B	2 RANGE SWITCH
4	W/B	D RANGE SWITCH
5	L/B	N RANGE SWITCH
6	O	R RANGE SWITCH
7	Y	P RANGE SWITCH
8	-	-
9	-	-
10	-	-
11	B	SENSOR GROUND
12	G/W	A/T FLUID TEMPERATURE SENSOR

ABDIA1053GB

A/T CONTROL SYSTEM


< WIRING DIAGRAM >

[4AT: RE4F03C]

Terminal No.	Color of Wire	Signal Name
15	L/W	-
16	B	-
17	-	-
18	G	-
19	L/R	-
20	V	-
21	-	-
22	-	-

Terminal No.	Color of Wire	Signal Name
3	-	-
4	-	-
5	-	-
6	BR/B	-
7	Y/B	-
8	-	-
9	R/W	-
10	SB	-
11	G/W	-
12	G/B	-
13	BR/W	-
14	LG	-

Connector No.	F58
Connector Name	A/T ASSEMBLY
Connector Color	GRAY

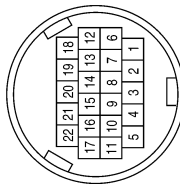

Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

A/T SHIFT LOCK SYSTEM


< WIRING DIAGRAM >

[4AT: RE4F03C]

A/T SHIFT LOCK SYSTEM

Wiring Diagram

INFOID:00000009267870

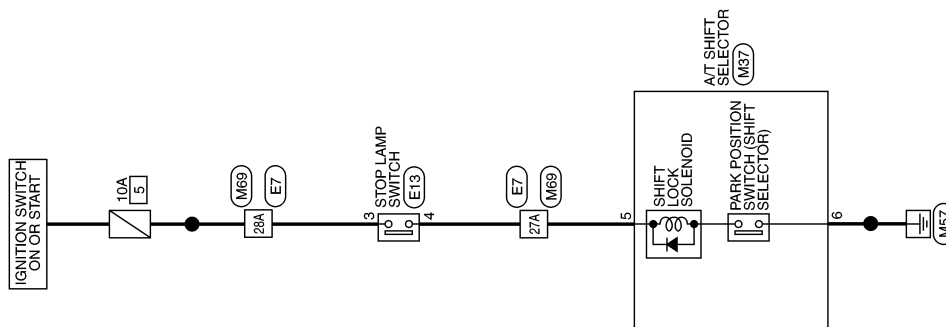

A/T SHIFT LOCK SYSTEM

ABDWA0671GB


A/T SHIFT LOCK SYSTEM

< WIRING DIAGRAM >

[4AT: RE4F03C]


A/T SHIFT LOCK SYSTEM CONNECTORS

Connector No.	M37
Connector Name	A/T SHIFT SELECTOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5	LG	-
6	B	-

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

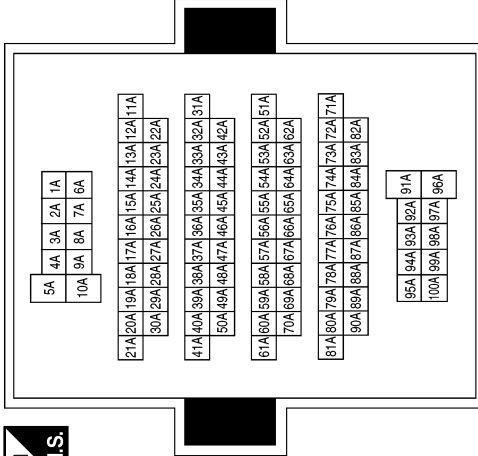

Terminal No.	Color of Wire	Signal Name
27A	LG	-
28A	L	-

Connector No.	E7
Connector Name	WIRE TO WIRE
Connector Color	WHITE

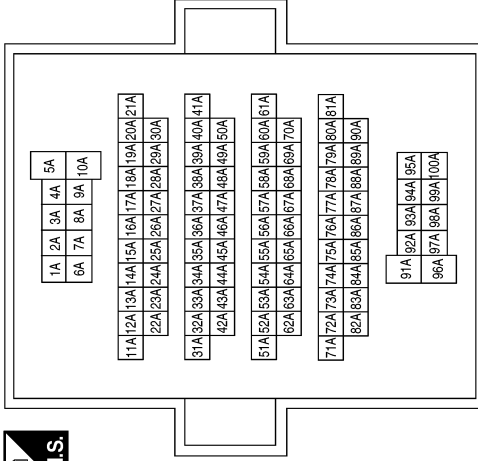

Terminal No.	Color of Wire	Signal Name
27A	P	-
28A	L	-

Connector No.	E13
Connector Name	STOP LAMP SWITCH (WITH A/T OR CVT)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	L	-
4	P	-

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000009267871

1. OBTAIN INFORMATION ABOUT SYMPTOM

Refer to [TM-121, "Diagnostic Work Sheet"](#) and interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred) as much as possible when the customer brings in the vehicle.

>> GO TO 2.

2. CHECK DTC

1. Before checking the malfunction, check whether any DTC exists.
2. If DTC exists, perform the following operations.
 - Record the DTC and freeze frame data. (Print out the data using CONSULT and affix them to the Work Order Sheet.)
 - Erase DTCs.
 - Check the relationship between the cause that is clarified with DTC and the malfunction information described by the customer. [TM-224, "Symptom Table"](#) is effective.
3. Check the information of related service bulletins and others also.

Do malfunction information and DTC exist?

- Malfunction information and DTC exists. >>GO TO 3.
- Malfunction information exists, but no DTC. >>GO TO 4.
- No malfunction information, but DTC exists. >>GO TO 5.

3. REPRODUCE MALFUNCTION SYMPTOM

Check any malfunction described by a customer, except those with DTC on the vehicle. Also investigate whether the symptom is a fail-safe or normal operation. Refer to [TM-105, "Fail-Safe"](#). When a malfunction symptom is reproduced, the question sheet is effective. Refer to [TM-121, "Diagnostic Work Sheet"](#).

Verify the relationship between the symptom and the conditions in which the malfunction described by the customer occurs.

>> GO TO 5.

4. REPRODUCE MALFUNCTION SYMPTOM

Check the malfunction described by the customer on the vehicle. Also investigate whether the symptom is a fail-safe or normal operation. Refer to [TM-105, "Fail-Safe"](#). When a malfunction symptom is reproduced, the question sheet is effective. Refer to [TM-121, "Diagnostic Work Sheet"](#).

Verify the relationship between the symptom and the conditions in which the malfunction described by the customer occurs.

>> GO TO 6.

5. PERFORM "DTC CONFIRMATION PROCEDURE"

Perform "DTC CONFIRMATION PROCEDURE" of the appropriate DTC to check if DTC is detected again. Refer to [TM-108, "DTC Inspection Priority Chart"](#) when multiple DTCs are detected, and then determine the order for performing the diagnosis.

NOTE:

If no DTC is detected, refer to the freeze frame data.

Is any DTC detected?

- YES >> GO TO 7.
- NO >> Check according to [GI-45, "Intermittent Incident"](#).

6. IDENTIFY MALFUNCTIONING SYSTEM WITH "DIAGNOSIS CHART BY SYMPTOM"

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[4AT: RE4F03C]

Use [TM-224, "Symptom Table"](#) from the symptom inspection result in step 4. Then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 8.

7. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the detected malfunctioning parts.

Reconnect parts or connector after repairing or replacing, and then erase DTC if necessary.

>> GO TO 8.

8. FINAL CHECK

Perform "DTC CONFIRMATION PROCEDURE" again to make sure that the repair is correctly performed.

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 3 or 4.

Is DTC or malfunction symptom reproduced?

YES-1 >> DTC is reproduced: GO TO 5.

YES-2 >> Malfunction symptom is reproduced: GO TO 6.

NO >> Before delivering the vehicle to the customer, make sure that DTC is erased.

Diagnostic Work Sheet

INFOID:000000009267872

DESCRIPTION

There are many operating conditions that may cause a malfunction of the transmission parts. By understanding those conditions properly, a quick and exact diagnosis can be achieved.

In general, customers have their own criteria for a problem. Therefore, it is important to understand the symptom and status well enough by asking the customer about the concerns carefully. In order to systemize all the information for the diagnosis, prepare the question sheet referring to the question points.

KEY POINTS

WHAT Vehicle & engine model
WHEN Date, Frequencies
WHERE Road conditions
HOW Operating conditions,
 Weather conditions,
 Symptoms

SEF907L

WORKSHEET SAMPLE

Question Sheet				
Customer name	MR/MS	Engine #		Manuf. Date
		Incident Date		VIN
		Model & Year		In Service Date
		Trans.		Mileage km/Mile
Symptoms	<input type="checkbox"/> Vehicle does not move (<input type="checkbox"/> Any position <input type="checkbox"/> Particular position)			
	<input type="checkbox"/> No upshift (<input type="checkbox"/> 1GR → 2GR <input type="checkbox"/> 2GR → 3GR <input type="checkbox"/> 3GR → 4GR)			
	<input type="checkbox"/> No downshift (<input type="checkbox"/> 4GR → 3GR <input type="checkbox"/> 3GR → 2GR <input type="checkbox"/> 2GR → 1GR)			
	<input type="checkbox"/> Lock-up malfunction			
	<input type="checkbox"/> Shift point too high or too low			
	<input type="checkbox"/> Shift shock or slip			
	<input type="checkbox"/> Noise or vibration			
	<input type="checkbox"/> No kick down			
	<input type="checkbox"/> No pattern select			
<input type="checkbox"/> Others				
Frequency	<input type="checkbox"/> All the time <input type="checkbox"/> Under certain conditions <input type="checkbox"/> Sometimes (times a day)			

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[4AT: RE4F03C]

Question Sheet

Weather conditions	<input type="checkbox"/> Not affected				
Weather	<input type="checkbox"/> Fine	<input type="checkbox"/> Cloud	<input type="checkbox"/> Rain	<input type="checkbox"/> Snow	<input type="checkbox"/> Other ()
Temp.	<input type="checkbox"/> Hot	<input type="checkbox"/> Warm	<input type="checkbox"/> Cool	<input type="checkbox"/> Cold	<input type="checkbox"/> Temp. (Approx. °C/°F)
Humidity	<input type="checkbox"/> High	<input type="checkbox"/> Middle	<input type="checkbox"/> Low		
Transmission conditions	<input type="checkbox"/> Not affected				
	<input type="checkbox"/> Cold		<input type="checkbox"/> During warm-up	<input type="checkbox"/> After warm-up	
	<input type="checkbox"/> Engine speed (rpm)				
Road conditions	<input type="checkbox"/> Not affected				
	<input type="checkbox"/> In town	<input type="checkbox"/> In suburbs	<input type="checkbox"/> Freeway	<input type="checkbox"/> Off road (Up/Down)	
Driving conditions	<input type="checkbox"/> Not affected				
	<input type="checkbox"/> At starting	<input type="checkbox"/> While idling	<input type="checkbox"/> While engine racing	<input type="checkbox"/> At racing	<input type="checkbox"/> While cruising
	<input type="checkbox"/> While accelerating		<input type="checkbox"/> While decelerating	<input type="checkbox"/> While turning (Right/Left)	
	<input type="checkbox"/> Vehicle speed [km/h (MPH)]				
Other conditions					

ADDITIONAL SERVICE WHEN REPLACING TCM

< BASIC INSPECTION >

[4AT: RE4F03C]

ADDITIONAL SERVICE WHEN REPLACING TCM

Description

INFOID:000000009267873

Always perform the following items when the TCM is replaced.

LOADING OF THE CALIBRATION DATA

- The TCM acquires calibration data (individual characteristic value) of each solenoid that is stored in the ROM assembly (in the control valve). This enables the TCM to perform accurate control. After the TCM is replaced, check that the TCM has correctly loaded the calibration data.

CAUTION:

When replacing TCM and transaxle assembly as a set, replace transaxle assembly first and then replace TCM.

If the TCM is replaced in advance, perform "TRANSAXLE ASSEMBLY REPLACEMENT: Special Repair Requirement".

Work Procedure

INFOID:000000009267874

1. CHECK WORK CONTENTS

Replacing only the TCM>>GO TO 2.

Replacing the TCM after the transaxle assembly is replaced>>GO TO 2.

Replacing the transaxle assembly after the TCM is replaced>>GO TO 4.

2. CHECK AFTER TCM IS REPLACED

1. Shift the selector lever to the P position.
2. Turn ignition switch ON.
3. Turn ignition switch OFF and wait for a minimum of 20 seconds.
4. Turn ignition switch ON.
5. Check that "P" is displayed on shift position indicator on combination meter.

NOTE:

Displayed approximately 2 seconds after the selector lever is moved to the P position.

Does the shift position indicator display "P"?

YES >> WORK END

NO >> GO TO 3.

3. DETECT MALFUNCTION ITEMS

Check the following items:

- Harness between the TCM and the ROM assembly inside the transaxle assembly is open or shorted.
- Disconnected, loose, bent, collapsed, or otherwise abnormal connector housing terminals

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

4. PERFORM TRANSAXLE ASSEMBLY REPLACEMENT

Perform "TRANSAXLE ASSEMBLY REPLACEMENT: Special Repair Requirement".

>> Refer to [TM-124, "Work Procedure"](#).

ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[4AT: RE4F03C]

ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY

Description

INFOID:000000009267875

Perform the following work after the transaxle assembly is replaced.

ERASING AND LOADING OF THE CALIBRATION DATA

- The TCM acquires calibration data (individual characteristic value) of each solenoid that is stored in the ROM assembly (in the control valve). This enables the TCM to perform accurate control. For this reason, after the transaxle assembly is replaced, it is necessary to erase the calibration data that is stored in the TCM and load new calibration data.

ERASING THE LEARNED VALUE DATA

- TCM learns indicated pressure for appropriate control of the transaxle assembly and records the learned values. For this reason, the learned values stored in TCM must be erased after replacing a transaxle assembly.

Work Procedure

INFOID:000000009267876

1. INITIALIZE TCM

Ⓟ With CONSULT

1. Set parking brake.
2. Turn ignition switch ON.
3. Select "Work Support" in "TRANSMISSION".
4. Select "ERASE MEMORY DATA".
5. While maintaining the conditions below, touch "Start".
 - Vehicle stop status
 - With engine stopped
 - Selector lever: "R" position
 - Accelerator pedal: Depressed

NOTE:

Select "Start" and complete within approximately 20 seconds.

Is "COMPLETED" displayed?

YES >> GO TO 2.

NO >> Turn ignition switch OFF and wait for a minimum of 20 seconds then perform the work again.

2. CHECK AFTER TCM IS INITIALIZED

Ⓟ With CONSULT

1. Turn ignition switch OFF with the selector lever in "R" position and wait for 20 seconds or more.
2. Turn ignition switch ON with the selector lever in "R" position.

CAUTION:

Never start the engine.

3. Select "CALIB DATA" in "TRANSMISSION".
4. Check that indicated value of "CALIB DATA" is equal to the value shown in the following table.

Item name	Display value
C/V CLB ID	00
UNIT CLB ID	00

Is the indicated value of "CALIB DATA" equal to the value shown in the table?

YES >> GO TO 3.

NO >> GO TO 1.

3. CHECK LOADING OF CALIBRATION DATA

1. Shift the selector lever to the "P" position.
2. Check that "P" is displayed on shift position indicator on combination meter.

NOTE:

Displayed approximately 5 seconds after the selector lever is moved to the "P" position.

Does shift position indicator display "P"?

ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[4AT: RE4F03C]

YES >> WORK END

NO >> GO TO 4.

A

4. DETECT MALFUNCTION ITEMS

Check the following items:

- Harness between the TCM and the ROM assembly inside the transaxle assembly is open or shorted.
- Disconnected, loose, bent, collapsed, or otherwise abnormal connector housing terminals

B

Is the inspection result normal?

C

YES >> GO TO 1.

NO >> Repair or replace the malfunctioning parts.

TM

E

F

G

H

I

J

K

L

M

N

O

P

A/T FLUID COOLER

Cleaning

INFOID:000000009315569

Whenever the A/T is repaired, overhauled, or replaced, the A/T fluid cooler mounted in the radiator must be inspected and cleaned.

Metal debris and friction material, if present, can become trapped in the A/T fluid cooler. This debris can contaminate the newly serviced A/T or, in severe cases, can block or restrict the flow of A/T fluid. In either case, malfunction of the newly serviced A/T may result.

Debris, if present, may build up as A/T fluid enters the cooler inlet. It will be necessary to back flush the cooler through the cooler outlet in order to flush out any built up debris.


A/T FLUID COOLER CLEANING PROCEDURE

1. Identify the A/T inlet and outlet fluid cooler hoses.
2. Position an oil pan under the A/T inlet and outlet fluid cooler hoses.
3. Disconnect the A/T fluid cooler inlet and outlet rubber hoses from the steel cooler tubes or bypass valve.

NOTE:

Replace the cooler hoses if rubber material from the hose remains on the tube fitting.

4. Allow any A/T fluid that remains in the cooler hoses to drain into the oil pan.

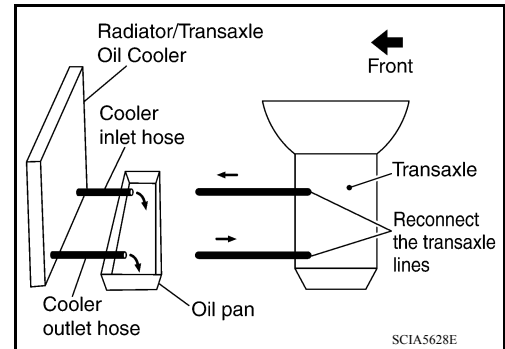


5. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

CAUTION:


- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
- Spray Transmission Cooler Cleaner only with adequate ventilation.
- Avoid contact with eyes and skin.
- Do not breathe vapors or spray mist.

6. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until A/T fluid flows out of the cooler inlet hose for 5 seconds.

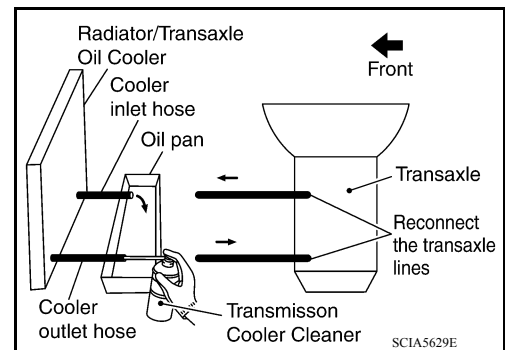

7. Insert the tip of an air gun into the end of the cooler outlet hose.

8. Wrap a shop rag around the air gun tip and end of cooler outlet hose.

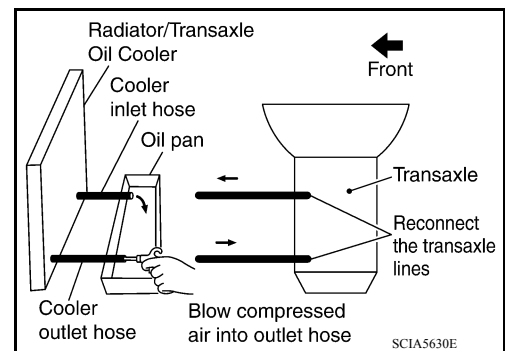

9. Blow compressed air regulated to 5 - 9 kg/cm² (490 - 883 kPa, 71 - 128 psi) through the cooler outlet hose for 10 seconds to force out any remaining A/T fluid.

10. Repeat steps 5 through 9 three additional times.

11. Position an oil pan under the banjo bolts that connect the A/T fluid cooler steel lines to the A/T.

12. Remove the banjo bolts.

13. Flush each steel line from the cooler side back toward the A/T by spraying Transmission Cooler Cleaner in a continuous stream for 5 seconds.

A/T FLUID COOLER

< BASIC INSPECTION >

[4AT: RE4F03C]

14. Blow compressed air regulated to 5 - 9 kg/cm² (490 - 883 kPa, 71 - 128 psi) through each steel line from the cooler side back toward the A/T for 10 seconds to force out any remaining A/T fluid.
15. Ensure all debris is removed from the steel cooler lines.
16. Ensure all debris is removed from the banjo bolts and fittings.
17. Perform "A/T FLUID COOLER DIAGNOSIS PROCEDURE".

A/T FLUID COOLER DIAGNOSIS PROCEDURE

NOTE:



Insufficient cleaning of the cooler inlet hose exterior may lead to inaccurate debris identification.

1. Position an oil pan under the A/T inlet and outlet cooler hoses.
2. Clean the exterior and tip of the cooler inlet hose.
3. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.


CAUTION:

- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
- Spray Transmission Cooler Cleaner only with adequate ventilation.
- Avoid contact with eyes and skin.
- Do not breathe vapors or spray mist.

4. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until A/T fluid flows out of the cooler inlet hose for 5 seconds.
5. Tie a common white, basket-type coffee filter to the end of the cooler inlet hose.

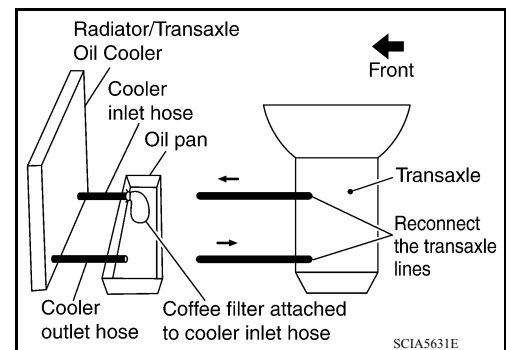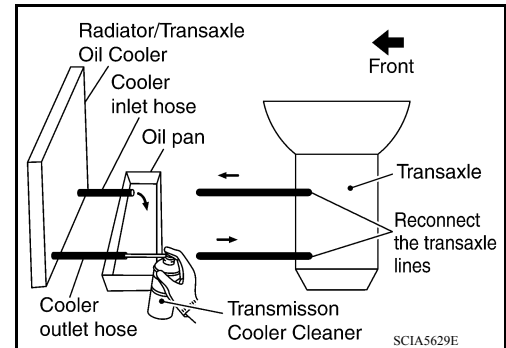

6. Insert the tip of an air gun into the end of the cooler outlet hose.
7. Wrap a shop rag around the air gun tip and end of cooler outlet hose.
8. Blow compressed air regulated to 5 - 9 kg/cm² (490 - 883 kPa, 71 - 128 psi) through the cooler outlet hose to force any remaining A/T fluid into the coffee filter.
9. Remove the coffee filter from the end of the cooler inlet hose.
10. Perform "A/T FLUID COOLER INSPECTION PROCEDURE".

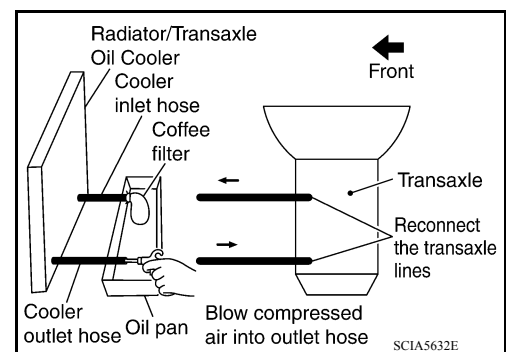


A/T FLUID COOLER INSPECTION PROCEDURE

A/T FLUID COOLER


< BASIC INSPECTION >

[4AT: RE4F03C]

1. Inspect the coffee filter for debris.
 - a. If small metal debris less than 1mm (0.040 in) in size or metal powder is found in the coffee filter, this is normal. If normal debris is found, the A/T fluid cooler/radiator can be re-used and the procedure is ended.

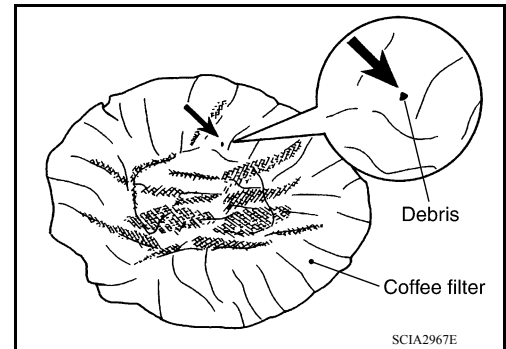

- b. If one or more pieces of debris are found that are over 1mm (0.040 in) in size and/or peeled clutch facing material is found in the coffee filter, the A/T fluid cooler is not serviceable. The A/T fluid cooler/radiator must be replaced and the inspection procedure is ended. Refer to [CO-14, "Exploded View"](#).

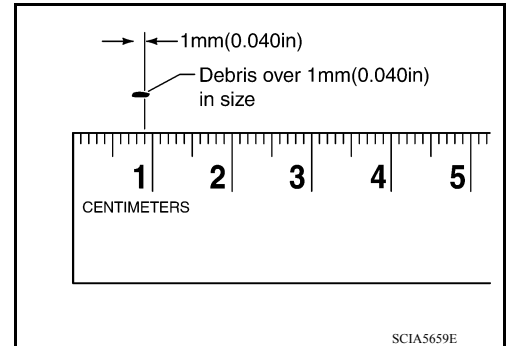

A/T FLUID COOLER FINAL INSPECTION

After performing all procedures, ensure that all remaining oil is cleaned from all components.

STALL TEST

< BASIC INSPECTION >

[4AT: RE4F03C]

STALL TEST

Work Procedure

INFOID:000000009267879

INSPECTION

1. Inspect the amount of engine oil. Replenish the engine oil if necessary. Refer to [LU-8. "Inspection"](#).
2. Drive for about 10 minutes to warm up the vehicle so that the A/T fluid temperature is 50 to 80°C (122 to 176°F).
3. Inspect the amount of ATF. Replenish if necessary. Refer to [TM-230. "Inspection"](#).
4. Securely engage the parking brake so that the tires do not turn.
5. Start the engine, apply foot brake, and place selector lever in "D" position.
6. Gradually press down the accelerator pedal while holding down the foot brake.
7. Quickly read off the stall speed, then quickly release the accelerator pedal.

CAUTION:

Never hold down the accelerator pedal for more than 5 seconds during this test.

Stall speed : Refer to [TM-254. "Stall Speed"](#).

8. Shift the selector lever to "N" position.
9. Cool down the ATF.
- CAUTION:**
Run the engine at idle for at least 1 minute.
10. Repeat steps 6 through 9 with selector lever in "1", "2" and "R" positions.

JUDGMENT OF STALL TEST

	Selector lever position				Possible location of malfunction
	"D"	"2"	"1"	"R"	
Stall speed	H	H	H	O	<ul style="list-style-type: none"> • Low clutch • one-way clutch
	O	O	H	H	Low and reverse brake
	O	O	O	H	Reverse clutch
	L	L	L	L	<ul style="list-style-type: none"> • Engine • Torque converter one-way clutch
	H	H	H	H	Line pressure low

O: Stall speed within standard value position

H: Stall speed higher than standard value

L: Stall speed lower than standard value

LINE PRESSURE TEST

< BASIC INSPECTION >

[4AT: RE4F03C]

LINE PRESSURE TEST

Work Procedure

INFOID:000000009267880

INSPECTION

1. Inspect the amount of engine oil. Replenish the engine oil if necessary. Refer to [LU-8, "Inspection"](#).
2. Drive for about 10 minutes to warm up the vehicle so that the A/T fluid temperature is to 50 to 80°C (122 to 176°F).
3. Inspect the amount of ATF. Replenish if necessary. Refer to [TM-230, "Inspection"](#).
4. Remove fluid pressure detection plug.

- 1 : "D" position fluid pressure detection plug
- 2 : "R" position fluid pressure detection plug

5. Install the joint pipe adapter [SST: KV31103600 (—)], adapter [SST: 25054000 (J-25695-4)], and oil pressure gauge set (commercial service tool).

NOTE:

When using oil pressure gauge, be sure to use O-ring attached to fluid pressure detection plug.

6. Securely engage parking brake so that the tires do not turn.
7. Start the engine.
8. Measure the line pressure at both idle and the stall speed.

CAUTION:

Keep brake pedal pressed all the way down during measurement.

Line pressure : [TM-255, "Line Pressure"](#)


9. Install O-ring to fluid pressure detection plug.

CAUTION:

- Do not reuse O-ring.
- Apply ATF to O-ring.

10. Install fluid pressure detection plug.

 : 7.4 N·m (1.70 lb-m, 66 in-lb)

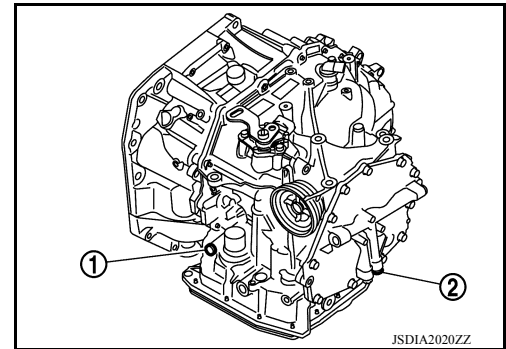

JUDGMENT

Judgment		Possible cause
Idle speed	Low for all positions ("P", "R", "N", "D", "2", "1")	Possible causes include malfunctions in the pressure supply system and low oil pump output. For example <ul style="list-style-type: none"> • Oil pump wear • Pressure regulator valve or plug sticking or spring fatigue • Oil strainer ⇒ oil pump ⇒ pressure regulator valve passage oil leak • Engine idle speed too low
	Only low for a specific position	Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.
	High	Possible causes include a sensor malfunction or malfunction in the line pressure adjustment function. For example <ul style="list-style-type: none"> • Accelerator pedal position signal malfunction • Line pressure solenoid malfunction (sticking in OFF state, filter clog, cut line) • Pressure regulator valve or plug sticking • Engine idle speed too high

LINE PRESSURE TEST

< BASIC INSPECTION >

[4AT: RE4F03C]

Judgment		Possible cause
Stall speed	Line pressure does not rise higher than the line pressure for idle.	Possible causes include a sensor malfunction or malfunction in the pressure adjustment function. For example <ul style="list-style-type: none"> • TCM malfunction • Line pressure solenoid malfunction (shorting, sticking in ON state) • Pressure regulator valve or plug sticking
	The pressure rises, but does not enter the standard position.	Possible causes include malfunctions in the pressure supply system and malfunction in the pressure adjustment function. For example <ul style="list-style-type: none"> • Oil pump wear • Line pressure solenoid malfunction (sticking, filter clog) • Pressure regulator valve or plug sticking
	Only low for a specific position	Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

U0073 COMMUNICATION BUS A OFF

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

DTC/CIRCUIT DIAGNOSIS

U0073 COMMUNICATION BUS A OFF

DTC Logic

INFOID:000000009267881

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detecting condition	Possible causes
U0073	Control Module Communication Bus "A" Off	When the ignition switch is ON, TCM detects a bus-off error continuously for 2 seconds or more.	Harness or connector (CAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn the ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U0073" detected?

- YES >> Go to [TM-132, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267882

For the diagnosis procedure, refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

U0100 LOST COMMUNICATION (ECM A)

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

U0100 LOST COMMUNICATION (ECM A)

DTC Logic

INFOID:000000009267883

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
U0100	Lost Communication With ECM/PCM "A"	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from ECM continuously for 2 seconds or more.	<ul style="list-style-type: none">• ECM• Harness or connector (CAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn the ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U0100" detected?

- YES >> Go to [TM-133, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267884

For the diagnosis procedure, refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

U0140 LOST COMMUNICATION (BCM)

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

U0140 LOST COMMUNICATION (BCM)

DTC Logic

INFOID:000000009267885

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
U0140	Lost Communication With Body Control Module	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from BCM continuously for 2 seconds or more.	<ul style="list-style-type: none">• BCM• Harness or connector (CAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U0140" detected?

- YES >> Go to [TM-134, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267886

For the diagnosis procedure, refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

U0155 LOST COMMUNICATION (IPC)

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

U0155 LOST COMMUNICATION (IPC)

DTC Logic

INFOID:000000009267887

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detecting condition	Possible causes
U0155	Lost Communication With Instrument Panel Cluster (IPC) Control Module	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from the combination meter continuously for 2 seconds or more.	<ul style="list-style-type: none">Combination meterHarness or connector (CAN communication line is open or shorted)

DTC REPRODUCTION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and wait for at least 5 seconds.
- Check the DTC.

Is "U0155" detected?

YES >> Go to [TM-135, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267888

For the diagnosis procedure, refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

U0300 CAN COMMUNICATION DATA

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

U0300 CAN COMMUNICATION DATA

Description

INFOID:000000009267889

The amount of data transmitted from each control unit is read.

DTC Logic

INFOID:000000009267890

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detecting condition	Possible cause
U0300	Internal Control Module Software Incompatibility	When the amount of data transmitted from each control unit is smaller than the specified amount.	Control units other than TCM.

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine and wait 2 seconds or more.
2. Check DTC.

Is "U0300" detected?

- YES >> Go to [TM-136, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267891

1. CHECK CONTROL UNIT

Check the number of control units replaced before detecting "U0300".

Is the number of replaced control units one?

- YES >> Since the replaced control unit may be out of specifications, check the part number and specifications.
NO >> GO TO 2.

2. INSPECTION CONTROL UNIT

Ⓟ With CONSULT

1. Remove one of the replaced control units.
2. Install the previous control unit mounted before replacement.
3. Turn ignition switch ON and wait 2 seconds or more.
4. Perform "Self Diagnostic Results" in "TRANSMISSION".

Is "U0300" detected?

- YES >> Turn OFF the ignition switch to check the other control units using the same method.
NO >> Since the removed control unit may be out of specifications, check the part number and specifications.

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

U1000 CAN COMM CIRCUIT

Description

INFOID:000000009267892

CAN (Controller Area Network) is a serial communication line for real-time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independently). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000009267893

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if..	Possible cause
U1000	CAN Communication Line	TCM is not transmitting CAN communication signal for 2 seconds or more.	<ul style="list-style-type: none">• Harness or connectors (CAN communication line is open or shorted.)• TCM

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" is previously conducted, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Run engine for at least 5 consecutive seconds at idle speed.
3. Check the DTC.

Is "U1000" detected?

- YES >> Go to [TM-137, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267894

For the diagnosis procedure, refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

U1117 LOST COMMUNICATION (ABS)

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

U1117 LOST COMMUNICATION (ABS)

DTC Logic

INFOID:000000009267895

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detecting condition	Possible causes
U1117	Lost Communication With ABS	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from ABS actuator control unit continuously for 2 seconds or more.	<ul style="list-style-type: none">• ABS actuator & control module• Harness or connector (CAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn the ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON, and wait for 5 seconds or more.
2. Check the DTC.

Is "U1117" detected?

YES >> Go to [TM-138, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267896

For the diagnosis procedure, refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

P062F EEPROM

Description

INFOID:000000009267897

TCM checks the value read in FLASH ROM at ignition switch ON, and judges if there is writing failure to FLASH ROM or malfunction of FLASH ROM.

DTC Logic

INFOID:000000009267898

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P062F	Internal Control Module EEPROM Error	When the ignition switch is ON, an error detected is the memory back-up value from the TCM FLASH ROM.	Control valve ASSY (ROM-assembly)

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn the ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Shift the selector lever to the P position.
2. Start engine.
3. Check the first trip DTC.

Is "P062F" detected?

- YES >> Go to [TM-139. "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267899

1. PERFORM DTC CONFIRMATION PROCEDURE

Refer to [GI-45. "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace the TCM. Refer to [TM-241. "Removal and Installation"](#).
- NO >> Repair or replace damaged parts.

P0705 TRANSMISSION RANGE SWITCH A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0705 TRANSMISSION RANGE SWITCH A

DTC Logic

INFOID:000000009267900

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0705	Transmission Range Sensor "A" Circuit Malfunction (PRNDL input)	The following diagnosis conditions are met and 2 or more position signals are ON at the same time for 5 seconds or more. <ul style="list-style-type: none"> Diagnosis condition - TCM power supply voltage: 10 V <TCM power supply voltage <16 V 	<ul style="list-style-type: none"> Harness or connector (Short circuit between transmission position SW and TCM) Transmission range switch

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn the ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

- Turn ignition switch ON.
- Shift the selector lever to the entire position from P to 1. (Hold the selector lever at each position for 10 seconds or more.)
- Check the first trip DTC.


Is "P0705" detected?

- YES >> Go to [TM-140, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267901

1. CHECK TCM INPUT SIGNALS

 With CONSULT

- Turn ignition switch ON.
- Select "TRANSMISSION" "DATA MONITOR".
- Select the "D position switch", "N position switch", "R position switch", "P position switch", "2 position switch", and "1 position switch".
- Shift the selector lever to the entire position from P to 1, and check the ON/OFF operation of each monitor item.

Monitor item	Condition	Status
RANGE SW 1	Selector lever in "1" position	On
	Other than the above	Off
RANGE SW 2	Selector lever in "2" position	On
	Other than the above	Off
RANGE SW D	Selector lever in "D" position	On
	Other than the above	Off
RANGE SW N	Selector lever in "N" position	On
	Other than the above	Off
RANGE SW R	Selector lever in "R" position	On
	Other than the above	Off

P0705 TRANSMISSION RANGE SWITCH A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

Monitor item	Condition	Status
RANGE SW P	Selector lever in "P" position	On
	Other than the above	Off

Ⓜ Without CONSULT.

1. Turn ignition switch OFF.
2. Disconnect the TCM connector.
3. Turn ignition switch ON.
4. Shift the selector lever to the entire position from P to 1, and check the voltage between the TCM harness connector terminal and ground.

TCM harness connector		Ground	Condition	Voltage
Connector	Terminal			
F44	2	Ground	Selector lever in "1" position	10 - 16 V
			Other than the above	Approx. 0 V
	3		Selector lever in "2" position	10 - 16 V
			Other than the above	Approx. 0 V
	4		Selector lever in "D" position	10 - 16 V
			Other than the above	Approx. 0 V
	5		Selector lever in "N" position	10 - 16 V
			Other than the above	Approx. 0 V
	6		Selector lever in "R" position	10 - 16 V
			Other than the above	Approx. 0 V
	7		Selector lever in "P" position	10 - 16 V
			Other than the above	Approx. 0 V

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO-1 [D position SW is "On" when selector is not in D position. (Or, connector terminal 4 is at 10 - 16 V.)]>> GO TO 2.

NO-2 [N position SW is "On" when selector is not in N position. (Or, connector terminal 5 is at 10 - 16 V.)]>> GO TO 4.

NO-3 [R position SW is "On" when selector is not in R position. (Or, connector terminal 6 is at 10 - 16 V.)]>> GO TO 6.

NO-4 [P position SW is "On" when selector is not in P position. (Or, connector terminal 7 is at 10 - 16 V.)]>> GO TO 8.

NO-5 [2 position SW is "On" when selector is not in 2 position. (Or, connector terminal 3 is at 10 - 16 V.)]>> GO TO 10.

NO-6 [1 position SW is "On" when selector is not in 1 position. (Or, connector terminal 2 is at 10 - 16 V.)]>> GO TO 12.

2. CHECK D POSITION SW CIRCUIT (CHECK 1)

1. Turn ignition switch OFF.
2. Disconnect the TCM connector.
3. Check the continuity between the TCM harness connector terminals.

P0705 TRANSMISSION RANGE SWITCH A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

TCM harness connector		Terminal	Continuity
Connector			
F44	4	2	Does not exist
		3	
		5	
		6	
		7	

Is the check result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3. CHECK D POSITION SW CIRCUIT (CHECK 2)

1. Disconnect the transmission range switch connector.
2. Turn the ignition switch ON.
3. Check the voltage between the TCM harness connector and ground.

TCM harness connector		Ground	Voltage
Connector	Terminal		
F44	4	Ground	Approx. 0 V

Is the check result normal?

YES >> GO TO 14.

NO >> Repair or replace the malfunctioning parts.

4. CHECK N POSITION SW CIRCUIT (CHECK 1)

1. Turn ignition switch OFF.
2. Disconnect the TCM connector.
3. Check the continuity between the TCM harness connector terminals.

TCM harness connector		Terminal	Continuity
Connector			
F44	5	2	Does not exist
		3	
		4	
		6	
		7	

Is the check result normal?

YES >> GO TO 5.

NO >> Repair or replace the malfunctioning parts.

5. CHECK N POSITION SW CIRCUIT (CHECK 2)

1. Disconnect the transmission range switch connector.
2. Turn ignition switch ON.
3. Check the voltage between the TCM harness connector and ground.

TCM harness connector		Ground	Voltage
Connector	Terminal		
F44	5	Ground	Approx. 0 V

Is the check result normal?

YES >> GO TO 14.

NO >> Repair or replace the malfunctioning parts.

6. CHECK P POSITION SW CIRCUIT (CHECK 1)

P0705 TRANSMISSION RANGE SWITCH A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

1. Turn ignition switch OFF.
2. Disconnect the TCM connector.
3. Check the continuity between the TCM harness connector terminals.

TCM harness connector		Continuity
Connector	Terminal	
F44	7	2
		3
		4
		5
		6
		Does not exist

Is the check result normal?

- YES >> GO TO 7.
 NO >> Repair or replace the malfunctioning parts.

7. CHECK P POSITION SW CIRCUIT (CHECK 2)

1. Disconnect the transmission range switch connector.
2. Turn ignition switch ON.
3. Check the voltage between the TCM harness connector and ground.

TCM harness connector		Ground	Voltage
Connector	Terminal		
F44	7	Ground	Approx. 0 V

Is the check result normal?

- YES >> GO TO 14.
 NO >> Repair or replace the malfunctioning parts.

8. CHECK R POSITION SW CIRCUIT (CHECK 1)

1. Turn ignition switch OFF.
2. Disconnect the TCM connector.
3. Check the continuity between the TCM harness connector terminals.

TCM harness connector		Continuity
Connector	Terminal	
F44	6	2
		3
		4
		5
		7
		Does not exist

Is the check result normal?

- YES >> GO TO 9.
 NO >> Repair or replace the malfunctioning parts.

9. CHECK R POSITION SW CIRCUIT (CHECK 2)

1. Disconnect the transmission range switch connector.
2. Turn ignition switch ON.
3. Check the voltage between the TCM harness connector and ground.

TCM harness connector		Ground	Voltage
Connector	Terminal		
F44	6	Ground	Approx. 0 V

Is the check result normal?

P0705 TRANSMISSION RANGE SWITCH A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

- YES >> GO TO 14.
NO >> Repair or replace the malfunctioning parts.

10.CHECK 2 POSITION SW CIRCUIT (CHECK 1)

1. Turn ignition switch OFF.
2. Disconnect the TCM connector.
3. Check the continuity between the TCM harness connector terminals.

TCM harness connector		Continuity	
Connector	Terminal		
F44	3	2	Does not exist
		4	
		5	
		6	
		7	

Is the check result normal?

- YES >> GO TO 11.
NO >> Repair or replace the malfunctioning parts.

11.CHECK 2 POSITION SW CIRCUIT (CHECK 2)

1. Disconnect the transmission range switch connector.
2. Turn ignition switch ON.
3. Check the voltage between the TCM harness connector and ground.

TCM harness connector		Ground	Voltage
Connector	Terminal		
F44	3	Ground	Approx. 0 V

Is the check result normal?

- YES >> GO TO 14.
NO >> Repair or replace the malfunctioning parts.

12.CHECK 1 POSITION SW CIRCUIT (CHECK 1)

1. Turn ignition switch OFF.
2. Disconnect the TCM connector.
3. Check the continuity between the TCM harness connector terminals.

TCM harness connector		Continuity	
Connector	Terminal		
F44	2	3	Does not exist
		4	
		5	
		6	
		7	

Is the check result normal?

- YES >> GO TO 13.
NO >> Repair or replace the malfunctioning parts.

13.CHECK 1 POSITION SW CIRCUIT (CHECK 2)

1. Disconnect the transmission range switch connector.
2. Turn ignition switch ON.
3. Check the voltage between the TCM harness connector and ground.

P0705 TRANSMISSION RANGE SWITCH A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

TCM harness connector		Ground	Voltage
Connector	Terminal		
F44	2	Ground	Approx. 0 V

Is the check result normal?

YES >> GO TO 14.

NO >> Repair or replace the malfunctioning parts.

14.CHECK TRANSMISSION RANGE SWITCH

Check the transmission range switch. Refer to [TM-145. "Component Inspection \(Transmission Range Switch\)"](#).

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-45. "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

Component Inspection (Transmission Range Switch)

INFOID:000000009267902

1.CHECK TRANSMISSION RANGE SWITCH

Check the continuity between the transmission range switch connector terminals.

Transmission range switch		Condition	Continuity
Terminal			
7	10	Selector lever in "P", "N" position	Exists
		Other than the above	Does not exist
6	9	Selector lever in "1" position	Exists
		Other than the above	Does not exist
	5	Selector lever in "2" position	Exists
		Other than the above	Does not exist
	8	Selector lever in "D" position	Exists
		Other than the above	Does not exist
	4	Selector lever in "N" position	Exists
		Other than the above	Does not exist
	2	Selector lever in "R" position	Exists
		Other than the above	Does not exist
	3	Selector lever in "P" position	Exists
		Other than the above	Does not exist

Is the check result normal?

YES >> INSPECTION END

NO >> There is a malfunction of the transmission range switch. Replace the transaxle assembly. Refer to [TM-250. "Removal and Installation"](#).

P0706 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0706 TRANSMISSION RANGE SENSOR A

DTC Logic

INFOID:000000009267903

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0706	Transmission Range Sensor "A" Circuit Range/Performance	The following diagnosis conditions are met and the position signal is OFF continuously for 15 seconds or more. <ul style="list-style-type: none">• Diagnosis condition<ul style="list-style-type: none">- TCM power supply voltage: 10 V <TCM power supply voltage <16 V	<ul style="list-style-type: none">• Harness or connector (Open circuit between transmission position SW and TCM)• Transmission position switch• Control cable

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn the ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch to ON.
2. Shift the selector lever to the entire position from P to 1. (Hold the selector lever at each position for 20 seconds or more.)
3. Check the first trip DTC.

Is "P0706" detected?

- YES >> Go to [TM-146, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267904

1. CHECK CONTROL CABLE

Check the control cable. Refer to [TM-235, "Inspection and Adjustment"](#).

Is the check result normal?

- YES >> GO TO 2.
NO >> Adjust the control cable Refer to [TM-235, "Inspection and Adjustment"](#).

2. CHECK POWER CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the transmission range switch connector.
3. Turn the ignition switch ON.
4. Check the voltage between the transmission range switch harness connector and ground.

Transmission range switch harness connector		Ground	Voltage
Connector	Terminal		
F52	6	Ground	10 - 16 V

Is the check result normal?

- YES >> GO TO 3.
NO >> GO TO 6.

3. CHECK CIRCUIT BETWEEN TRANSMISSION RANGE SWITCH AND TCM (CHECK 1)

1. Turn the ignition switch OFF.
2. Disconnect the TCM connector.

P0706 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

3. Check the continuity between the transmission range switch harness connector and the TCM harness connector.

Transmission range switch harness connector		TCM harness connector		Continuity
Connector	Terminal	Connector	Terminal	
F52	2	F44	3	Exists
	3		2	
	4		4	
	5		6	
	8		5	
	9		7	

Is the check result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4. CHECK CIRCUIT BETWEEN TRANSMISSION RANGE SWITCH AND TCM (CHECK 2)

Check the continuity between the transmission range switch harness connector and ground.

Transmission range switch harness connector		Ground	Continuity
Connector	Terminal		
F52	2	Ground	Does not exist
	3		
	4		
	5		
	8		
	9		

Is the check result normal?

YES >> GO TO 5.

NO >> Repair or replace the malfunctioning parts.

5. CHECK TRANSMISSION RANGE SWITCH

Check the transmission range switch. Refer to [TM-148. "Component Inspection \(Transmission Range Switch\)"](#).

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-45. "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

6. CHECK CIRCUIT BETWEEN IPDM E/R AND TRANSMISSION RANGE SWITCH (CHECK 1)

1. Disconnect the IPDM E/R connector.
2. Check the continuity between the IPDM E/R harness connector and the transmission range switch.

IPDM E/R harness connector		Transmission range switch harness connector		Continuity
Connector	Terminal	Connector	Terminal	
E45	21	F52	6	Exists

Is the check result normal?

YES >> GO TO 7.

NO >> Repair or replace the malfunctioning parts.

7. CHECK CIRCUIT BETWEEN IPDM E/R AND TRANSMISSION RANGE SWITCH (CHECK 2)

Check the continuity between the IPDM E/R harness connector and ground.

P0706 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

IPDM E/R harness connector		Ground	Continuity
Connector	Terminal		
E45	21	Ground	Does not exist

Is the check result normal?

YES >> GO TO 8.

NO >> Repair or replace the malfunctioning parts.

8. DETECTION OF MALFUNCTION ITEMS

Check the following items:

- Harness open circuit or short circuit between the ignition switch and IPDM E/R. Refer to [PG-20, "Wiring Diagram — Ignition Power Supply —"](#).
- 10 A fuse (#49, IPDM E/R). Refer to [PG-62, "IPDM E/R Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

Component Inspection (Transmission Range Switch)

INFOID:000000009267905

1. CHECK TRANSMISSION RANGE SWITCH

Check the continuity between the transmission range switch connector terminals.

Transmission range switch		Condition	Continuity
Terminal			
7	10	Selector lever in "P", "N" position	Exists
		Other than the above	Does not exist
6	9	Selector lever in "1" position	Exists
		Other than the above	Does not exist
	5	Selector lever in "2" position	Exists
		Other than the above	Does not exist
	8	Selector lever in "D" position	Exists
		Other than the above	Does not exist
	4	Selector lever in "N" position	Exists
		Other than the above	Does not exist
	2	Selector lever in "R" position	Exists
		Other than the above	Does not exist
	3	Selector lever in "P" position	Exists
		Other than the above	Does not exist

Is the check result normal?

YES >> INSPECTION END

NO >> There is a malfunction of the transmission range switch. Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

DTC Logic

INFOID:000000009267906

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0711	Transmission Fluid Temperature Sensor "A" Circuit Range/ Performance	Under the following diagnosis conditions, A/T fluid temperature does not rise to 15°C (59°F) after driving for a certain period of time with the TCM-received fluid temperature sensor value between -40°C (-40°F) and 14°C (57.2°F). <ul style="list-style-type: none"> • Diagnosis condition <ul style="list-style-type: none"> - Selector lever: "D" position - Vehicle speed: 10 km/h (7 MPH) or more - Engine speed: 450 rpm or more - Accelerator pedal position: 1.0/8 or more - TCM power supply voltage: More than 11 V 	A/T fluid temperature sensor
		When the condition of the final judgment is satisfied after satisfying that of the provisional judgment: <ul style="list-style-type: none"> • Provisional judgment: All of the following conditions are satisfied within 2 seconds after the ignition switch is turned ON. <ul style="list-style-type: none"> - U0073, U0100, P0712 and P0713 are not detected. • CAN communication is normal. • TCM power supply voltage: More than 11 V • The difference between A/T fluid temperature and engine coolant temperature is 38°C (100.4°F) or more, or -27°C (-16.6°F) or less. • Final judgment: When all of the following conditions are satisfied and this state is maintained for 300 seconds: <ul style="list-style-type: none"> - ECM is normal. - Provisional judgment is satisfied. 	A/T fluid temperature sensor

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

2. CHECK A/T FLUID TEMPERATURE SENSOR FUNCTION

With CONSULT

1. Cool the engine.
2. Turn ignition switch ON.

CAUTION:

Never start the engine.

3. Select "FLUID TEMP" in "Data Monitor" in "TRANSMISSION".
4. Select "COOLANT TEMP/S" in "Data Monitor" in "ENGINE".
5. Check temperature difference between A/T fluid and engine coolant.

With GST

1. Complete engine diagnoses P0111, P0116, and P0196.
2. After starting the engine start, run the engine at idle for 5 minutes.
3. Check the DTC.

Is the temperature calculated by subtracting engine coolant temperature from A/T fluid temperature more than 38°C (100.4°F) or is it less than -27°C (-16.6°F)? (With CONSULT)/Is "P0711" detected? (With GST)

YES >> Go to [TM-151, "Diagnosis Procedure"](#).

NO-1 [With CONSULT: "FLUID TEMP" is 15°C (59°F) or more]>>INSPECTION END

NO-2 [With CONSULT: "FLUID TEMP" is 14°C (57.2°F) or less]>>GO TO 3.

NO-3 (With GST)>>GO TO 3.

3. CHECK DTC DETECTION

With CONSULT

1. Select "SLCT LVR POSI", "VHCL/S SE-AT", "ACCELE POSI", "FLUID TEMP" in "Data Monitor" in "TRANSMISSION".
2. Record A/T fluid temperature.
3. Start the engine and wait for at least 3 minutes.
4. Drive the vehicle for the total minutes specified in the Driving time column below with the following conditions satisfied.

SLCT LVR POSI	: D
VHCL/S SE-AT	: 10 km/h (7 MPH) or more
ACCELE POSI	: 1.0/8 or more

A/T fluid temperature before engine start	Driving time
-40°C (-40°F) – -31°C (-23.8°F)	20 minutes or more
-30°C (-22°F) – -21°C (-5.8°F)	19 minutes or more
-20°C (-4°F) – -11°C (12.2°F)	15 minutes or more
-10°C (14°F) – -1°C (30.2°F)	12 minutes or more
0°C (32°F) – 9°C (48.2°F)	9 minutes or more
10°C (50°F) – 14°C (57.2°F)	5 minutes or more

5. Perform "Self Diagnostic Results" in "TRANSMISSION".

With GST

1. Cool the engine.
2. Start the engine and wait for at least 3 minutes.
3. Drive the vehicle and maintain the following conditions for 21 minutes or more.

Selector lever	: D position
Vehicle speed	: 10 km/h (7 MPH) or more
Accelerator pedal opening	: 1.0/8 or more

4. Check the DTC.

Is "P0711" detected?

YES >> Go to [TM-151, "Diagnosis Procedure"](#).

NO >> INSPECTION END

P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

Diagnosis Procedure

INFOID:000000009267907

1. CHECK A/T FLUID TEMPERATURE SENSOR

1. Turn ignition switch OFF.
2. Disconnect the A/T unit connector.
3. Check the A/T fluid temperature sensor. Refer to [TM-151, "Component Inspection \(A/T Fluid Temperature Sensor\)"](#).

Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
NO >> Repair or replace the malfunctioning parts.

Component Inspection (A/T Fluid Temperature Sensor)

INFOID:000000009267908

1. CHECK A/T FLUID TEMPERATURE SENSOR

Measure the resistance between the A/T unit connector terminals.

A/T unit connector		Condition	Resistance
Terminal			
11	16	A/T fluid temperature: 20°C (68°F)	Approx. 6.5 kΩ
		A/T fluid temperature: 50°C (122°F)	Approx. 2.2 kΩ
		A/T fluid temperature: 80°C (176°F)	Approx. 0.87 kΩ

Is the check result normal?

- YES >> INSPECTION END
NO >> There is a malfunction of the A/T fluid temperature sensor. Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A

DTC Logic

INFOID:000000009267909

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0712	Transmission Fluid Temperature Sensor "A" Circuit Low	Under the following diagnosis conditions, the A/T fluid temperature identified by TCM is 180°C (356°F) or more continuously for 5 seconds or more. <ul style="list-style-type: none">• Diagnosis condition<ul style="list-style-type: none">- Ignition switch: ON- TCM power supply voltage: 10 V <TCM power supply voltage <16 V	<ul style="list-style-type: none">• Harness or connector (Short circuit to ground in the fluid temperature sensor circuit)• A/T fluid temperature sensor

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn the ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON, and wait for 10 seconds or more.
2. Check the first trip DTC.

Is "P0712" detected?

- YES >> Go to [TM-152, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267910

1. CHECK CIRCUIT BETWEEN TCM AND A/T UNIT

1. Turn ignition switch OFF.
2. Disconnect the TCM connector and A/T unit connector.
3. Check the continuity between TCM harness connector and ground.

TCM harness connector		Ground	Continuity
Connector	Terminal		
F44	12	Ground	Does not exist

Is the check result normal?

- YES >> GO TO 2.
NO >> Repair or replace malfunctioning part.

2. CHECK FLUID TEMPERATURE SENSOR

Check the fluid temperature sensor. Refer to [TM-152, "Component Inspection \(A/T Fluid Temperature Sensor\)"](#).

Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
NO >> Repair or replace the malfunctioning parts.

Component Inspection (A/T Fluid Temperature Sensor)

INFOID:000000009267911

1. CHECK A/T FLUID TEMPERATURE SENSOR

P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

Measure the resistance between the A/T unit connector terminals.

A/T unit connector		Condition	Resistance
Terminal			
11	16	A/T fluid temperature: 20°C (68°F)	Approx. 6.5 kΩ
		A/T fluid temperature: 50°C (122°F)	Approx. 2.2 kΩ
		A/T fluid temperature: 80°C (176°F)	Approx. 0.87 kΩ

Is the check result normal?

YES >> INSPECTION END

NO >> There is a malfunction of the A/T fluid temperature sensor. Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A

DTC Logic

INFOID:000000009267912

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0713	Transmission Fluid Temperature Sensor "A" Circuit High	Under the following diagnosis conditions, the A/T fluid temperature identified by TCM is – 40°C (–40°F) or less continuously for 5 seconds or more. • Diagnosis condition - Ignition switch: ON - Vehicle speed: 10 km/h (7 MPH) or more - Selector lever: D position - TCM power supply voltage: 10 V <TCM power supply voltage <16 V	<ul style="list-style-type: none">• Harness or connector (Open circuit or short circuit to the power supply in the fluid temperature sensor circuit)• A/T fluid temperature sensor

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

1. Drive the vehicle.
2. Maintain the following conditions for 5 seconds or more.

Vehicle speed : 10 km/h (7 MPH) or more
Selector lever : D position

3. Check the first trip DTC.

Is "P0713" detected?

YES >> Go to [TM-152, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267913

1. CHECK CIRCUIT BETWEEN TCM AND A/T UNIT (CHECK 1)

1. Turn ignition switch OFF.
2. Disconnect the TCM connector and A/T unit connector.
3. Check the continuity between the TCM harness connector and the A/T unit harness connector.

TCM harness connector		A/T unit harness connector		Continuity
Connector	Terminal	Connector	Terminal	
F44	12	F46	11	Exists
	11		16	

Is the check result normal?

YES >> GO TO 2.
NO >> Repair or replace malfunctioning part.

2. CHECK CIRCUIT BETWEEN TCM AND A/T UNIT (CHECK 2)

1. Turn ignition switch ON.

P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

2. Check the voltage between the TCM harness connector and ground.

TCM harness connector		Ground	Voltage
Connector	Terminal		
F44	12	Ground	Approx. 0 V

Is the check result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning part.

3. CHECK FLUID TEMPERATURE SENSOR

Check the fluid temperature sensor. Refer to [TM-155, "Component Inspection \(A/T Fluid Temperature Sensor\)"](#).

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

Component Inspection (A/T Fluid Temperature Sensor)

INFOID:000000009267914

1. CHECK A/T FLUID TEMPERATURE SENSOR

Measure the resistance between the A/T unit connector terminals.

A/T unit connector		Condition	Resistance
Terminal			
11	16	A/T fluid temperature: 20°C (68°F)	Approx. 6.5 kΩ
		A/T fluid temperature: 50°C (122°F)	Approx. 2.2 kΩ
		A/T fluid temperature: 80°C (176°F)	Approx. 0.87 kΩ

Is the check result normal?

YES >> INSPECTION END

NO >> There is a malfunction of the A/T fluid temperature sensor. Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

P0717 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0717 INPUT SPEED SENSOR A

DTC Logic

INFOID:000000009267915

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0717	Input/Turbine Speed Sensor "A" Circuit No Signal	Under the following diagnosis conditions, the input speed sensor value is less than 600 rpm continuously for 5 seconds or more. • Diagnosis condition - Engine speed: More than 1,500 rpm - Position: Other than P or N - Idle switch: OFF - Vehicle speed: More than 40 km/h (25 MPH) - TCM power supply voltage: 10 V <TCM power supply voltage <16 V	<ul style="list-style-type: none">• Harness or connector (Open circuit or short circuit in the input speed sensor circuit)• Input speed sensor

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 5 seconds or more.

Engine speed	: More than 1,500 rpm
Accelerator pedal position	: 0.5/8.0 or more
Selector lever	: D position
Vehicle speed	: More than 40 km/h (25 MPH)

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0717" detected?

- YES >> Go to [TM-156, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267916

1. CHECK INPUT SPEED SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the transaxle assembly connector.
3. Turn ignition switch ON.
4. Check the voltage between the A/T unit harness connector and ground.

P0717 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

A/T unit harness connector		Ground	Voltage
Connector	Terminal		
F46	14	Ground	Approx. 5 V

Is the check result normal?

YES >> GO TO 2.

NO >> Check the TCM power supply. Refer to [TM-216, "Diagnosis Procedure"](#).

2. CHECK INPUT SPEED SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check the continuity between the A/T unit harness connector and ground.

A/T unit harness connector		Ground	Continuity
Connector	Terminal		
F46	16	Ground	Exists

Is the check result normal?

YES >> GO TO 3.

NO >> Check or repair the malfunction items.

3. CHECK INPUT SPEED SENSOR SIGNAL CIRCUIT

1. Disconnect the TCM connector.
2. Check the continuity between the TCM harness connector and the A/T unit harness connector.

TCM harness connector		A/T unit harness connector		Continuity
Connector	Terminal	Connector	Terminal	
F44	35	F46	10	Exists

Is the check result normal?

YES >> GO TO 4.

NO >> Check or repair the malfunction items.

4. CHECK INPUT SPEED SENSOR TCM CIRCUIT (CHECK 3)

Check the continuity between TCM harness connector and ground.

TCM harness connector		Ground	Continuity
Connector	Terminal		
F44	35	Ground	Does not exist

Is the check result normal?

YES >> GO TO 5.

NO >> Check or repair the malfunction items.


5. CHECK TCM INPUT SIGNALS

1. Connect all of the disconnected connectors.
2. Lift the vehicle.
3. Start the engine.
4. Check the frequency of the input speed sensor.

P0717 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

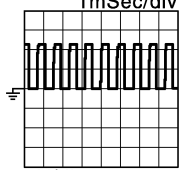TCM connector		Ground	Condition	Standard
Connector	Terminal			
F44	35	Ground	<ul style="list-style-type: none"> • Selector lever: 1 position • While driving at 20km/h (12 MPH) 	<p>Approx. 880 Hz</p>  <p>1mSec/div</p> <p>5V/div</p> <p>JSDIA1906GB</p>

Is the check result normal?

- YES >> Perform a simulation test to judge the cause of the malfunction. Refer to [GI-45. "Intermittent Incident"](#).
- NO >> Replace the transaxle assembly. Refer to [TM-250. "Removal and Installation"](#).

P0720 OUTPUT SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0720 OUTPUT SPEED SENSOR

DTC Logic

INFOID:000000009267917

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0720	Output Speed Sensor Circuit	Under the following diagnosis conditions, the output speed sensor value is less than 100 rpm continuously for 5 seconds or more. <ul style="list-style-type: none"> • Diagnosis condition - Selector lever: Shift to a position other than P or N. - Throttle position: More than 0.0/8.0 - Input speed: More than 1,000 rpm 	<ul style="list-style-type: none"> • Harness or connector (Open circuit or short circuit in the output speed sensor circuit) • Output speed sensor

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Maintain the following conditions for 10 seconds or more.

Selector lever : N position ⇒ D position
 Throttle position : 0.5/8.0 or more
 Engine speed : More than 1,500 rpm

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0720" detected?

YES >> Go to [TM-159, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267918

1. CHECK OUTPUT SPEED SENSOR POWER CIRCUIT (CHECK 1)

1. Turn ignition switch OFF.
2. Disconnect the output speed sensor connector.
3. Turn the ignition switch ON.
4. Check the voltage between the output speed sensor harness connector and ground.

Output speed sensor harness connector		Ground	Voltage
Connector	Terminal		
F41	3	Ground	10 – 16V

Is the check result normal?

YES >> GO TO 2.
 NO >> GO TO 6.

P0720 OUTPUT SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

2. CHECK OUTPUT SPEED SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check the continuity between the output speed sensor harness connector and ground.

Output speed sensor harness connector		Ground	Continuity
Connector	Terminal		
F41	1	Ground	Exists

Is the check result normal?

- YES >> GO TO 3.
 NO >> Check or repair the malfunction items.

3. CHECK OUTPUT SPEED SENSOR SIGNAL CIRCUIT (CHECK 1)

1. Disconnect the TCM connector.
2. Check the continuity between the output speed sensor harness connector and the TCM harness connector.

Output speed sensor harness connector		TCM harness connector		Continuity
Connector	Terminal	Connector	Terminal	
F41	2	F18	24	Exists

Is the check result normal?

- YES >> GO TO 4.
 NO >> Check or repair the malfunction items.

4. CHECK OUTPUT SPEED SENSOR SIGNAL CIRCUIT (CHECK 2)

Check the continuity between the output speed sensor harness connector and ground.


Output speed sensor harness connector		Ground	Continuity
Connector	Terminal		
F41	2	Ground	Does not exist

Is the check result normal?

- YES >> GO TO 5.
 NO >> Check or repair the malfunction items.

5. CHECK OUTPUT SPEED SENSOR SIGNAL

1. Connect all of the disconnected connectors.
2. Lift the vehicle.
3. Start the engine.
4. Check the frequency of the output speed sensor.

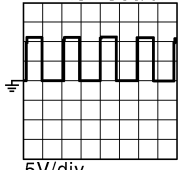TCM connector		Ground	Condition	Standard
Connector	Terminal			
F44	24	Ground	<ul style="list-style-type: none"> • Selector lever: 1 position • While driving at 20 km/h (12 MPH) 	<p>Approx. 640 Hz 2.5mSec/div</p>  <p>5V/div JSDIA1904GB</p>

Is the check result normal?

- YES >> Perform a simulation test to judge the cause of the malfunction. Refer to [GI-45. "Intermittent Incident"](#).
 NO >> Replace the output speed sensor. Refer to [TM-244. "Removal and Installation"](#).

P0720 OUTPUT SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

6. CHECK OUTPUT SPEED SENSOR POWER CIRCUIT (CHECK 2)

1. Disconnect the IPDM E/R connector.
2. Check the continuity between the IPDM E/R harness connector terminal and the output speed sensor.

IPDM E/R harness connector		Output speed sensor harness connector		Continuity
Connector	Terminal	Connector	Terminal	
E45	21	F41	3	Exists

Is the check result normal?

- YES >> GO TO 7.
NO >> Repair or replace the malfunctioning parts.

7. CHECK OUTPUT SPEED SENSOR POWER CIRCUIT (CHECK 3)

Check the continuity between the IPDM E/R harness connector terminal and ground.

IPDM E/R harness connector		Ground	Continuity
Connector	Terminal		
E45	21	Ground	Does not exist

Is the check result normal?

- YES >> GO TO 8.
NO >> Repair or replace the malfunctioning parts.

8. DETECTION OF MALFUNCTION ITEMS

Check the following items:

- Harness open circuit or short circuit between the ignition switch and IPDM E/R. Refer to [PG-20. "Wiring Diagram — Ignition Power Supply —"](#).
- 10 A fuse (#49, IPDM E/R). Refer to [PG-62. "IPDM E/R Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-45. "Intermittent Incident"](#).
NO >> Repair or replace the malfunctioning parts.

P072C STUCK IN 1GR

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P072C STUCK IN 1GR

DTC Logic

INFOID:000000009267919

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P072C	Stuck in Gear 1	The following diagnosis conditions are met and the detection conditions continue for 0.5 seconds or more. <ul style="list-style-type: none">• Diagnosis condition<ul style="list-style-type: none">- Shifting is not in progress.- Stop lamp switch OFF• Detection conditions<ul style="list-style-type: none">- Deceleration: Less than – 0.35 G- Gear ratio: 6% or more, or – 6% or less compared with normal gear ratio	<ul style="list-style-type: none">• 2-4 brake solenoid valve• Control valve assembly

DTC CONFIRMATION PROCEDURE

CAUTION:

- **“[TM-162, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PREPARATION BEFORE WORK

If another “DTC CONFIRMATION PROCEDURE” occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Select the D position.
3. Drive the vehicle.
4. Maintain the following conditions for 5 seconds or more.

Selector lever : 1 position
Stop lamp switch : OFF
Vehicle speed : 20 km/h (13 MPH) or more

5. Check the first trip DTC.

Is “P072C” detected?

- YES >> Go to [TM-162, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267920

1. MALFUNCTION CAUSE SIMULATION TEST

Refer to [GI-45, "Intermittent Incident"](#).

Is the check result normal?

- YES >> Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).
NO >> Repair or replace the malfunctioning parts.

P072D STUCK IN 2GR

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P072D STUCK IN 2GR

DTC Logic

INFOID:000000009267921

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P072D	Stuck in Gear 2	<p>The following diagnosis conditions are met and the detection conditions continue for 0.5 seconds or more.</p> <ul style="list-style-type: none"> • Diagnosis condition - Shifting is not in progress. - Stop lamp switch OFF • Detection conditions - Deceleration: Less than – 0.35 G - Gear ratio: 6% or more, or – 6% or less compared with normal gear ratio 	<ul style="list-style-type: none"> • High clutch/low & reverse brake solenoid valve • Control valve assembly

DTC REPRODUCTION PROCEDURE

CAUTION:

- **“[TM-163, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PREPARATION BEFORE WORK

If another “DTC CONFIRMATION PROCEDURE” occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 5 seconds or more.

Selector lever	: 2 position
Gear	: 2GR
Stop lamp switch	: OFF
Vehicle speed	: 20 km/h (13 MPH) or more

4. Check the first trip DTC.

Is “P072D” detected?

- YES >> Go to [TM-163, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267922

1. MALFUNCTION CAUSE SIMULATION TEST

Refer to [GI-45, "Intermittent Incident"](#).

Is the check result normal?

- YES >> Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).
- NO >> Repair or replace the malfunctioning parts.

P072E STUCK IN 3GR

DTC Logic

INFOID:000000009267923

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC Detection Condition	Possible causes
P072E	Stuck in Gear 3	The following diagnosis conditions are met and the detection conditions continue for 0.5 seconds or more. <ul style="list-style-type: none"> • Diagnosis condition - Shifting is not in progress. - Stop lamp switch OFF • Detection conditions - Deceleration: Less than – 0.35 G - Gear ratio: 6% or more, or – 6% or less compared with normal gear ratio 	<ul style="list-style-type: none"> • 2-4 brake solenoid valve • Control valve assembly

DTC REPRODUCTION PROCEDURE

CAUTION:

- **“[TM-164, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PREPARATION BEFORE WORK

If another “DTC CONFIRMATION PROCEDURE” occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 5 seconds or more.

Selector lever	: D position (O/D OFF)
Gear	: 3GR
Stop lamp switch	: OFF
Vehicle speed	: 20 km/h (13 MPH) or more

4. Check the first trip DTC.

Is “P072E” detected?

- YES >> Go to [TM-164, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267924

1. MALFUNCTION CAUSE SIMULATION TEST

Refer to [GI-45, "Intermittent Incident"](#).

Is the check result normal?

- YES >> Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).
- NO >> Repair or replace the malfunctioning parts.

P072F STUCK IN 4GR

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P072F STUCK IN 4GR

DTC Logic

INFOID:000000009267925

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P072F	Stuck in Gear 4	<p>The following diagnosis conditions are met and the detection conditions continue for 0.5 seconds or more.</p> <ul style="list-style-type: none"> • Diagnosis condition - Shifting is not in progress. - Stop lamp switch OFF • Detection conditions - Deceleration: Less than – 0.35 G - Gear ratio: 6% or more, or – 6% or less compared with normal gear ratio 	<ul style="list-style-type: none"> • Low clutch solenoid valve • Control valve assembly

DTC REPRODUCTION PROCEDURE

CAUTION:

- **“[TM-165, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PREPARATION BEFORE WORK

If another “DTC CONFIRMATION PROCEDURE” occurs just before, turn the ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 5 seconds or more.

Selector lever	: D position
Gear	: 4GR
Stop lamp switch	: OFF
Vehicle speed	: 20 km/h (13 MPH) or more

4. Check the first trip DTC.

Is “P072F” detected?

- YES >> Go to [TM-165, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267926

1. MALFUNCTION CAUSE SIMULATION TEST

Refer to [GI-45, "Intermittent Incident"](#).

Is the check result normal?

- YES >> Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).
 NO >> Repair or replace the malfunctioning parts.

P0731 1GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0731 1GR INCORRECT RATIO

Description

INFOID:000000009267927

This malfunction is detected when the A/T does not shift into 1GR position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:000000009267928

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0731	Gear 1 Incorrect Ratio	Under the following diagnosis conditions, the gear ratio is 1.531 –1.593 (2GR ratio), 0.980 –1.020 (3GR ratio), or 0.683 – 0.711 (4GR ratio) continuously for 2 seconds or more. <ul style="list-style-type: none"> • Diagnosis condition - Shifting is not in progress. - Input speed: 300 rpm or more - Output speed: 300 rpm or more - Engine speed: (Input speed – 50 rpm) or more - Selector lever: D position - Gear: 1GR - Throttle position: 3/8 or more 	<ul style="list-style-type: none"> • Clutches and brakes • Hydraulic circuit • Control valve assembly
		Under the following diagnosis conditions, the gear ratio is 1.531 –1.593 (2GR ratio), 0.980 –1.020 (3GR ratio), or 0.683 – 0.711 (4GR ratio) continuously for 2 seconds or more. <ul style="list-style-type: none"> • Diagnosis condition - Shifting is not in progress. - Input speed: 300 rpm or more - Output speed: 300 rpm or more - Engine speed: (Input speed – 50 rpm) or more - Selector lever: 1 position - Throttle position: 0.7/8 or more 	<ul style="list-style-type: none"> • Clutches and brakes • Hydraulic circuit • Control valve assembly

DTC CONFIRMATION PROCEDURE

CAUTION:

- **“[TM-168. "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PREPARATION BEFORE WORK

If another “DTC CONFIRMATION PROCEDURE” occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION (CHECK 1)

Ⓜ With CONSULT

P0731 1GR INCORRECT RATIO

[4AT: RE4F03C]

< DTC/CIRCUIT DIAGNOSIS >

1. Select "1ST GR FNCTN P0731" in "DTC Work Support" in "TRANSMISSION".
2. Drive vehicle according to the following conditions.

Selector lever	: D position
Gear	: 1GR
Accelerator pedal position	: 3/8 or more
Vehicle speed	: 20 km/h (13 MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from "OUT OFCONDITION" to "TESTING".

CAUTION:

When "TESTING" is not indicated on CONSULT for a long time, check "Self Diagnostic Results" in "TRANSMISSION". When a DTC other than "P0731" is detected, check the DTC. Refer to [TM-109](#), "DTC Index".

With GST

1. Drive vehicle and maintain the following conditions for 2 seconds or more.

Selector lever	: D position
Gear	: 1GR
Accelerator pedal position	: 3/8 or more
Vehicle speed	: 20 km/h (13 MPH) or more

2. Check the first trip DTC.

Is "OUT OF CONDITION", "STOP VEHICLE", or "COMPLETED RESULT NG" displayed? / Is "P0731" detected?

YES-1 (OUT OF CONDITION.)>>Perform "step 2" again.

YES-2 (STOP VEHICLE.)>>GO TO 3.

YES-3 (COMPLETED RESULT NG)>>Go to [TM-168](#), "Diagnosis Procedure".

YES-4 ("P0731" is detected.)>>Go to [TM-168](#), "Diagnosis Procedure".

NO >> GO TO 3.

3.CHECK DTC DETECTION (CHECK 2)

With CONSULT

1. Select "1ST GR FNCTN P0731" in "DTC Work Support" in "TRANSMISSION".
2. Drive vehicle according to the following conditions.

Selector lever	: 1 position
Accelerator pedal position	: 0.7/8 or more
Vehicle speed	: 20 km/h (13 MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from "OUT OFCONDITION" to "TESTING".

CAUTION:

When "TESTING" is not indicated on CONSULT for a long time, check "Self Diagnostic Results" in "TRANSMISSION". When a DTC other than "P0731" is detected, check the DTC. Refer to [TM-109](#), "DTC Index".

With GST

1. Drive vehicle and maintain the following conditions for 2 seconds or more.

Selector lever	: 1 position
Accelerator pedal position	: 0.7/8 or more
Vehicle speed	: 20 km/h (13 MPH) or more

2. Check the first trip DTC.

Is "OUT OF CONDITION", "STOP VEHICLE" or "COMPLETED RESULT NG" displayed? / Is "P0731" detected?

YES-1 (OUT OF CONDITION.)>>Perform step 3 again.

YES-2 (STOP VEHICLE.)>>GO TO 4.

YES-3 (COMPLETED RESULT NG)>>Go to [TM-168](#), "Diagnosis Procedure".

YES-4 ("P0731" is detected.)>>Go to [TM-168](#), "Diagnosis Procedure".

P0731 1GR INCORRECT RATIO

[4AT: RE4F03C]

< DTC/CIRCUIT DIAGNOSIS >

NO >> GO TO 4.

4.CHECK SYMPTOM

1. Stop the vehicle.
2. Drive vehicle in "D" position allowing it to shift from 1GR to 4GR and check shift timing and shift shock.

>> INSPECTION END

Diagnosis Procedure

INFOID:000000009267929

1.MALFUNCTION CAUSE SIMULATION TEST

Refer to [GI-45. "Intermittent Incident"](#).

Is the check result normal?

- YES >> Replace the transaxle assembly. Refer to [TM-250. "Removal and Installation"](#).
NO >> Repair or replace the malfunctioning parts.

P0732 2GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0732 2GR INCORRECT RATIO

Description

INFOID:000000009267930

This malfunction is detected when the A/T does not shift into 2GR position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:000000009267931

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0732	Gear 2 Incorrect Ratio	Under the following diagnosis conditions, the gear ratio is 2.804 – 2.918 (1GR ratio), 0.980 – 1.020 (3GR ratio), or 0.683 – 0.711 (4GR ratio) continuously for 2 seconds or more. <ul style="list-style-type: none"> • Diagnosis condition - Shifting is not in progress. - Input speed: 300 rpm or more - Output speed: 300 rpm or more - Engine speed: (Input speed – 50 rpm) or more - Selector lever: 2 position - Gear: 2GR - Throttle position: 0.7/8.0 or more 	<ul style="list-style-type: none"> • Clutches and brakes • Hydraulic circuit • Control valve assembly

DTC CONFIRMATION PROCEDURE

CAUTION:

- **“[TM-170, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PREPARATION BEFORE WORK

If another “DTC CONFIRMATION PROCEDURE” occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Select “2ND GR FNCTN P0732” in “DTC Work Support” in “TRANSMISSION”.
2. Drive vehicle according to the following conditions.

Selector lever	: 2 position
Gear	: 2GR
Accelerator pedal position	: 0.7/8 or more
Vehicle speed	: 20 km/h (13 MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from “OUT OFCONDITION” to “TESTING”.

CAUTION:

When “TESTING” is not indicated on CONSULT for a long time, check “Self Diagnostic Results” in “TRANSMISSION”. When a DTC other than “P0732” is detected, check the DTC. Refer to [TM-109, "DTC Index"](#).

P0732 2GR INCORRECT RATIO

[4AT: RE4F03C]

< DTC/CIRCUIT DIAGNOSIS >

 With GST

1. Drive vehicle and maintain the following conditions for 2 seconds or more.

Selector lever	: 2 position
Gear	: 2GR
Accelerator pedal position	: 0.7/8 or more
Vehicle speed	: 20 km/h (13 MPH) or more

2. Check the first trip DTC.

Is "OUT OF CONDITION", "STOP VEHICLE", or "COMPLETED RESULT NG" displayed? / Is "P0732" detected?

YES-1 (OUT OF CONDITION.)>>Perform "step 2" again.

YES-2 (STOP VEHICLE.)>>GO TO 3.

YES-3 (COMPLETED RESULT NG)>>Go to [TM-170, "Diagnosis Procedure"](#).

YES-4 ("P0732" is detected.)>>Go to [TM-170, "Diagnosis Procedure"](#).

NO >> GO TO 3.

3.CHECK SYMPTOM

1. Stop the vehicle.

2. Drive vehicle in "D" position allowing it to shift from 1GR to 4GR and check shift timing and shift shock.

>> INSPECTION END

Diagnosis Procedure

INFOID:000000009267932

1.MALFUNCTION CAUSE SIMULATION TEST

Refer to [GI-45, "Intermittent Incident"](#).

Is the check result normal?

YES >> Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

NO >> Repair or replace the malfunctioning parts.

P0733 3GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0733 3GR INCORRECT RATIO

Description

INFOID:000000009267933

This malfunction is detected when the A/T does not shift into 3GR position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:000000009267934

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0733	Gear 3 Incorrect Ratio	Under the following diagnosis conditions, the gear ratio is 2.804 – 2.918 (1GR ratio), 1.531 – 1.593 (2GR ratio), or 0.683 – 0.711 (4GR ratio) continuously for 2 seconds or more. <ul style="list-style-type: none"> • Diagnosis condition - Shifting is not in progress. - Input speed: 300 rpm or more - Output speed: 300 rpm or more - Engine speed: (Input speed – 50 rpm) or more - Selector lever: D position - Gear: 3GR - Throttle position: 0.7/8.0 or more 	<ul style="list-style-type: none"> • Clutches and brakes • Hydraulic circuit • Control valve assembly

DTC CONFIRMATION PROCEDURE

CAUTION:

- **“[TM-172, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PREPARATION BEFORE WORK

If another “DTC CONFIRMATION PROCEDURE” occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Select “3RD GR FNCTN P0733” in “DTC Work Support” in “TRANSMISSION”.
2. Drive vehicle according to the following conditions.

Selector lever	: D position (O/D OFF)
Gear	: 3GR
Accelerator pedal position	: 0.7/8 or more
Vehicle speed	: 20 km/h (13 MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from “OUT OFCONDITION” to “TESTING”.

CAUTION:

When “TESTING” is not indicated on CONSULT for a long time, check “Self Diagnostic Results” in “TRANSMISSION”. When a DTC other than “P0733” is detected, check the DTC. Refer to [TM-109, "DTC Index"](#).

P0733 3GR INCORRECT RATIO

[4AT: RE4F03C]

< DTC/CIRCUIT DIAGNOSIS >

 With GST

1. Drive vehicle and maintain the following conditions for 2 seconds or more.

Selector lever	: D position (O/D OFF)
Gear	: 3GR
Accelerator pedal position	: 0.7/8 or more
Vehicle speed	: 20 km/h (13 MPH) or more

2. Check the first trip DTC.

Is "OUT OF CONDITION", "STOP VEHICLE", or "COMPLETED RESULT NG" displayed? / Is "P0733" detected?

YES-1 (OUT OF CONDITION.)>>Perform "step 2" again.

YES-2 (STOP VEHICLE.)>>GO TO 3.

YES-3 (COMPLETED RESULT NG)>>Go to [TM-172, "Diagnosis Procedure"](#).

YES-4 ("P0733" is detected.)>>Go to [TM-172, "Diagnosis Procedure"](#).

NO >> GO TO 3.

3.CHECK SYMPTOM

1. Stop the vehicle.

2. Drive vehicle in "D" position allowing it to shift from 1GR to 4GR and check shift timing and shift shock.

>> INSPECTION END

Diagnosis Procedure

INFOID:000000009267935

1.MALFUNCTION CAUSE SIMULATION TEST

Refer to [GI-45, "Intermittent Incident"](#).

Is the check result normal?

YES >> Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

NO >> Repair or replace the malfunctioning parts.

P0734 4GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0734 4GR INCORRECT RATIO

Description

INFOID:000000009267936

This malfunction is detected when the A/T does not shift into 4GR position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:000000009267937

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0734	Gear 4 Incorrect Ratio	Under the following diagnosis conditions, the gear ratio is 2.804 – 2.918 (1GR ratio), 1.531 – 1.593 (2GR ratio), or 0.980 – 1.020 (3GR ratio) continuously for 2 seconds or more. <ul style="list-style-type: none"> • Diagnosis condition - Shifting is not in progress. - Input speed: 300 rpm or more - Output speed: 300 rpm or more - Engine speed: (Input speed – 50 rpm) or more - Selector lever: D position - Gear: 4GR - Throttle position: 0.7/8.0 or more 	<ul style="list-style-type: none"> • Clutches and brakes • Hydraulic circuit • Control valve assembly

DTC CONFIRMATION PROCEDURE

CAUTION:


- **“[TM-174, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PREPARATION BEFORE WORK

If another “DTC CONFIRMATION PROCEDURE” occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Select “4TH GR FNCTN P0734” in “DTC Work Support” in “TRANSMISSION”.
2. Drive vehicle according to the following conditions.

Selector lever	: D position
Gear	: 4GR
Accelerator pedal position	: 0.7/8 or more
Vehicle speed	: 20 km/h (13 MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from “OUT OFCONDITION” to “TESTING”.

CAUTION:

When “TESTING” is not indicated on CONSULT for a long time, check “Self Diagnostic Results” in “TRANSMISSION”. When a DTC other than “P0734” is detected, check the DTC. Refer to [TM-109, "DTC Index"](#).

P0734 4GR INCORRECT RATIO

[4AT: RE4F03C]

< DTC/CIRCUIT DIAGNOSIS >

 With GST

1. Drive vehicle and maintain the following conditions for 2 seconds or more.

Selector lever	: D position
Gear	: 4GR
Accelerator pedal position	: 0.7/8 or more
Vehicle speed	: 20 km/h (13 MPH) or more

2. Check the first trip DTC.

Is "OUT OF CONDITION", "STOP VEHICLE", or "COMPLETED RESULT NG" displayed? / Is "P0734" detected?

YES-1 (OUT OF CONDITION.)>>Perform "step 2" again.

YES-2 (STOP VEHICLE.)>>GO TO 3.

YES-3 (COMPLETED RESULT NG)>>Go to [TM-174, "Diagnosis Procedure"](#).

YES-4 ("P0734" is detected.)>>Go to [TM-174, "Diagnosis Procedure"](#).

NO >> GO TO 3.

3.CHECK SYMPTOM

1. Stop the vehicle.

2. Drive vehicle in "D" position allowing it to shift from 1GR to 4GR and check shift timing and shift shock.

>> INSPECTION END

Diagnosis Procedure

INFOID:000000009267938

1.MALFUNCTION CAUSE SIMULATION TEST

Refer to [GI-45, "Intermittent Incident"](#).

Is the check result normal?

YES >> Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

NO >> Repair or replace the malfunctioning parts.

P073E UNABLE TO ENGAGE R RANGE

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P073E UNABLE TO ENGAGE R RANGE

Description

INFOID:000000009267939

This malfunction is detected when the A/T does not shift into reverse position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:000000009267940

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P073E	Unable to Engage Reverse	Under the following diagnosis conditions, the gear ratio is 2.449 or more continuously for 2 seconds or more. <ul style="list-style-type: none"> • Diagnosis condition - Shifting is not in progress. - Input speed: 300 rpm or more - Output speed: 300 rpm or more - Engine speed: (Input speed – 50 rpm) or more - Selector lever: R position - Throttle position: 0.7/8.0 or more 	<ul style="list-style-type: none"> • High clutch/low & reverse brake solenoid valve • Control valve assembly

DTC CONFIRMATION PROCEDURE

CAUTION:

- **“[TM-176, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PREPARATION BEFORE WORK

If another “DTC CONFIRMATION PROCEDURE” occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Select “R POSITION FNCTN” in “DTC & SRT confirmation” in “TRANSMISSION”.
2. Drive vehicle according to the following conditions.

Selector lever : R position
 Throttle position : 0.7/8 or more
 Vehicle speed : 5 km/h (8 MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from “OUT OFCONDITION” to “TESTING”.

CAUTION:

When “TESTING” is not indicated on CONSULT for a long time, check “Self Diagnostic Results” in “TRANSMISSION”. When a DTC other than “P073E” is detected, check the DTC. Refer to [TM-109, "DTC Index"](#).

With GST

1. Start the engine.
2. Drive vehicle and maintain the following conditions for 2 seconds or more.

P073E UNABLE TO ENGAGE R RANGE

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

Selector lever : R position
Throttle position : 0.7/8 or more
Vehicle speed : 5 km/h (8 MPH) or more

3. Check the first trip DTC.

Is "OUT OF CONDITION", "STOP VEHICLE" or "COMPLETED RESULT NG" displayed? / Is "P073E" detected?

YES-1 (OUT OF CONDITION.)>>Perform "step 2" again.

YES-2 (STOP VEHICLE.)>>INSPECTION END

YES-3 (COMPLETED RESULT NG)>>Go to [TM-176, "Diagnosis Procedure"](#).

YES-4 ("P073E" is detected.)>>Go to [TM-176, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267941

1.MALFUNCTION CAUSE SIMULATION TEST

Refer to [GI-45, "Intermittent Incident"](#).

Is the check result normal?

YES >> Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

NO >> Repair or replace the malfunctioning parts.

P073F UNABLE TO ENGAGE 1GR

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P073F UNABLE TO ENGAGE 1GR

Description

INFOID:000000009267942

This malfunction is detected when the A/T does not shift into 1GR position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:000000009267943

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P073F	Unable to Engage Gear 1	Under the following diagnosis conditions, the gear ratio is 3.033 or more continuously for 2 seconds or more. • Diagnosis condition - Shifting is not in progress. - Input speed: 300 rpm or more - Output speed: 300 rpm or more - Engine speed: (Input speed – 50 rpm) or more– - Selector lever: D position - Gear: 1st - Throttle position: 3/8 or more	• Low clutch solenoid valve • Control valve assembly
		Under the following diagnosis conditions, the gear ratio is 3.033 or more continuously for 2 seconds or more. • Diagnosis condition - Shifting is not in progress. - Input speed: 300 rpm or more - Output speed: 300 rpm or more - Engine speed: (Input speed – 50 rpm) or more - Selector lever: 1 position - Throttle position: 0.7/8 or more	• Low clutch solenoid valve • Control valve assembly

DTC CONFIRMATION PROCEDURE

CAUTION:

- **“[TM-179, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PREPARATION BEFORE WORK

If another “DTC CONFIRMATION PROCEDURE” occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION (CHECK 1)

Ⓜ With CONSULT

1. Select “1ST GR FNCTN P0731” in “DTC & SRT confirmation” in “TRANSMISSION”.

NOTE:

“1ST GR FNCTN P0731” can be used in this diagnosis.

2. Drive vehicle according to the following conditions.

P073F UNABLE TO ENGAGE 1GR

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

Selector lever	: D position
Gear	: 1GR
Accelerator pedal position	: 3/8 or more
Vehicle speed	: 5 km/h (4 MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from “OUT OFCONDITION” to “TESTING”.

CAUTION:

When “TESTING” is not indicated on CONSULT for a long time, check “Self Diagnostic Results” in “TRANSMISSION”. When a DTC other than “P073F” is detected, check the DTC. Refer to [TM-109, “DTC Index”](#).

 With GST

1. Drive vehicle and maintain the following conditions for 2 seconds or more.

Selector lever	: D position
Gear	: 1GR
Accelerator pedal position	: 3/8 or more
Vehicle speed	: 5 km/h (4 MPH) or more

2. Check the first trip DTC.

Is “OUT OF CONDITION”, “STOP VEHICLE”, or “COMPLETED RESULT NG” displayed? / Is “P073F” detected?

YES-1 (OUT OF CONDITION.)>>Perform “step 2” again.

YES-2 (STOP VEHICLE.)>>GO TO 3.

YES-3 (COMPLETED RESULT NG)>>Go to [TM-179, “Diagnosis Procedure”](#).

YES-4 (“P073F” is detected.)>>Go to [TM-179, “Diagnosis Procedure”](#).

NO >> GO TO 3.

3.CHECK DTC DETECTION (CHECK 2)

 With CONSULT

1. Select “1ST GR FNCTN P0731” in “DTC & SRT confirmation” in “TRANSMISSION”.

NOTE:

“1ST GR FNCTN P0731” can be used in this diagnosis.

2. Drive vehicle according to the following conditions.

Selector lever	: 1 position
Accelerator pedal position	: 0.7/8 or more
Vehicle speed	: 5 km/h (4 MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from “OUT OFCONDITION” to “TESTING”.

CAUTION:

When “TESTING” is not indicated on CONSULT for a long time, check “Self Diagnostic Results” in “TRANSMISSION”. When a DTC other than “P073F” is detected, check the DTC. Refer to [TM-109, “DTC Index”](#).

 With GST

1. Drive vehicle and maintain the following conditions for 2 seconds or more.

Selector lever	: 1 position
Throttle position	: 0.7/8 or more
Vehicle speed	: 5 km/h (4 MPH) or more

2. Check the first trip DTC.

Is “OUT OF CONDITION”, “STOP VEHICLE”, or “COMPLETED RESULT NG” displayed? / Is “P073F” detected?

YES-1 (OUT OF CONDITION.)>>Perform step 3 again.

YES-2 (STOP VEHICLE.)>>GO TO 4.

YES-3 (COMPLETED RESULT NG)>>Go to [TM-179, “Diagnosis Procedure”](#).

YES-4 (“P073F” is detected.)>>Go to [TM-179, “Diagnosis Procedure”](#).

P073F UNABLE TO ENGAGE 1GR

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

NO >> GO TO 4.

4.CHECK SYMPTOM

1. Stop the vehicle.
2. Drive vehicle in "D" position allowing it to shift from 1GR to 4GR and check shift timing and shift shock.

>> INSPECTION END

Diagnosis Procedure

INFOID:000000009267944

1.MALFUNCTION CAUSE SIMULATION TEST

Refer to [GI-45. "Intermittent Incident"](#).

Is the check result normal?

- YES >> Replace the transaxle assembly. Refer to [TM-250. "Removal and Installation"](#).
NO >> Repair or replace the malfunctioning parts.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

P0740 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0740 TORQUE CONVERTER

DTC Logic

INFOID:000000009267945

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0740	Torque Converter Clutch Circuit/Open	The follow diagnosis conditions are met, and the TCM torque converter clutch solenoid valve current monitor reading is 200 mA or less continuously for 0.5 seconds or more. • Diagnosis condition - Solenoid valve output current: 750 mA or more - TCM power supply voltage: 10 V < TCM power supply voltage < 16 V	<ul style="list-style-type: none"> • Harness or connector (Torque converter clutch solenoid valve circuit is open or shorted to power supply.) • Torque converter clutch solenoid valve

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 5 seconds or more.

Selector lever : D position
 Vehicle speed : 45 km/h (28 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0740" detected?

YES >> Go to [TM-180, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267946

1. CHECK CIRCUIT BETWEEN TCM AND THE A/T UNIT

1. Turn the ignition switch OFF.
2. Disconnect the TCM connector and the A/T unit connector.
3. Check the continuity between the TCM harness connector and the A/T unit harness connector.

TCM harness connector		A/T unit harness connector		Continuity
Connector	Terminal	Connector	Terminal	
F44	38	F46	18	Exists

Is the check result normal?

YES >> GO TO 2.
 NO >> Repair or replace the malfunctioning parts.

2. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE

P0740 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

Check the torque converter clutch solenoid valve. Refer to [TM-181. "Component Inspection \(Torque Converter Clutch Solenoid Valve\)"](#).

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-45. "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

Component Inspection (Torque Converter Clutch Solenoid Valve)

INFOID:000000009267947

1. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE

Check the resistance between the A/T unit connector terminal and ground.

A/T unit connector Terminal	Ground	Condition	Resistance
18	Ground	A/T fluid temperature: 20°C (68°F)	Approx. 6.1 Ω
		A/T fluid temperature: 50°C (122°F)	Approx. 6.9 Ω
		A/T fluid temperature: 80°C (176°F)	Approx. 7.7 Ω

Is the check result normal?

YES >> INSPECTION END

NO >> There is a malfunction of the torque converter clutch solenoid valve. Replace the transaxle assembly. Refer to [TM-250. "Removal and Installation"](#).

P0743 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0743 TORQUE CONVERTER

DTC Logic

INFOID:000000009267948

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0743	Torque Converter Clutch Circuit Electrical	<p>The following diagnosis conditions are met, and the TCM torque converter clutch solenoid valve current monitor reading is 200 mA or less continuously for 0.5 seconds or more.</p> <ul style="list-style-type: none"> • Diagnosis condition - Solenoid valve output current: 750 mA or more - GND short circuit diagnosis occurs in the solenoid valve drive circuit. - TCM power supply voltage: 10 V < TCM power supply voltage < 16 V 	<ul style="list-style-type: none"> • Harness or connector (Short circuit to ground in the torque converter clutch solenoid valve circuit) • Torque converter clutch solenoid valve

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 5 seconds or more.

Selector lever : D position
 Vehicle speed : 45 km/h (28 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0743" detected?

YES >> Go to [TM-182, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267949

1. CHECK CIRCUIT BETWEEN TCM AND A/T UNIT

1. Turn ignition switch OFF.
2. Disconnect the TCM connector and A/T unit connector.
3. Check the continuity between TCM harness connector and ground.

TCM harness connector		Ground	Continuity
Connector	Terminal		
F44	38	Ground	Does not exist

Is the check result normal?

YES >> GO TO 2.

P0743 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

NO >> Repair or replace the malfunctioning parts.

2.CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE

Check the torque converter clutch solenoid valve. Refer to [TM-183, "Component Inspection \(Torque Converter Clutch Solenoid Valve\)"](#).

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

Component Inspection (Torque Converter Clutch Solenoid Valve)

INFOID:000000009267950

1.CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE

Check the resistance between the A/T unit connector terminal and ground.

A/T unit connector Terminal	Ground	Condition	Resistance
18	Ground	A/T fluid temperature: 20°C (68°F)	Approx. 6.1 Ω
		A/T fluid temperature: 50°C (122°F)	Approx. 6.9 Ω
		A/T fluid temperature: 80°C (176°F)	Approx. 7.7 Ω

Is the check result normal?

YES >> INSPECTION END

NO >> There is a malfunction of the torque converter clutch solenoid valve. Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

P0744 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0744 TORQUE CONVERTER

Description

INFOID:000000009267951

This DTC is detected when the torque converter clutch solenoid valve is electrically normal but the torque converter clutch does not engage. This is not due to an electrical malfunction (circuit open or shorted), but is instead due to a mechanical malfunction (sticking of the control valve, malfunction of the solenoid, etc.).

DTC Logic

INFOID:000000009267952

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0744	Torque Converter Clutch Circuit Intermittent	The following diagnosis conditions are met, and the torque converter slip speed is at or above a set value (40 rpm + Vehicle speed / 2) continuously for 30 seconds or more. <ul style="list-style-type: none">• Diagnosis condition- Lock-up pressure difference: More than Max. lock-up pressure difference × 0.95	<ul style="list-style-type: none">• Torque converter clutch solenoid valve• Control valve assembly• Torque converter

DTC REPRODUCTION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 35 seconds or more.

Selector lever : D position
Vehicle speed : 45 km/h (28 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0744" detected?

YES >> Go to [TM-184, "Diagnosis Procedure"](#).
NO >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000009267953

1. CHECK LINE PRESSURE

Perform line pressure test. Refer to [TM-130, "Work Procedure"](#).

Is the check result normal?

YES >> GO TO 2.
NO >> Repair or replace the malfunction items.

2. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE

1. Turn ignition switch OFF.
2. Disconnect the A/T unit connector.
3. Check the torque converter clutch solenoid valve. Refer to [TM-185, "Component Inspection \(Torque Converter Clutch Solenoid Valve\)"](#).

P0744 TORQUE CONVERTER

[4AT: RE4F03C]

< DTC/CIRCUIT DIAGNOSIS >

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Repair or replace the malfunction items.

Component Inspection (Torque Converter Clutch Solenoid Valve)

INFOID:000000009267954

1. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE

Check the resistance between the A/T unit connector terminal and ground.

A/T unit connector Terminal	Ground	Condition	Resistance
18	Ground	A/T fluid temperature: 20°C (68°F)	Approx. 6.1 Ω
		A/T fluid temperature: 50°C (122°F)	Approx. 6.9 Ω
		A/T fluid temperature: 80°C (176°F)	Approx. 7.7 Ω

Is the check result normal?

YES >> INSPECTION END

NO >> There is a malfunction of the torque converter clutch solenoid valve. Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

P074A UNABLE TO ENGAGE 2GR

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P074A UNABLE TO ENGAGE 2GR

Description

INFOID:000000009267955

This malfunction is detected when the A/T does not shift into 2GR position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:000000009267956

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P074A	Unable to Engage Gear 2	Under the following diagnosis conditions, the gear ratio is 3.033 or more continuously for 2 seconds or more. <ul style="list-style-type: none">• Diagnosis condition<ul style="list-style-type: none">- Shifting is not in progress.- Input speed: 300 rpm or more- Output speed: 300 rpm or more- Engine speed: (Input speed – 50 rpm) or more- Selector lever: 2 position- Gear: 2GR- Throttle position: 0.7/8.0 or more	<ul style="list-style-type: none">• Low clutch solenoid valve• Control valve assembly

DTC CONFIRMATION PROCEDURE

CAUTION:

- **“[TM-187, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PREPARATION BEFORE WORK

If another “DTC CONFIRMATION PROCEDURE” occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Select “2ND GR FNCTN P0732” in “DTC & SRT confirmation” in “TRANSMISSION”.

NOTE:

“2ND GR FNCTN P0731” can be used in this diagnosis.

2. Drive vehicle according to the following conditions.

Selector lever	: 2 position
Gear	: 2GR
Accelerator pedal position	: 0.7/8 or more
Vehicle speed	: 5 km/h (4 MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from “OUT OFCONDITION” to “TESTING”.

CAUTION:

When “TESTING” is not indicated on CONSULT for a long time, check “Self Diagnostic Results” in “TRANSMISSION”. When a DTC other than “P074A” is detected, check the DTC. Refer to [TM-109, "DTC Index"](#).

P074A UNABLE TO ENGAGE 2GR

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

 With GST

1. Drive vehicle and maintain the following conditions for 2 seconds or more.

Selector lever	: 2 position
Gear	: 2GR
Accelerator pedal position	: 0.7/8 or more
Vehicle speed	: 5 km/h (4 MPH) or more

2. Check the first trip DTC.

Is "OUT OF CONDITION", "STOP VEHICLE", or "COMPLETED RESULT NG" displayed? / Is "P074A" detected?

YES-1 (OUT OF CONDITION.)>>Perform "step 2" again.

YES-2 (STOP VEHICLE.)>>GO TO 3.

YES-3 (COMPLETED RESULT NG)>>Go to [TM-187, "Diagnosis Procedure"](#).

YES-4 ("P074A" is detected.)>>Go to [TM-187, "Diagnosis Procedure"](#).

NO >> GO TO 3.

3.CHECK SYMPTOM

1. Stop the vehicle.

2. Drive vehicle in "D" position allowing it to shift from 1GR to 4GR and check shift timing and shift shock.

>> INSPECTION END

Diagnosis Procedure

INFOID:000000009267957

1.MALFUNCTION CAUSE SIMULATION TEST

Refer to [GI-45, "Intermittent Incident"](#).

Is the check result normal?

YES >> Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

NO >> Repair or replace the malfunctioning parts.

P074B UNABLE TO ENGAGE 3GR

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P074B UNABLE TO ENGAGE 3GR

Description

INFOID:000000009267958

This malfunction is detected when the A/T does not shift into 3GR position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:000000009267959

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P074B	Unable to Engage Gear 3	Under the following diagnosis conditions, the gear ratio is 3.033 or more continuously for 2 seconds or more. <ul style="list-style-type: none">• Diagnosis condition<ul style="list-style-type: none">- Shifting is not in progress.- Input speed: 300 rpm or more- Output speed: 300 rpm or more- Engine speed: (Input speed – 50 rpm) or more- Selector lever: D position- Gear: 3GR- Throttle position: 0.7/8.0 or more	<ul style="list-style-type: none">• Low clutch solenoid valve• Control valve assembly

DTC CONFIRMATION PROCEDURE

CAUTION:

- **“[TM-189, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PREPARATION BEFORE WORK

If another “DTC CONFIRMATION PROCEDURE” occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓟ With CONSULT

1. Select “3RD GR FNCTN P0733” in “DTC & SRT confirmation” in “TRANSMISSION”.

NOTE:

“3RD GR FNCTN P0731” can be used in this diagnosis.

2. Drive vehicle according to the following conditions.

Selector lever	: D position (O/D OFF)
Gear	: 3GR
Accelerator pedal position	: 0.7/8 or more
Vehicle speed	: 20 km/h (13 MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from “OUT OFCONDITION” to “TESTING”.

CAUTION:

When “TESTING” is not indicated on CONSULT for a long time, check “Self Diagnostic Results” in “TRANSMISSION”. When a DTC other than “P074B” is detected, check the DTC. Refer to [TM-109, "DTC Index"](#).

P074B UNABLE TO ENGAGE 3GR

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

 With GST

1. Drive vehicle and maintain the following conditions for 2 seconds or more.

Selector lever	: D position (O/D OFF)
Gear	: 3GR
Accelerator pedal position	: 0.7/8 or more
Vehicle speed	: 20 km/h (13 MPH) or more

2. Check the first trip DTC.

Is "OUT OF CONDITION", "STOP VEHICLE", or "COMPLETED RESULT NG" displayed? / Is "P074B" detected?

YES-1 (OUT OF CONDITION.)>>Perform "step 2" again.

YES-2 (STOP VEHICLE.)>>GO TO 3.

YES-3 (COMPLETED RESULT NG)>>Go to [TM-189, "Diagnosis Procedure"](#).

YES-4 ("P074B" is detected.)>>Go to [TM-189, "Diagnosis Procedure"](#).

NO >> GO TO 3.

3.CHECK SYMPTOM

1. Stop the vehicle.

2. Drive vehicle in "D" position allowing it to shift from 1GR to 4GR and check shift timing and shift shock.

>> INSPECTION END

Diagnosis Procedure

INFOID:000000009267960

1.MALFUNCTION CAUSE SIMULATION TEST

Refer to [GI-45, "Intermittent Incident"](#).

Is the check result normal?

YES >> Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

NO >> Repair or replace the malfunctioning parts.

P074C UNABLE TO ENGAGE 4GR

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P074C UNABLE TO ENGAGE 4GR

Description

INFOID:000000009267961

This malfunction is detected when the A/T does not shift into 4GR position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:000000009267962

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P074C	Unable to Engage Gear 4	Under the following diagnosis conditions, the gear ratio is 1.060 or more continuously for 2 seconds or more. <ul style="list-style-type: none">• Diagnosis condition<ul style="list-style-type: none">- Shifting is not in progress.- Input speed: 300 rpm or more- Output speed: 300 rpm or more- Engine speed: (Input speed – 50 rpm) or more- Selector lever: D position- Gear: 4GR- Throttle position: 0.7/8.0 or more	<ul style="list-style-type: none">• High clutch/low & reverse brake solenoid valve• 2-4 brake solenoid valve• Control valve assembly

DTC CONFIRMATION PROCEDURE

CAUTION:

- **“[TM-191, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PREPARATION BEFORE WORK

If another “DTC CONFIRMATION PROCEDURE” occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓟ With CONSULT

1. Select “4TH GR FNCTN P0734” in “DTC & SRT confirmation” in “TRANSMISSION”.

NOTE:

“4TH GR FNCTN P0731” can be used in this diagnosis.

2. Drive vehicle according to the following conditions.

Selector lever	: D position
Gear	: 4GR
Accelerator pedal position	: 0.7/8 or more
Vehicle speed	: 20 km/h (13MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from “OUT OFCONDITION” to “TESTING”.

CAUTION:

When “TESTING” is not indicated on CONSULT for a long time, check “Self Diagnostic Results” in “TRANSMISSION”. When a DTC other than “P074C” is detected, check the DTC. Refer to [TM-109, "DTC Index"](#).

P074C UNABLE TO ENGAGE 4GR

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

 With GST

1. Drive vehicle and maintain the following conditions for 2 seconds or more.

Selector lever	: D position
Gear	: 4GR
Accelerator pedal position	: 0.7/8 or more
Vehicle speed	: 20 km/h (13MPH) or more

2. Check the first trip DTC.

Is "OUT OF CONDITION", "STOP VEHICLE" or "COMPLETED RESULT NG" displayed? / Is "P074C" detected?

YES-1 (OUT OF CONDITION.)>>Perform "step 2" again.

YES-2 (STOP VEHICLE.)>>GO TO 3.

YES-3 (COMPLETED RESULT NG)>>Go to [TM-191, "Diagnosis Procedure"](#).

YES-4 ("P074C" is detected.)>>Go to [TM-191, "Diagnosis Procedure"](#).

NO >> GO TO 3.

3.CHECK SYMPTOM

1. Stop the vehicle.

2. Drive vehicle in "D" position allowing it to shift from 1GR to 4GR and check shift timing and shift shock.

>> INSPECTION END

Diagnosis Procedure

INFOID:000000009267963

1.MALFUNCTION CAUSE SIMULATION TEST

Refer to [GI-45, "Intermittent Incident"](#).

Is the check result normal?

YES >> Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

NO >> Repair or replace the malfunctioning parts.

P0863 TCM COMMUNICATION

Description

INFOID:000000009267964

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H and CAN-L) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000009267965

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0863	TCM Communication Circuit	When detecting error during the initial diagnosis of CAN controller to TCM.	Harness or connectors (CAN communication line is open or shorted.)

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn the ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Start engine and wait for at least 10 seconds.
2. Check DTC.

Is "P0863" detected?

- YES >> Go to [TM-192, "Diagnosis Procedure"](#).
- NO >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000009267966

1. CHECK CAN COMMUNICATION CIRCUIT

Ⓜ With CONSULT

1. Start the engine.
2. Check DTC.

Is "P0863" indicated?

- YES >> Replace the TCM. Refer to [TM-241, "Removal and Installation"](#).
- NO >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

P0890 TCM

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0890 TCM

DTC Logic

INFOID:000000009267967

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0890	Transmission Control Module Power Relay Sense Circuit Low	Under the following diagnosis conditions, the battery voltage supplied to the TCM is less than 8.4V continuously for 0.2 seconds or more. • Diagnosis condition - TCM power supply voltage: More than 11 V	Harness or connector (TCM power supply circuit is open or shorted.)

DTC REPRODUCTION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Check the first trip DTC.

Is "P0890" detected?

- YES >> Go to [TM-193, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267968

1. CHECK TCM BATTERY VOLTAGE CIRCUIT

1. Turn the ignition switch ON.
2. Disconnect the TCM connector.
3. Disconnect the IPDM E/R connector.
4. Check the continuity between the TCM harness connector and the IPDM E/R harness connector.

TCM harness connector		IPDM E/R harness connector		Continuity
Connector	Terminal	Connector	Terminal	
F44	47	E45	21	Exists
	48			

Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
NO >> GO TO 2.

2. DETECTION OF MALFUNCTION ITEMS

10 A fuse (#49, IPDM E/R). Refer to [PG-62, "IPDM E/R Terminal Arrangement"](#).

Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
NO >> Repair or replace the malfunctioning parts.

P0962 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0962 PRESSURE CONTROL SOLENOID A

DTC Logic

INFOID:000000009267969

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0962	Pressure Control Solenoid "A" Control Circuit Low	<p>The following diagnosis conditions are met, and the current monitor reading of the TCM line pressure solenoid valve is 200 mA or less continuously for 0.5 seconds or more.</p> <ul style="list-style-type: none"> • Diagnosis condition - Solenoid valve output current: 750 mA or more - GND short circuit diagnosis occurs in the solenoid valve drive circuit. - TCM power supply voltage: 10 V < TCM power supply voltage < 16 V 	<ul style="list-style-type: none"> • Harness or connector (Short circuit to ground in the line pressure solenoid valve circuit) • Line pressure solenoid valve

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Maintain the following conditions for 5 seconds or more.

Selector lever : N position
 Engine speed : Idle speed

3. Check the first trip DTC.

Is "P0962" detected?

YES >> Go to [TM-194, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267970

1. CHECK CIRCUIT BETWEEN TCM AND A/T UNIT

1. Turn ignition switch OFF.
2. Disconnect the TCM connector and A/T unit connector.
3. Check the continuity between TCM harness connector and ground.

TCM harness connector		Ground	Continuity
Connector	Terminal		
F44	37	Ground	Does not exist

Is the check result normal?

YES >> GO TO 2.
 NO >> Repair or replace the malfunctioning parts.

2. CHECK LINE PRESSURE SOLENOID VALVE

P0962 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

Check the line pressure solenoid valve. Refer to [TM-195. "Component Inspection \(Line Pressure Solenoid Valve\)"](#).

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-45. "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

Component Inspection (Line Pressure Solenoid Valve)

INFOID:000000009267971

1. CHECK LINE PRESSURE SOLENOID VALVE

Check the resistance between the A/T unit connector and ground.

A/T unit connector Terminal	Ground	Condition	Resistance
13	Ground	A/T fluid temperature: 20°C (68°F)	Approx. 6.1 Ω
		A/T fluid temperature: 50°C (122°F)	Approx. 6.9 Ω
		A/T fluid temperature: 80°C (176°F)	Approx. 7.7 Ω

Is the check result normal?

YES >> INSPECTION END

NO >> There is a malfunction of line pressure solenoid valve. Replace the transaxle assembly. Refer to [TM-250. "Removal and Installation"](#).

P0963 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0963 PRESSURE CONTROL SOLENOID A

DTC Logic

INFOID:000000009267972

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0963	Pressure Control Solenoid "A" Control Circuit High	The following diagnosis conditions are met, and the current monitor reading of the TCM line pressure solenoid valve is 200 mA or less continuously for 0.5 seconds or more. <ul style="list-style-type: none">• Diagnosis condition<ul style="list-style-type: none">- Solenoid valve output current: 750 mA or more- TCM power supply voltage: 10 V < TCM power supply voltage < 16 V	<ul style="list-style-type: none">• Harness or connector (Line pressure solenoid valve circuit is open or shorted to power supply.)• Line pressure solenoid valve

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Maintain the following conditions for 5 seconds or more.

Selector lever : N position
Engine speed : Idle speed

3. Check the first trip DTC.

Is "P0963" detected?

YES >> Go to [TM-196, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267973

1. CHECK CIRCUIT BETWEEN TCM AND A/T UNIT

1. Turn the ignition switch OFF.
2. Disconnect the TCM connector and A/T unit connector.
3. Check the continuity between the TCM harness connector and the A/T unit harness connector.

TCM harness connector		A/T unit harness connector		Continuity
Connector	Terminal	Connector	Terminal	
F44	37	F46	13	Exists

Is the check result normal?

YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

2. CHECK LINE PRESSURE SOLENOID VALVE

Check the line pressure solenoid valve. Refer to [TM-195, "Component Inspection \(Line Pressure Solenoid Valve\)"](#).

P0963 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

Component Inspection (Line Pressure Solenoid Valve)

INFOID:000000009267974

1. CHECK LINE PRESSURE SOLENOID VALVE

Check the resistance between the A/T unit connector and ground.

A/T unit connector Terminal	Ground	Condition	Resistance
13	Ground	A/T fluid temperature: 20°C (68°F)	Approx. 6.1 Ω
		A/T fluid temperature: 50°C (122°F)	Approx. 6.9 Ω
		A/T fluid temperature: 80°C (176°F)	Approx. 7.7 Ω

Is the check result normal?

YES >> INSPECTION END

NO >> There is a malfunction of line pressure solenoid valve. Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

P0973 SHIFT SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0973 SHIFT SOLENOID A

DTC Logic

INFOID:000000009267975

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0973	Shift Solenoid "A" Control Circuit Low	The following diagnosis conditions are met, and the TCM select switch ON-OFF solenoid valve monitor value is ON continuously for 0.5 seconds or more. <ul style="list-style-type: none">• Diagnosis condition<ul style="list-style-type: none">- select switch ON-OFF solenoid valve: OFF- TCM power supply voltage: 10 V < TCM power supply voltage < 16 V	<ul style="list-style-type: none">• Harness or connector (Short circuit to ground in the select switch ON-OFF solenoid valve circuit)• Select switch ON-OFF solenoid valve

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Maintain the following conditions for 5 seconds or more.

Selector lever : N position ⇒ R position

3. Check the first trip DTC.

Is "P0973" detected?

- YES >> Go to [TM-198, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267976

1. CHECK CIRCUIT BETWEEN TCM AND A/T UNIT

1. Turn the ignition switch OFF.
2. Disconnect the TCM connector and A/T unit connector.
3. Check the continuity between TCM harness connector and ground.

TCM harness connector		Ground	Continuity
Connector	Terminal		
F44	1	Ground	Does not exist

Is the check result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

2. CHECK SELECT SWITCH ON-OFF SOLENOID VALVE

Check the select switch ON-OFF solenoid valve. Refer to [TM-199, "Component Inspection \(Select Switch ON-OFF Solenoid Valve\)"](#).

P0973 SHIFT SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-45. "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

Component Inspection (Select Switch ON-OFF Solenoid Valve)

INFOID:000000009267977

1. CHECK SELECT SWITCH ON-OFF SOLENOID VALVE

Check the resistance between the A/T unit connector and ground.

A/T unit connector Terminal	Ground	Condition	Resistance
19	Ground	A/T fluid temperature: 20°C (68°F)	Approx. 27 Ω
		A/T fluid temperature: 50°C (122°F)	Approx. 31 Ω
		A/T fluid temperature: 80°C (176°F)	Approx. 35 Ω

Is the check result normal?

YES >> INSPECTION END

NO >> There is a malfunction of select switch ON-OFF solenoid valve. Replace the transaxle assembly.
Refer to [TM-250. "Removal and Installation"](#).

P0974 SHIFT SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0974 SHIFT SOLENOID A

DTC Logic

INFOID:000000009267978

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0974	Shift Solenoid "A" Control Circuit High	The following diagnosis conditions are met, and the TCM select switch ON-OFF solenoid valve monitor value is OFF continuously for 0.5 seconds or more. • Diagnosis condition - Select switch ON-OFF solenoid valve: ON - TCM power supply voltage: 10 V < TCM power supply voltage < 16 V	<ul style="list-style-type: none">• Harness or connector (Select switch ON-OFF solenoid valve circuit is open or shorted to power supply)• Select switch ON-OFF solenoid valve

DTC REPRODUCTION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Maintain the following conditions for 5 seconds or more.

Selector lever : N position ⇒ R position

3. Check the first trip DTC.

Is "P0974" detected?

- YES >> Go to [TM-200, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267979

1. CHECK CIRCUIT BETWEEN TCM AND A/T UNIT

1. Turn ignition switch OFF.
2. Disconnect the TCM connector and A/T unit connector.
3. Check the continuity between the TCM harness connector and the A/T unit harness connector.

TCM harness connector		A/T unit harness connector		Continuity
Connector	Terminal	Connector	Terminal	
F44	1	F46	19	Exists

Is the check result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

2. CHECK SELECT SWITCH ON-OFF SOLENOID VALVE

Check the select switch ON-OFF solenoid valve. Refer to [TM-201, "Component Inspection \(Select Switch ON-OFF Solenoid Valve\)"](#).

Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

P0974 SHIFT SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

NO >> Repair or replace the malfunctioning parts.

Component Inspection (Select Switch ON-OFF Solenoid Valve)

INFOID:000000009267980

1. CHECK SELECT SWITCH ON-OFF SOLENOID VALVE

Check the resistance between the A/T unit connector and ground.

A/T unit connector Terminal	Ground	Condition	Resistance
19	Ground	A/T fluid temperature: 20°C (68°F)	Approx. 27 Ω
		A/T fluid temperature: 50°C (122°F)	Approx. 31 Ω
		A/T fluid temperature: 80°C (176°F)	Approx. 35 Ω

Is the check result normal?

YES >> INSPECTION END

NO >> There is a malfunction of select switch ON-OFF solenoid valve. Replace the transaxle assembly.
Refer to [TM-250, "Removal and Installation"](#).

P0976 SHIFT SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0976 SHIFT SOLENOID B

DTC Logic

INFOID:000000009267981

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0976	Shift Solenoid B Control Circuit Low	<p>The following diagnosis conditions are met, and the TCM low clutch solenoid valve current monitor reading is 200 mA or less continuously for 0.5 seconds or more.</p> <ul style="list-style-type: none"> • Diagnosis condition - Solenoid valve output current: 750 mA or more - GND short circuit diagnosis occurs in the solenoid valve drive circuit. - TCM power supply voltage: 10 V < TCM power supply voltage < 16 V 	<ul style="list-style-type: none"> • Harness or connector (Short circuit to ground in the low clutch solenoid valve circuit) • Low clutch solenoid valve

DTC REPRODUCTION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 5 seconds or more.

Selector lever	: D position
Gear	: 1GR, 2GR, 3GR
Vehicle speed	: 5 km/h (4 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0976" detected?

YES >> Go to [TM-210, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267982

1. CHECK CIRCUIT BETWEEN TCM AND A/T UNIT

1. Turn the ignition switch OFF.
2. Disconnect the TCM connector and A/T unit connector.
3. Check the continuity between TCM harness connector and ground.

TCM harness connector		Ground	Continuity
Connector	Terminal		
F44	30	Ground	Does not exist

Is the check result normal?

YES >> GO TO 2.

P0976 SHIFT SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

NO >> Repair or replace the malfunctioning parts.

2.CHECK LOW CLUTCH SOLENOID VALVE

Check the low clutch solenoid valve. Refer to [TM-203, "Component Inspection \(Low Clutch Solenoid Valve\)"](#).

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

Component Inspection (Low Clutch Solenoid Valve)

INFOID:000000009267983

1.CHECK LOW CLUTCH SOLENOID VALVE

Check the resistance between the A/T unit connector and ground.

A/T unit connector Terminal	Ground	Condition	Resistance
6	Ground	A/T fluid temperature: 20°C (68°F)	Approx. 6.2 Ω
		A/T fluid temperature: 50°C (122°F)	Approx. 7.0 Ω
		A/T fluid temperature: 80°C (176°F)	Approx. 7.8 Ω

Is the check result normal?

YES >> INSPECTION END

NO >> There is a malfunction of the low clutch solenoid valve. Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

P0977 SHIFT SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0977 SHIFT SOLENOID B

DTC Logic

INFOID:000000009267984

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0977	Shift Solenoid B Control Circuit High	The following diagnosis conditions are met, and the TCM low clutch solenoid valve current monitor reading is 200 mA or less continuously for 0.5 seconds or more. <ul style="list-style-type: none">• Diagnosis condition- Solenoid valve output current: 750 mA or more- TCM power supply voltage: 10 V < TCM power supply voltage < 16 V	<ul style="list-style-type: none">• Harness or connector (Low clutch solenoid valve circuit is open or shorted to power supply.)• Low clutch solenoid valve

DTC REPRODUCTION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 5 seconds or more.

Selector lever : D position
Gear : 1GR, 2GR, 3GR
Vehicle speed : 5 km/h (4 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0977" detected?

YES >> Go to [TM-212, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267985

1. CHECK CIRCUIT BETWEEN TCM AND A/T UNIT

1. Turn ignition switch OFF.
2. Disconnect the TCM connector and A/T unit connector.
3. Check the continuity between the TCM harness connector and the A/T unit harness connector.

TCM harness connector		A/T unit harness connector		Continuity
Connector	Terminal	Connector	Terminal	
F44	30	F46	6	Exists

Is the check result normal?

YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

P0977 SHIFT SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

2. CHECK LOW CLUTCH SOLENOID VALVE

Check the low clutch solenoid valve. Refer to [TM-205, "Component Inspection \(Low Clutch Solenoid Valve\)"](#).
Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
- NO >> Repair or replace the malfunctioning parts.

Component Inspection (Low Clutch Solenoid Valve)

INFOID:000000009267986

1. CHECK LOW CLUTCH SOLENOID VALVE

Check the resistance between the A/T unit connector and ground.

A/T unit connector Terminal	Ground	Condition	Resistance
6	Ground	A/T fluid temperature: 20°C (68°F)	Approx. 6.2 Ω
		A/T fluid temperature: 50°C (122°F)	Approx. 7.0 Ω
		A/T fluid temperature: 80°C (176°F)	Approx. 7.8 Ω

Is the check result normal?

- YES >> INSPECTION END
- NO >> There is a malfunction of the low clutch solenoid valve. Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

P0979 SHIFT SOLENOID C

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0979 SHIFT SOLENOID C

DTC Logic

INFOID:000000009267987

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0979	Shift Solenoid C Control Circuit Low	<p>The following diagnosis conditions are met, and the current monitor reading of the TCM 2-4 brake solenoid valve is 200 mA or less continuously for 0.5 seconds or more.</p> <ul style="list-style-type: none"> • Diagnosis condition - Solenoid valve output current: 750 mA or more - GND short circuit diagnosis occurs in the solenoid valve drive circuit. - TCM power supply voltage: 10 V < TCM power supply voltage < 16 V 	<ul style="list-style-type: none"> • Harness or connector (Short circuit to ground in the 2-4 brake solenoid valve circuit) • 2-4 brake solenoid valve

DTC REPRODUCTION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 5 seconds or more.

Selector lever : 2 position
 Gear : 2GR
 Vehicle speed : 20 km/h (13 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0979" detected?

YES >> Go to [TM-206, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267988

1. CHECK CIRCUIT BETWEEN TCM AND A/T UNIT

1. Turn ignition switch OFF.
2. Disconnect the TCM connector and A/T unit connector.
3. Check the continuity between TCM harness connector and ground.

TCM harness connector		Ground	Continuity
Connector	Terminal		
F44	39	Ground	Does not exist

Is the check result normal?

YES >> GO TO 2.

P0979 SHIFT SOLENOID C

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

NO >> Repair or replace the malfunctioning parts.

2.CHECK 2-4 BRAKE SOLENOID VALVE

Check the 2-4 brake solenoid valve. Refer to [TM-207, "Component Inspection \(2-4 Brake Solenoid Valve\)"](#).

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

Component Inspection (2-4 Brake Solenoid Valve)

INFOID:000000009267989

1.CHECK 2-4 BRAKE SOLENOID VALVE

Check the resistance between the A/T unit connector and ground.

A/T unit connector Terminal	Ground	Condition	Resistance
12	Ground	A/T fluid temperature: 20°C (68°F)	Approx. 6.2 Ω
		A/T fluid temperature: 50°C (122°F)	Approx. 7.0 Ω
		A/T fluid temperature: 80°C (176°F)	Approx. 7.8 Ω

Is the check result normal?

YES >> INSPECTION END

NO >> There is a malfunction of the 2-4 brake solenoid valve. Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

P0980 SHIFT SOLENOID C

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0980 SHIFT SOLENOID C

DTC Logic

INFOID:000000009267990

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0980	Shift Solenoid C Control Circuit High	The following diagnosis conditions are met, and the TCM 2-4 brake solenoid valve current monitor reading is 200 mA or less continuously for 0.5 seconds or more. <ul style="list-style-type: none">• Diagnosis condition<ul style="list-style-type: none">- Solenoid valve output current: 750 mA or more- TCM power supply voltage: 10 V < TCM power supply voltage < 16 V	<ul style="list-style-type: none">• Harness or connector (2-4 brake solenoid valve circuit is open or shorted to power source.)• 2-4 brake solenoid valve

DTC REPRODUCTION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 5 seconds or more.

Selector lever : 2 position
Gear : 2GR
Vehicle speed : 20 km/h (13 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0980" detected?

YES >> Go to [TM-212, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267991

1. CHECK CIRCUIT BETWEEN TCM AND A/T UNIT

1. Turn the ignition switch OFF.
2. Disconnect the TCM connector and A/T unit connector.
3. Check the continuity between the TCM harness connector and the A/T unit harness connector.

TCM harness connector		A/T unit harness connector		Continuity
Connector	Terminal	Connector	Terminal	
F44	39	F46	12	Exists

Is the check result normal?

YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

P0980 SHIFT SOLENOID C

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

2. CHECK 2-4 BRAKE SOLENOID VALVE

Check the 2-4 brake solenoid valve. Refer to [TM-209, "Component Inspection \(2-4 Brake Solenoid Valve\)"](#).
Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
- NO >> Repair or replace the malfunctioning parts.

Component Inspection (2-4 Brake Solenoid Valve)

INFOID:000000009267992

1. CHECK 2-4 BRAKE SOLENOID VALVE

Check the resistance between the A/T unit connector and ground.

A/T unit connector Terminal	Ground	Condition	Resistance
12	Ground	A/T fluid temperature: 20°C (68°F)	Approx. 6.2 Ω
		A/T fluid temperature: 50°C (122°F)	Approx. 7.0 Ω
		A/T fluid temperature: 80°C (176°F)	Approx. 7.8 Ω

Is the check result normal?

- YES >> INSPECTION END
- NO >> There is a malfunction of the 2-4 brake solenoid valve. Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

P0982 SHIFT SOLENOID D

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0982 SHIFT SOLENOID D

DTC Logic

INFOID:000000009267993

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0982	Shift Solenoid D Control Circuit Low	<p>The following diagnosis conditions are met, and the current monitor reading of the TCM high clutch/low & reverse brake solenoid valve is 200 mA or less continuously for 0.5 seconds or more.</p> <ul style="list-style-type: none"> • Diagnosis condition - Solenoid valve output current: 750 mA or more - GND short circuit diagnosis occurs in the solenoid valve drive circuit. - TCM power supply voltage: 10 V < TCM power supply voltage < 16 V 	<ul style="list-style-type: none"> • Harness or connector (Short circuit to ground in the high clutch/low & reverse brake solenoid valve circuit) • High clutch/low & reverse brake solenoid valve

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 5 seconds or more.

Selector lever	: D position
Gear	: 3GR, 4GR
Vehicle speed	: 45 km/h (28 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0982" detected?

- YES >> Go to [TM-210, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267994

1. CHECK CIRCUIT BETWEEN TCM AND A/T UNIT

1. Turn ignition switch OFF.
2. Disconnect the TCM connector and A/T unit connector.
3. Check the continuity between TCM harness connector and ground.

TCM harness connector		Ground	Continuity
Connector	Terminal		
F44	40	Ground	Does not exist

Is the check result normal?

P0982 SHIFT SOLENOID D

[4AT: RE4F03C]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 2.
- NO >> Repair or replace the malfunctioning parts.

2.CHECK HIGH CLUTCH/LOW & REVERSE BRAKE SOLENOID VALVE

Check the high clutch/low & reverse brake solenoid valve. Refer to [TM-211, "Component Inspection \(High Clutch Solenoid Valve\)"](#).

Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
- NO >> Repair or replace the malfunctioning parts.

Component Inspection (High Clutch Solenoid Valve)

INFOID:000000009267995

1.CHECK HIGH CLUTCH/LOW & REVERSE BRAKE SOLENOID VALVE

Check the resistance between the A/T unit connector and ground.

A/T unit connector Terminal	Ground	Condition	Resistance
7	Ground	A/T fluid temperature: 20°C (68°F)	Approx. 6.2 Ω
		A/T fluid temperature: 50°C (122°F)	Approx. 7.0 Ω
		A/T fluid temperature: 80°C (176°F)	Approx. 7.8 Ω

Is the check result normal?

- YES >> INSPECTION END
- NO >> There is a malfunction of the high clutch/low & reverse brake solenoid valve. Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

P0983 SHIFT SOLENOID D

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P0983 SHIFT SOLENOID D

DTC Logic

INFOID:000000009267996

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0983	Shift Solenoid D Control Circuit High	The following diagnosis conditions are met, and the current monitor reading of the TCM line pressure solenoid valve is 200 mA or less continuously for 0.5 seconds or more. <ul style="list-style-type: none">• Diagnosis condition- Solenoid valve output current: 750 mA or more- TCM power supply voltage: 10 V < TCM power supply voltage < 16 V	<ul style="list-style-type: none">• Harness or connector (High clutch/low & reverse brake solenoid valve circuit is open or shorted to power supply.)• High clutch/low & reverse brake solenoid valve

DTC REPRODUCTION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 5 seconds or more.

Selector lever : D position
Gear : 3GR, 4GR
Vehicle speed : 45 km/h (28 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0983" detected?

YES >> Go to [TM-212, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009267997

1. CHECK CIRCUIT BETWEEN TCM AND A/T UNIT

1. Turn ignition switch OFF.
2. Disconnect the TCM connector and A/T unit connector.
3. Check the continuity between the TCM harness connector and the A/T unit harness connector.

TCM harness connector		A/T unit harness connector		Continuity
Connector	Terminal	Connector	Terminal	
F44	40	F46	7	Exists

Is the check result normal?

YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

P0983 SHIFT SOLENOID D

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

2. CHECK HIGH CLUTCH/LOW & REVERSE BRAKE SOLENOID VALVE

Check the high clutch/low & reverse brake solenoid valve. Refer to [TM-213](#). "[Component Inspection \(High Clutch Solenoid Valve\)](#)".

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-45](#). "[Intermittent Incident](#)".

NO >> Repair or replace the malfunctioning parts.

Component Inspection (High Clutch Solenoid Valve)

INFOID:000000009267998

1. CHECK HIGH CLUTCH/LOW & REVERSE BRAKE SOLENOID VALVE

Check the resistance between the A/T unit connector and ground.

A/T unit connector Terminal	Ground	Condition	Resistance
7	Ground	A/T fluid temperature: 20°C (68°F)	Approx. 6.2 Ω
		A/T fluid temperature: 50°C (122°F)	Approx. 7.0 Ω
		A/T fluid temperature: 80°C (176°F)	Approx. 7.8 Ω

Is the check result normal?

YES >> INSPECTION END

NO >> There is a malfunction of the high clutch/low & reverse brake solenoid valve. Replace the transaxle assembly. Refer to [TM-250](#). "[Removal and Installation](#)".

P2760 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

P2760 TORQUE CONVERTER

Description

INFOID:000000009267999

This DTC is detected when the torque converter clutch solenoid valve is electrically normal but the torque converter clutch does not engage. This is not due to an electrical malfunction (circuit open or shorted), but is instead due to a mechanical malfunction (sticking of the control valve, malfunction of the solenoid, etc.).

DTC Logic

INFOID:000000009268000

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P2760	Torque Converter Clutch Pressure Control Solenoid Control Circuit Intermittent	The following diagnosis conditions are met, and the torque converter slip speed is above a set value (target slip speed + 200 rpm) continuously for 30 seconds or more. <ul style="list-style-type: none">• Diagnosis condition- Lock-up pressure difference: More than Max. lock-up pressure difference × 0.95	<ul style="list-style-type: none">• Torque converter clutch solenoid valve• Control valve assembly• Torque converter

DTC REPRODUCTION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 40 seconds or more.

Selector lever : D position
Vehicle speed : 45 km/h (28 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P2760" detected?

YES >> Go to [TM-214, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268001

1. CHECK LINE PRESSURE

Perform line pressure test. Refer to [TM-130, "Work Procedure"](#).

Is the check result normal?

YES >> GO TO 2.
NO >> Repair or replace the malfunction items.

2. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE

1. Turn the ignition switch OFF.
2. Disconnect the A/T unit connector.
3. Check the torque converter clutch solenoid valve. Refer to [TM-215, "Component Inspection \(Torque Converter Clutch Solenoid Valve\)"](#).

P2760 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Repair or replace the malfunction items.

Component Inspection (Torque Converter Clutch Solenoid Valve)

INFOID:000000009268002

1. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE

Check the resistance between the A/T unit connector terminal and ground.

A/T unit connector Terminal	Ground	Condition	Resistance
18	Ground	A/T fluid temperature: 20°C (68°F)	Approx. 6.1 Ω
		A/T fluid temperature: 50°C (122°F)	Approx. 6.9 Ω
		A/T fluid temperature: 80°C (176°F)	Approx. 7.7 Ω

Is the check result normal?

YES >> INSPECTION END

NO >> There is a malfunction of the torque converter clutch solenoid valve. Replace the transaxle assembly. Refer to [TM-250, "Removal and Installation"](#).

MAIN POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

MAIN POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000009268003

1. CHECK TCM POWER CIRCUIT 1

1. Turn the ignition switch OFF.
2. Disconnect the TCM connector.
3. Check the voltage between the TCM harness connector terminals and ground.

TCM harness connector		Ground	Voltage
Connector	Terminal		
F44	45	Ground	10 – 16

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 4.

2. CHECK TCM POWER CIRCUIT 2

Check the voltage between the TCM harness connector terminals and ground.

TCM harness connector		Ground	Condition	Voltage
Connector	Terminal			
F44	47	Ground	Ignition switch ON	10 – 16
			Ignition switch OFF	Approx. 0 V
	48		Ignition switch ON	10 – 16
			Ignition switch OFF	Approx. 0 V

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 5.

3. CHECK TCM GROUND CIRCUIT

Check the continuity between TCM harness connector terminals and ground.

TCM harness connector		Ground	Continuity
Connector	Terminal		
F44	41	Ground	Existed
	42		

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45. "Intermittent Incident"](#).
NO >> Repair or replace the malfunctioning parts.

4. DETECT MALFUNCTION ITEMS (PART 1)

Check the following items:

- Open or short circuit of the harness between battery positive terminal and TCM connectors terminal 45.
- 10A fuse [No.25, fuse block (J/B)]. Refer to [PG-60. "Terminal Arrangement"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45. "Intermittent Incident"](#).
NO >> Repair or replace the malfunctioning parts.

5. DETECT MALFUNCTION ITEMS (PART 2)

Check the following items:

- Open or short circuit of the harness between IPDM E/R harness connector terminal 21 and TCM connector terminals 47, 48.
- Harness open circuit or short circuit between the ignition switch and IPDM E/R. Refer to [PG-20. "Wiring Diagram — Ignition Power Supply —"](#).

MAIN POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

- 10A fuse [No.49, IPDM E/R]. Refer to [PG-62, "IPDM E/R Terminal Arrangement"](#).
- IPDM E/R

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

OVERDRIVE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

OVERDRIVE CONTROL SWITCH

Component Function Check

INFOID:000000009268004

1. CHECK O/D INDICATOR LAMP FUNCTION

Check O/D OFF indicator lamp turns ON for approx. 2 seconds when ignition switch turns ON.

Is the inspection results normal?

YES >> GO TO 2.

NO >> Go to [TM-220, "Diagnosis Procedure"](#).

2. CHECK O/D SWITCH FUNCTION

1. Shift the selector lever to "D" position.
2. Check that O/D OFF indicator lamp turns ON/OFF when sport mode switch is operated.

Is the inspection results normal?

YES >> INSPECTION END

NO >> Go to [TM-218, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009268005

1. CHECK OVERDRIVE CONTROL SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/T shift selector connector.
3. Turn ignition switch ON.
4. Check the voltage between A/T shift selector harness connector terminals.

A/T shift selector harness connector			Voltage
Connector	Terminal		
M38	1	2	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 3.

2. CHECK OVERDRIVE CONTROL SWITCH

Check overdrive control switch. Refer to [TM-219, "Component Inspection \(Overdrive Control Switch\)"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

3. CHECK GROUND CIRCUIT

Check the continuity between A/T shift selector harness connector terminal and ground.

A/T shift selector harness connector		Ground	Continuity
Connector	Terminal		
M38	2	Ground	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4. CHECK CIRCUIT BETWEEN COMBINATION METER AND A/T SHIFT SELECTOR (PART 1)

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check the continuity between combination meter harness connector terminal and A/T shift selector harness connector terminal.

OVERDRIVE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

Combination meter harness connector		A/T shift selector harness connector		Continuity
Connector	Terminal	Connector	Terminal	
M24	28	M38	1	Existed

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair or replace the malfunctioning parts.

5.CHECK CIRCUIT BETWEEN COMBINATION METER AND A/T SHIFT SELECTOR (PART 2)

Check the continuity between combination meter harness connector terminal and ground.

Combination meter harness connector		Ground	Continuity
Connector	Terminal		
M24	28	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Repair or replace the malfunctioning parts.

6.CHECK COMBINATION METER INPUT SIGNAL

1. Connect all of the disconnected connectors.
2. Turn ignition switch ON.
3. Select "Data Monitor" in "METER/M&A".
4. Select "O/D OFF SW".
5. Check that "O/D OFF SW" turns ON/OFF when overdrive control switch is operated. Refer to [MWI-22, "Reference Value"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
- NO >> Replace combination meter. Refer to [MWI-53, "Removal and Installation"](#).

Component Inspection (Overdrive Control Switch)

INFOID:000000009268006


1.CHECK OVERDRIVE CONTROL SWITCH

Check the continuity between wires of selector lever knob (1)

Condition	Continuity
Overdrive control switch is depressed	Existed
Overdrive control switch is released	Not existed

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Replace the selector lever knob. Refer to [TM-233, "Removal and Installation"](#).

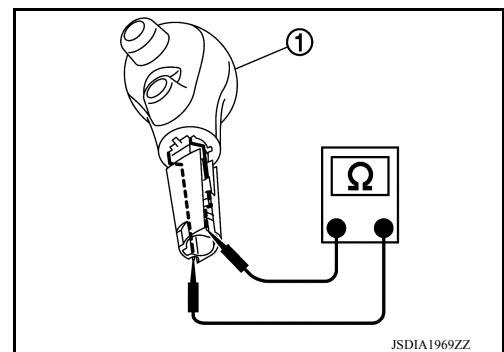

JSDIA1969ZZ

OD OFF INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

OD OFF INDICATOR LAMP

Component Function Check

INFOID:000000009268007

1. CHECK O/D OFF INDICATOR LAMP FUNCTION

Check O/D OFF indicator lamp turns ON for approx. 2 seconds when ignition switch turns ON.

Is the inspection results normal?

- YES >> INSPECTION END
- NO >> Go to [TM-220, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009268008

1. CHECK DTC (TCM)

Ⓟ With CONSULT

1. Turn ignition switch ON.
2. Check "Self Diagnostic Results" in "TRANSMISSION".

Is any DTC detected?

- YES >> Check DTC detected item. Refer to [TM-109, "DTC Index"](#).
- NO >> GO TO 2.

2. CHECK DTC (COMBINATION METER)

Ⓟ With CONSULT

Check "Self Diagnostic Results" in "METER/M&A".

Is any DTC detected?

- YES >> Check DTC detected item. Refer to [MWI-25, "DTC Index"](#).
- NO >> GO TO 3.

3. CHECK COMBINATION METER INPUT SIGNAL

Ⓟ With CONSULT

1. Shift the selector lever to "D" position.
2. Select "Data Monitor" in "METER/M&A".
3. Select "O/D OFF IND".
4. Check that "O/D OFF IND" turns ON/OFF when overdrive control switch is operated. Refer to [MWI-22, "Reference Value"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-53, "Removal and Installation"](#).
- NO >> GO TO 4.

4. CHECK TCM INPUT/OUTPUT SIGNAL

Ⓟ With CONSULT

1. Select "Data Monitor" in "TRANSMISSION".
2. Select "OD CONT SW".
3. Check that "OD CONT SW" turns ON/OFF when overdrive control switch is operated. Refer to [TM-99, "Reference Value"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-53, "Removal and Installation"](#).
- NO >> Check overdrive control switch. Refer to [TM-218, "Diagnosis Procedure"](#).

SHIFT POSITION INDICATOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

SHIFT POSITION INDICATOR CIRCUIT

Component Parts Function Inspection

INFOID:000000009268009

1. CHECK SHIFT POSITION INDICATOR

1. Start the engine.
2. Shift the selector lever.
3. Check that the selector lever position and the shift position indicator on the combination meter are identical.

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Go to [TM-221, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009268010

1. CHECK TCM INPUT/OUTPUT SIGNAL

Ⓜ With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "RANGE".
4. Shift the selector lever.
5. Check that selector lever position, "RANGE" on the CONSULT screen, and shift position indicator display on the combination meter are identical.

Is the check result normal?

- YES >> INSPECTION END
NO-1 ("RANGE" is changed but is not displayed on the shift position indicator.)>>Check "Self Diagnostic Result" in "TRANSMISSION".
NO-2 ("RANGE" and shift position indicator are different.)>>Check "Self Diagnostic Result" in "TRANSMISSION".
NO-3 (Specific "RANGE" is not displayed on the shift position indicator.)>>Check "Self Diagnostic Result" in "METER/M&A".

SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

SHIFT LOCK SYSTEM

Component Function Check

INFOID:000000009268011

1. CHECK SHIFT LOCK OPERATION (BRAKE PEDAL RELEASED)

1. Ignition switch ON.
2. Attempt to shift selector lever to any position other than Park with brake pedal released.

Can the selector lever be shifted?

- YES >> Go to [TM-222, "Diagnosis Procedure"](#).
NO >> GO TO 2.

2. CHECK SHIFT LOCK OPERATION (BRAKE PEDAL APPLIED)

Attempt to shift the selector lever to any position other than Park with brake pedal applied.

Can the selector lever be shifted?

- YES >> Inspection End.
NO >> Go to [TM-222, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009268012

1. CHECK STOP LAMP SWITCH

1. Ignition switch ON.
2. Check voltage between stop lamp switch connector E13 terminal 4 and ground.

Stop lamp switch		Ground	Brake pedal	Voltage
Connector	Terminal			
E13	4	Ground	Applied	Battery voltage
			Released	0V

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 4.

2. CHECK A/T SHIFT SELECTOR

Check voltage between A/T shift selector connector M37 terminal 6 and ground.

A/T shift selector		Ground	Brake pedal	Shift selector	Voltage
Connector	Terminal				
M37	6	Ground	Applied	Park	Battery voltage
				Others	0V

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 5.

3. CHECK GROUND CIRCUIT

1. Ignition switch OFF.
2. Disconnect A/T shift selector connector.
3. Check continuity between A/T shift selector connector M37 terminal 6 and ground.

A/T shift selector		Ground	Continuity
Connector	Terminal		
M37	6	Ground	Yes

Is the inspection result normal?

- YES >> Replace A/T shift selector. Refer to [TM-233, "Removal and Installation"](#).
NO >> Repair or replace ground circuit.

SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[4AT: RE4F03C]

4. CHECK STOP LAMP SWITCH POWER CIRCUIT

Check voltage between stop lamp switch connector E13 terminal 3 and ground.

Stop lamp switch		Ground	Voltage
Connector	Terminal		
E13	3	Ground	Battery voltage

Is the inspection result normal?

YES >> Replace stop lamp switch.

NO >> Repair or replace power circuit.

5. CHECK A/T SHIFT SELECTOR POWER CIRCUIT

Check voltage between A/T shift selector connector M37 terminal 5 and ground.

A/T shift selector		Ground	Brake pedal	Voltage
Connector	Terminal			
M37	5	Ground	Applied	Battery voltage

Is the inspection result normal?

YES >> Replace A/T shift selector. Refer to [TM-233, "Removal and Installation"](#).

NO >> Repair or replace power circuit.

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[4AT: RE4F03C]

SYMPTOM DIAGNOSIS

SYSTEM SYMPTOM

Symptom Table

INFOID:000000009268013

The diagnosis item numbers show the sequence for inspection. Inspect in order from item 1.

CAUTION:

If any malfunction occurs in the RE4F03C transmission, replace the transaxle assembly.

Symptom		Vehicle condition check																																																															
		Hard									Soft																																																						
		A/T			Input signal						Output signal																																																						
											Output						Monitor			Output signal																																													
			A/T fluid level and condition			Fluid leakage			Accelerator pedal position sensor			Engine speed signal			Output speed sensor			Input speed sensor			A/T fluid temperature sensor			Stop lamp switch			Primary pressure solenoid valve			Torque converter solenoid valve			Low clutch solenoid valve			High clutch/low & reverse brake solenoid valve			2-4 brake solenoid valve			Select switch ON-OFF solenoid valve			Torque converter solenoid valve			Low clutch solenoid valve			High clutch/low & reverse brake solenoid valve			2-4 brake solenoid valve			Select switch ON-OFF solenoid valve			ECM signal receive malfunction			CAN communication		
			TM-231			TM-230			EC-85			TM-109																																																					
Poor performance	Driving performance			Shift point is high in "D" position.																		4	4																																										
				Shift point is low in "D" position.																		3	3																																										
		Larger shock when shifting gears		→ "D" position																		5	5	5	3	4	1	2	1	2	6	6																																	
				→ "R" position																		5	5	5	3	4	1	2	1	2	6	6																																	
				1GR ⇒ 2GR																		2	5	2	3	4	1	1	1	1	6	6																																	
				2GR ⇒ 3GR																		2	5	2	3	4	1	1	1	1	6	6																																	
				3GR ⇒ 4GR																		2	5	2	3	4	1	1	1	1	6	6																																	
				4GR ⇒ 3GR																		2	5	2	3	4	1	1	1	1	6	6																																	
				3GR ⇒ 2GR																		2	5	2	3	4	1	1	1	1	6	6																																	
				2GR ⇒ 1GR																		2	5	2	3	4	1	1	1	1	6	6																																	
				Downshift when accelerator pedal is depressed																		2	5	2	3	4	1	1	1	1	6	6																																	
		Upshift when accelerator pedal is released																		2	5	2	3	4	1	1	1	1	6	6																																			
Judder		Lock-up																		3	2	3	2	4	5	1	1	6	6																																				
		Lock-up																		3	2	2	4	1	1	6	6																																						

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[4AT: RE4F03C]

Symptom			Vehicle condition check																						
			Hard	Soft																					
			A/T	Input signal							Output signal														
											Output					Monitor			Output signal						
A/T fluid level and condition	Fluid leakage	Accelerator pedal position sensor	Engine speed signal	Output speed sensor	Input speed sensor	A/T fluid temperature sensor	Stop lamp switch	Primary pressure solenoid valve	Torque converter solenoid valve	Low clutch solenoid valve	High clutch/low & reverse brake solenoid valve	2-4 brake solenoid valve	Select switch ON-OFF solenoid valve	Torque converter solenoid valve	Low clutch solenoid valve	High clutch/low & reverse brake solenoid valve	2-4 brake solenoid valve	Select switch ON-OFF solenoid valve	ECM signal receive malfunction	CAN communication					
Poor performance			Strange noise			<u>TM-231</u>																			
						Noise			<u>TM-230</u>																
									<u>EC-85</u>																
			<u>TM-109</u>																						
			Fluid leakage			1																			

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[4AT: RE4F03C]

Symptom			Vehicle condition check																		
			Hard				Soft														
			A/T		Input signal								Output signal								
													Output/monitor					Output signal			
			A/T fluid level and condition	Line pressure	Accelerator pedal position sensor	Engine speed signal	Output speed sensor	Input speed sensor	A/T fluid temperature sensor	Stop lamp switch	Primary pressure solenoid valve	Torque converter solenoid valve	Low clutch solenoid valve	High clutch/low & reverse brake solenoid valve	2-4 brake solenoid valve	Select switch ON-OFF solenoid valve	ECM signal receive malfunction	CAN communication			
TM-231	TM-130	EC-85	TM-109																		
Function trouble	Gear does not change	"D" position	Locks in 1GR																		
			Locks in 2GR															1	1	1	
			Locks in 3GR			1		1	1	1				1	1	1					
			Locks in 4GR																		
			1GR → 2GR					2								1					
			2GR → 3GR												1	1	1				
			3GR → 4GR												1		1				
			4GR → 3GR					2							1		1				
			3GR → 2GR													1	1	1			
			2GR → 1GR														1				
	Does not lock-up			4	3	4	3	5	2		1							6	6		
	Poor shifting	Slip	When shifting gears	1GR ⇔ 2GR	2		4	4	4	5		1				1			3	3	
				2GR ⇔ 3GR	2		4	4	4	5		1			1	1				3	3
3GR ⇔ 4GR				2		4	4	4	5		1		1		1					3	3

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[4AT: RE4F03C]

Symptom			Vehicle condition check																			
			Hard				Soft															
			A/T		Vehi- cle		Input signal								Output signal							
															Output/monitor			Output signal				
			A/T fluid level and condition	Line pressure	Control linkage		Output speed sensor	Accelerator pedal position sensor	Engine speed signal	Input speed sensor	A/T fluid temperature sensor	Battery voltage	Transmission range switch	Stop lamp switch	Primary pressure solenoid valve	Torque converter solenoid valve	Low clutch solenoid valve	High clutch/low & reverse brake solenoid valve	2-4 brake solenoid valve	Select switch ON-OFF solenoid valve	Starter relay	ECM signal receive malfunction
TM-231	TM-130	TM-235										TM-109										
Function trou- ble	Poor power trans- mis- sion	Slip	With selector lever in "D" position, acceleration is extremely poor.	2	6	4	4	4	5			1	1			1		3	3			
			With selector lever in "R" position, acceleration is extremely poor.	2	6	4	4	4	5					1				1		3	3	
			While starting off by accelerating in 1GR, engine races.	2		4	4	4	5					1	1			1		3	3	
			While accelerating in 2GR, engine races.	2		4	4	4	5					1	1	1				3	3	
			While accelerating in 3GR, engine races.	2		4	4	4	5					1	1					3	3	
			While accelerating in 4GR, engine races.	2		4	4	4	5					1		1	1			3	3	
			Lock-up	2		4	4	4	5					1	1					3	3	
			No creep at all.	2											1	1	1	1	1			
			Extremely large creep.					1														

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[4AT: RE4F03C]

Symptom		Vehicle condition check																		
		Hard			Soft															
		A/T	Vehi- cle	Input signal										Output signal						
														Output/monitor				Output signal		
A/T fluid level and condition	Line pressure	Control linkage	Output speed sensor	Accelerator pedal position sensor	Engine speed signal	Input speed sensor	A/T fluid temperature sensor	Battery voltage	Transmission range switch	Stop lamp switch	Primary pressure solenoid valve	Torque converter solenoid valve	Low clutch solenoid valve	High clutch/low & reverse brake solenoid valve	2-4 brake solenoid valve	Select switch ON-OFF solenoid valve	Starter relay	ECM signal receive malfunction	CAN communication	
		TM-231	TM-130	TM-235																
											TM-109									
Function trouble	Power transmission cannot be performed	Vehicle cannot run in all position.	3	4						2	1	1	1	1	1					
		Driving is not possible in "D" position.	3	4						2	1	1	1	1	1					
		Driving is not possible in "R" position.	3	4						2	1					1				
		Engine does not start in "N" or "P" position.			2					1	3						4	5		
		Engine starts in position other than "N" or "P".			1						2						3	4		
		Engine stall				3	4	4				5	2	1	1	1	1	1		
		Engine stalls when selector lever shifted "N" → "D" or "R".				3	4	4									1			

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[4AT: RE4F03C]

Symptom			Vehicle condition check						
			Hard		Soft				
			A/T	Vehicle	Input signal	Output signal			
						Output/monitor			
			A/T fluid level and condition	Control linkage	Transmission range switch	Low clutch solenoid valve	High clutch/low & reverse brake solenoid valve	2-4 brake solenoid valve	Select switch ON-OFF solenoid valve
TM-231	TM-235	TM-109							
Function trouble	Poor operation	Vehicle does not enter parking condition.	1	2					
		Parking condition is not cancelled.	1	2					
		Vehicle runs with A/T in "N" position.	1	2	3	3	3	3	
		Vehicle moves forward with the "R" position.	1	2	3	3	3	3	
		Vehicle runs with A/T in "P" position.	1	2	3	3	3	3	
		Vehicle moves backward with the "D" position.	1	2		3		3	

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

PERIODIC MAINTENANCE


A/T FLUID

Inspection

INFOID:000000009268014

FLUID LEAKAGE

- Check transaxle surrounding area (oil seal and plug etc.)for fluid leakage.
- If anything is found, repair or replace damaged parts and adjust A/T fluid level. Refer to [TM-231, "Adjustment"](#).

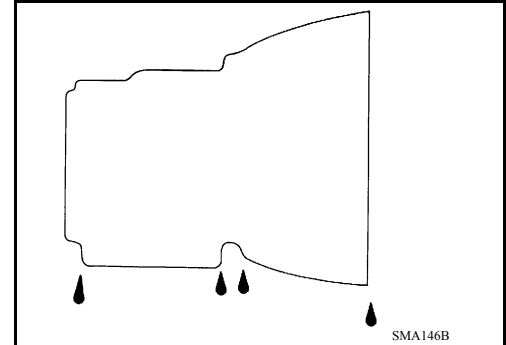

Changing

INFOID:000000009267877

- A/T fluid** : Refer to [TM-254, "General Specification"](#).
- Fluid capacity** : Refer to [TM-254, "General Specification"](#).

CAUTION:

- Use only Genuine NISSAN Matic S ATF. Do not mix with other ATF.
- Using ATF other than Genuine NISSAN Matic S ATF will cause deterioration driveability and A/T durability, and may damage the A/T, which is not covered by the warranty.
- Always use shop paper. Never use shop cloth.
- Replace a drain plug gasket with new ones at the final stage of the operation when installing.
- Use caution when looking into the drain hole as there is a risk of dripping fluid entering the eye.
- After replacement, always perform an ATF leakage check.

1. Select "Data Monitor" in "TRANSMISSION" using CONSULT.
2. Select "FLUID TEMP", and check that the A/T fluid temperature is 40 °C (104°F) or less.
3. Check that the selector lever is in the "P" position, then completely engage the parking brake.
4. Lift up the vehicle.
5. Remove the drain plug and overflow tube, and then drain the ATF from the oil pan. Refer to [TM-242, "Removal and Installation"](#).

6. Install the charging pipe set (KV311039S0) (A) into the drain hole.

CAUTION:

Tighten the charging pipe by hand.

7. Install the ATF changer hose (B) to the charging pipe.

CAUTION:

Press the ATF changer hose all the way onto the charging pipe until it stops.


8. Fill approximately 3 liters (2-5/8 Imp qt) of the ATF.
9. Remove the ATF changer hose and charging pipe, then install the drain plug.

NOTE:

Perform this work quickly because ATF leaks.

10. Lift down the vehicle.
11. Start the engine.
12. While depressing the brake pedal, shift the selector lever to the entire position from "P" to "1", and shift it to the "P" position.

NOTE:

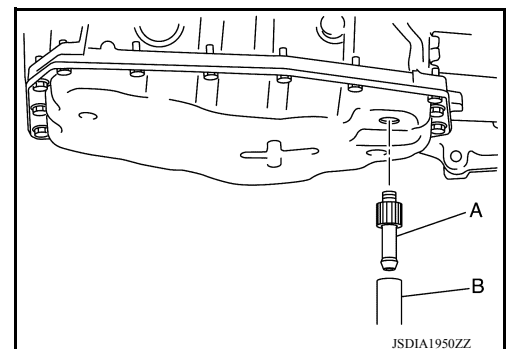

< PERIODIC MAINTENANCE >

Hold the lever at each position for 5 seconds.

13. Check that the CONSULT "Data Monitor" in "FLUID TEMP " is 35 to 45°C (95 to 113°F).
14. Stop the engine.
15. Lift up the vehicle.
16. Remove the drain plug, and then drain the ATF from the oil pan.
17. Repeat steps 6 to 16 (one time).
18. Install the overflow tube. Refer to [TM-242, "Removal and Installation"](#).

CAUTION:

Be sure to tighten to the specified torque. If it is not tightened to the specified torque, the tube may be damaged.

19. Install the charging pipe set (KV311039S0) (A) into the drain hole.

CAUTION:

Tighten the charging pipe by hand.

20. Install the ATF changer hose (B) to the charging pipe.

CAUTION:

Press the ATF changer hose all the way onto the charging pipe until it stops.

21. Fill approximately 3 liters (2-5/8 Imp qt) of the ATF.
22. Remove the ATF changer hose and charging pipe, then install the drain plug.

NOTE:

Perform this work quickly because ATF leaks.

23. Lift down the vehicle.
24. Start the engine.
25. While depressing the brake pedal, shift the selector lever to the entire position from "P" to "1", and shift it to the "P" position.

NOTE:

Hold the lever at each position for 5 seconds.

26. Check that the CONSULT "Data Monitor" in "FLUID TEMP " is 35 to 45°C (95 to 113°F).
27. Lift up the vehicle.
28. Remove the drain plug and check that ATF is drained out from the overflow tube.

CAUTION:

Perform this work with the vehicle idling.

NOTE:


If the ATF is not drained out, refer to "Adjustment" and add ATF.

29. When the flow of ATF slows to a drip, tighten the drain plug to the specified torque. Refer to [TM-242, "Removal and Installation"](#).

CAUTION:

Do not reuse drain plug gasket.

30. Lift down the vehicle.
31. Stop the engine.

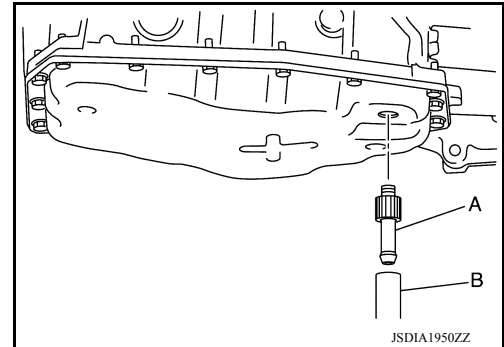

Adjustment

INFOID:000000009267878

A/T fluid : Refer to [TM-254, "General Specification"](#).

Fluid capacity : Refer to [TM-254, "General Specification"](#).

CAUTION:


- Use only Genuine NISSAN Matic S ATF. Never mix with other ATF.
- Using ATF other than Genuine NISSAN Matic S ATF will cause deterioration driveability and A/T durability, and may damage the A/T, which is not covered by the warranty.
- During adjusting of the ATF level, check CONSULT so that the fluid temperature may be maintained from 35 to 45°C (95 to 113°F).
- Use caution when looking into the drain hole as there is a risk of dripping fluid entering the eye.

A/T FLUID

< PERIODIC MAINTENANCE >

[4AT: RE4F03C]

1. Check that the selector lever is in the "P" position, then completely engage the parking brake.
2. Start the engine.
3. Adjust the ATF to be approximately 40°C (104°F).
NOTE:
The ATF is largely affected by temperature. Therefore be sure to use CONSULT and check the "FLUID TEMP" under "TRANSMISSION" in "Data Monitor" while adjusting.
4. While depressing the brake pedal, shift the selector lever to the entire position from "P" to "1", and shift it to the "P" position.
NOTE:
Hold the lever at each position for 5 seconds.
5. Lift up the vehicle.
6. Check that there is no ATF leakage.
7. Remove the drain plug. Refer to [TM-242, "Removal and Installation"](#).
8. Install the charging pipe set (KV311039S0) (A) into the drain plug hole.
CAUTION:
Tighten the charging pipe by hand.
9. Install the ATF changer hose (B) to the charging pipe.
CAUTION:
Press the ATF changer hose all the way onto the charging pipe until it stops.
10. Fill approximately 0.5 liters (1/2 Imp qt) of the ATF.
11. Remove the ATF changer hose from the charging pipe, and check that the ATF drains out from the charging pipe. If it does not drain out, perform charging again.
CAUTION:
Perform this work with the vehicle idling.
12. When the flow of ATF slows to a drip, disconnect the charging pipe from the oil pan.
13. Tighten the drain plug to the specified torque. Refer to [TM-242, "Removal and Installation"](#).
CAUTION:
Never reuse drain plug gasket.
14. Lift down the vehicle.
15. Stop the engine.

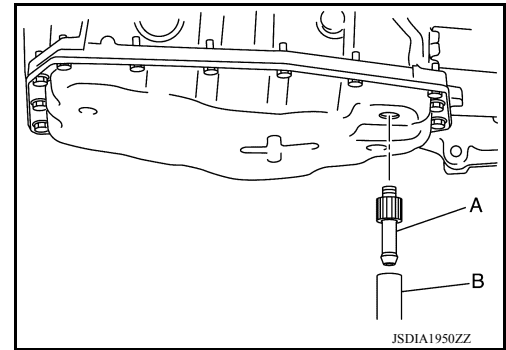

A/T SHIFT SELECTOR

< REMOVAL AND INSTALLATION >


[4AT: RE4F03C]

REMOVAL AND INSTALLATION

A/T SHIFT SELECTOR

Exploded View

INFOID:000000009268015

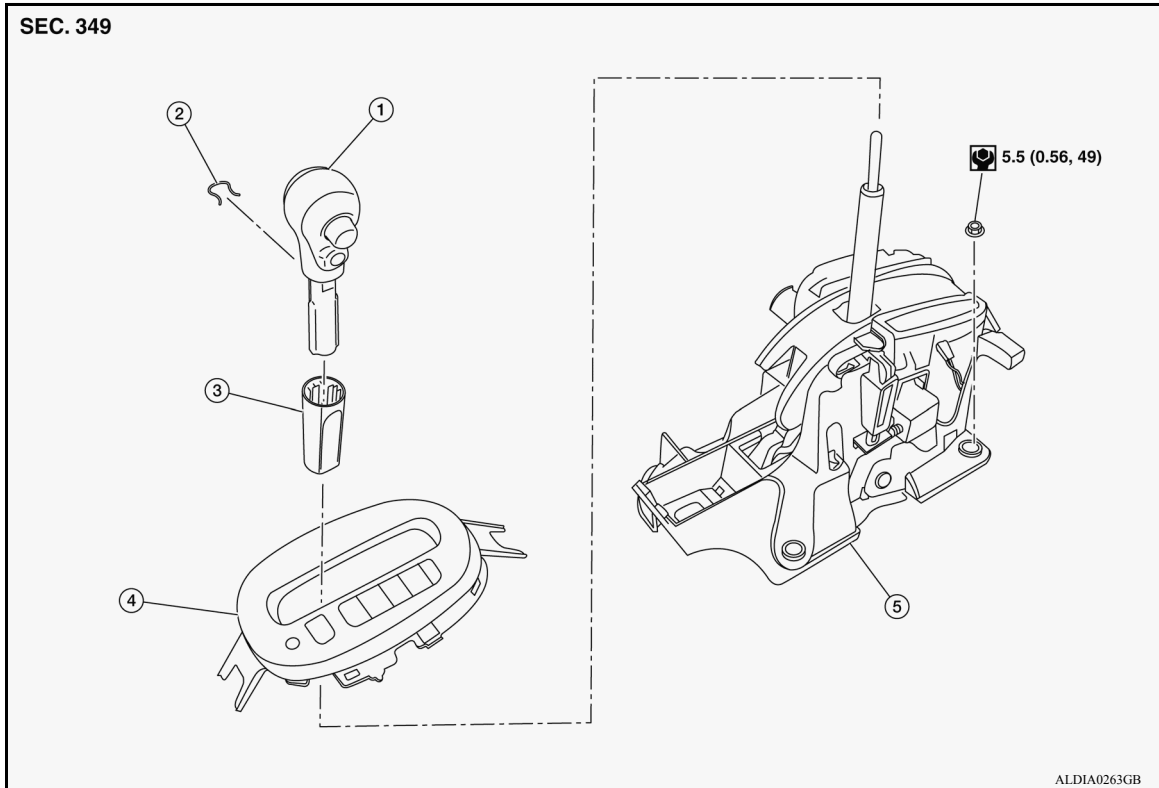

- | | | |
|------------------------------|----------------------------|--------------------------------|
| 1. Shift selector handle | 2. Lock pin | 3. Shift selector handle cover |
| 4. Position indication panel | 5. Shift selector assembly | |

Removal and Installation

INFOID:000000009268016

CAUTION:

Always apply the parking brake before performing removal and installation.

REMOVAL

1. Move the shift selector to the "N" position.
2. Remove the shift selector handle. Refer to [TM-234, "Disassembly and Assembly"](#).
3. Remove the center console. Refer to [IP-23, "Removal and Installation"](#).
4. Disconnect the harness connector from the shift selector.
5. Move the shift selector to the "P" position.
6. Remove the key interlock cable from the shift selector assembly. Refer to [TM-239, "Removal and Installation"](#).
7. Remove the control cable from the shift selector assembly. Refer to [TM-236, "Removal and Installation"](#).
8. Remove the shift selector assembly.

INSTALLATION


Installation is in the reverse order of removal.

A/T SHIFT SELECTOR

< REMOVAL AND INSTALLATION >

[4AT: RE4F03C]

- When connecting the control cable (1) to the shift selector assembly (2), face the grooved surface of the rib (A) up and insert the control cable until it stops.

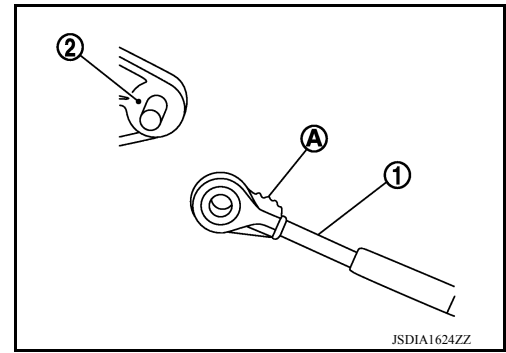


Disassembly and Assembly


INFOID:000000009268017

DISASSEMBLY

- Slide the shift selector handle cover (1) down.
CAUTION:
Do not damage the shift selector handle cover.
- Pull out the lock pin (2).
- Pull the shift selector handle (3) and shift selector handle cover upward to remove them.
- Remove the position lamp.

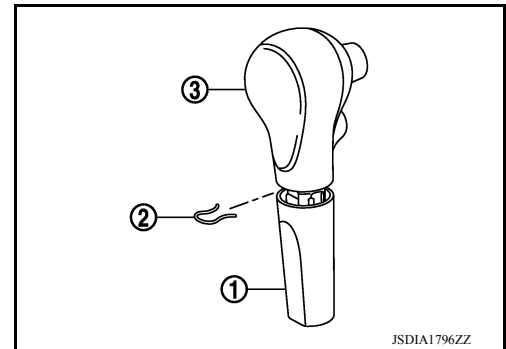


- Disengage the hooks (A) (4 locations), and lift up the position indication panel (1) to separate it from the shift selector assembly (2).
CAUTION:
Do not damage the shift selector assembly.

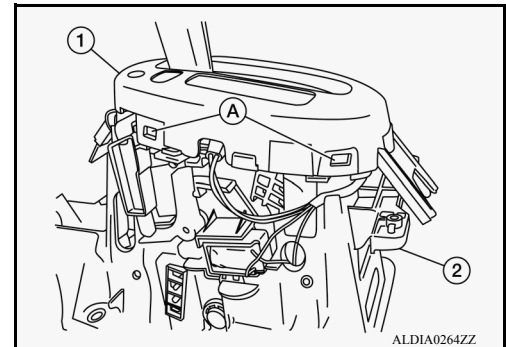

ASSEMBLY

Assembly is in the reverse order of disassembly.

- Follow the procedure below to install the shift selector handle.
- Install the lock pin (2) onto the shift selector handle (3).
 - Install the shift selector handle cover (1) onto the shift selector handle.
 - Press the shift selector handle onto the shift selector until it clicks.
CAUTION:
 - When pressing the shift selector handle onto the shift selector, do not press the shift selector handle button.
 - Do not strike the shift selector handle to install it into place.
 - After installing shift selector handle, pull the handle to check that it does not become disconnected.

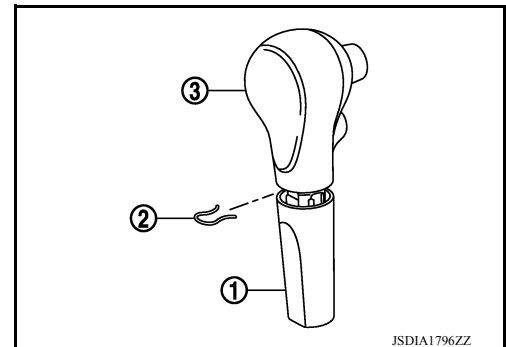

A/T SHIFT SELECTOR

< REMOVAL AND INSTALLATION >

[4AT: RE4F03C]

INFOID:00000009268018


Inspection and Adjustment

INSPECTION

1. Move the shift selector to "P" position, and turn ignition switch ON.
2. Check that shift selector can be moved to other than "P" position when brake pedal is depressed. Also check that shift selector can be moved from "P" position only when brake pedal is depressed.
3. Move the shift selector and check for excessive effort, sticking, noise or rattle.
4. Check that shift selector stops at each position with the feel of engagement when it is moved through all the positions. Check that the actual position of shift selector matches the position shown by shift position indicator and manual lever on the transaxle.
5. The method of operating shift selector to individual positions correctly should be as shown.
6. When shift selector handle button is pressed in "P", "R", "N", "D", "2" or "1" position without applying forward/backward force to shift selector, check button operation for sticking.
7. Check that back-up lamps illuminate only when shift selector is placed in the "R" position.
8. Check that back-up lamps do not illuminate when shift selector is pushed toward the "R" position when in the "P" or "N" position.
9. Check that the engine can only be started with shift selector in the "P" and "N" positions.
10. Check that transaxle is locked completely when shift selector is in "P" position.

CAUTION:


Check the lighting without pressing shift selector handle button.

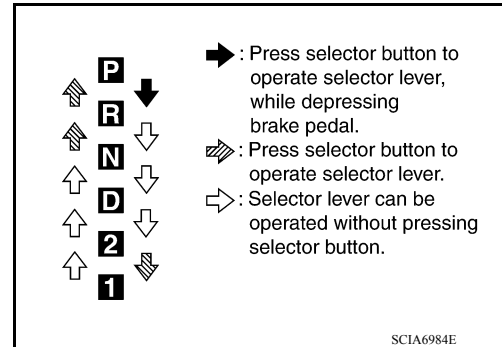

9. Check that the engine can only be started with shift selector in the "P" and "N" positions.
10. Check that transaxle is locked completely when shift selector is in "P" position.

ADJUSTMENT

1. Move shift selector to "P" position.
CAUTION:
Rotate the wheels at least a quarter turn and be certain the transaxle is locked in the "P" position.
2. Loosen the control cable nut (A).
3. Place manual lever (B) to "P" position.
CAUTION:
Do not apply force to the manual lever.
4. Tighten the control cable nut. Refer to [TM-236, "Exploded View"](#).
CAUTION:
Do not move the manual lever when tightening.

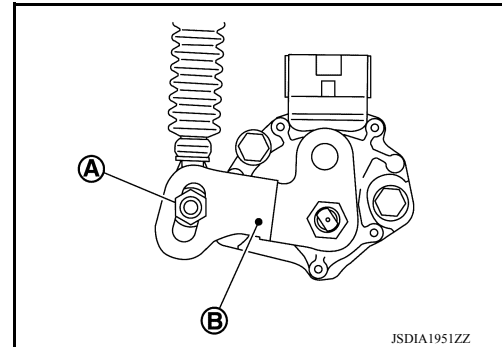

CONTROL CABLE


< REMOVAL AND INSTALLATION >

[4AT: RE4F03C]

CONTROL CABLE

Exploded View

INFOID:000000009268019

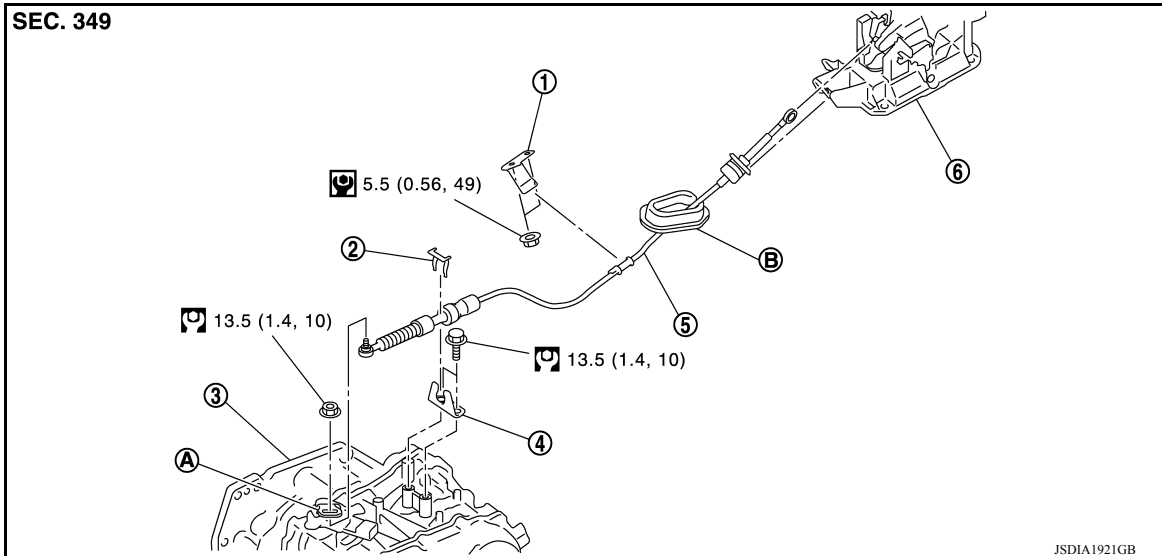

- | | | |
|-----------------|------------------|----------------------------|
| 1. Bracket B | 2. Lock plate | 3. Transaxle assembly |
| 4. Bracket A | 5. Control cable | 6. Shift selector assembly |
| A: Manual lever | B: Grommet | |

Removal and Installation


INFOID:000000009268020

CAUTION:

Always apply the parking brake before performing removal and installation.

REMOVAL

1. Remove the battery. Refer to [PG-63, "Removal and Installation"](#).
2. Remove the TCM and bracket. Refer to [TM-241, "Removal and Installation"](#).
3. Remove the IPDM E/R. Refer to [PCS-56, "Removal and Installation"](#).
4. Remove the center console. Refer to [IP-23, "Removal and Installation"](#).
5. Remove the control cable from the shift selector assembly.
6. Disengage the pawls (B) of the grommet (A), and pull downwards to remove.
7. Remove the control cable nut from the manual lever.

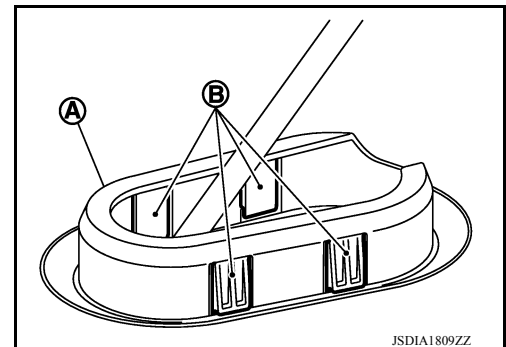


CONTROL CABLE

< REMOVAL AND INSTALLATION >

[4AT: RE4F03C]


8. Remove the lock plate (1).

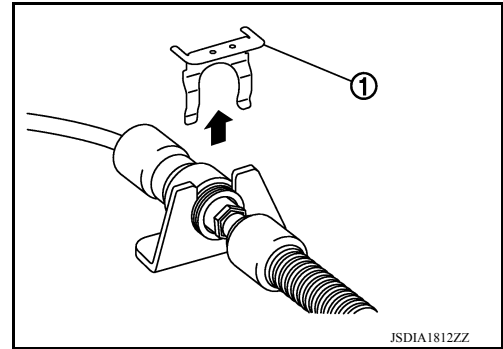

9. Lift up the heat plate.

10. Remove the control cable (1) from the bracket (2).

⇐ : Front

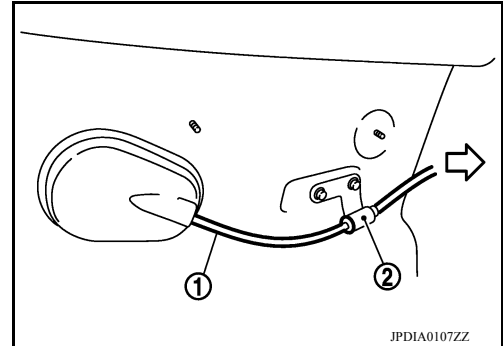

11. Remove the control cable from the vehicle.

12. Remove bracket.


INSTALLATION

Installation is in the reverse order of removal.

- From below the vehicle, press the grommet (A) into place until the pawls (B) make a click sound.


CAUTION:

Check that pulling down on the grommet does not disconnect it.

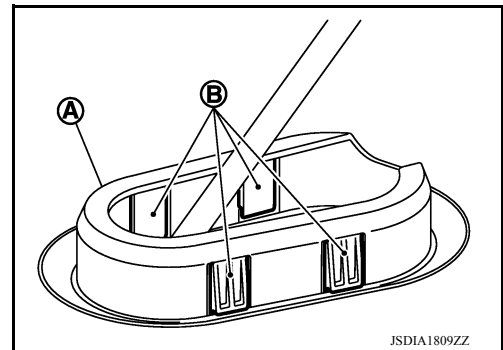

- Pay attention to the following when connecting the control cable to the shift selector.

1. When connecting the control cable (1) to the shift selector assembly (2), face the grooved surface of the rib (A) up and insert the control cable until it stops.

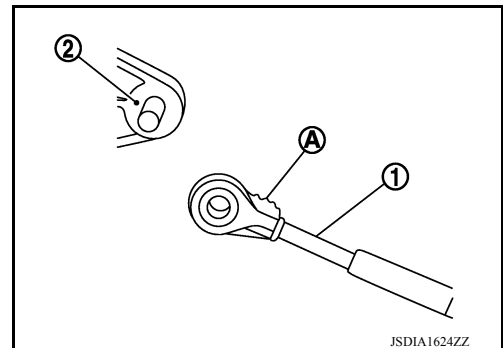

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

CONTROL CABLE


< REMOVAL AND INSTALLATION >

[4AT: RE4F03C]

2. Install the socket (A) onto the shift selector assembly.

CAUTION:

- Insert the socket into the shift selector assembly, then push it firmly in place.
- Check that pulling on the socket does not disconnect it.

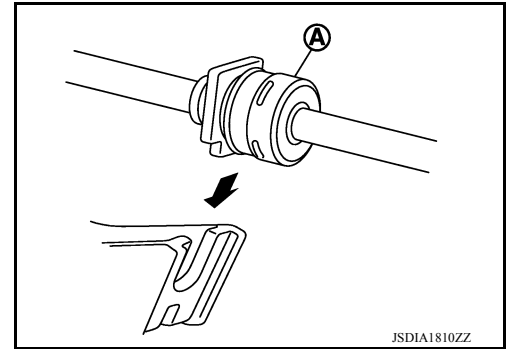

Inspection

INFOID:000000009268021

INSPECTION AFTER INSTALLATION

Check the A/T position. If a malfunction is found, adjust the A/T position. Refer to [TM-235. "Inspection and Adjustment"](#).

KEY INTERLOCK CABLE


< REMOVAL AND INSTALLATION >

[4AT: RE4F03C]

KEY INTERLOCK CABLE

Exploded View

INFOID:00000009268022

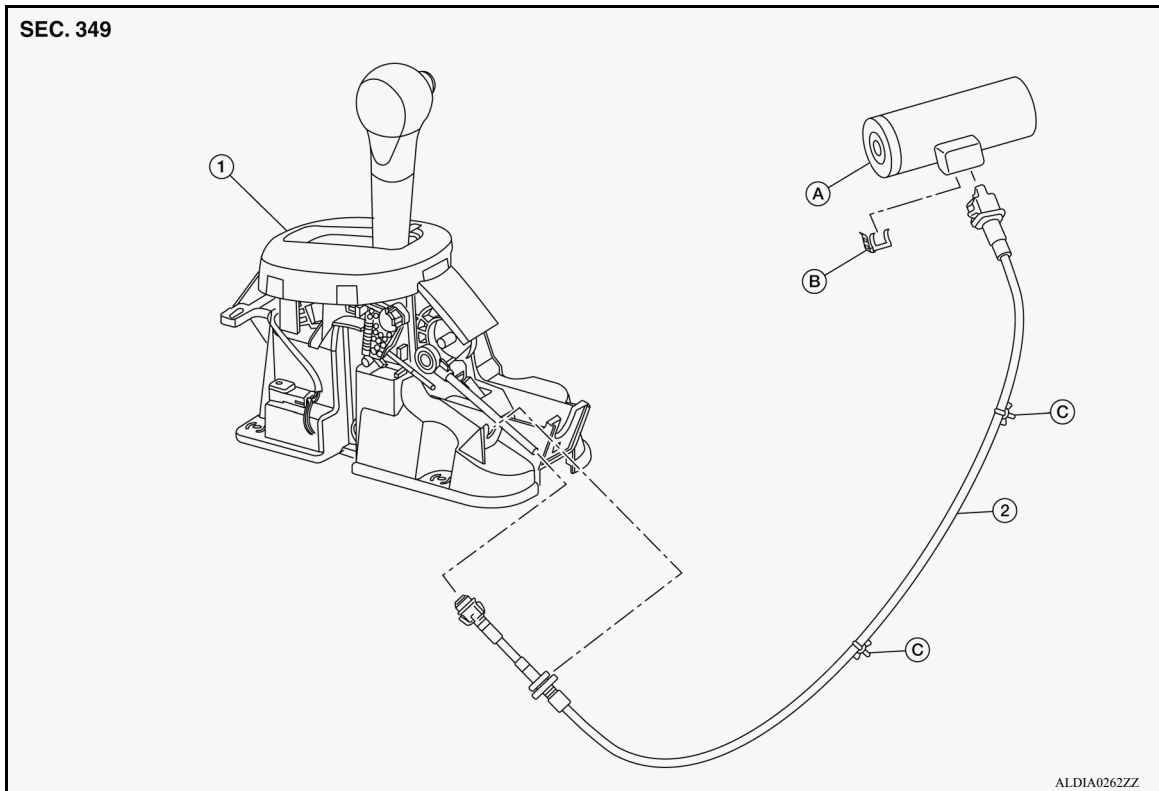

1. A/T shift selector assembly
B: Lock plate

2. Key interlock cable
C: Clip

- A: Key cylinder

Removal and Installation

INFOID:00000009268023

CAUTION:


Always apply the parking brake before performing removal and installation.

REMOVAL

1. Move the shift selector to the "N" position.
2. Remove the shift selector handle. Refer to [TM-234, "Disassembly and Assembly"](#).
3. Remove the center console. Refer to [IP-23, "Removal and Installation"](#).
4. Move the shift selector to the "P" position.
5. Press the pawls (B) of the key interlock cable slider (A) while sliding it in the direction of the casing cap (C), and separate the adjusting holder (D) and slider.

(E) : Key interlock rod

6. Remove the key interlock cable from the shift selector assembly.
7. Remove the instrument lower panel LH. Refer to [IP-20, "Removal and Installation"](#).
8. Remove the steering column upper and lower covers. Refer to [ST-9, "Exploded View"](#).
9. Remove the center console lower (if equipped). Refer to [IP-25, "Removal and Installation"](#).

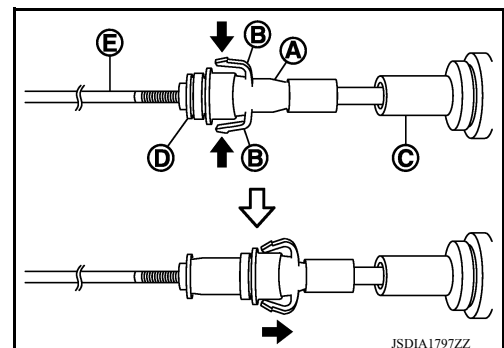

KEY INTERLOCK CABLE


< REMOVAL AND INSTALLATION >

[4AT: RE4F03C]

10. Lift lock plate (A) in the direction of the arrow (←C) and remove in the direction of the arrow (←D).

- (1) : Key interlock cable
(B) : Key cylinder

11. Remove the key interlock cable from the key cylinder.
12. Disengage the clips and remove the key interlock cable from the vehicle.

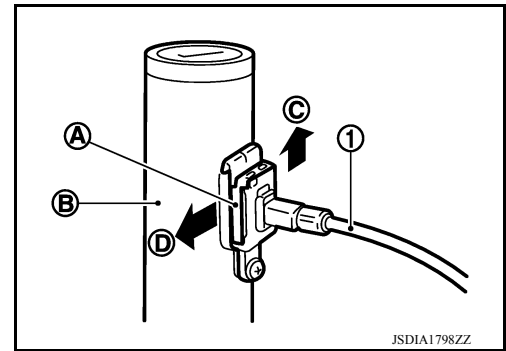


INSTALLATION

Installation is in the reverse order of removal.

- Temporarily install the adjust holder (A) to the key interlock rod (B).
- Install the casing cap (C) to the cable bracket (D) on the shift selector assembly.

CAUTION:


- Do not bend or twist key interlock cable excessively when installing.
- After installing key interlock cable to cable bracket (D) on shift selector assembly, make sure casing cap (C) is firmly secured in cable bracket (D) on shift selector assembly.
- If casing cap (C) is loose [less than 39.2 N (4.0 kg, 8.8 lb) removing force], replace key interlock cable.

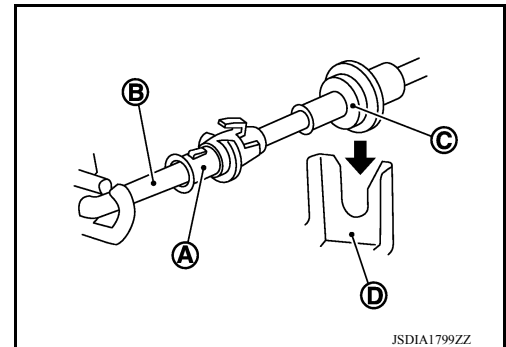

- Slide the slider (A) toward the key interlock rod (D) while pressing the pull lock (B) down to securely connect the adjust holder (C) with the key interlock rod (D).

CAUTION:

- Do not press tabs when holding slider (A).
- Do not apply any side-to-side force to key interlock rod (D) when sliding slider (A).

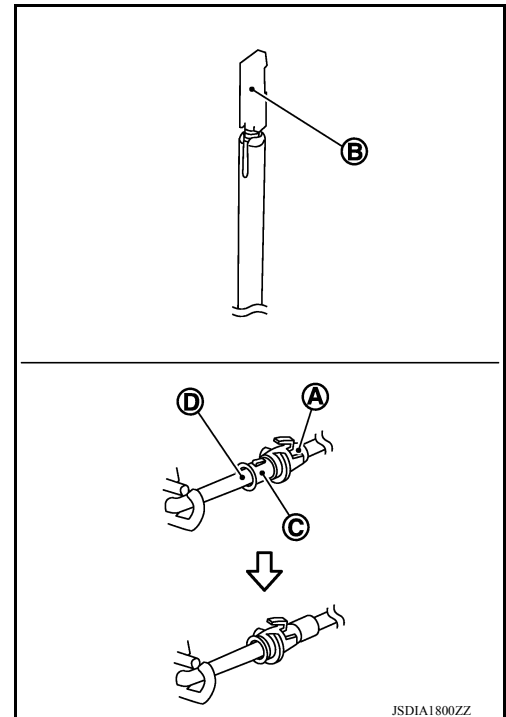

Inspection

INFOID:000000009268024


INSPECTION AFTER INSTALLATION

- Check the A/T operation. If a malfunction is found, adjust the A/T position. Refer to [TM-235, "Inspection and Adjustment"](#).
- Make sure the key can be removed only when the shift selector is in the "P" position.
- Make sure the ignition switch will not turn to LOCK position when the shift selector is not in the "P" position.

TCM

Exploded View

INFOID:000000009268025

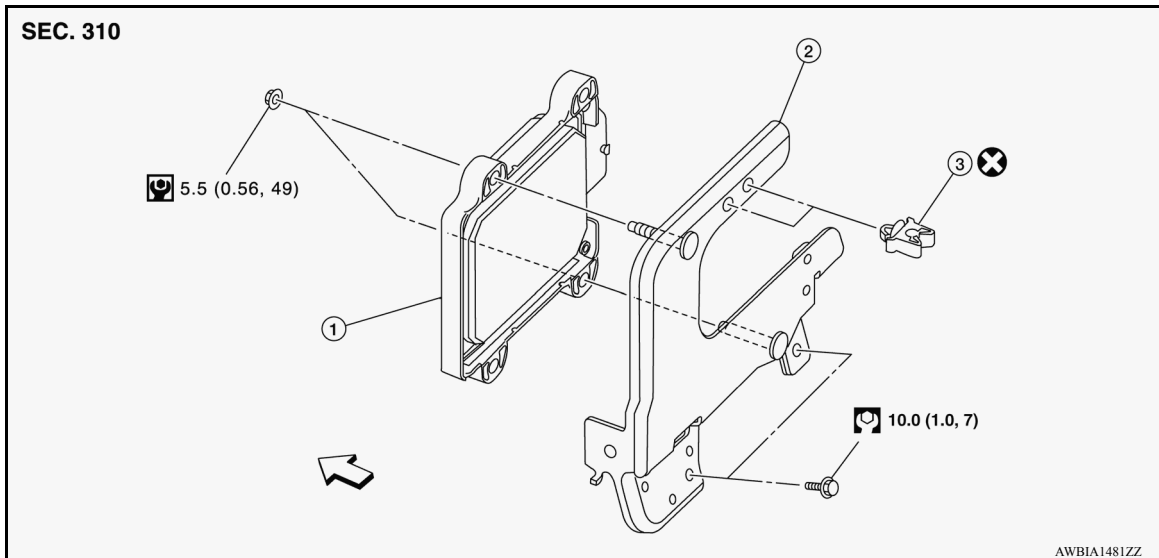

1. TCM
 ⇐ Front

2. Bracket

3. Clips

Removal and Installation

INFOID:000000009268026

NOTE:

When replacing the TCM and transaxle assembly as a set, replace the transaxle assembly first and then replace the TCM. Refer to [TM-123, "Description"](#).

REMOVAL

1. Remove the battery. Refer to [PG-63, "Removal and Installation"](#).
2. Disconnect the harness connector from the TCM.
3. Remove the TCM and bracket as an assembly.
4. Remove the TCM from the bracket, if necessary.

INSTALLATION

Installation is in the reverse order of removal.

Adjustment

INFOID:000000009268027

ADJUSTMENT AFTER INSTALLATION

Perform "ADDITIONAL SERVICE WHEN REPLACING TCM". Refer to [TM-123, "Description"](#).

OIL PAN


< REMOVAL AND INSTALLATION >

[4AT: RE4F03C]

OIL PAN

Exploded View

INFOID:000000009268028

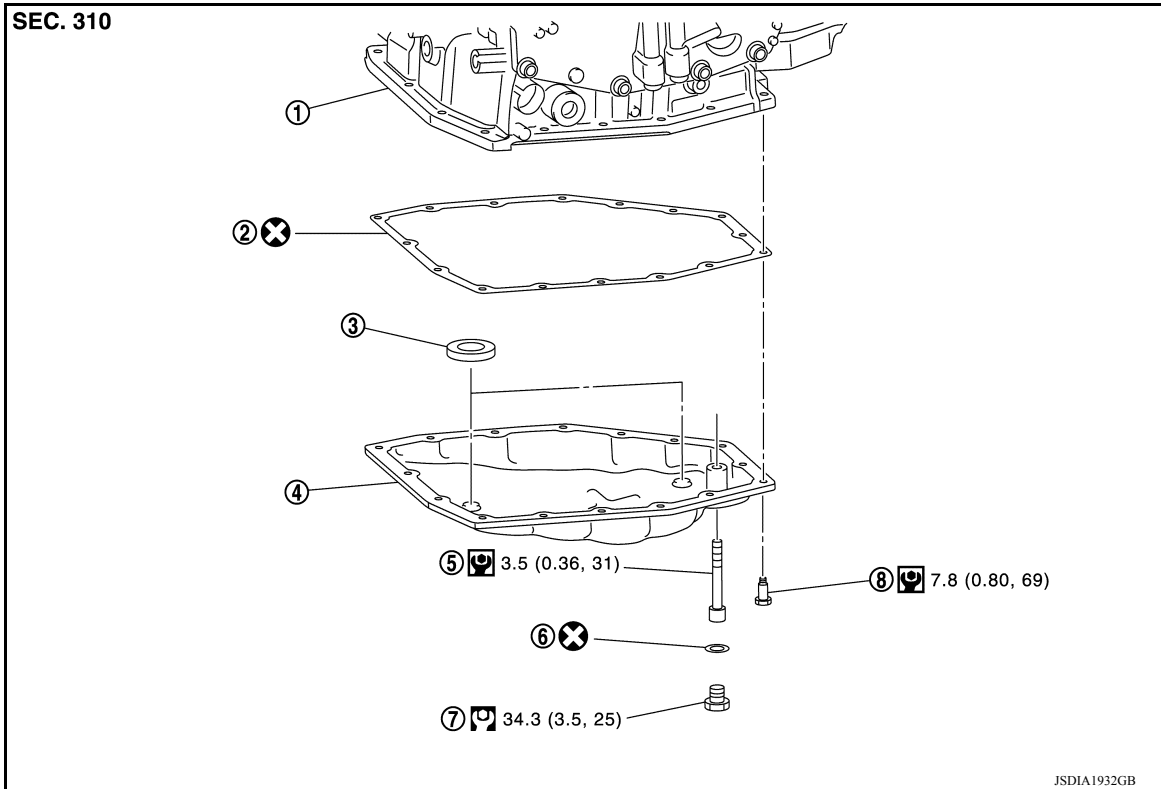

- | | | |
|-----------------------|-------------------------|----------------------|
| 1. Transaxle assembly | 2. Oil pan gasket | 3. Magnet |
| 4. Oil pan | 5. Overflow tube | 6. Drain plug gasket |
| 7. Drain plug | 8. Oil pan fitting bolt | |

Removal and Installation

INFOID:000000009268029

REMOVAL

1. Remove the drain plug and overflow tube, and then drain the ATF.


WARNING:

A/T fluid can splash when draining, use safety glasses to protect eyes.

2. Remove the drain plug gasket from the drain plug.
3. Remove the oil pan bolts (←), and then remove the oil pan and oil pan gasket.

← : Front

4. Remove the magnets from the oil pan.

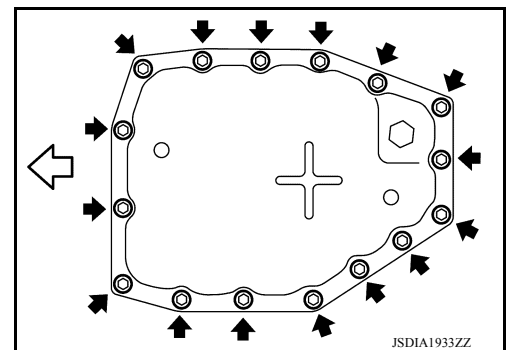

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Do not reuse oil pan gasket and drain plug gasket.


OIL PAN

< REMOVAL AND INSTALLATION >

[4AT: RE4F03C]

- Do not reuse oil pan bolts.
- Completely remove all moisture, oil, old gasket, etc. from the oil pan gasket mating surface of transaxle case and oil pan.
- When installing the overflow tube, be sure to tighten to the specified torque. If it is not tightened to the specified torque, the tube may be damaged.
- When the oil pan is installed, temporarily tighten oil pan bolts, then tighten the oil pan bolts to specification in the order shown.

← : Front

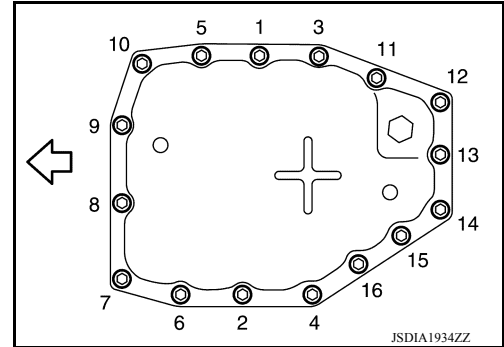

INFOID:000000009268030

Inspection and Adjustment

INSPECTION AFTER REMOVAL

Check oil pan for foreign material.

- If a large amount of worn material is found, clutch plate may be worn.
 - If iron powder is found, bearings, gears, or clutch plates may be worn.
 - If aluminum powder is found, bushing may be worn, or chips or burrs of aluminum casting parts may enter.
- Check points where wear is found in all cases.

INSPECTION AFTER INSTALLATION

Check for A/T fluid leakage. Refer to [TM-230, "Inspection"](#).

ADJUSTMENT AFTER INSTALLATION

Check the A/T fluid level. Refer to [TM-231, "Adjustment"](#).

OUTPUT SPEED SENSOR


< REMOVAL AND INSTALLATION >

[4AT: RE4F03C]

OUTPUT SPEED SENSOR

Exploded View

INFOID:000000009268031

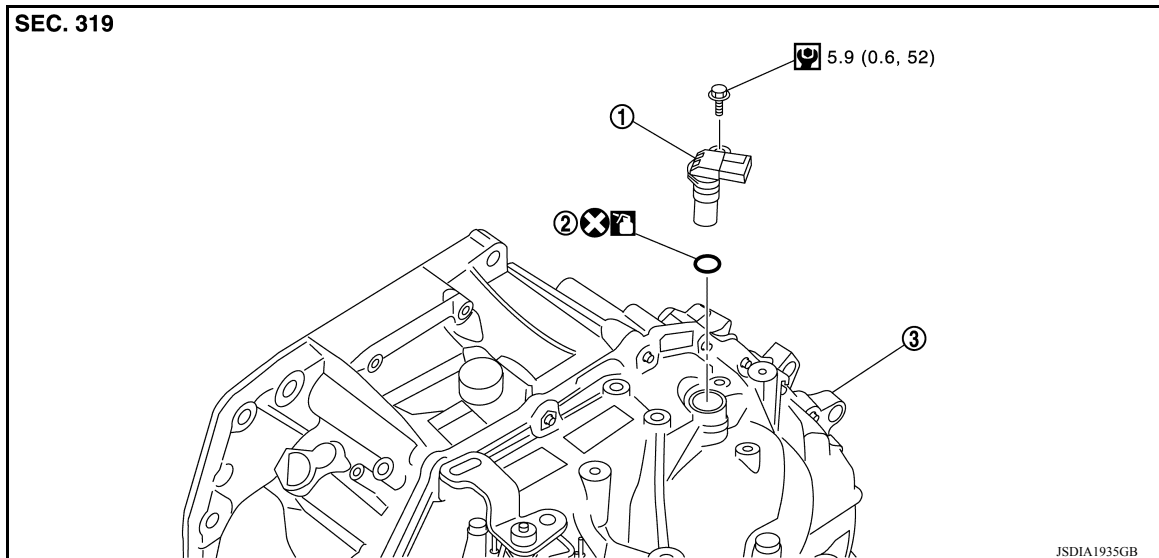

1. Output speed sensor

2. O-ring

3. Transaxle assembly

⇐ Front

Removal and Installation

INFOID:000000009268032

REMOVAL

1. Remove the front LH wheel and tire.
2. Disconnect the harness connector from output speed sensor.
3. Remove the output speed sensor.
4. Remove the O-ring from the output speed sensor.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Do not reuse O-ring.
- Apply Genuine NISSAN Matic S ATF to the O-ring.

Inspection and Adjustment

INFOID:000000009268033

INSPECTION AFTER INSTALLATION

Check for A/T fluid leakage. Refer to [TM-230, "Inspection"](#).

ADJUSTMENT AFTER INSTALLATION

Check the A/T fluid level. Refer to [TM-231, "Adjustment"](#).

DIFFERENTIAL SIDE OIL SEAL


< REMOVAL AND INSTALLATION >

[4AT: RE4F03C]

DIFFERENTIAL SIDE OIL SEAL

Exploded View

INFOID:000000009268034

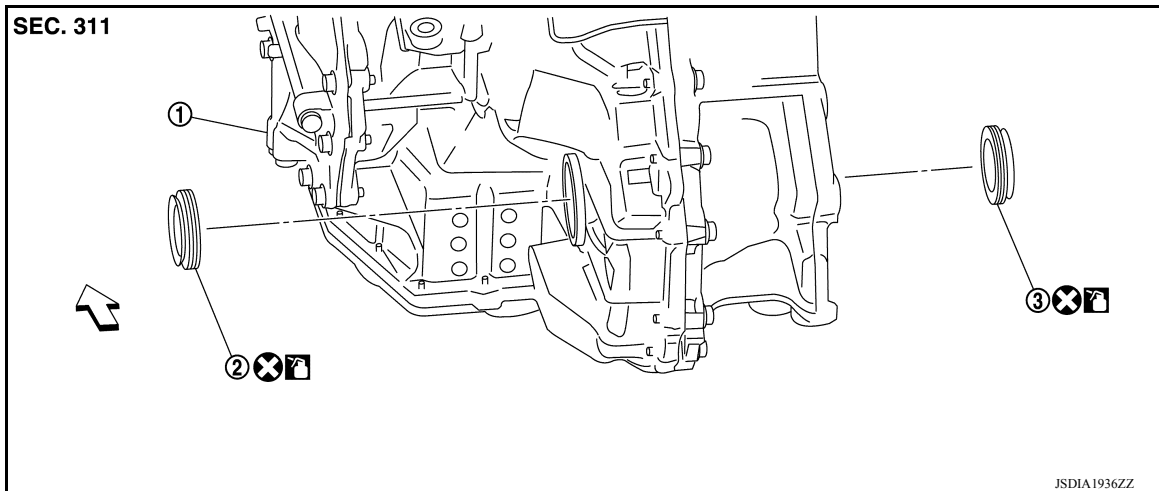

1. Transaxle assembly

⇐ Front

2. Differential side oil seal (left side)



Genuine NISSAN Matic S ATF

3. Differential side oil seal (right side)

Removal and Installation

INFOID:000000009268035

NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

REMOVAL

1. Remove the front drive shafts from the transaxle assembly. Refer to [FAX-15. "Removal and Installation"](#).
2. Remove the differential side oil seal using suitable tool.

CAUTION:

When removing the differential side oil seal, be careful not to scratch the oil seal mating surfaces of the transaxle case and converter housing.

INSTALLATION


1. Drive the differential side oil seal into the transaxle case side (A) and converter housing side (B) using suitable tool to the specified dimension.

CAUTION:

- Be careful not to scratch the lip of the differential side oil seal when press-fitting it.
- Do not reuse differential side oil seal.
- Apply Genuine NISSAN Matic S ATF to the differential side oil seal lip and around the oil seal.

Dimension (C) : $1.8 \pm 0.5 \text{ mm}$ ($0.071 \pm 0.020 \text{ in.}$)

Dimension (D) : $1.8 \pm 0.5 \text{ mm}$ ($0.071 \pm 0.020 \text{ in.}$)

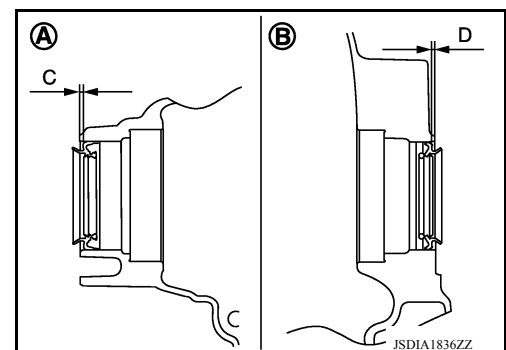

2. Install the front drive shaft. Refer to [FAX-15. "Removal and Installation"](#).

Inspection and Adjustment

INFOID:000000009268036

INSPECTION AFTER INSTALLATION

Check for A/T fluid leakage. Refer to [TM-230. "Inspection"](#).

ADJUSTMENT AFTER INSTALLATION

DIFFERENTIAL SIDE OIL SEAL

< REMOVAL AND INSTALLATION >

[4AT: RE4F03C]

Check the A/T fluid level. Refer to [TM-231, "Adjustment"](#).

FLUID COOLER TUBE


< REMOVAL AND INSTALLATION >

[4AT: RE4F03C]

FLUID COOLER TUBE

Exploded View

INFOID:000000009268037

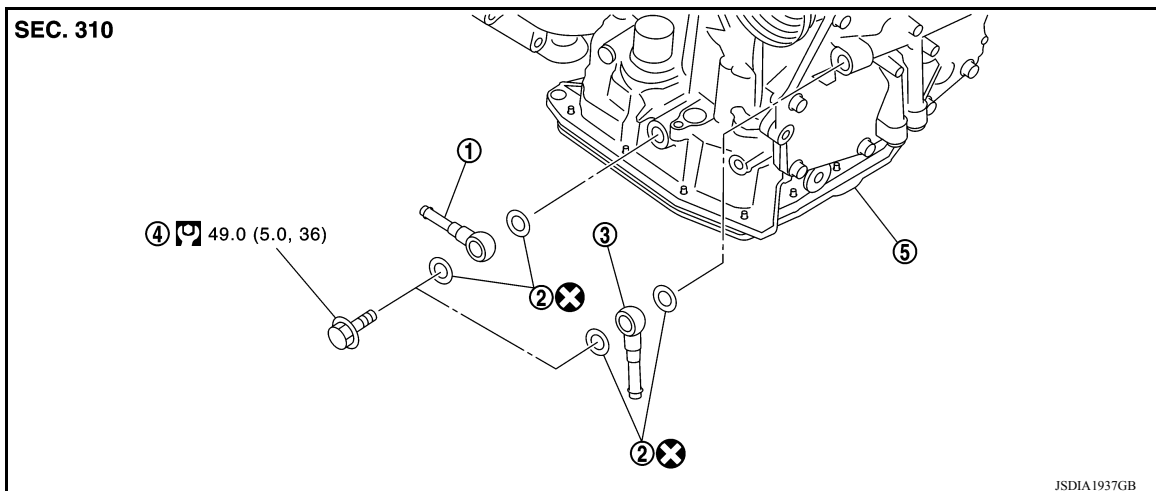

- | | | |
|------------------------|--------------------------|------------------------|
| 1. Fluid cooler tube A | 2. Copper sealing washer | 3. Fluid cooler tube B |
| 4. Bolt | 5. Transaxle assembly | |

Removal and Installation

INFOID:000000009268038

WARNING:

- Do not open the radiator cap or drain plug when the engine is hot. There is a danger that hot liquid may spray out, causing serious injury.
- Perform these steps after the coolant temperature has cooled sufficiently.

CAUTION:

Do not reuse copper sealing washers.

NOTE:

Lift up the vehicle and perform the work from below.

REMOVAL

1. Remove fluid cooler hose and fluid cooler tube A.
2. Disconnect the washer from fluid cooler tube A.
3. Remove fluid cooler hose and fluid cooler tube B.
4. Disconnect the washer from fluid cooler tube B.


INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Do not reuse copper sealing washers.

When installing the fluid cooler tube A (1) and B (2) onto the transaxle assembly, install it so that it is in contact with the transaxle case rib (A).

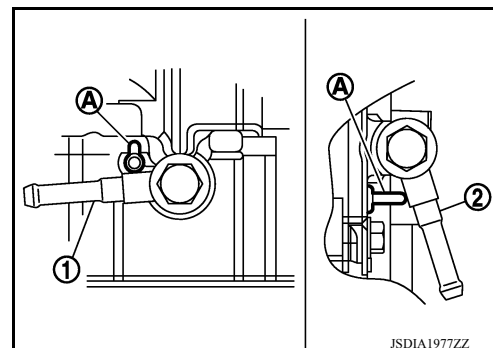

FLUID COOLER TUBE

< REMOVAL AND INSTALLATION >

[4AT: RE4F03C]

Inspection and Adjustment

INFOID:000000009268039

INSPECTION AFTER INSTALLATION

Check for A/T fluid leakage. Refer to [TM-230, "Inspection"](#).

ADJUSTMENT AFTER INSTALLATION

Check the A/T fluid level. Refer to [TM-231, "Adjustment"](#).

FLUID COOLER HOSE

< REMOVAL AND INSTALLATION >

[4AT: RE4F03C]

FLUID COOLER HOSE

Exploded View

INFOID:000000009315604

A

Removal and Installation

INFOID:000000009315605

B

Inspection and Adjustment

INFOID:000000009315606

C

INSPECTION AFTER INSTALLATION

Check for A/T fluid leakage. Refer to [TM-230, "Inspection"](#).

ADJUSTMENT AFTER INSTALLATION

Adjust the A/T fluid level. Refer to [TM-231, "Adjustment"](#).

TM

E

F

G

H

I

J

K

L

M

N

O


P

UNIT REMOVAL AND INSTALLATION

TRANSMISSION ASSEMBLY

Exploded View

INFOID:000000009268040

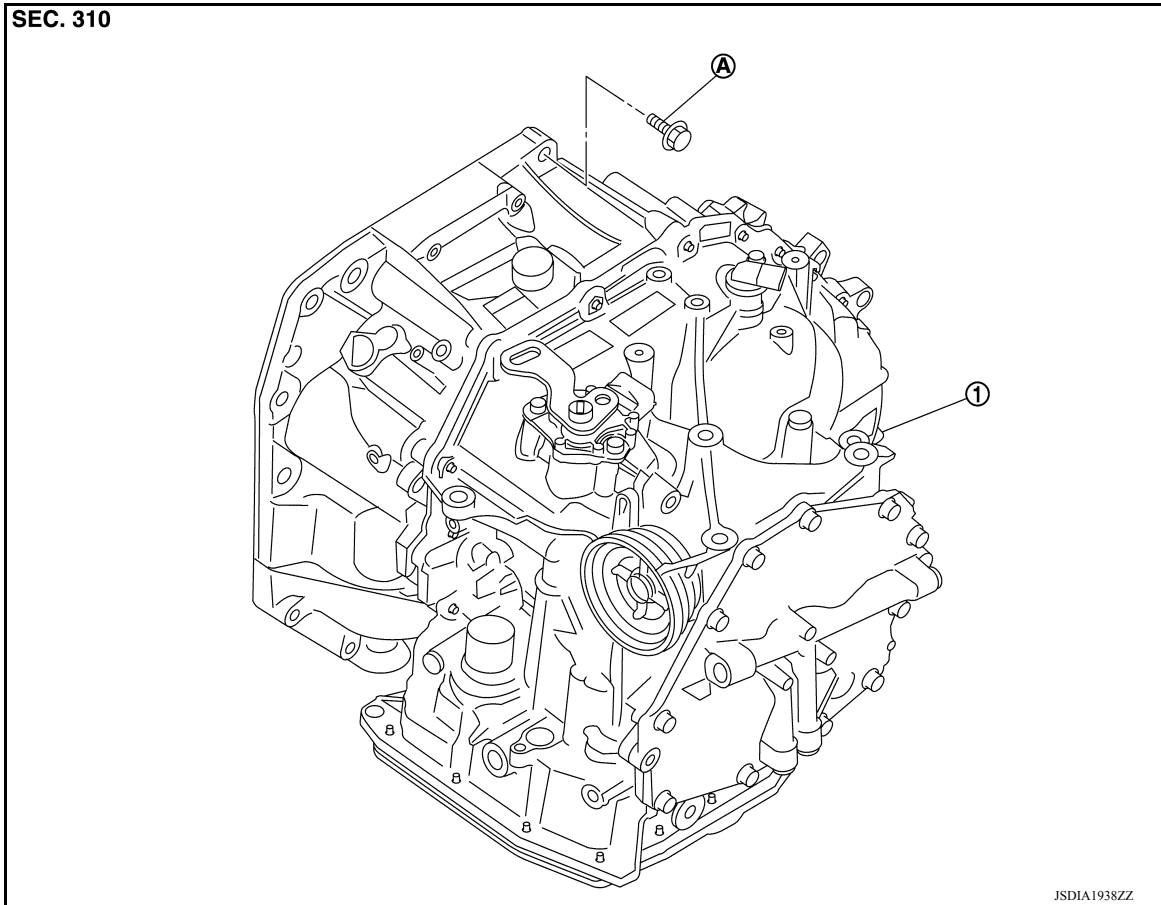

1. Transaxle assembly

A. : Tightening must be done following the installation procedure. Refer to [TM-250, "Removal and Installation"](#).

Removal and Installation

INFOID:000000009268041

WARNING:

- Do not open the radiator cap or drain plug when the engine is hot. Hot liquid may spray out, causing serious injury.
- Perform these steps after the coolant temperature has cooled sufficiently.

NOTE:

- When replacing the TCM and transaxle assembly as a set, replace the transaxle assembly first and then replace the TCM. Refer to [TM-124, "Description"](#).
- When replacing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

REMOVAL

1. Remove the TCM. Refer to [TM-241, "Removal and Installation"](#).
2. Remove the battery plate.
3. Remove the air duct and air cleaner case. Refer to [EM-25, "Removal and Installation"](#).
4. Disconnect the harness connectors from the following components and remove the harness from the transaxle.
 - A/T unit. Refer to [TM-61, "Removal and Installation Procedure for A/T Assembly Connector"](#).

TRANSMISSION ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[4AT: RE4F03C]


- Transmission range switch
 - Input speed sensor
 - Output speed sensor
 - Crankshaft position sensor. Refer to [EM-56, "Exploded View"](#).
 - Ground
5. Remove the control cable from the transaxle assembly. Refer to [TM-236, "Removal and Installation"](#).
 6. Disconnect the fluid cooler hose from the fluid cooler tube. Refer to [TM-247, "Removal and Installation"](#).
 7. Remove the left and right drive shafts. Refer to [FAX-15, "Removal and Installation"](#).
 8. Remove the drive shaft heat insulator.
 9. Remove starter motor. Refer to [STR-31, "Removal and Installation"](#).
 10. Reposition the fender protectors out of the way. Refer to [EXT-26, "Removal and Installation"](#).
 11. Rotate the crankshaft and remove the nuts that secure the drive plate to the torque converter.
CAUTION:
Rotate crankshaft clockwise (as viewed from the front of the engine).
 12. Remove the rear torque rod. Refer to [EM-82, "Exploded View"](#).
 13. Set a transmission jack under the transaxle assembly.
CAUTION:
Be careful not to contact the drain plug when setting the transmission jack.
 14. Set a transmission jack under the engine assembly.
CAUTION:
Be careful not to contact the drain plug when setting the transmission jack.
 15. Remove the left engine mounting insulator. Refer to [EM-82, "Exploded View"](#).
 16. Remove the left engine mounting bracket (LH). Refer to [EM-82, "Exploded View"](#).
 17. Remove the bolts that fasten the transaxle assembly and engine assembly.
 18. Remove the transaxle assembly from the vehicle.
CAUTION:
Do not drop the torque converter.

INSTALLATION


Installation is in the reverse order of removal.

CAUTION:

- **Do not reuse O-ring or copper sealing washers.**
- **Apply ATF to the O-ring.**
- When installing the transaxle assembly onto the engine assembly, check the engagement of the dowel pins (←).

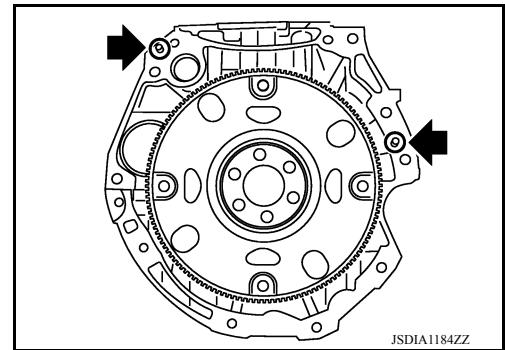

- When using suitable tool (A) for alignment, install it to the alignment stud bolt used to align the torque converter to the drive plate.

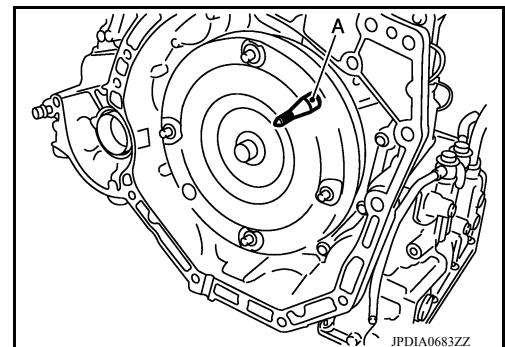


TRANSMISSION ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[4AT: RE4F03C]

- Rotate the crankshaft so that the alignment hole (A) of drive plate aligns with the position of the torque converter alignment stud bolt.
- CAUTION:**
- Rotate the crankshaft clockwise (as viewed from the front of the engine).
 - Be careful that torque converter stud bolts are aligned to the drive plate holes. Otherwise the stud bolts contact the drive plate.
- Insert the alignment stud bolt of torque converter into the alignment hole of the drive plate, aligning the drive plate holes with the torque converter stud bolts.

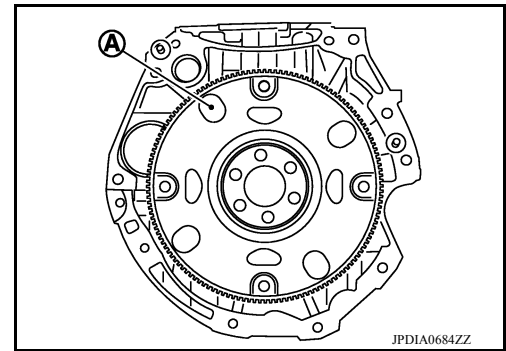

CAUTION:


Be careful not to strike the drive plate with the torque converter stud bolts.

- When installing the torque converter nuts, temporarily tighten the nuts. Then, after installing the engine and transaxle assembly bolts tighten the nuts to the specified torque.

Tightening torque : 51 N·m (5.2 kg-m, 38 ft-lb)

CAUTION:

- Rotate the crankshaft clockwise (as viewed from the front of the engine).
 - Check the tightening torque for the crankshaft pulley bolts after the bolts fastening the drive plate and torque converter have been tightened and the crankshaft pulley bolts have been secured. Refer to [EM-82, "Exploded View"](#).
- Install the transaxle assembly and engine assembly bolts according to the following standards.

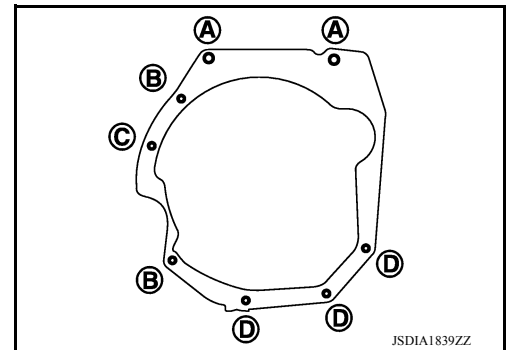

Bolt No.	A	B	C	D
Direction of insertion	Transaxle assembly → Engine assembly	Engine assembly → Transaxle assembly		
Number of bolts	2	2	1	3
Bolt length mm (in)	40 (1.57)	44 (1.73)	69 (2.72)	49 (1.93)
Tightening torque N·m (kg-m, ft-lb)	48.0 (4.9, 35)			

Inspection and Adjustment


INFOID:000000009268042

INSPECTION BEFORE INSTALLATION

Check the distance (A) between the converter housing and torque converter.

- (B) : Scale
- (C) : Straightedge

Dimension (A) : [TM-255, "Torque Converter"](#)

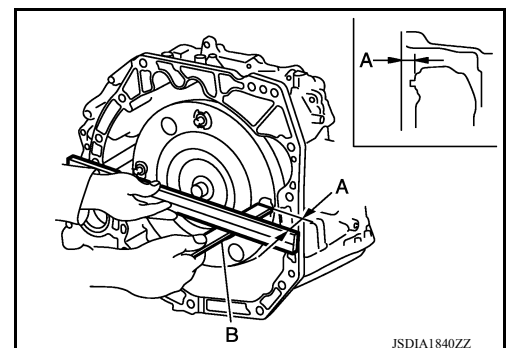

TRANSMISSION ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[4AT: RE4F03C]

INSPECTION AFTER INSTALLATION

Check the following items:

- A/T fluid leakage, refer to [TM-230, "Inspection"](#).
- For the A/T positions, refer to [TM-235, "Inspection and Adjustment"](#)
- Start the engine and check for coolant leakage from the parts which are removed and reinstalled.

ADJUSTMENT AFTER INSTALLATION

- Check the A/T fluid level. Refer to [TM-231, "Adjustment"](#).
- Perform "TRANSAXLE ASSEMBLY REPLACEMENT". Refer to [TM-124, "Description"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[4AT: RE4F03C]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specification

INFOID:000000009268043

Transaxle model		RE4F03C
Stall torque ratio		1.91 : 1
Transmission gear ratio	1st	2.861
	2nd	1.562
	3rd	1.000
	4th	0.697
	Reverse	2.310
Recommended fluid		Genuine NISSAN Matic S ATF* ¹
Fluid capacity		5.2 liter (5-1/2 US qt, 4-5/8 Imp qt)* ²

CAUTION:

- Use only Genuine NISSAN Matic S ATF. Do not mix with other ATF.
- Using ATF other than Genuine NISSAN Matic S ATF will cause deterioration of driveability and A/T durability, and may damage the A/T, which is not covered by the warranty.

*1: Refer to [MA-12, "Fluids and Lubricants"](#).

*2: The fluid capacity is the reference value.

Vehicle Speed at Which Gear Shifting Occurs

INFOID:000000009268044

Unit: km/h (MPH)

Gear position	Throttle position	
	Full throttle	Half throttle
D1 → D2	52 – 58 (33 – 36)	28 – 34 (18 – 21)
D2 → D3	98 – 104 (61 – 64)	56 – 62 (35 – 38)
D3 → D4	155 – 161 (97 – 100)	122 – 128 (76 – 79)
D4 → D3	150 – 156 (94 – 96)	63 – 69 (40 – 42)
D3 → D2	88 – 94 (55 – 58)	39 – 45 (25 – 27)
D2 → D1	38 – 44 (24 – 27)	17 – 23 (11 – 14)

- At half throttle, the accelerator opening is 4/8 of the full opening.

Vehicle Speed at Which Lock-up Occurs/Releases

INFOID:000000009268045

Unit: km/h (MPH)

Throttle position	Gear position	Vehicle speed	
		Lock-up ON	Lock-up OFF
Closed throttle	3GR	33 – 39 (21 – 24)	30 – 36 (19 – 22)
	4GR	52 – 58 (33 – 36)	48 – 54 (30 – 33)
Half throttle	3GR (OD OFF)	87 – 93 (55 – 57)	84 – 90 (53 – 55)
	4GR	122 – 128 (76 – 79)	92 – 98 (58 – 60)

- At closed throttle, the accelerator opening is less than 1/8 condition. (Closed throttle position signal OFF)
- At half throttle, the accelerator opening is 4/8 of the full opening.

Stall Speed

INFOID:000000009268046

Stall speed	2,410 – 2,850 rpm
-------------	-------------------

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[4AT: RE4F03C]

Line Pressure

INFOID:000000009268047

Unit: kPa (kg/cm², psi)

Select position	Engine speed	Line pressure
"R" position	Idle speed	570 (5.81, 82.7)
	Stall speed	2,140 (21.83, 310.3)
"D" position	Idle speed	410 (4.18, 59.5)
	Stall speed	1,400 (14.28, 203.0)

Torque Converter

INFOID:000000009268048

Dimension between end of converter housing and torque converter	16.2 mm (0.638 in)
---	--------------------

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009268049

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS


WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Procedure without Cowl Top Cover

INFOID:000000009268050

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

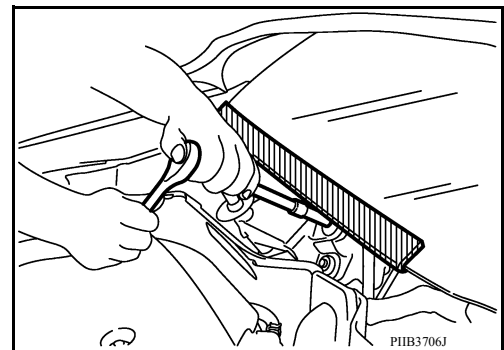

Precaution for TCM and Transaxle Assembly Replacement

INFOID:000000009268051

CAUTION:

- To replace TCM, refer to [TM-325, "Description"](#).
- To replace transaxle assembly, refer to [TM-326, "Description"](#).

Precaution for G Sensor Removal/Installation or Replacement

INFOID:000000009268052

CAUTION:

To remove/install or replace G sensor, refer to [TM-328, "Description"](#).

PRECAUTIONS


< PRECAUTION >

[CVT: RE0F11A]


INFOID:000000009268053

General Precautions


- Turn ignition switch OFF and disconnect the battery cable from the negative terminal before connecting or disconnecting the CVT assembly harness connector. Because battery voltage is applied to TCM even if ignition switch is turned OFF.

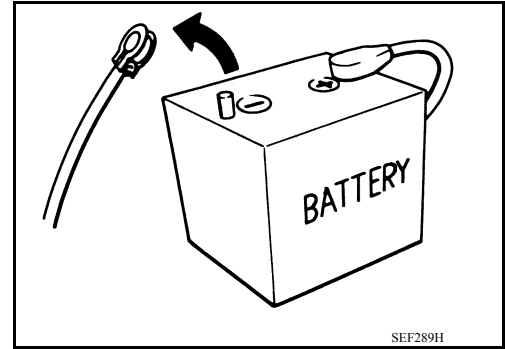


- When connecting or disconnecting pin connectors into or from TCM, do not damage pin terminals (bend or break). Check that there are not any bends or breaks on TCM pin terminal, when connecting pin connectors.

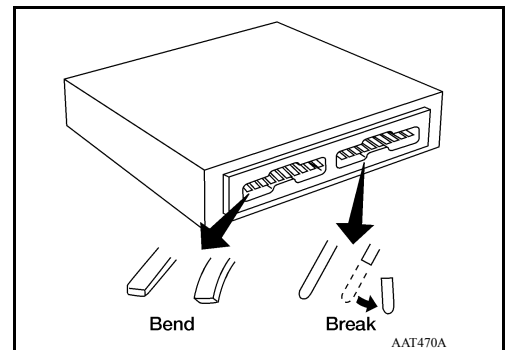

- Perform TCM input/output signal inspection and check whether TCM functions normally or not before replacing TCM. Refer to [TM-299, "Reference Value"](#).

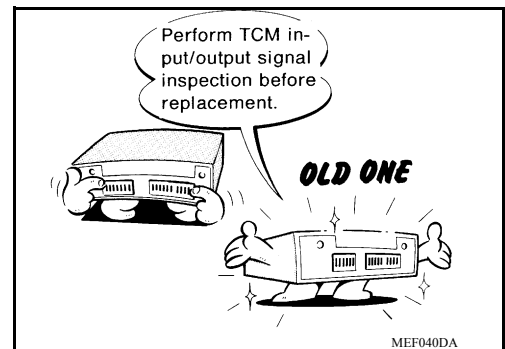

- Perform "DTC (Diagnostic Trouble Code) CONFIRMATION PROCEDURE". If the repair is completed DTC should not be displayed in the "DTC CONFIRMATION PROCEDURE".

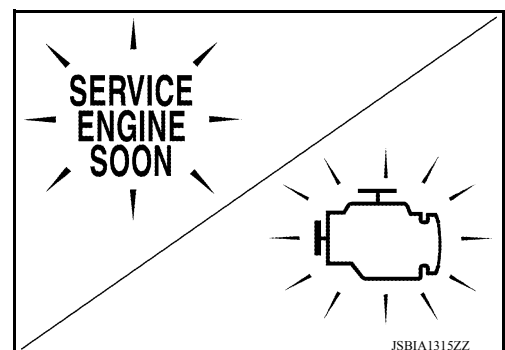

- Always use the specified brand of CVT fluid. Refer to [MA-12, "Fluids and Lubricants"](#).
- Use lint-free paper not cloth rags during work.
- Dispose of the waste oil using the methods prescribed by law, ordinance, etc. after replacing the CVT fluid.

On Board Diagnosis (OBD) System of CVT and Engine

INFOID:000000009268054

The ECM has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

PRECAUTIONS

< PRECAUTION >

[CVT: RE0F11A]

CAUTION:


- Be sure to turn the ignition switch OFF and disconnect the battery cable from the negative terminal before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to light up due to an open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Be sure to route and secure the harnesses properly after work. Interference of the harness with a bracket, etc. may cause the MIL to light up due to a short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to a malfunction of the EGR system or fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the TCM and ECM before returning the vehicle to the customer.

Removal and Installation Procedure for CVT Unit Connector

INFOID:000000009268055


REMOVAL

- Rotate bayonet ring (A) counterclockwise. Pull out CVT unit harness connector (B) upward and remove it.

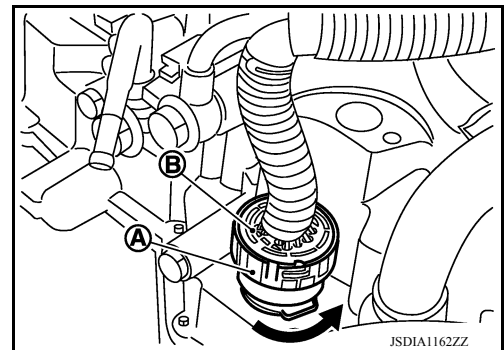


INSTALLATION

1. Align marking (A) on CVT unit harness connector terminal with marking (B) on bayonet ring. Insert CVT unit harness connector.
2. Rotate bayonet ring clockwise.

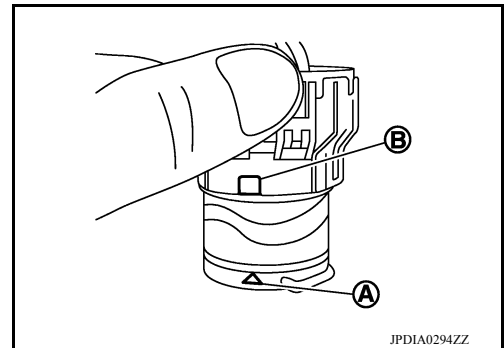

3. Rotate bayonet ring clockwise until marking (A) on CVT unit harness connector terminal body is aligned with the slit (B) on bayonet ring as shown in the figure (correctly fitting condition).

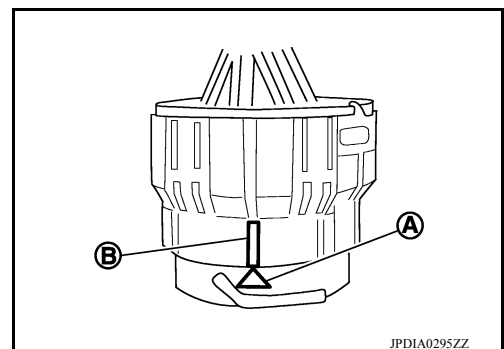


CAUTION:

PRECAUTIONS

< PRECAUTION >

[CVT: RE0F11A]

- Securely align marking (A) on CVT unit harness connector terminal body with bayonet ring slit (B). Then, be careful not to make a half fit condition as shown in the figure.
- Do not mistake the slit of bayonet ring for other dent portion.

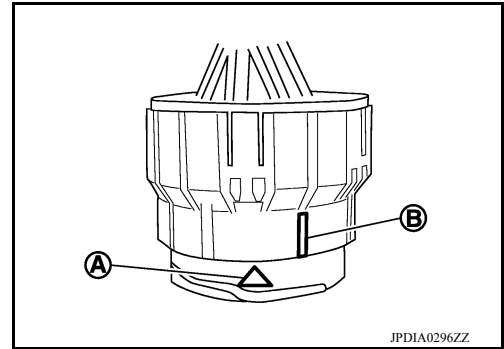

A
B
C

TM

E
F
G
H
I
J
K
L
M
N
O
P

PREPARATION

< PREPARATION >

[CVT: RE0F11A]



PREPARATION

PREPARATION

Special Service Tools

INFOID:000000009268056

Tool number Tool name	Description
1. KV311039S0 Charging pipe set 2. KV31103920* O-ring	CVT fluid changing and adjustment
KV38107900 Protector a: ϕ 32 mm	Installing drive shaft

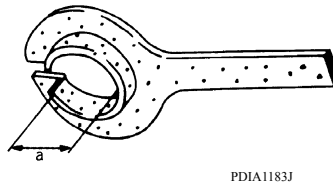
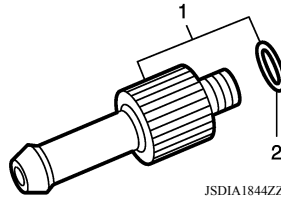


*: The O-ring as an unit part is set as a SST.

Commercial Service Tools

INFOID:000000009268057

Tool number Tool name	Description
31197EU50A Drive plate location guide a: ϕ 25 mm	Installing transaxle assembly
Drift a: ϕ 56 mm b: ϕ 50 mm	Installing differential side oil seal

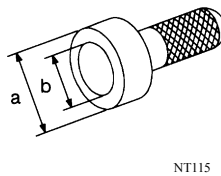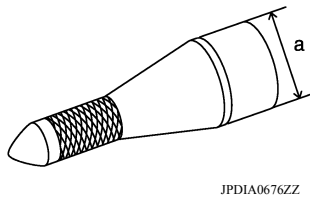

COMPONENT PARTS

< SYSTEM DESCRIPTION >


[CVT: RE0F11A]

SYSTEM DESCRIPTION

COMPONENT PARTS CVT CONTROL SYSTEM

CVT CONTROL SYSTEM : Component Parts Location

INFOID:00000009268058

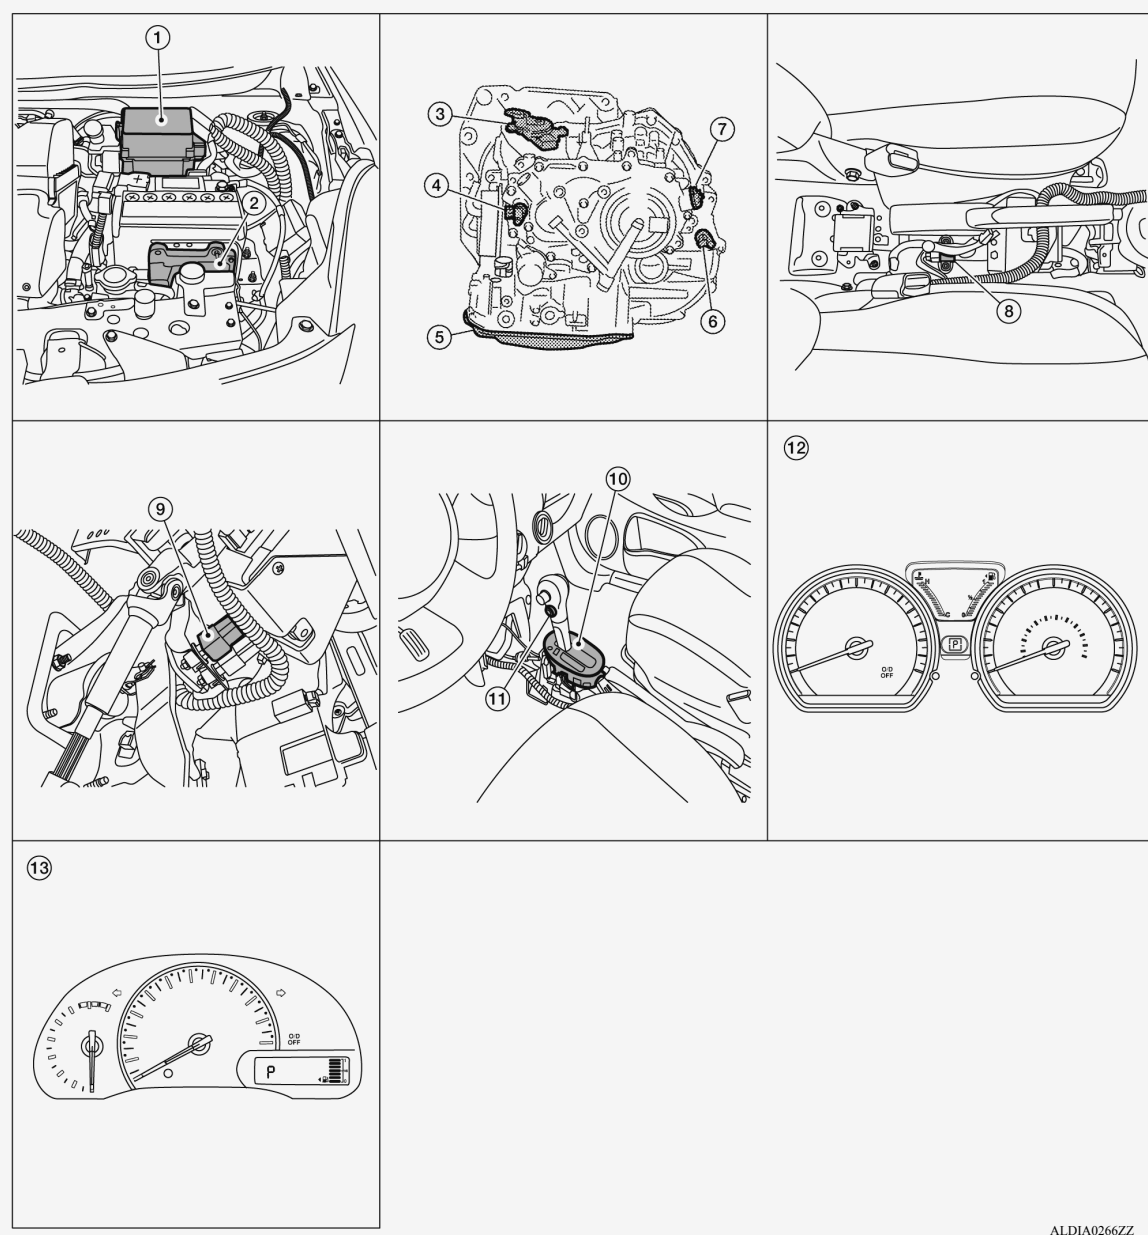

- | | | |
|--------------------------------|------------------------------|--------------------------------|
| 1. IPDM E/R | 2. TCM | 3. Transmission range switch |
| 4. Primary speed sensor | 5. CVT unit | 6. Output speed sensor |
| 7. Secondary speed sensor | 8. G sensor | 9. Stop lamp switch |
| 10. CVT shift selector | 11. Overdrive control switch | 12. Combination meter (type A) |
| 13. Combination meter (type B) | | |

COMPONENT DESCRIPTION

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

Component		Function
IPDM E/R		The TCM receives the A/C compressor feedback signal via CAN communications from the IPDM E/R.
TCM		TM-262, "CVT CONTROL SYSTEM : TCM"
Transmission range switch		TM-263, "CVT CONTROL SYSTEM : Transmission Range Switch"
Primary speed sensor		TM-263, "CVT CONTROL SYSTEM : Primary Speed Sensor"
CVT unit		—
Control valve	ROM assembly*	TM-262, "CVT CONTROL SYSTEM : ROM Assembly"
	CVT fluid temperature sensor*	TM-264, "CVT CONTROL SYSTEM : CVT Fluid Temperature Sensor"
	Secondary pressure sensor*	TM-264, "CVT CONTROL SYSTEM : Secondary Pressure Sensor"
	Primary pressure solenoid valve*	TM-265, "CVT CONTROL SYSTEM : Primary Pressure Solenoid Valve"
	Low brake solenoid valve*	TM-265, "CVT CONTROL SYSTEM : Low Brake Solenoid Valve"
	High clutch & reverse brake solenoid valve*	TM-265, "CVT CONTROL SYSTEM : High Clutch & Reverse Brake Solenoid Valve"
	Torque converter clutch solenoid valve*	TM-265, "CVT CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve"
Line pressure solenoid valve*		TM-266, "CVT CONTROL SYSTEM : Line Pressure Solenoid Valve"
Output speed sensor		TM-264, "CVT CONTROL SYSTEM : Output Speed Sensor"
Secondary speed sensor		TM-263, "CVT CONTROL SYSTEM : Secondary Speed Sensor"
G sensor		TM-266, "CVT CONTROL SYSTEM : G Sensor"
Overdrive control switch		TM-266, "CVT CONTROL SYSTEM : Overdrive Control Switch"
Combination meter		The TCM receives the sport mode switch signal via CAN communications from the combination meter.
ABS actuator and electric unit (control unit)		The TCM receives the following signals via CAN communications from the ABS actuator and electric unit (control unit). <ul style="list-style-type: none"> • Vehicle speed signal • VDC operation signal • VDC malfunction signal
ECM		<ul style="list-style-type: none"> • For purposes including improving the feeling when shifting and preventing drops in engine speed, control signals are exchanged between the ECM and TCM, and real-time cooperative control is performed according to the vehicle driving conditions. (Engine and CVT integrated control) <ul style="list-style-type: none"> - Engine and CVT integrated control signal • The TCM receives the following signals via CAN communications from the ECM. <ul style="list-style-type: none"> - Engine speed signal - Accelerator pedal position signal - Closed throttle position signal • TCM sends and receives the following signals with ECM through CAN communication to perform D position N idle control. <ul style="list-style-type: none"> - N idle instruction signal
BCM		The TCM receives the following signals via CAN communications from the BCM. <ul style="list-style-type: none"> • Stop lamp switch signal • Turn indicator signal

*: These components are included in control valve assembly.

CVT CONTROL SYSTEM : TCM

INFOID:000000009268059

- The vehicle driving status is judged based on the signals from the sensors, switches, and other control units, and the optimal transaxle control is performed.
- For TCM control items, refer to [TM-274, "CVT CONTROL SYSTEM : System Description"](#).

CVT CONTROL SYSTEM : ROM Assembly

INFOID:000000009268060

- The ROM assembly is installed to control valve.

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

- The ROM assembly stores the calibration data (characteristic value) of each solenoid valve. TCM enables accurate hydraulic control by obtaining the calibration data.

CVT CONTROL SYSTEM : Transmission Range Switch


INFOID:000000009268061

- The transmission range switch is installed to upper part of transaxle case.
- The transmission range switch detects the selector lever position.

CVT CONTROL SYSTEM : Primary Speed Sensor

INFOID:000000009268062


- The primary speed sensor is installed to side cover of transaxle.
- The primary speed sensor detects primary pulley speed.
- The primary speed sensor generates the ON-OFF pulse (short waveform) in proportion to the rotating body speed which is "The higher the rotating body speed is, the faster the change cycle is". The TCM judges the rotating speed from the changing cycle of this pulse signal.

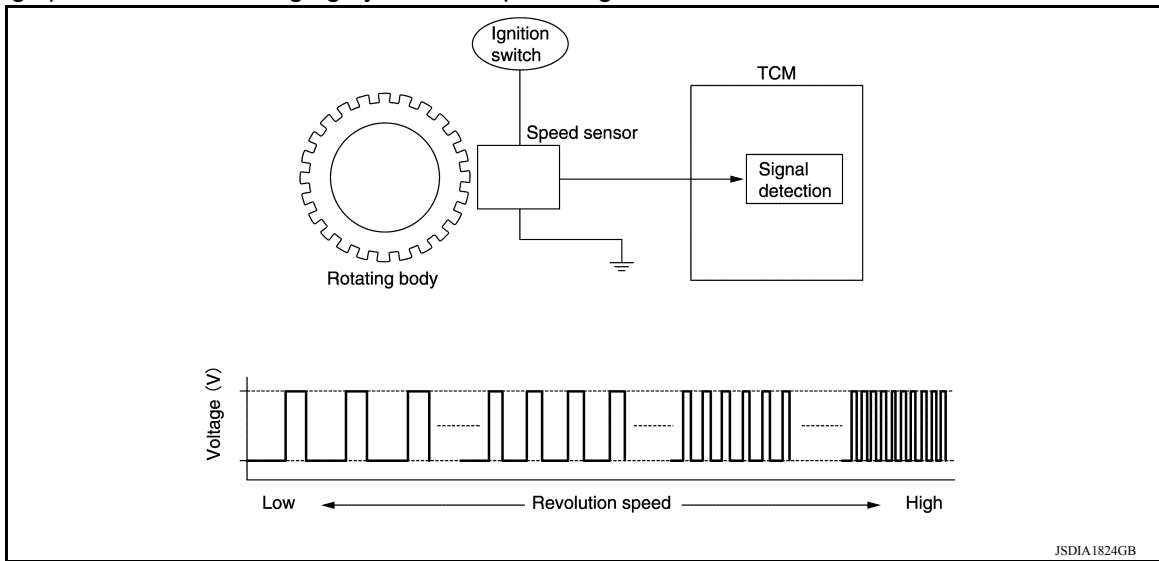

CVT CONTROL SYSTEM : Secondary Speed Sensor

INFOID:000000009268063

- The secondary speed sensor is installed to side cover of transaxle.
- The secondary speed sensor detects secondary pulley speed.
- The secondary speed sensor generates the ON-OFF pulse (short waveform) in proportion to the rotating body speed which is "The higher the rotating body speed is, the faster the change cycle is". The TCM judges the rotating speed from the changing cycle of this pulse signal.

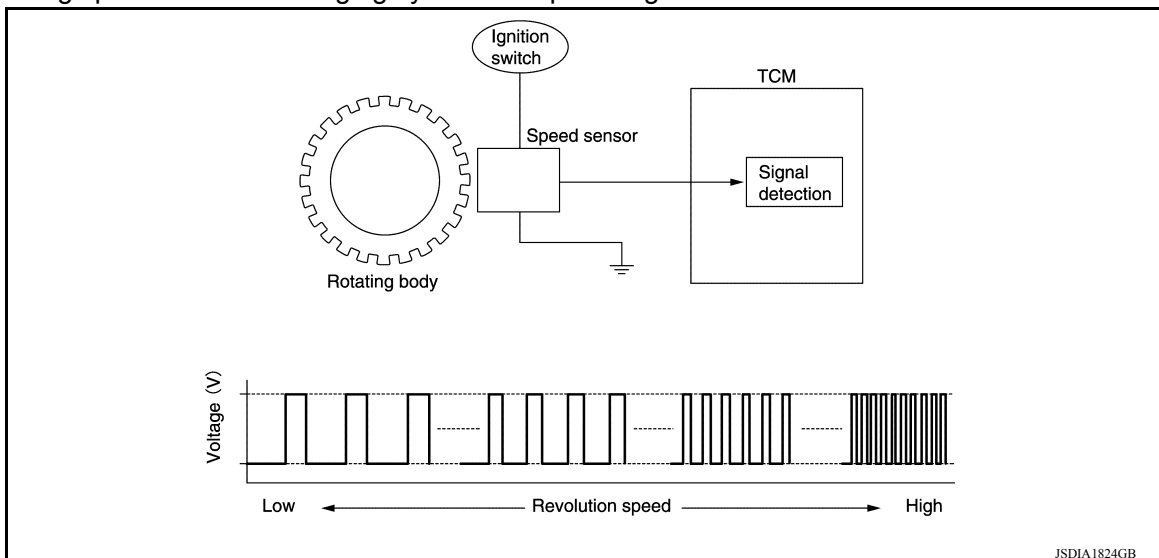

COMPONENT PARTS


< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

CVT CONTROL SYSTEM : Output Speed Sensor

INFOID:000000009268064


- The output speed sensor is installed to the back side of transaxle case.
- The output speed sensor detects final gear speed. TCM evaluates the vehicle speed from the final gear revolution.
- The output speed sensor generates the ON-OFF pulse (short waveform) in proportion to the rotating body speed which is "The higher the rotating body speed is, the faster the change cycle is". The TCM judges the rotating speed from the changing cycle of this pulse signal.

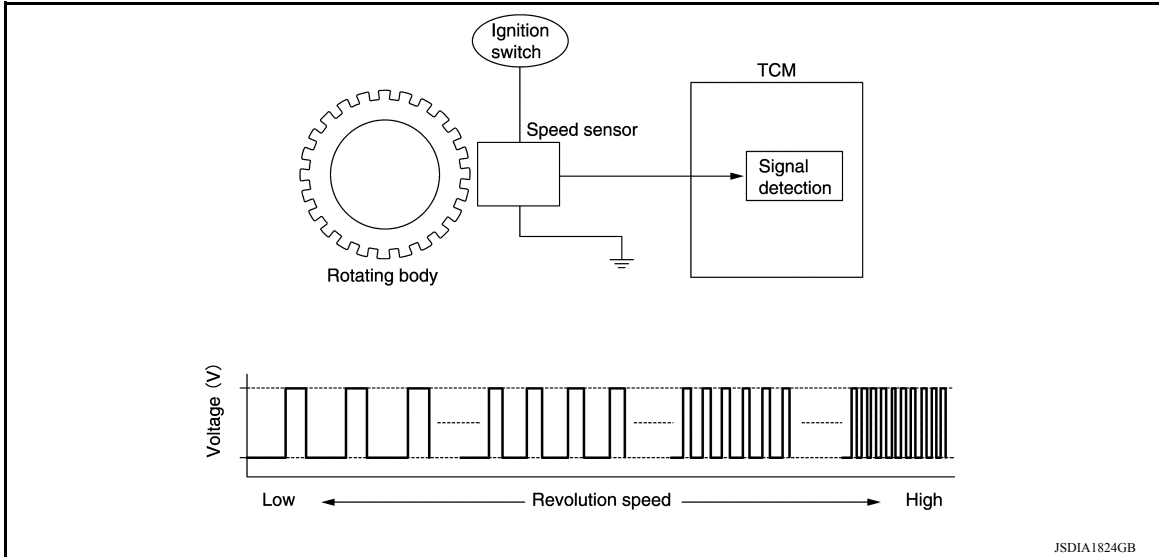

CVT CONTROL SYSTEM : CVT Fluid Temperature Sensor

INFOID:000000009268065

- The CVT fluid temperature sensor is installed to control valve.
- The CVT fluid temperature sensor detects CVT fluid temperature in oil pan.
- The fluid temperature sensor uses a thermistor, and changes the signal voltage by converting changes in the CVT fluid temperature to a resistance value. TCM evaluates the CVT fluid temperature from the signal voltage value.

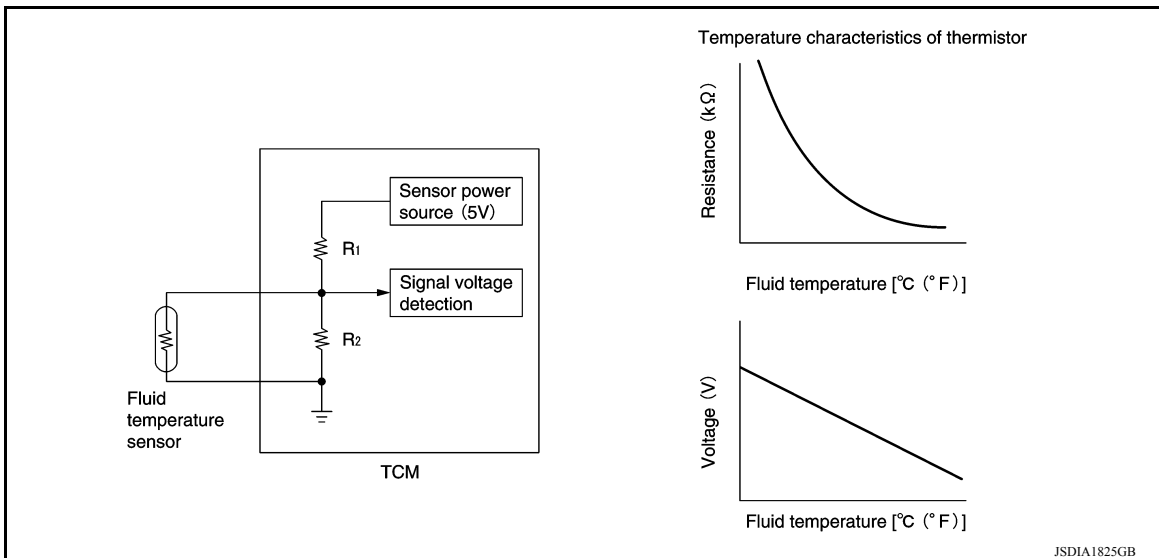

CVT CONTROL SYSTEM : Secondary Pressure Sensor

INFOID:000000009268066


- The secondary pressure sensor is installed to control valve.
- The secondary pressure sensor detects the pressure applied to the secondary pulley.

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

- When pressure is applied to the ceramic device in the secondary pressure sensor, the ceramic device is deformed, resulting in voltage change. TCM evaluates the secondary pressure from its voltage change. Voltage is increased along with pressure increase.

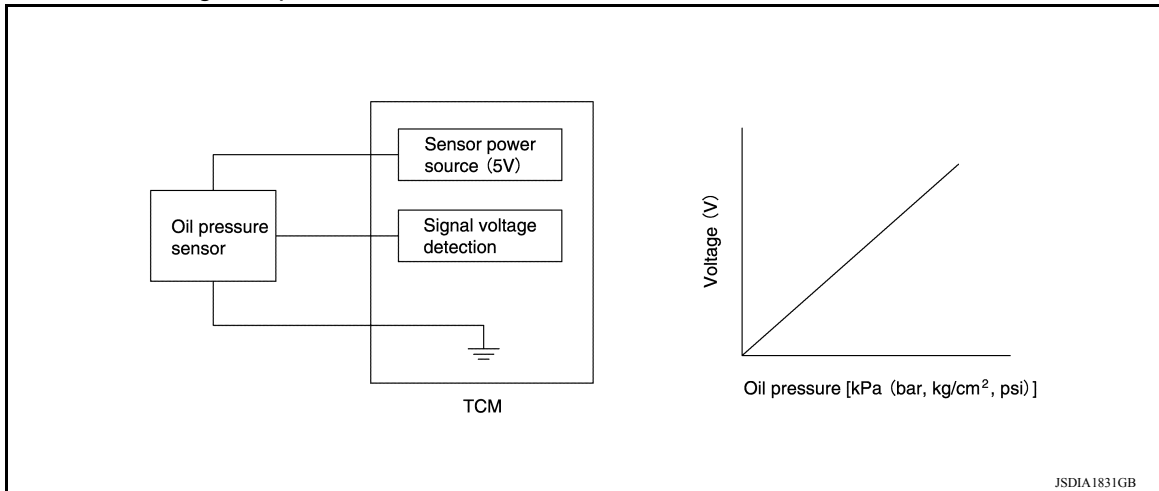

CVT CONTROL SYSTEM : Primary Pressure Solenoid Valve

INFOID:000000009268067

- The primary pressure solenoid valve is installed to control valve.
- The primary pressure solenoid valve controls the primary pressure control valve. For information about the primary pressure control valve, refer to [TM-271, "TRANSAXLE : Component Description"](#).
- The primary pressure solenoid valve uses the linear solenoid valve [N/H (normal high) type].

NOTE:

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces hydraulic control when the coil is not energized.

CVT CONTROL SYSTEM : Low Brake Solenoid Valve

INFOID:000000009268068

- The low brake solenoid valve is installed to control valve.
- The low brake solenoid valve adjusts the tightening pressure of the low brake.
- The low brake solenoid valve uses the linear solenoid valve [N/L (normal low) type].

NOTE:

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/L (normal low) type does not produce hydraulic control when the coil is not energized.

CVT CONTROL SYSTEM : High Clutch & Reverse Brake Solenoid Valve

INFOID:000000009268069

- The high clutch & reverse brake solenoid valve is installed to control valve.
- The high clutch & reverse brake solenoid valve adjusts the tightening pressure of the high clutch and reverse brake.
- The high clutch & reverse brake solenoid valve uses the linear solenoid valve [N/H (normal high) type].

NOTE:

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces hydraulic control when the coil is not energized.

CVT CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve

INFOID:000000009268070

- The torque converter clutch solenoid valve is installed to control valve.
- The torque converter clutch solenoid valve controls the torque converter clutch control valve. For information about the torque converter clutch control valve, refer to [TM-271, "TRANSAXLE : Component Description"](#).
- The torque converter clutch solenoid valve utilizes a linear solenoid valve [N/L (normal low) type].

NOTE:

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/L (normal low) type does not produce hydraulic control when the coil is not energized.

CVT CONTROL SYSTEM : Line Pressure Solenoid Valve

INFOID:000000009268071

- The line pressure solenoid valve is installed to control valve.
- The line pressure solenoid valve controls the pressure regulator valve. For information about the pressure regulator valve, refer to [TM-271. "TRANSAXLE : Component Description"](#).
- The line pressure solenoid valve uses the linear solenoid valve [N/H (normal high) type].

NOTE:

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces hydraulic control when the coil is not energized.

CVT CONTROL SYSTEM : G Sensor

INFOID:000000009268072

- G sensor is installed to floor under instrument lower cover.
- G sensor detects front/rear G and inclination applied to the vehicle.
- G sensor converts front/rear G and inclination applied to the vehicle to voltage signal. TCM evaluates front/rear G and inclination angle of the vehicle from the voltage signal.

CVT CONTROL SYSTEM : Overdrive Control Switch

INFOID:000000009268073

- The overdrive control switch is installed to the selector lever knob.
- When the OD OFF indicator lamp on the combination meter is OFF and the overdrive control switch is pressed, the overdrive is cancelled and the OD OFF indicator lamp is ON.
- When the OD OFF indicator lamp on the combination meter is ON and the overdrive control switch is pressed, the overdrive is active and the OD OFF indicator lamp is OFF.

CVT CONTROL SYSTEM : OD OFF Indicator Lamp

INFOID:000000009268074

- OD OFF indicator lamp is positioned on the combination meter.
- OD OFF indicator lamp is ON when set to the overdrive off.
- OD OFF indicator lamp turns on for a certain period of time when the ignition switch turns ON, and then turns off.

Condition (status)	OD OFF indicator lamp
Ignition switch OFF.	OFF
Ignition switch ON.	ON (Approx. 2 seconds)
Overdrive control switch is pressed when the selector lever is in the "D" position and the OD OFF indicator lamp is OFF.	ON
Overdrive control switch is pressed when the selector lever is in the "D" position and the OD OFF indicator lamp is ON.	OFF
Selector lever is shifted to other position when the selector lever is at "D" position and the OD OFF indicator lamp is ON.	OFF

CVT CONTROL SYSTEM : Shift Position Indicator

INFOID:000000009268075

TCM transmits shift position signal to combination meter via CAN communication. The actual shift position is displayed on combination meter according to the signal.

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

CVT CONTROL SYSTEM : Malfunction Indicator Lamp (MIL)


INFOID:000000009268076

The malfunction indicator lamp (MIL) is located on the combination meter.

The MIL will illuminate when the ignition switch is turned ON without the engine running. This is a bulb check.

When the engine is started, the MIL should turn off. If the MIL remains illuminated, the on board diagnostic system has detected an engine system malfunction.


For details, refer to [EC-58. "DIAGNOSIS DESCRIPTION : Malfunction Indicator Lamp \(MIL\)"](#).

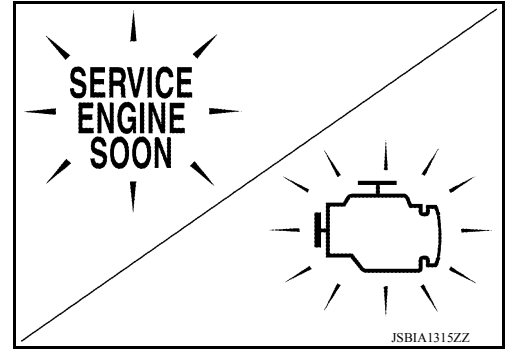

SHIFT LOCK SYSTEM

SHIFT LOCK SYSTEM : Component Parts Location

INFOID:000000009268077

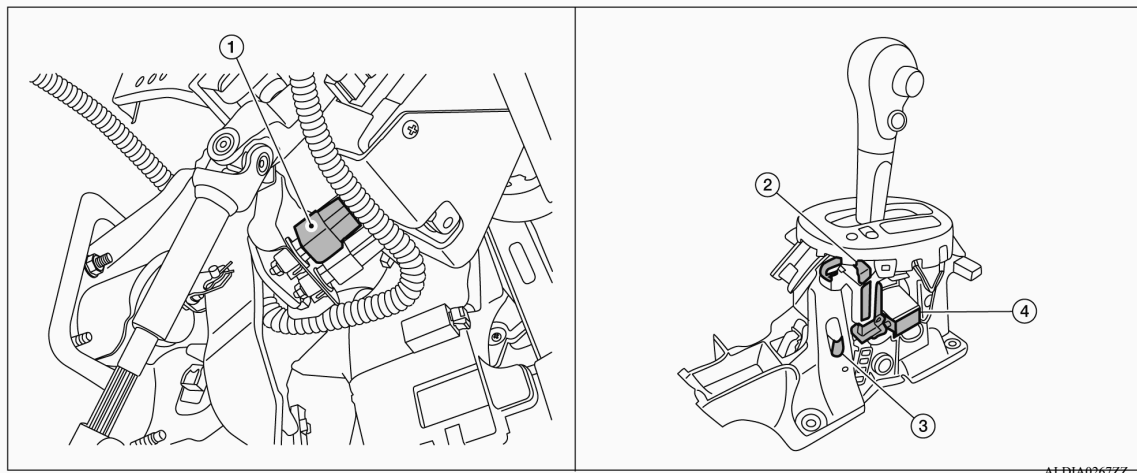

1. Stop lamp switch
2. Shift lock release lever
3. Park position switch
4. Shift lock solenoid

COMPONENT DESCRIPTION

Component	Function
Stop lamp switch	Stop lamp switch turns ON when brake pedal is depressed.
Shift lock release lever	Manually releases the shift lock.
Park position switch	Detects that the selector lever is in "P" position.
Shift lock solenoid	Operates according to the signal from the stop lamp switch and moves the lock lever.

STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >


[CVT: RE0F11A]

STRUCTURE AND OPERATION

TRANSAXLE

TRANSAXLE : Cross-Sectional View

INFOID:000000009268078

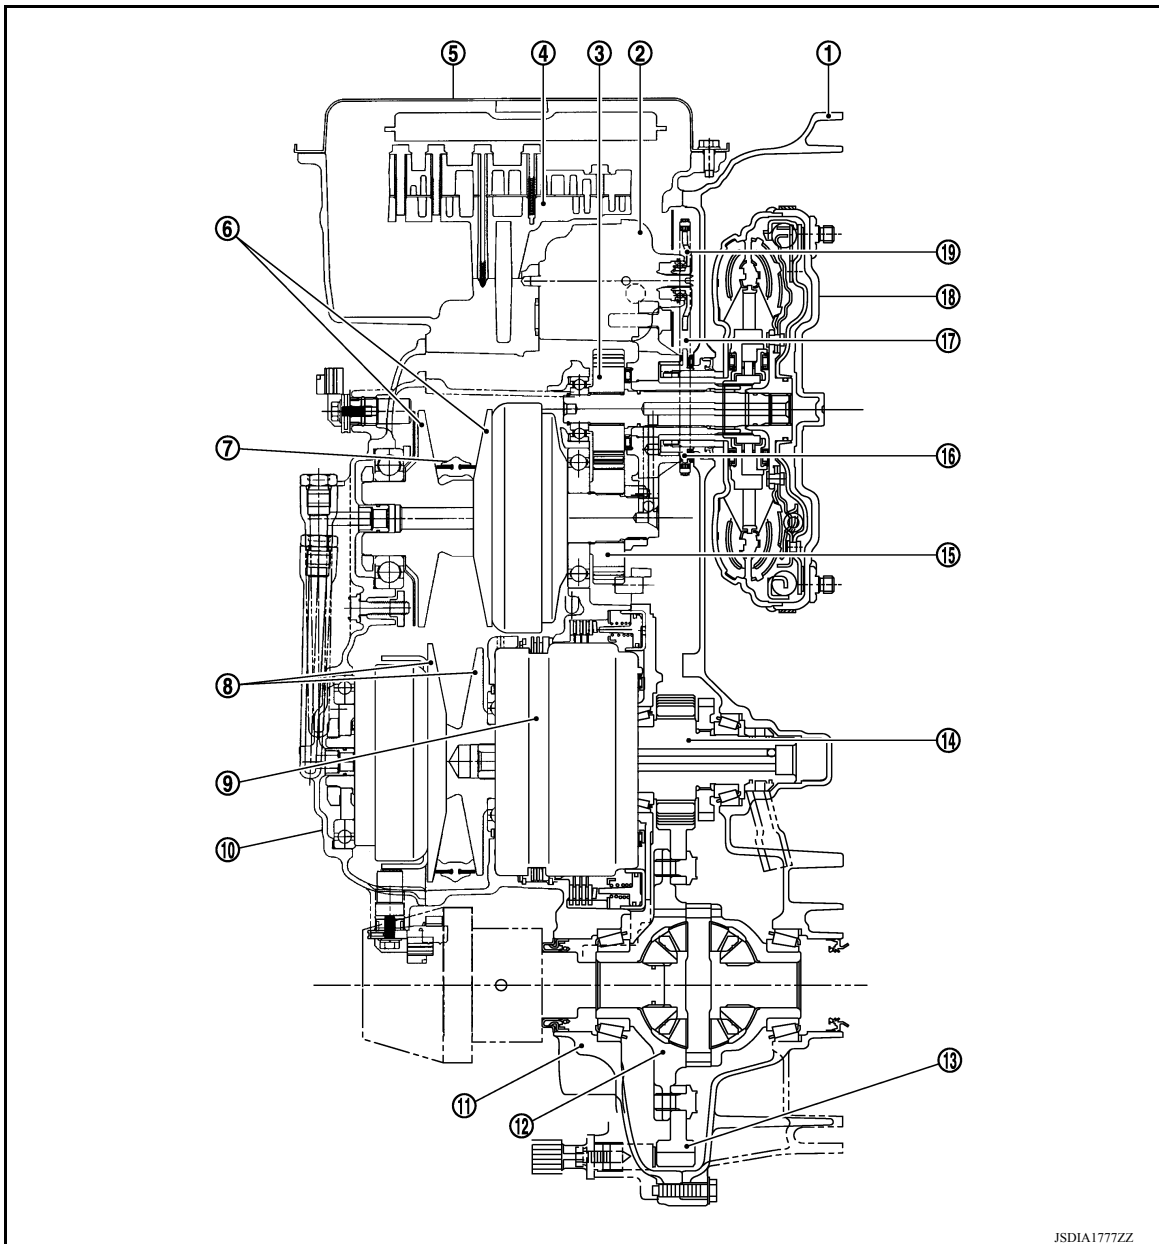

- | | | |
|----------------------|---------------------|---------------------------------------|
| 1. Converter housing | 2. Oil pump | 3. Counter drive gear |
| 4. Control valve | 5. Oil pan | 6. Primary pulley |
| 7. Steel belt | 8. Secondary pulley | 9. Planetary gear (auxiliary gearbox) |
| 10. Side cover | 11. Transaxle case | 12. Differential case |
| 13. Final gear | 14. Reduction gear | 15. Counter driven gear |
| 16. Drive sprocket | 17. Oil pump chain | 18. Torque converter |
| 19. Driven sprocket | | |

TRANSAXLE : Transaxle Mechanism

INFOID:000000009268079

BELT & PULLEY

STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

Mechanism


It is composed of a pair of pulleys (the groove width is changed freely in the axial direction) and the steel belt (the steel plates are placed continuously and the belt is guided with the multilayer steel rings on both sides). The groove width changes according to wrapping radius of steel belt and pulley from low status to overdrive status continuously with non-step. It is controlled with the oil pressures of primary pulley and secondary pulley.

Steel belt

It is composed of multiple steel plates (A) and two steel rings (B) stacked to a several number. The feature of this steel belt transmits power with compression of the steel plate in contrast with transmission of power in pulling with a rubber belt. Friction force is required with the pulley slope to transmit power from the steel plate. The force is generated with the following mechanism:


Oil pressure applies to the secondary pulley to nip the plate. ⇒The plate is pushed and extended outward. ⇒The steel ring shows withstands. ⇒Pulling force is generated on the steel ring. ⇒The plate of the primary pulley is nipped between the pulley. ⇒Friction force is generated between the steel belt and the pulley.

Therefore, responsibilities are divided by the steel plate that transmits the power with compression and the steel ring that maintains necessary friction force. In this way, the tension of the steel ring is distributed on the entire surface and stress variation is limited, resulting in good durability.

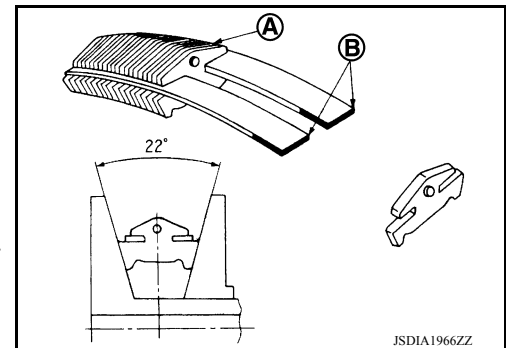

Pulley

The primary pulley (input shaft side) and the secondary pulley (output shaft side) have the shaft with slope (fixed cone surface), movable sheave (movable cone surface that can move in the axial direction) and oil pressure chamber at the back of the movable sheave.

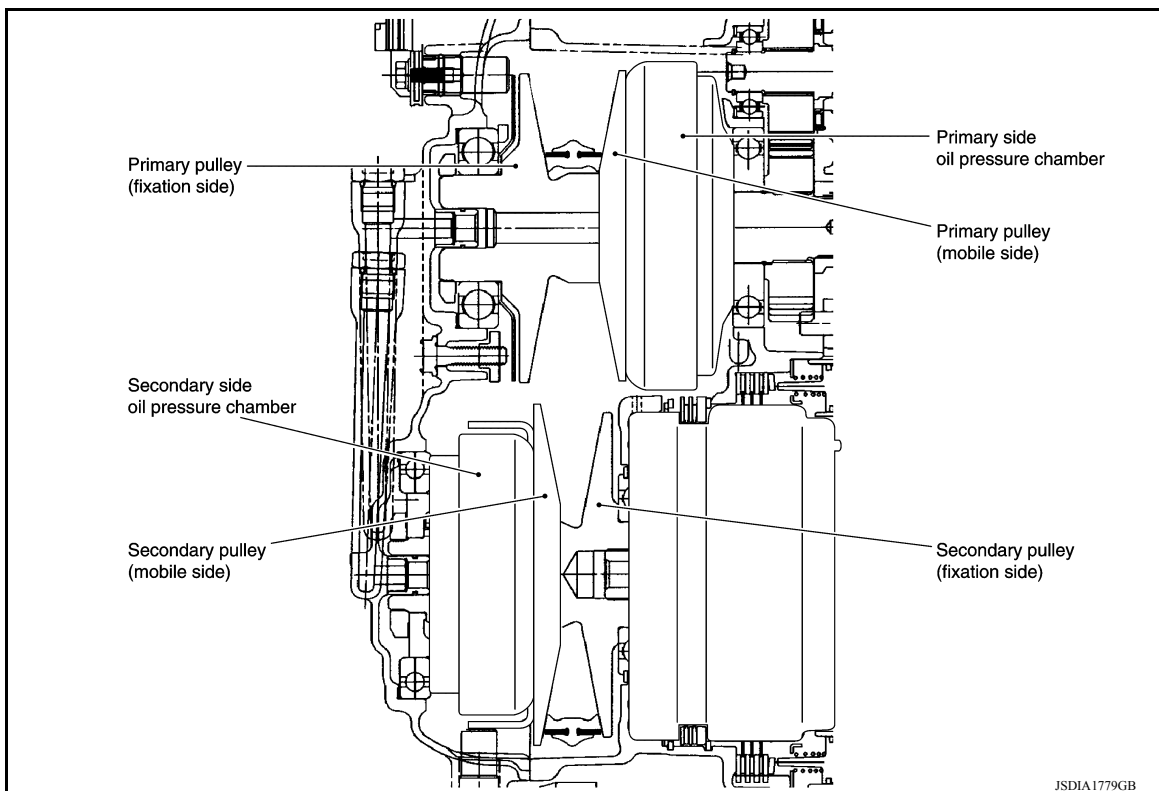

Pulley gear shifting operation

• Pulley gear shifting operation


The movable sheave slides on the shaft to change the groove width of the pulley. Input signals of engine load (accelerator pedal opening), engine revolution and gear ratio (vehicle speed) change the operation pressures of the primary pulley and the secondary pulley, and controls the pulley groove width. Along with change of the pulley groove width, the belt contact radius is changed. This allows continuous and stepless

STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

gear shifting from low to overdrive. "The contact radius ratio of each pulley in contact with the belt x auxiliary gearbox gear ratio" is the gear ratio.

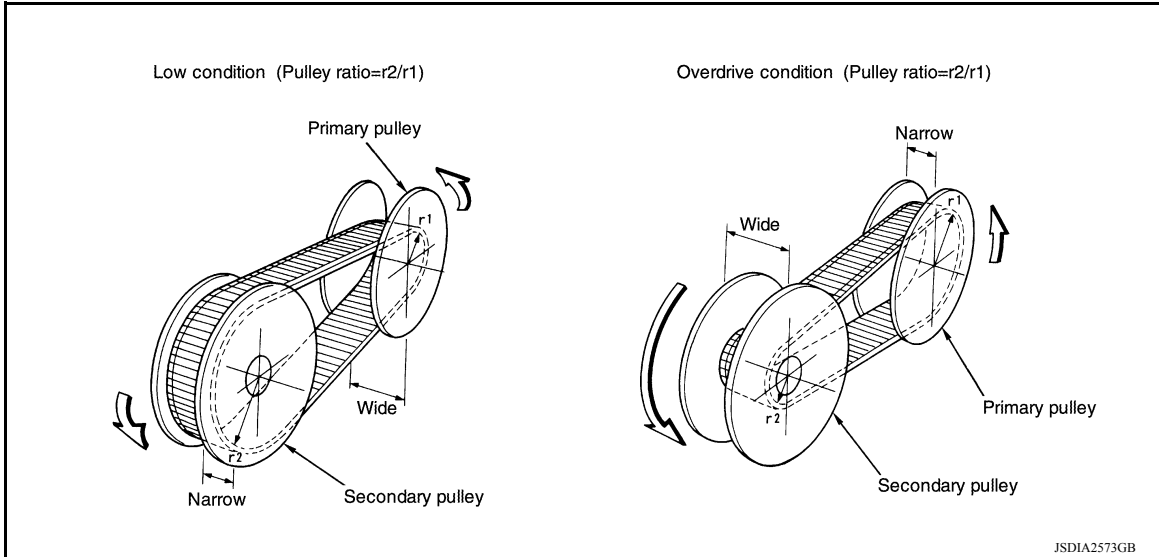

AUXILIARY GEARBOX MECHANISM

1st, 2nd and reverse gears are changed with the planetary gear mechanism.

TRANSAXLE : Operation Status

INFOID:000000009268080

×: Engaged or applied.

Slector lever position	Parking mechanism	Counter gear set	Low brake	High clutch	Reverse brake	Primary pulley	Secondary pulley	Steel belt	Reduction gear set
P	×	×				×	×	×	
R		×			×	×	×	×	×
N		×				×	×	×	
D		×	× (1GR)	× (2GR)		×	×	×	×
L		×	× (1GR)	× (2GR)		×	×	×	×

STRUCTURE AND OPERATION


< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

TRANSAXLE : Oil Pressure System

INFOID:00000009268081

Oil pressure required for operation of the transaxle transmission mechanism is generated by oil pump, oil pressure control valve, solenoid valve, etc.

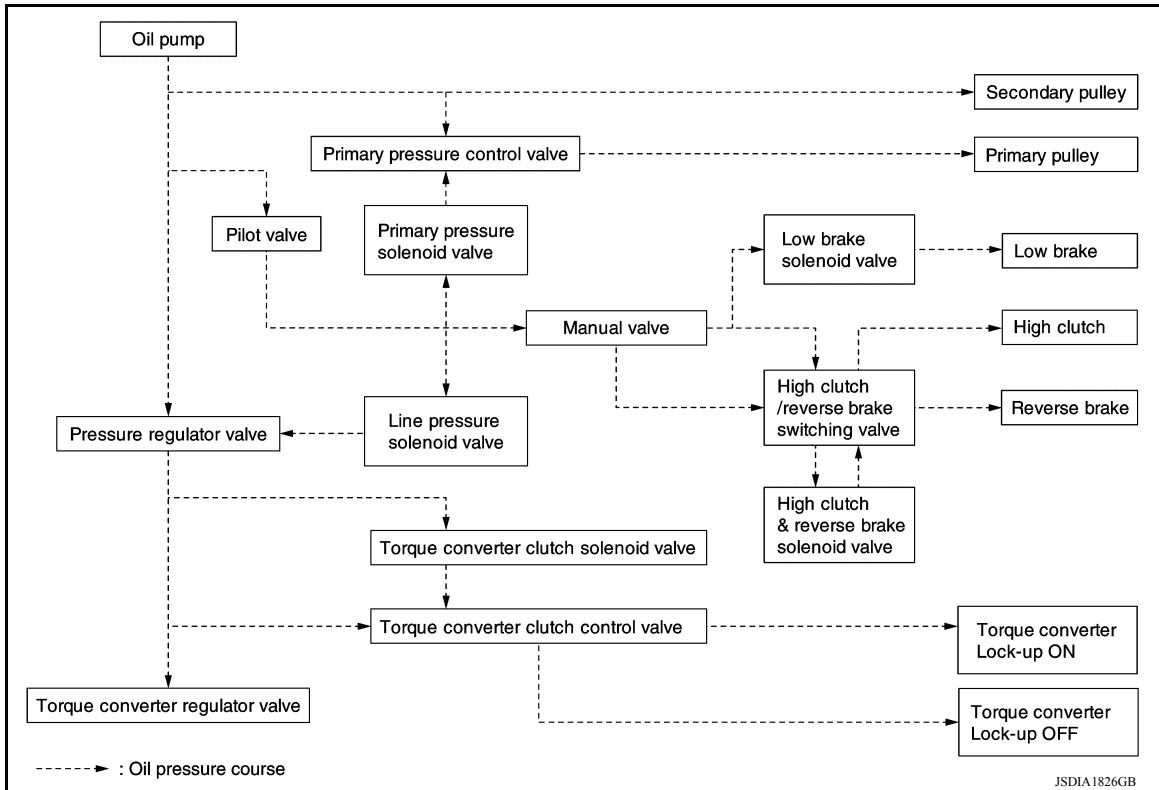

TRANSAXLE : Component Description

INFOID:00000009268082

Part name	Function
Torque converter	It is composed of the cover converter, turbine assembly, stator, pump impeller assembly, etc. It increases the engine torque and transmits the power to the transaxle.
Oil pump	Through the oil pump drive chain, it uses the vane oil pump driven by the engine. It generates necessary oil pressure to circulate fluid and to operate the clutch and brake.
Counter gear set	The power from the torque converter is transmitted to the primary pulley through the counter drive gear and the counter driven gear.
Belt & pulley (Continuously variable transmission)	It is composed of the primary pulley, secondary pulley, steel belt, etc. and the mechanism performs shifting, changes the gear ratio and transmits the power with oil pressure from the control valve.
Auxiliary gearbox (stepped transmission)	It is composed of the planetary gear, multi-disc clutch, multi-disc brake, etc. and the mechanism performs shifting (1-2 gear shifting and reverse) with oil pressure from the control valve.
Reduction gear set	Conveys power from the transmission mechanism to the reduction gear and the final gear.
Parking mechanism	When the shift lever is changed to P position, the mechanism fixes the parking gear (integrated with the reduction gear) and the fixes the output shaft.
Control valve	Controls oil pressure from the oil pump to the pressure suitable for the line pressure control system, shift control system, lock-up control system and lubrication system.
Pressure regulator valve	Adjusts the discharge pressure from the oil pump to the optimum pressure (line pressure) corresponding to the driving condition.
Torque converter regulator valve	Adjusts the feed pressure to the torque converter to the optimum pressure corresponding to the driving condition.
Pilot valve	Adjusts line pressure and produces a constant pressure (pilot pressure) necessary for activating each solenoid valve.

STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]


Part name	Function
Manual valve	Distributes the clutch and brake operation pressures (pilot pressure) corresponding to each shift position.
High clutch/reverse brake switching valve	Switches the circuit for the high clutch and the reverse brake.
Torque converter clutch control valve	It is operated with the torque converter clutch solenoid valve and it adjusts the tightening pressure and non-tightening pressure of the torque converter clutch piston of the torque converter.
Primary pressure control valve	It is operated with the primary pressure solenoid valve and adjusts the feed pressure to the primary pulley.
Primary pressure solenoid valve	TM-265, "CVT CONTROL SYSTEM : Primary Pressure Solenoid Valve"
Low brake solenoid valve	TM-265, "CVT CONTROL SYSTEM : Low Brake Solenoid Valve"
High clutch & reverse brake solenoid valve	TM-265, "CVT CONTROL SYSTEM : High Clutch & Reverse Brake Solenoid Valve"
Torque converter clutch solenoid valve	TM-265, "CVT CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve"
Line pressure solenoid valve	TM-266, "CVT CONTROL SYSTEM : Line Pressure Solenoid Valve"

FLUID COOLER & FLUID WARMER SYSTEM

FLUID COOLER & FLUID WARMER SYSTEM : System Description

INFOID:000000009268083


CVT FLUID COOLER SCHEMATIC

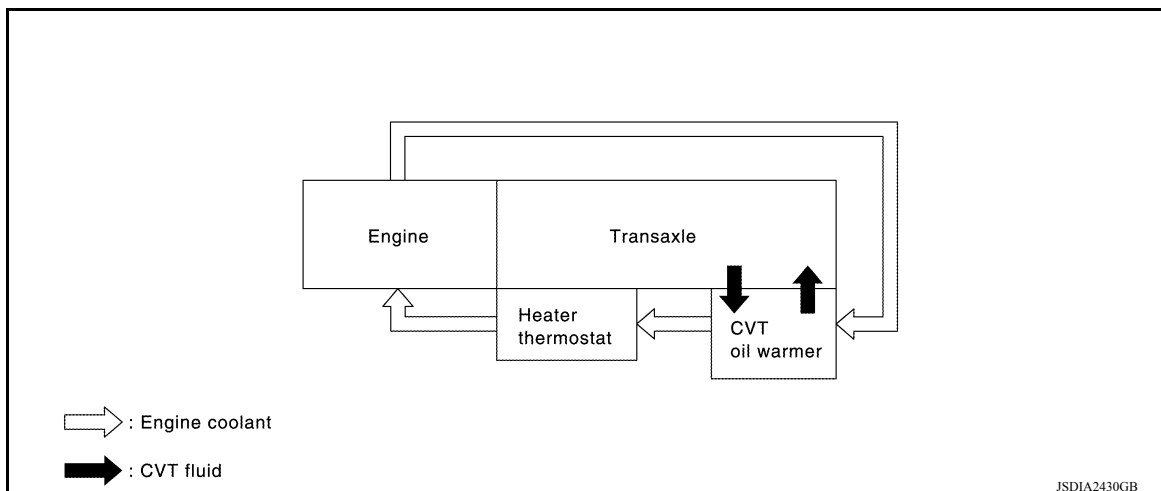

COMPONENT DESCRIPTION

CVT Oil Warmer

- The CVT oil warmer (1) is installed on the front part of transaxle assembly.
- When engine is started while engine and CVT are cold, engine coolant temperature rises more quickly than CVT fluid temperature. CVT oil warmer is provided with two circuits for CVT and engine coolant respectively so that warmed engine coolant warms CVT quickly. This helps shorten CVT warming up time, improving fuel economy.
- A cooling effect is obtained when CVT fluid temperature is high.

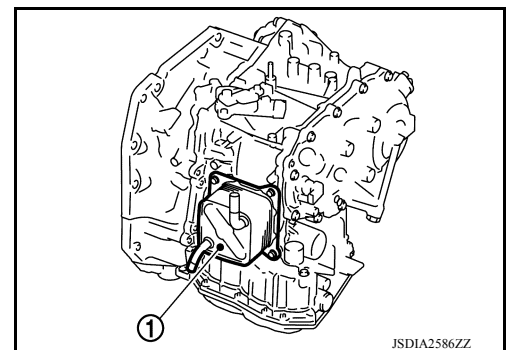


Heater Thermostat

STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

- The heater thermostat (1) is installed on the front part of transaxle assembly.
- The heater thermostat starts opening before the completion of an engine warm-up and fully opens at the completion of the engine warm-up. This allows the transaxle to be warmed up when CVT fluid temperature is lower than coolant temperature under low temperature conditions.

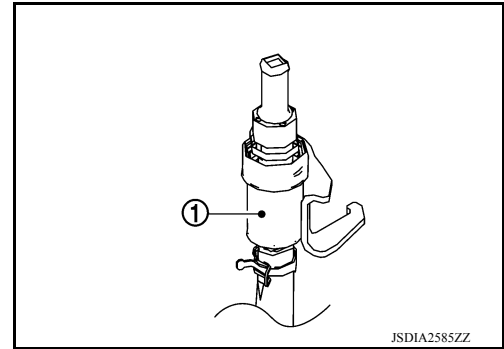

SHIFT LOCK SYSTEM

SHIFT LOCK SYSTEM : System Description

INFOID:000000009268093

The selector lever cannot be shifted from “P” position to any other position unless the ignition switch is in the ON position and the brake pedal is depressed.

KEY LOCK SYSTEM

KEY LOCK SYSTEM : System Description

INFOID:000000009268094

- The key lock mechanism also operates as a shift lock:
 - With the ignition switch turned to ON, selector lever cannot be shifted from “P” position to any other position unless brake pedal is depressed.
 - With the key removed, selector lever cannot be shifted from “P” position to any other position.
 - The key cannot be removed unless selector lever is placed in “P” position.
- The shift lock and key lock mechanisms are controlled by the ON-OFF operation of the shift lock solenoid and by the operation of the rotator and slider located inside key cylinder, respectively.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]


SYSTEM

CVT CONTROL SYSTEM

CVT CONTROL SYSTEM : System Description

INFOID:000000009268084

SYSTEM DIAGRAM

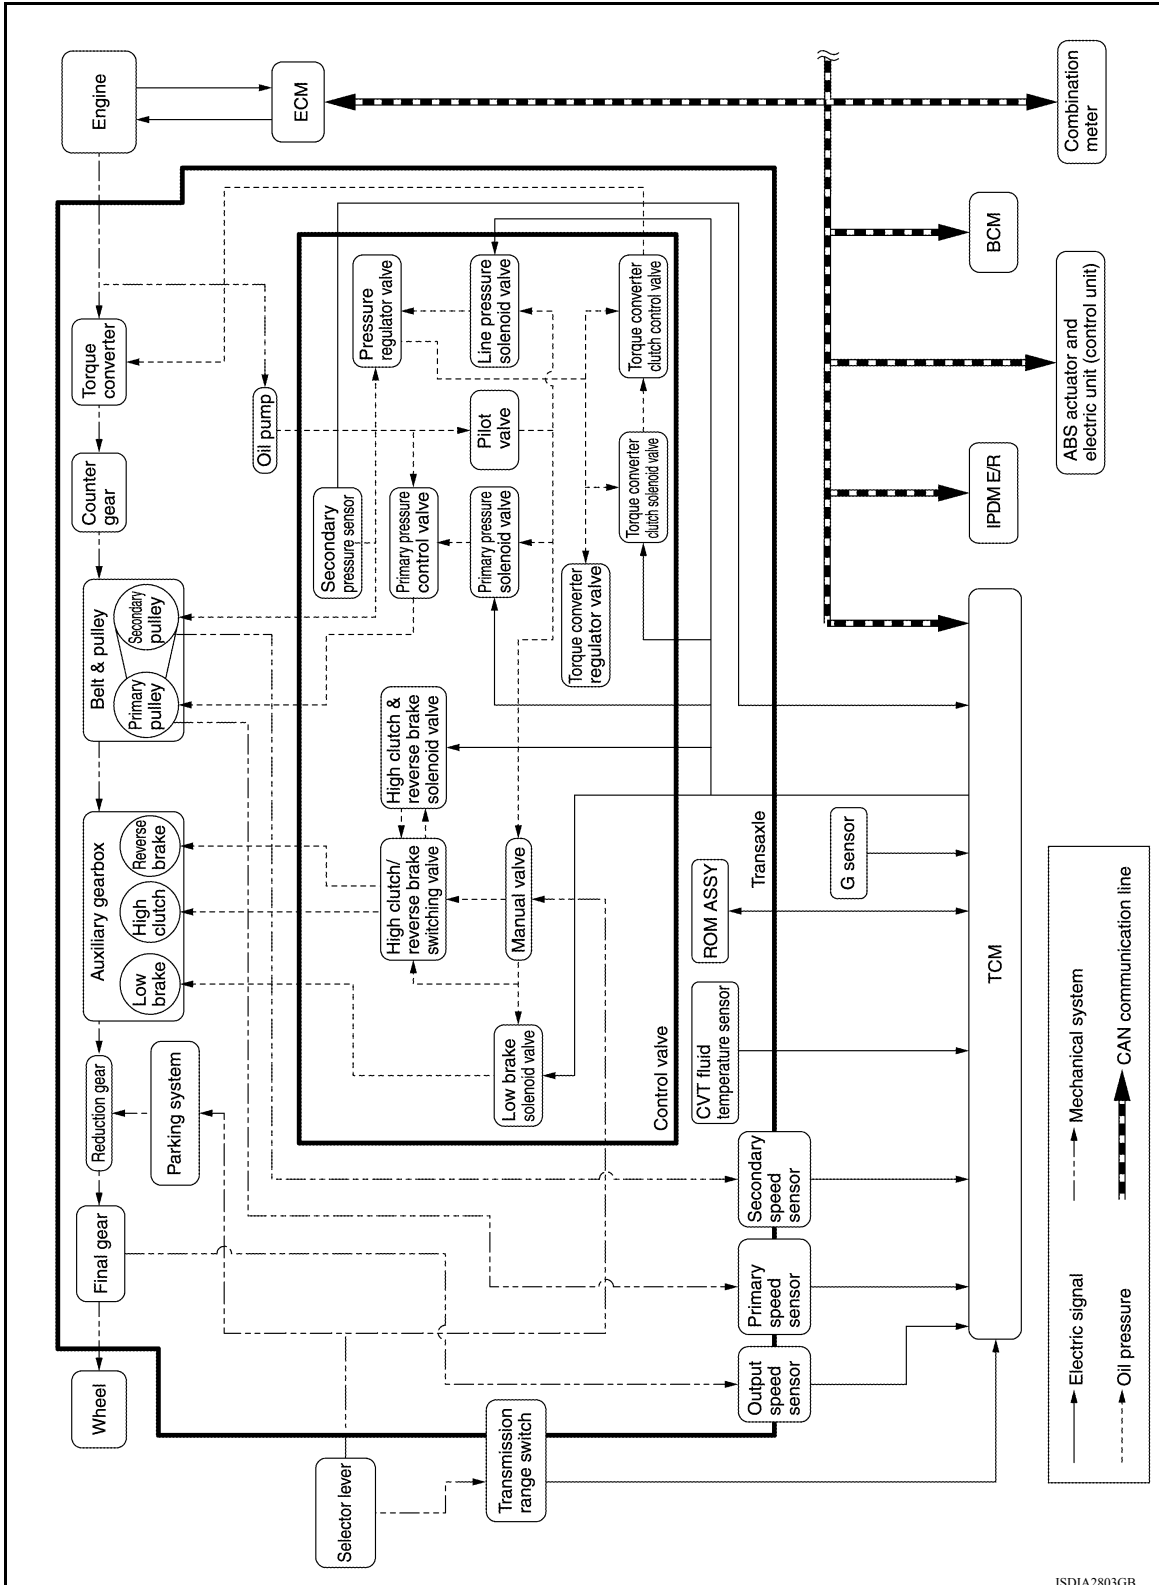

SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

INPUT/OUTPUT SIGNAL TABLE

Sensor (or signal)		TCM function		Actuator
<ul style="list-style-type: none"> • Engine and CVT integrated control signal • Engine speed signal • Accelerator pedal position signal • Closed throttle position signal • Stop lamp switch signal • Secondary pressure sensor • CVT fluid temperature sensor • Primary speed sensor • Secondary speed sensor • Output speed sensor • Transmission range switch signal • Overdrive control switch signal • Vehicle speed signal (ABS) • ABS operation signal • A/C compressor feedback signal • G sensor • N idle instruction signal • Turn indicator signal 	⇒	<ul style="list-style-type: none"> • Line pressure control (TM-282, "LINE PRESSURE CONTROL : System Description") • Shift control (TM-283, "SHIFT CONTROL : System Description") • Select control (TM-285, "SELECT CONTROL : System Description") • Lock-up control (TM-286, "LOCK-UP CONTROL : System Description") • Idle neutral control (TM-287, "IDLE NEUTRAL CONTROL : System Description") • Fail-safe mode (TM-307, "Fail-safe") • Self-diagnosis function (TM-293, "CONSULT Function") • Communication function with CONSULT (TM-293, "CONSULT Function") • CAN communication control (TM-340, "Description") 	⇒	<ul style="list-style-type: none"> • Line pressure solenoid valve • Primary pressure solenoid valve • Torque converter clutch solenoid valve • High clutch & reverse brake solenoid valve • Low brake solenoid valve • OD OFF indicator lamp • Shift position indicator

SYSTEM DESCRIPTION

- CVT detects the vehicle driving status from switches, sensors and signals, and controls the vehicle so that the optimum shift position and shift timing may always be achieved. It also controls the vehicle to reduce shift and lockup shock, etc.
- Receives input signals from switches and sensors.
- Sends the output signal necessary for operation of solenoid valves, and evaluates the line pressure, shift timing, lockup operation, engine brake performance, etc.
- If a malfunction occurs on the electric system, activate the fail-safe mode only to drive the vehicle.

LIST OF CONTROL ITEMS AND INPUT/OUTPUT

	Control Item	Shift control	Line pressure control	Select control	Lock-up control	Fail-safe function *
Input	Engine torque signal (CAN communication)	×	×	×	×	×
	Engine speed signal (CAN communication)	×	×	×	×	×
	Accelerator pedal position signal (CAN communication)	×	×	×	×	×
	Closed throttle position signal (CAN communication)	×	×		×	
	Stop lamp switch signal (CAN communication)	×	×	×	×	
	Secondary pressure sensor	×	×	×		×
	CVT fluid temperature sensor		×	×	×	×
	Primary speed sensor	×	×		×	×
	Secondary speed sensor	×	×	×	×	×
	Output speed sensor	×	×	×	×	×
	Transmission range switch	×	×	×	×	×
	Overdrive control switch (CAN communication)	×				

SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

Control Item		Shift control	Line pressure control	Select control	Lock-up control	Fail-safe function *
Output	Line pressure solenoid valve	×	×	×		×
	Primary pressure solenoid valve	×				×
	Torque converter clutch solenoid valve				×	×
	High clutch & reverse brake solenoid valve	×		×		×
	Low brake solenoid valve	×		×		×
	Shift position indicator (CAN communication)			×		
	OD OFF indicator lamp (CAN communication)	×				

·*: If these input/output signals show errors, TCM activates the fail-safe function.


SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

CVT CONTROL SYSTEM : Schematic

INFOID:00000009268085

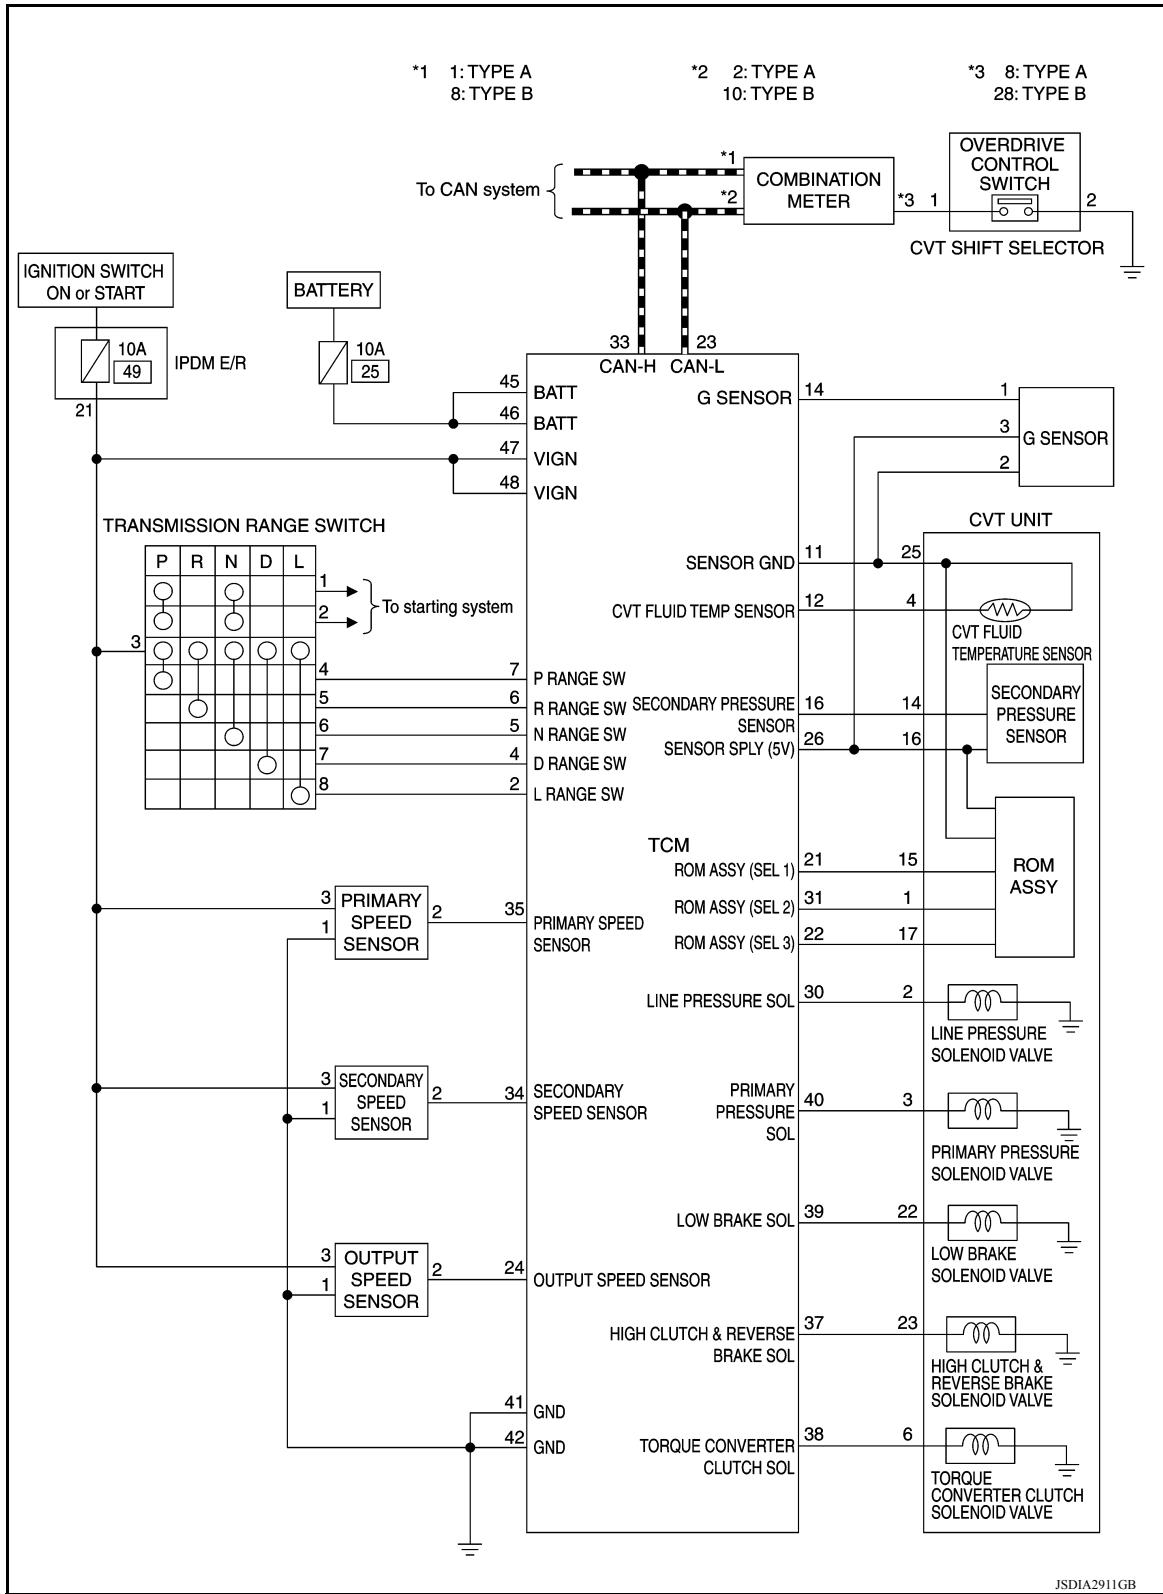


JSDIA2911GB

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

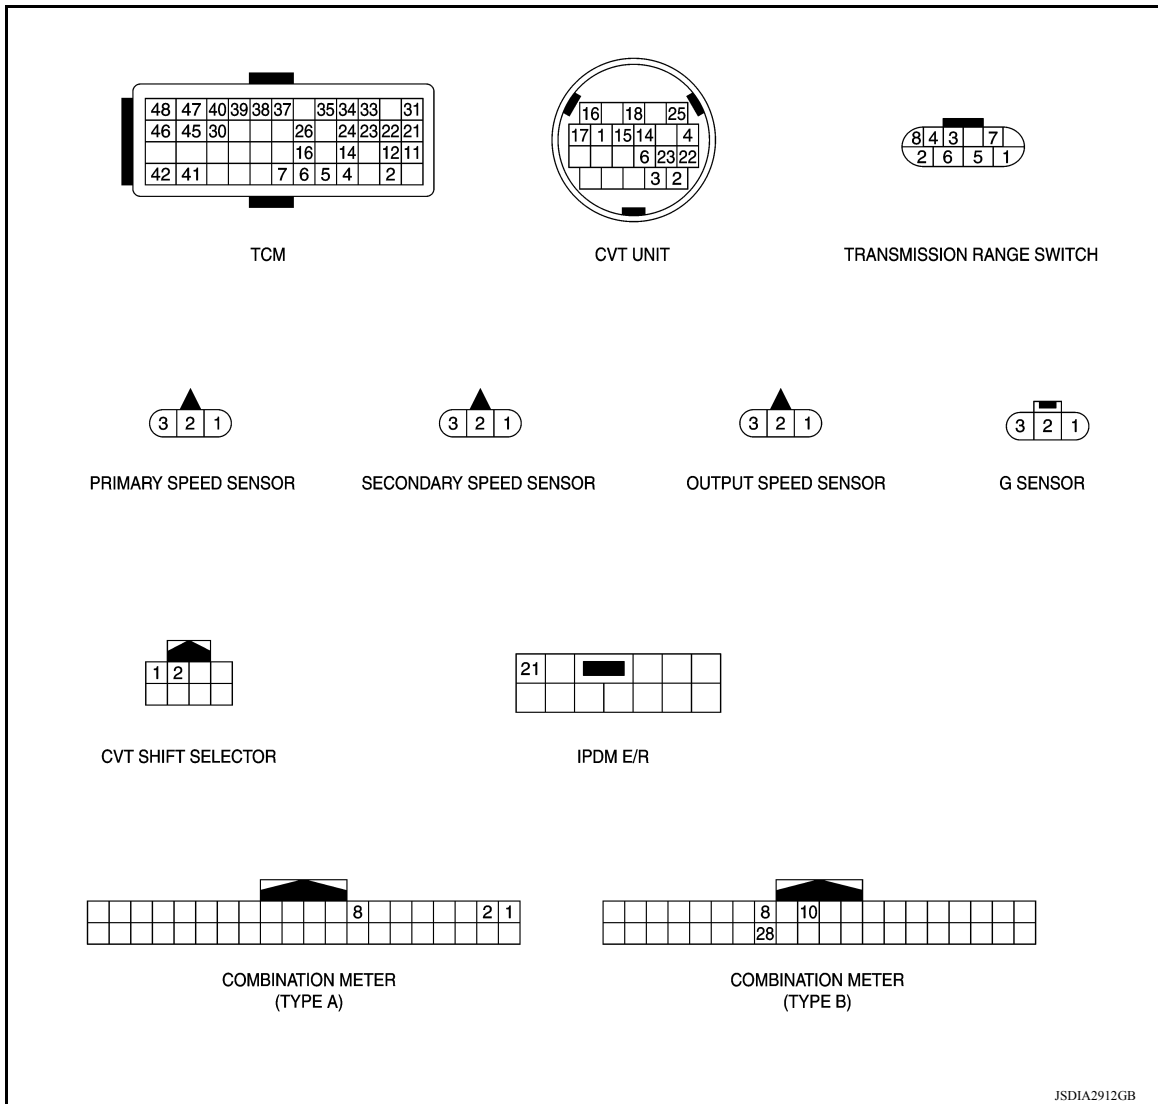

CVT CONTROL SYSTEM : Fail-safe

INFOID:000000009644832

TCM has a fail-safe mode. The mode functions so that operation can be continued even if the signal circuit of the main electronically controlled input/output parts is damaged.

If the vehicle shows following behaviors including “poor acceleration”, a malfunction of the applicable system is detected by TCM and the vehicle may be in a fail-safe mode. At this time, check the DTC code and perform inspection and repair according to the malfunction diagnosis procedures.

Fail-safe function

DTC	Vehicle behavior	Conditions of vehicle
P062F	<ul style="list-style-type: none"> Not changed from normal driving 	—
P0705	<ul style="list-style-type: none"> Shift position indicator on combination meter is not displayed. Selector shock is large Start is slow Acceleration is slow Lock-up is not performed. 	—
P0706	<ul style="list-style-type: none"> Shift position indicator on combination meter is not displayed. Selector shock is large Start is slow Acceleration is slow Lock-up is not performed. 	—

SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

DTC	Vehicle behavior	Conditions of vehicle	
P0711	• Acceleration is slow	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ (50°F)	A
	• Selector shock is large • Start is slow	Engine coolant temperature when engine start: -35°C (-31°F) \leq Temp. $< 10^{\circ}\text{C}$ (50°F)	B
	• Selector shock is large • Start is slow	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ (-31°F)	C
P0712	• Acceleration is slow	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ (50°F)	C
	• Selector shock is large • Start is slow	Engine coolant temperature when engine start: -35°C (-31°F) \leq Temp. $< 10^{\circ}\text{C}$ (50°F)	TM
	• Selector shock is large • Start is slow	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ (-31°F)	E
P0713	• Acceleration is slow	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ (50°F)	E
	• Selector shock is large • Start is slow	Engine coolant temperature when engine start: -35°C (-31°F) \leq Temp. $< 10^{\circ}\text{C}$ (50°F)	F
	• Selector shock is large • Start is slow	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ (-31°F)	G
P0715	• Selector shock is large • Start is slow • Acceleration is slow • Vehicle speed is not increased • Lock-up is not performed.	—	H
P0720	• Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed.	—	I
P0740	• Lock-up is not performed.	—	J
P0743	• Lock-up is not performed.	—	J
P0744	• Lock-up is not performed.	—	J
P0746	• Selector shock is large • Start is slow • Acceleration is slow • Vehicle speed is not increased • Lock-up is not performed.	—	K
P0846	• Start is slow • Acceleration is slow	—	L
P0847	• Acceleration is slow	—	M
P0848	• Start is slow • Acceleration is slow	—	M
P0863	• Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed.	—	N
P0890	• Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed.	—	O
P0962	• Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed.	—	P

SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

DTC	Vehicle behavior	Conditions of vehicle
P0963	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed. 	—
P0965	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed. 	—
P0966	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed. 	—
P0967	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed. 	—
P0998	<ul style="list-style-type: none"> • Start is slow • Lock-up is not performed. 	—
P0999	<ul style="list-style-type: none"> • Start is slow • Lock-up is not performed. 	Wire disconnection
	<ul style="list-style-type: none"> • Start is slow • Lock-up is not performed. 	Voltage shorting
P099B	<ul style="list-style-type: none"> • Start is slow 	—
P099C	<ul style="list-style-type: none"> • Start is slow • Lock-up is not performed. 	Wire disconnection
	<ul style="list-style-type: none"> • Start is slow • Lock-up is not performed. 	Voltage shorting
P1586	<ul style="list-style-type: none"> • Not changed from normal driving 	—
P1588	<ul style="list-style-type: none"> • Not changed from normal driving 	—
P2765	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Vehicle speed is not increased • Lock-up is not performed. 	—
P2857	<ul style="list-style-type: none"> • Start is slow • Lock-up is not performed. 	—
P2858	<ul style="list-style-type: none"> • Vehicle speed is not increased • Lock-up is not performed. 	—
P2859	<ul style="list-style-type: none"> • Vehicle speed is not increased 	—
P285A	<ul style="list-style-type: none"> • Start is slow 	—
U0073	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed. 	—
U0100	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed. 	—
U0140	<ul style="list-style-type: none"> • Not changed from normal driving 	—
U0141	<ul style="list-style-type: none"> • Not changed from normal driving 	—
U0155	<ul style="list-style-type: none"> • Not changed from normal driving 	—
U0300	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed. 	—

SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

DTC	Vehicle behavior	Conditions of vehicle
U1000	• Not changed from normal driving	—
U1117	• Not changed from normal driving	—

CVT CONTROL SYSTEM : Protection Control

INFOID:000000009268087

The TCM becomes the protection control status temporarily to protect the safety when the safety of TCM and transmission is lost. It automatically returns to the normal status if the safety is secured. The TCM has the following protection control.

CONTROL FOR WHEEL SPIN

Control	When a wheel spin is detected, the engine output and gear ratio are limited and the line pressure is increased. At the 1GR, the clutch pressure is increased.
Vehicle behavior in control	If the accelerator is kept depressing during wheel spin, the engine revolution and vehicle speed are limited to a certain degree. From the 1GR, upshift to a certain gear ratio is only allowed.
Normal return condition	Wheel spin convergence returns the control to the normal control.

CONTROL WHEN FLUID TEMPERATURE IS HIGH

Control	When the CVT fluid temperature is high, the gear shift permission maximum revolution and the maximum torque are reduced than usual to prevent increase of the oil temperature.
Vehicle behavior in control	Power performance may be lowered, compared to normal control.
Normal return condition	The control returns to the normal control when CVT fluid temperature is lowered.

TORQUE IS REDUCED WHEN DRIVING WITH THE REVERSE GEAR

Control	Engine output is controlled according to a vehicle speed while reversing the vehicle.
Vehicle behavior in control	Power performance may be lowered while reversing the vehicle.
Normal return condition	Torque returns to normal by positioning the selector lever in a range other than "R" position.

REVERSE PROHIBIT CONTROL

Control	The reverse brake is controlled to avoid becoming engaged when the selector lever is set in "R" position while driving in forward direction at more than the specified speed.
Vehicle behavior in control	If the selector lever is put at "R" position when driving with the forward gear, the gear becomes neutral, not reverse.
Normal return condition	The control returns to normal control when the vehicle is driven at low speeds. (The reverse brake becomes engaged.)


LINE PRESSURE CONTROL

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

LINE PRESSURE CONTROL : System Description

INFOID:000000009268088

SYSTEM DIAGRAM

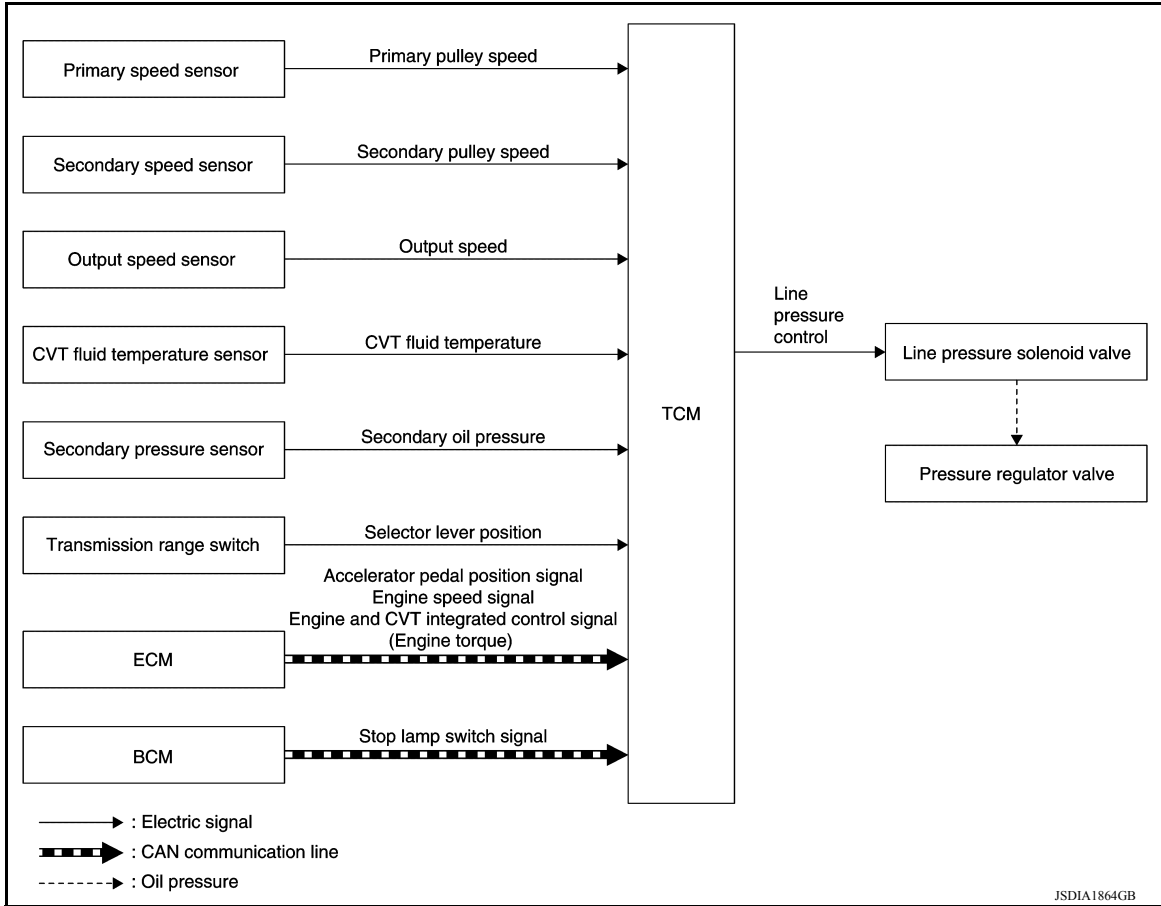

DESCRIPTION

Highly accurate line pressure control (secondary pressure control) reduces friction for improvement of fuel economy.

Normal Oil Pressure Control

Appropriate line pressure and secondary pressure suitable for driving condition are determined based on the accelerator pedal position, engine speed, primary pulley (input) speed, secondary pulley (output) speed, vehicle speed, input torque, stop lamp switch signal, transmission range switch signal, lock-up signal, power voltage, target shift ratio, oil temperature and oil pressure.

Secondary Pressure Feedback Control


In normal oil pressure control and oil pressure control in shifting, highly accurate secondary pressure is determined by detecting the secondary pressure using an oil pressure sensor and by feedback control.

SHIFT CONTROL

SHIFT CONTROL : System Description

INFOID:000000009268089

SYSTEM DIAGRAM

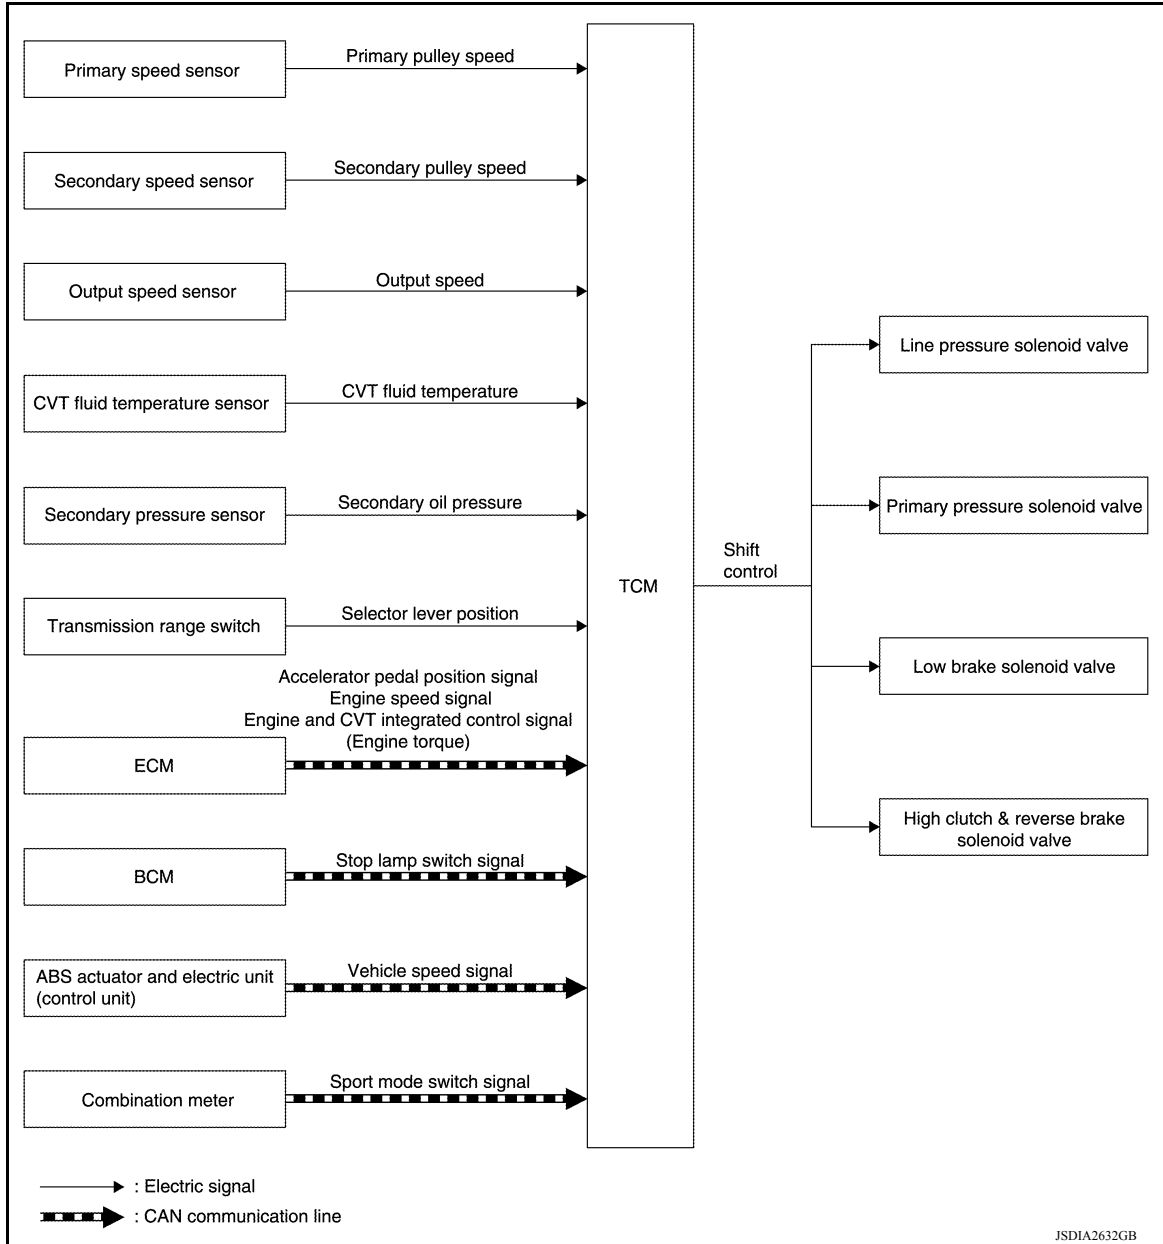

DESCRIPTION

To select the gear ratio that can give the driving force to meet driver's intent or vehicle situation, the vehicle driving condition such as vehicle speed or accelerator pedal position is detected and the most appropriate gear ratio is selected and the shifting method before reaching the speed is determined. The information is output to the primary pressure solenoid valve to control the line pressure input/output to the primary pulley, to determine the primary pulley (movable pulley) position and to control the gear position.

D Position (Normal)


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM

< SYSTEM DESCRIPTION >


[CVT: RE0F11A]

Gear shifting is performed in all shifting ranges from the lowest to the highest gear ratio.

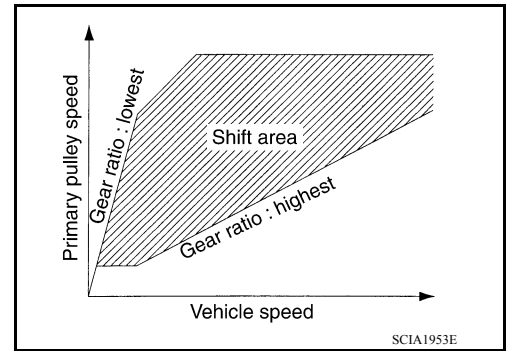


D Position (Sport)

The gear ratio is generally high by limiting the shifting range on the high side, and this always generates a large driving power.

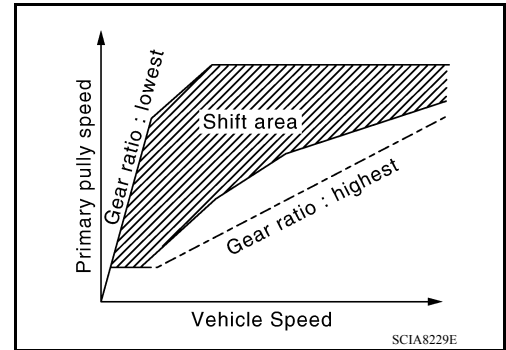

L Position

By limiting the shifting range only to the lowest of the gear ratio, a large driving force and engine brake are obtained.

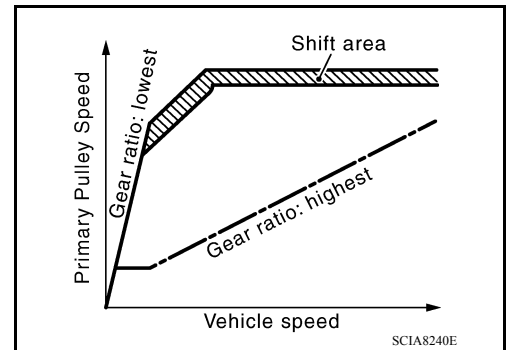


Hill Climbing And Descending Control

If a downhill is detected with the accelerator pedal is released, the system performs downshift to increase the engine brake force so that vehicle may not be accelerated more than necessary. If a climbing hill is detected, the system improves the acceleration performance in re-acceleration by limiting the gear shift range on the high side.

NOTE:

For engine brake control on a downhill, the control can be stopped with CONSULT.

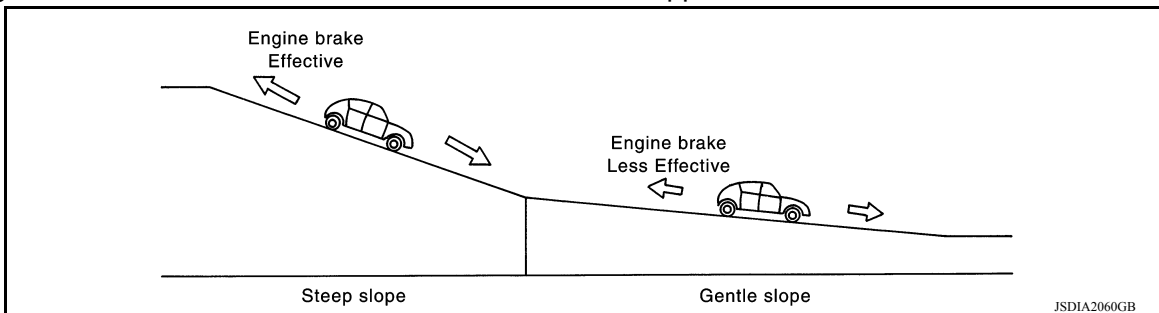

Control In Acceleration


From change of the vehicle speed or accelerator pedal position, the acceleration request level of the driver or driving scene is evaluated. In start or acceleration during driving, the gear shift characteristics with linearity of revolution increase and vehicle speed increase are gained to improve the acceleration feel.

SELECT CONTROL

SELECT CONTROL : System Description

INFOID:00000009268090

SYSTEM DIAGRAM

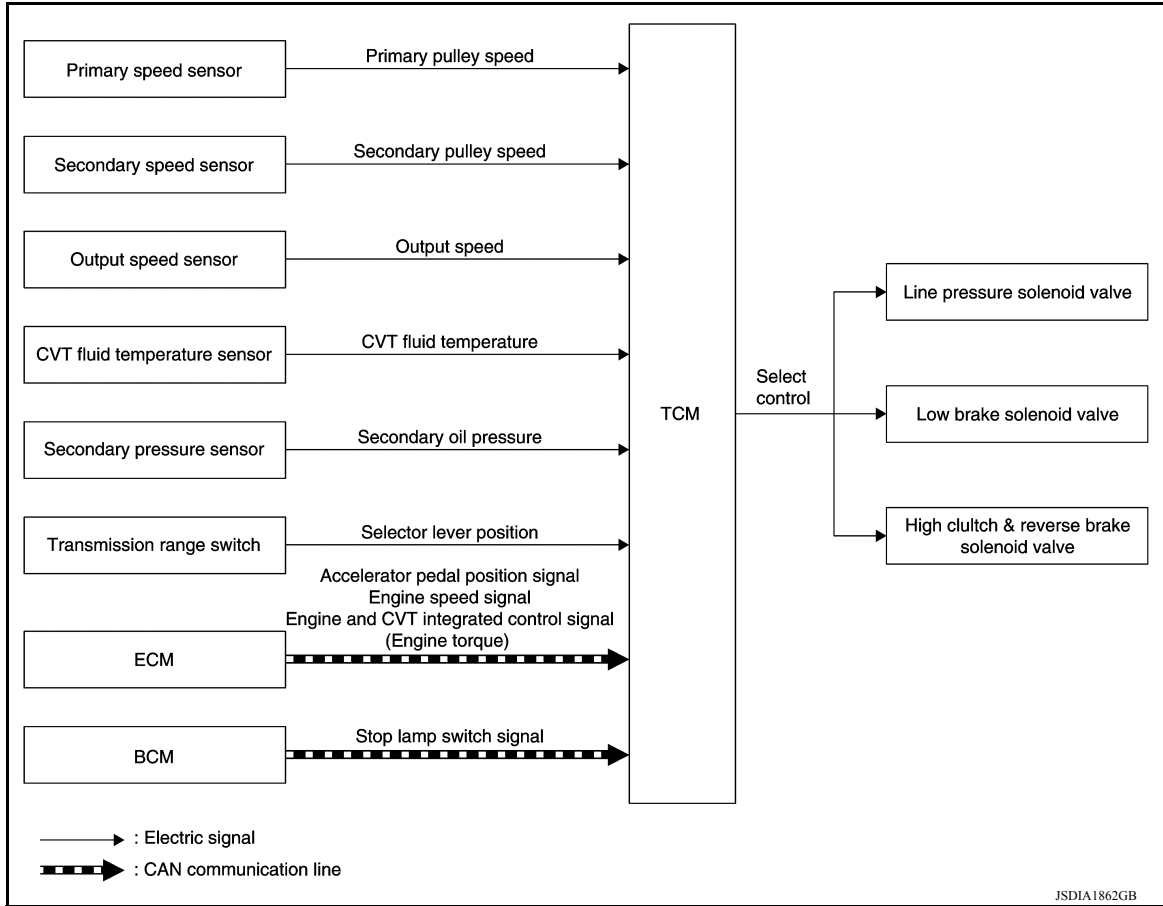

DESCRIPTION

Based on accelerator pedal angle, engine speed, primary pulley speed, and the secondary pulley speed, the optimum operating pressure is set to reduce impact of a selector lever operation while shifting from "N" ("P") to "D" ("R") position.


LOCK-UP CONTROL

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

LOCK-UP CONTROL : System Description

INFOID:000000009268091

SYSTEM DIAGRAM

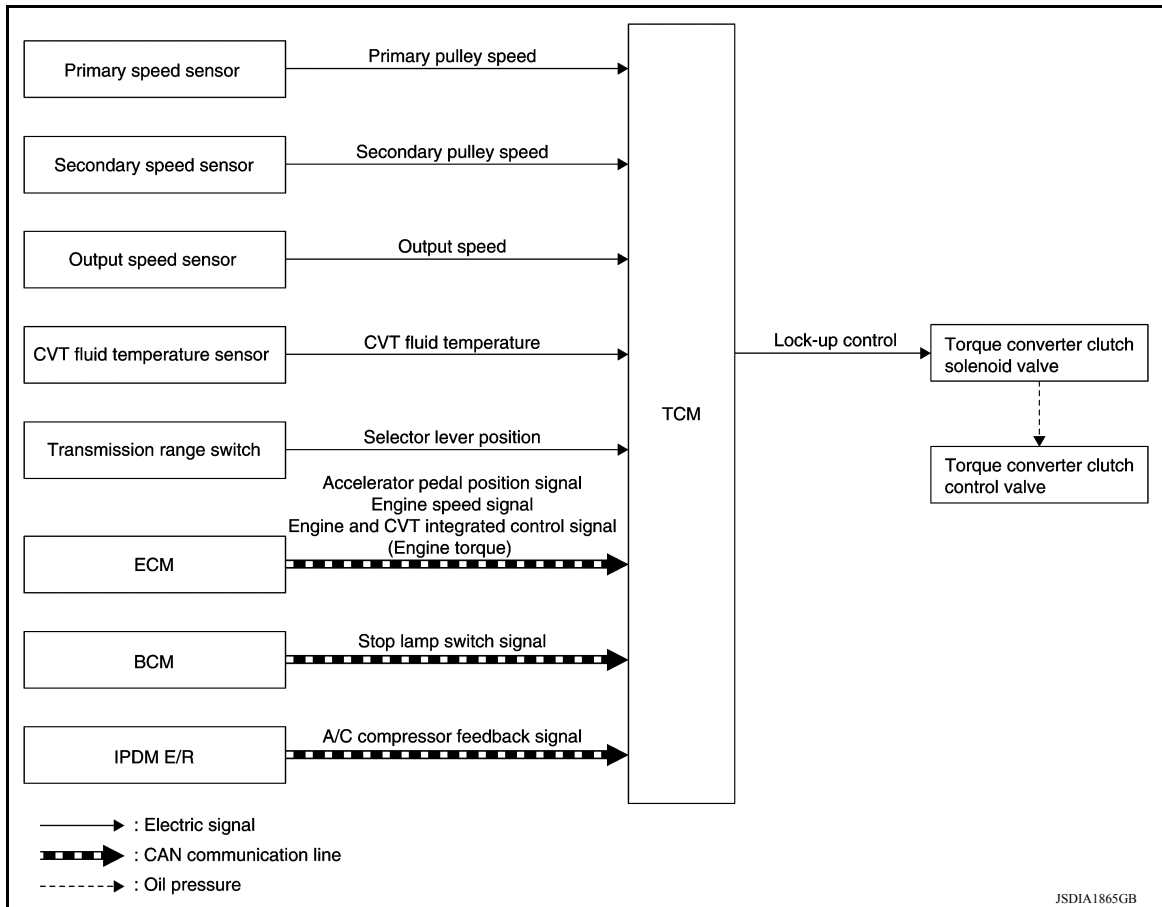

DESCRIPTION

- Controls for improvement of the transmission efficiency by engaging the torque converter clutch in the torque converter and eliminating slip of the converter. Achieves comfortable driving with slip control of the torque converter clutch.
- The oil pressure feed circuit for the torque converter clutch piston chamber is connected to the torque converter clutch control valve. The torque converter clutch control valve is switched by the torque converter clutch solenoid valve with the signal from TCM. This controls the oil pressure circuit, which is supplied to the torque converter clutch piston chamber, to the release side or engagement side.
- If the CVT fluid temperature is low or the vehicle is in fail-safe mode due to malfunction, lock-up control is prohibited.

Lock-up engagement

In lock-up engagement, the torque converter clutch solenoid valve makes the torque converter clutch control valve locked up to generate the lock-up apply pressure. This pushes the torque converter clutch piston for engagement.

Lock-up release condition


In lock-up release, the torque converter clutch solenoid valve makes the torque converter clutch control valve non-locked up to drain the lock-up apply pressure. This does not engage the torque converter clutch piston.

IDLE NEUTRAL CONTROL

IDLE NEUTRAL CONTROL : System Description

INFOID:000000009268092

SYSTEM DIAGRAM

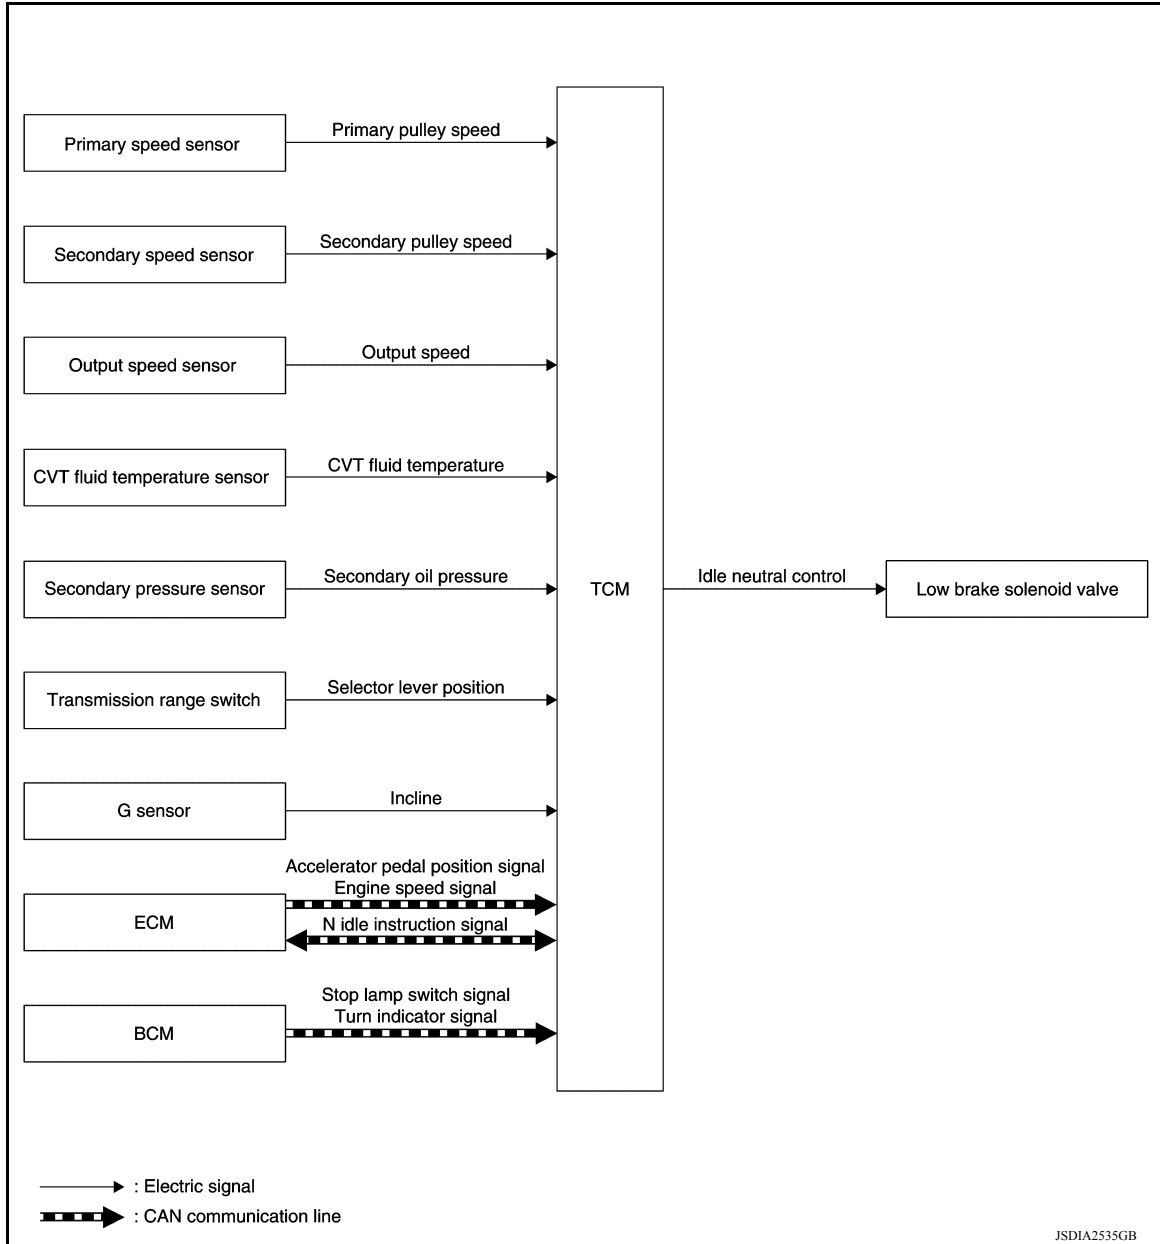

DESCRIPTION

If a driver has no intention of starting the vehicle in D position, TCM operates the low brake solenoid valve and controls the oil pressure of the low brake to be low pressure. Therefore, the low brake is in the release (slip) status and the power transmission route of transaxle is the same status as the N position. In this way, the transaxle is in idling status and load to the engine can be reduced to improve fuel economy.

NOTE:


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

Provides idle neutral control when stop/start operation is not performed.

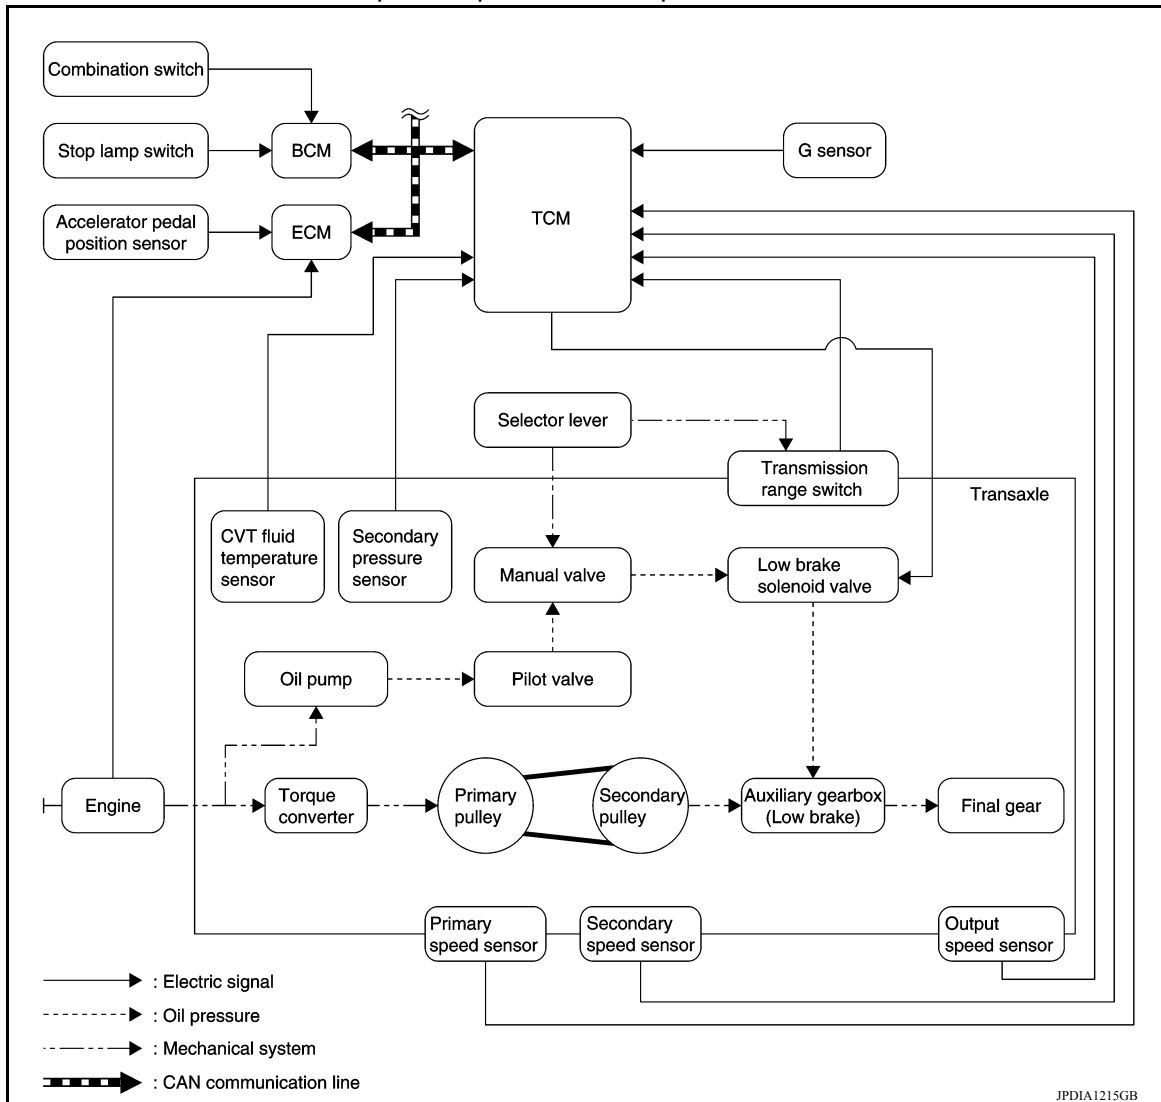

Idle Neutral Control Start Condition

Idle neutral control is started when all of the following conditions are fulfilled. However, during idle neutral control, idle neutral control is stopped when any of the following conditions is not met or idle neutral control continues 30 seconds.

Driving environment	: Flat road or road with mild gradient
Selector lever position	: "D" position
Vehicle speed	: 0 km/h (0 MPH)
Accelerator pedal position	: 0.0/8
Brake pedal	: Depressed
Engine speed	: Idle speed
Turn signal lamp/hazard signal lamp	: Not activated

NOTE:

Stops or prohibits the idle neutral control when the TCM and ECM detect that the vehicle is in one of the following conditions.

- Engine coolant temperature and CVT fluid temperature are the specified temperature or more, or the specified temperature or less.
- When a transaxle malfunction occurs.
- When the vehicle detects DTC and is in the fail-safe mode.

Idle Neutral Control Resume Condition

SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

When the idle neutral control finishes, if the vehicle is driven at more than the specified speed and the idle neutral control start conditions are satisfied, the idle neutral control starts again. If the vehicle has a malfunction, the idle neutral control does not start.

- A
- B
- C
- TM**
- E
- F
- G
- H
- I
- J
- K
- L
- M
- N
- O
- P

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

ON BOARD DIAGNOSTIC (OBD) SYSTEM

Description

INFOID:000000009268095

This is an on board diagnosis system which records diagnosis information related to the exhaust gases. It detects malfunctions related to sensors and actuators. The malfunctions are indicated by means of the malfunction indicator lamp (MIL) and are stored as DTC in the ECU memory. The diagnosis information can be checked using a diagnosis tool (GST: Generic Scan Tool).

Function of OBD

INFOID:000000009268096

The GST is connected to the diagnosis connector on the vehicle and communicates with the on-board control units to perform diagnosis. The diagnosis connector is the same as for CONSULT. Refer to [GI-53, "Description"](#).

DIAGNOSIS SYSTEM (TCM)

DIAGNOSIS DESCRIPTION

DIAGNOSIS DESCRIPTION : 1 Trip Detection Diagnosis and 2 Trip Detection Diagnosis

INFOID:000000009268097

NOTE:

"Start the engine and turn OFF the ignition switch after warm-up." This is defined as 1 trip.

1 TRIP DETECTION DIAGNOSIS

When initial malfunction is detected, TCM memorizes DTC. In these diagnoses, some illuminate MIL and some do not. Refer to [TM-311. "DTC Index"](#).

2 TRIP DETECTION DIAGNOSIS

When initial malfunction is detected, TCM memorizes DTC of the 1st trip. MIL does not light at this stage. <1 trip>

If the same malfunction is detected again in next driving, TCM memorizes DTC. When DTC is memorized, MIL lights. <2 trip>

"Trip" of the "2 trip detection diagnosis" indicates the driving mode that executes self-diagnosis during driving.

×: Check possible —: Check not possible

Item	DTC at the 1st trip		DTC		MIL	
	Display at the 1st trip	Display at the 2nd trip	Display at the 1st trip	Display at the 2nd trip	Illumination at the 1st trip	Illumination at the 2nd trip
1 trip detection diagnosis (Refer to TM-311. "DTC Index")	—	—	×	—	×	—
2 trip detection diagnosis (Refer to TM-311. "DTC Index")	×	—	—	×	—	×

DIAGNOSIS DESCRIPTION : DTC and DTC of 1st Trip

INFOID:000000009268098

2 TRIP DETECTION DIAGNOSIS THAT ILLUMINATES MIL

- The DTC number of the 1st trip is the same as the DTC number.
- When a malfunction is detected at the 1st trip, TCM memorizes DTC of the 1st trip. MIL does not light at this stage. If the same malfunction is not detected at the 2nd trip (conforming to necessary driving conditions), DTC at the 1st trip is erased from TCM. If the same malfunction is detected at the 2nd trip, TCM memorizes DTC and MIL lights at the same time.
- The DTC of the 1st trip is specified in Service \$01 of SAE J1979/ISO 15031-5. Since detection of DTC at the 1st trip does not illuminate MIL, warning for a problem is not given to a driver.
- For procedure to delete DTC and 1st trip DTC from TCM, refer to [TM-293. "CONSULT Function"](#).
- If DTC of the 1st trip is detected, it is necessary to check the cause according to the "Diagnosis flow". Refer to [TM-322. "Work Flow"](#).

DIAGNOSIS DESCRIPTION : Malfunction Indicator Lamp (MIL)

INFOID:000000009268099

- TCM not only detects DTC, but also sends the MIL signal to ECM through CAN communication. ECM sends the MIL signal to the combination meter through CAN communication according to the signal, and illuminates MIL.
- For malfunction indicator lamp (MIL) description, refer to [EC-58. "DIAGNOSIS DESCRIPTION : Malfunction Indicator Lamp \(MIL\)"](#).

DIAGNOSIS DESCRIPTION : Counter System

INFOID:000000009268100

RELATION BETWEEN DTC AT 1ST TRIP/DTC/MIL AND DRIVING CONDITIONS (FOR 2 TRIP DETECTION DIAGNOSIS THAT ILLUMINATES MIL)

- When initial malfunction is detected, TCM memorizes DTC of the 1st trip. MIL does not light at this stage.
- If the same malfunction is detected at the 2nd trip, TCM memorizes DTC and MIL lights at the same time.
- Then, MIL goes after driving the vehicle for 3 trips under "Driving condition B" without malfunction.
- DTC is displayed until 40 trips of "Driving condition A" are satisfied without detecting the same malfunction. DTC is erased when 40 trips are satisfied.

DIAGNOSIS SYSTEM (TCM)

[CVT: RE0F11A]

< SYSTEM DESCRIPTION >

- When the self-diagnosis result is acceptable at the 2nd trip (conforming to driving condition B), DTC of the 1st trip is erased.

COUNTER SYSTEM LIST

Item	Driving condition	Trip
MIL (OFF)	B	3
DTC (clear)	A	40
DTC at 1st trip (clear)	B	1

DRIVING CONDITION

Driving condition A

Driving condition A is the driving condition that provides warm-up.

In specific, count-up is performed when all of the following conditions are satisfied.

- Engine speed is 400 rpm or more.
- After start of the engine, the water temperature increased by 20 °C (36 °F) or more.
- Water temperature was 70 °C (158 °F) or more.
- The ignition switch was changed from ON to OFF.

NOTE:

- If the same malfunction is detected regardless of the driving condition, reset the A counter.
- When the above is satisfied without detecting the same malfunction, count up the A counter.
- When MIL goes off due to the malfunction and the A counter reaches 40, the DTC is erased.

Driving condition B

Driving condition B is the driving condition that performs all diagnoses once.

In specific, count-up is performed when all of the following conditions are satisfied.

- Engine speed is 400 rpm or more.
- Water temperature was 70 °C (158 °F) or more.
- In closed loop control, vehicle speed of 70 – 120 km/h (43 – 75 MPH) continued for 60 seconds or more.
- In closed loop control, vehicle speed of 30 – 60 km/h (19 – 37 MPH) continued for 10 seconds or more.
- In closed loop control, vehicle speed of 4 km/h (2 MPH) or less and idle determination ON continued for 12 seconds or more.
- After start of the engine, 22 minutes or more have passed.
- The condition that the vehicle speed is 10km/h (6 MPH) or more continued for 10 seconds or more in total.
- The ignition switch was changed from ON to OFF.

NOTE:


- If the same malfunction is detected regardless of the driving condition, reset the B counter.
- When the above is satisfied without detecting the same malfunction, count up the B counter.
- When the B counter reaches 3 without malfunction, MIL goes off.
- When the B counter is counted once without detecting the same malfunction after TCM memorizes DTC of the 1st trip, DTC of the 1st trip is erased.

DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

TIME CHART

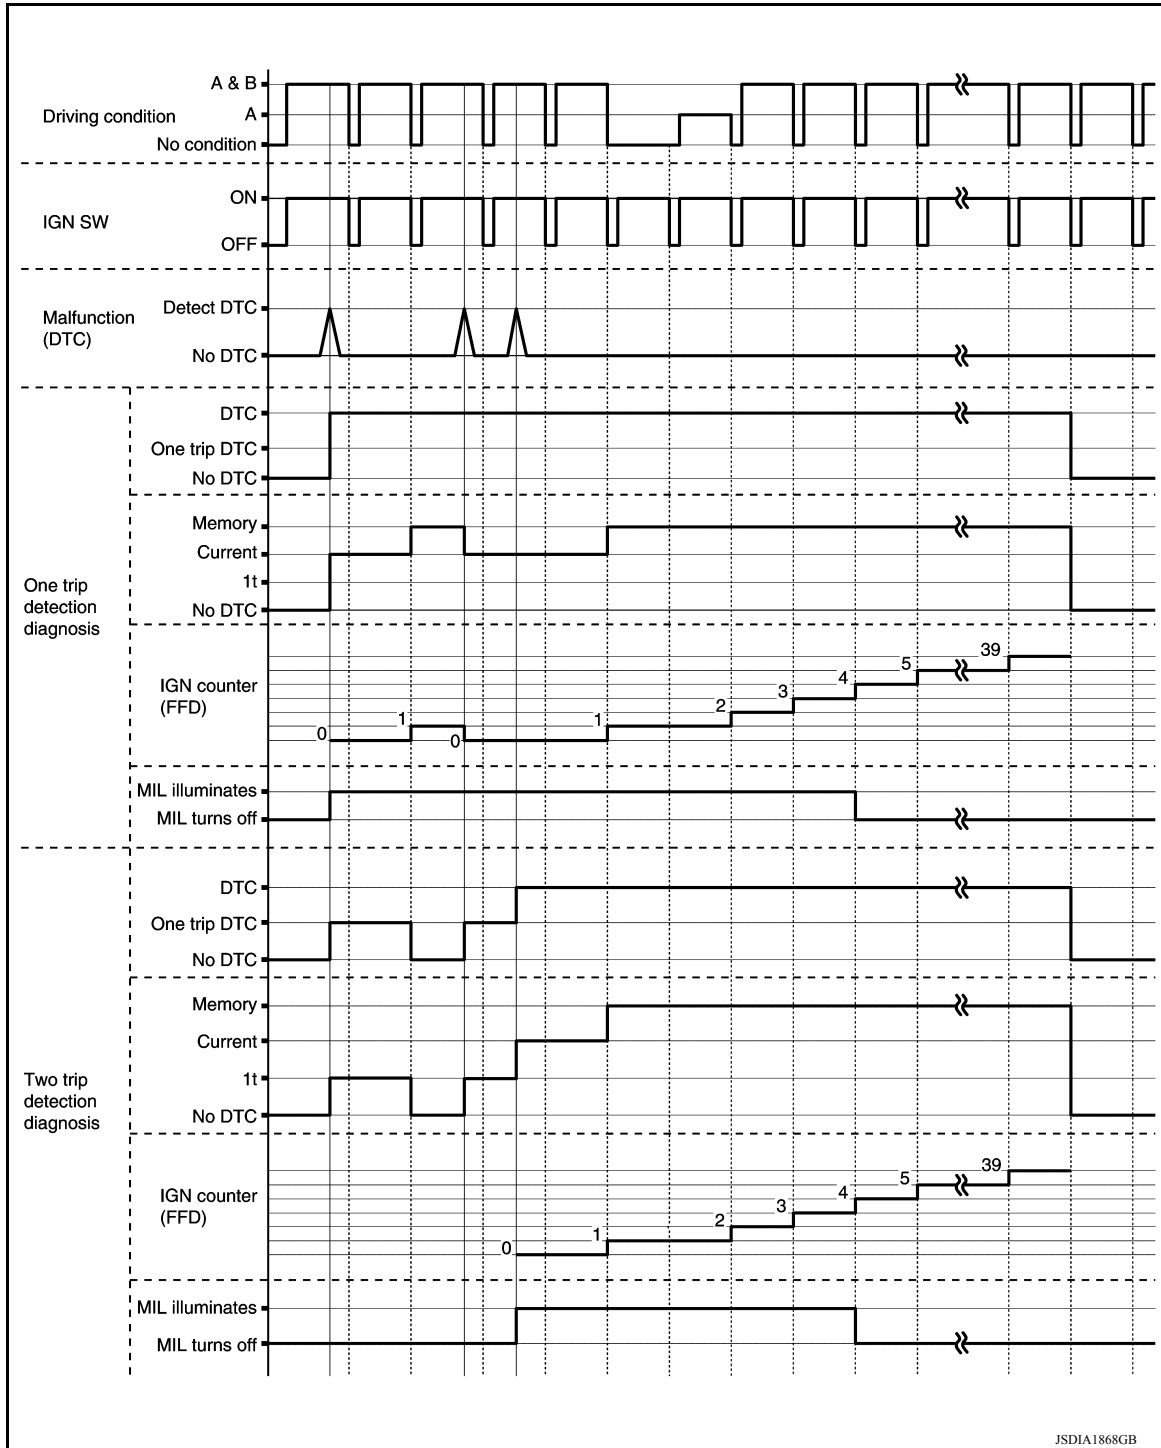

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

CONSULT Function

INFOID:000000009268101

APPLICATION ITEMS

Conditions	Function
Work Support	This mode enables a technician to adjust some devices faster and more accurately.
Self Diagnostic Results	Retrieve DTC from ECU and display diagnostic items.
Data Monitor	Monitor the input/output signal of the control unit in real time.
CAN Diagnosis	This mode displays a network diagnosis result about CAN by a diagram.

DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

Conditions	Function
CAN Diagnosis Support Monitor	It monitors the status of CAN communication.
ECU Identification	Display the ECU identification number (part number etc.) of the selected system.
CALIB DATA	The calibration data status of TCM can be checked.

SELF DIAGNOSTIC RESULTS

Refer to [TM-311, "DTC Index"](#).

DTC at 1st trip and method to read DTC

- DTC (P0705, P0711, P0720, etc.) is specified by SAE J2012/ISO 15031-6.
- DTC and DTC at 1st trip are displayed on "Self Diagnostic results" of CONSULT.
When DTC is currently detected, "CRNT" is displayed. If "PAST" is displayed, it shows a malfunction occurred in the past. The trip number of drive without malfunction of concerned DTC can be confirmed with "IGN counter" inside "FFD".
- When the DTC at the 1st trip is detected, the "timing" is displayed as "1t".

DTC deletion method

NOTE:

- If the battery terminal is disconnected, the TCM memory is erased. (The disconnection time varies from several seconds to several hours.)
- If the ignition switch is left ON after repair, turn OFF the ignition switch and wait for 10 seconds or more. Then, turn the ignition ON again. (Engine stop)
 1. Touch "TRANSMISSION" of CONSULT.
 2. Touch "Self Diagnostic Result".
 3. Touch "Erase". (DTC memorized in TCM is erased.)

IGN counter

The ignition counter is displayed in "FFD" and the number of times of satisfied "Driving condition A" is displayed after normal recovery of DTC. Refer to [EC-52, "DIAGNOSIS DESCRIPTION : Counter System"](#).

- If malfunction (DTC) is currently detected, "0" is displayed.
- After normal recovery, every time "Driving condition A" is satisfied, the display value increases from 1 → 2 → 3...38 → 39.
- When MIL turns OFF due to the malfunction and the counter reaches 40, the DTC is erased.

NOTE:

The counter display of "40" cannot be checked.

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

×: Application ▼: Optional selection

Monitored item	(Unit)	Monitor item selection		Remarks
		MAIN SIG- NALS	ECU IN- PUT SIG- NALS	
VSP SENSOR	(km/h or mph)	▼	×	Displays the vehicle speed calculated from the CVT output shaft speed.
ESTM VSP SIG	(km/h or mph)	▼	×	Displays the vehicle speed signal (ABS) received through CAN communication.
PRI SPEED SEN	(rpm)	▼	×	Displays the primary pulley speed calculated from the pulse signal of the primary speed sensor.
SEC REV SENSOR	(rpm)	▼	×	Displays the secondary pulley speed calculated from the pulse signal of the secondary speed sensor.
VHCL/S SE (REV)	(rpm)	▼	×	Displays the CVT output shaft speed calculated from the pulse signal of the output speed sensor.
ENG SPEED SIG	(rpm)	▼	×	Displays the engine speed received through CAN communication.
LINE PRESSURE SEN	(V)	▼	×	Displays the signal voltage of the line pressure sensor.

DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

Monitored item	(Unit)	Monitor item selection		Remarks
		MAIN SIG- NALS	ECU IN- PUT SIG- NALS	
ATF TEMP SEN	(V)	▼	×	Displays the signal voltage of the CVT fluid temperature sensor.
G SENSOR	(V)	▼	×	Displays the signal voltage of the G sensor.
VIGN SEN	(V)	▼	×	Displays the battery voltage applied to TCM.
VEHICLE SPEED	(km/h or mph)	×	▼	Displays the vehicle speed recognized by TCM.
INPUT REV	(rpm)	▼	▼	Displays the input shaft speed of CVT recognized by TCM.
PRI SPEED	(rpm)	×	▼	Displays the primary pulley speed recognized by TCM.
SEC SPEED	(rpm)	▼	▼	Displays the secondary pulley speed recognized by TCM.
OUTPUT REV	(rpm)	▼	▼	Displays the output shaft speed of CVT recognized by TCM.
ENG SPEED	(rpm)	×	▼	Displays the engine speed recognized by TCM.
SLIP REV	(rpm)	×	▼	Displays the speed difference between the input shaft speed of CVT and the engine speed.
TOTAL GEAR RATIO		×	▼	Displays the total CVT gear ratio calculated from input shaft speed/output shaft speed of CVT.
PULLEY GEAR RATIO		×	▼	Displays the pulley gear ratio calculated from primary pulley speed/secondary pulley speed.
AUX GEARBOX		▼	▼	Displays the gear position of the auxiliary gearbox recognized by TCM.
G SPEED	(G)	▼	▼	Displays the acceleration and deceleration speed of the vehicle calculated from vehicle speed change.
ACCEL POSI SEN 1	(deg)	×	×	Displays the estimated throttle position received through CAN communication.
VENG TRQ	(Nm)	×	▼	Display the engine torque recognized by TCM.
PRI TRQ	(Nm)	▼	▼	Display the input shaft torque of CVT.
TRQ RTO		▼	▼	Display the torque ratio of torque converter.
LINE PRESSURE	(MPa)	×	▼	Displays the secondary pressure (line pressure) calculated from the signal voltage of the secondary pressure sensor.
FLUID TEMP	(°C or °F)	×	▼	Displays the CVT fluid temperature calculated from the signal voltage of the CVT fluid temperature sensor.
DSR REV	(rpm)	▼	▼	Displays the target primary pulley speed calculated from processing of gear shift control.
TRGT GEAR RATIO		▼	▼	Displays the target gear ratio from the input shaft to the output shaft of CVT calculated from processing of gear shift control.
TGT PLY GR RATIO		▼	▼	Displays the target gear ratio of the pulley from processing of gear shift control.
TRGT AUX GEARBOX		▼	▼	Displays the target gear of the auxiliary gearbox calculated from processing of gear shift control.
LU PRS	(MPa)	▼	▼	Displays the target oil pressure of the torque converter clutch solenoid valve calculated from oil pressure processing of gear shift control.
LINE PRS	(MPa)	▼	▼	Displays the target oil pressure of the line pressure solenoid valve calculated from oil pressure processing of gear shift control.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

Monitored item	(Unit)	Monitor item selection		Remarks
		MAIN SIG- NALS	ECU IN- PUT SIG- NALS	
TRGT PRI PRESSURE	(MPa)	▼	▼	Displays the target oil pressure of the primary pressure solenoid valve calculated from oil pressure processing of gear shift control.
TRGT HC/RB PRESS	(MPa)	▼	▼	Displays the target oil pressure of the high clutch & reverse brake solenoid valve calculated from oil pressure processing of gear shift control.
TRGT LB PRESSURE	(MPa)	▼	▼	Displays the target oil pressure of the low brake solenoid valve calculated from oil pressure processing of gear shift control.
ISOLT1	(A)	×	▼	Displays the command current from TCM to the torque converter clutch solenoid valve.
ISOLT2	(A)	×	▼	Displays the command current from TCM to the line pressure solenoid valve.
PRI SOLENOID	(A)	×	▼	Displays the command current from TCM to the primary pressure solenoid valve.
HC/RB SOLENOID	(A)	×	▼	Displays the command current from TCM to the high clutch& reverse brake solenoid valve.
L/B SOLENOID	(A)	×	▼	Displays the command current from TCM to the low brake solenoid valve.
SOLMON1	(A)	×	×	Monitors the command current from TCM to the torque converter clutch solenoid valve and displays the monitored value.
SOLMON2	(A)	×	×	Monitors the command current from TCM to the line pressure solenoid valve and displays the monitored value.
PRI SOL MON	(A)	×	×	Monitors the command current from TCM to the primary pressure solenoid valve and displays the monitored value.
HC/RB SOL MON	(A)	×	×	Monitors the command current from TCM to the high clutch& reverse brake solenoid valve and displays the monitored value.
L/B SOL MON	(A)	×	×	Monitors the current command from TCM to the low brake solenoid valve and displays the monitored value.
D POSITION SW	(On/Off)	▼	×	Displays the operation status of the transmission range switch (D position).
N POSITION SW	(On/Off)	▼	×	Displays the operation status of the transmission range switch (N position).
R POSITION SW	(On/Off)	▼	×	Displays the operation status of the transmission range switch (R position).
P POSITION SW	(On/Off)	▼	×	Displays the operation status of the transmission range switch (P position).
BRAKESW	(On/Off)	×	×	Displays the reception status of the stop lamp switch signal received through CAN communication.
L POSITION SW	(On/Off)	▼	×	Displays the operation status of the transmission range switch (L position).
IDLE SW	(On/Off)	×	×	Displays the reception status of the closed throttle position signal received through CAN communication.
SPORT MODE SW	(On/Off)	×	×	Displays the reception status of the overdrive control switch signal received through CAN communication.
STRDWNSW	(On/Off)	▼	×	<ul style="list-style-type: none"> • Displays the operation status of the paddle shifter (down switch). • It is displayed although not equipped.

DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

Monitored item	(Unit)	Monitor item selection		Remarks
		MAIN SIG- NALS	ECU IN- PUT SIG- NALS	
STRUPSW	(On/Off)	▼	×	<ul style="list-style-type: none"> Displays the operation status of the paddle shifter (up switch). It is displayed although not equipped.
DOWNLVR	(On/Off)	▼	×	<ul style="list-style-type: none"> Displays the operation status of the selector lever (down switch). It is displayed although not equipped.
UPLVR	(On/Off)	▼	×	<ul style="list-style-type: none"> Displays the operation status of the selector lever (up switch). It is displayed although not equipped.
NONMMODE	(On/Off)	▼	×	<ul style="list-style-type: none"> Displays if the selector lever position is not at the manual shift gate. It is displayed although not equipped.
MMODE	(On/Off)	▼	×	<ul style="list-style-type: none"> Displays if the selector lever position is at the manual shift gate. It is displayed although not equipped.
INDLRNG	(On/Off)	▼	▼	Displays the transmission status of the shift position (L position) signal transmitted through CAN communication.
INDDRNG	(On/Off)	▼	▼	Displays the transmission status of the shift position (D position) signal transmitted through CAN communication.
INGNRNG	(On/Off)	▼	▼	Displays the transmission status of the shift position (N position) signal transmitted through CAN communication.
INGRRNG	(On/Off)	▼	▼	Displays the transmission status of the shift position (R position) signal transmitted through CAN communication.
INGPRNG	(On/Off)	▼	▼	Displays the transmission status of the shift position (P position) signal transmitted through CAN communication.
CVT LAMP	(On/Off)	▼	▼	Displays the transmission status of the SPORT indicator lamp signal transmitted through CAN communication.
SPORT MODE IND	(On/Off)	▼	▼	Displays the transmission status of the SPORT indicator lamp signal transmitted through CAN communication.
MMODE IND	(On/Off)	▼	▼	<ul style="list-style-type: none"> Displays the transmission status of the manual mode signal transmitted through CAN communication. It is displayed although not equipped.
VDC ON	(On/Off)	▼	×	<ul style="list-style-type: none"> Displays the reception status of the VDC (ESP) operation signal received through CAN communication. It is displayed although not equipped.
TCS ON	(On/Off)	▼	×	<ul style="list-style-type: none"> Displays the reception status of the TCS operation signal received through CAN communication. It is displayed although not equipped.
ABS FAIL SIGNAL	(On/Off)	▼	×	Displays the reception status of the ABS malfunction signal received through CAN communication.
ABS ON	(On/Off)	▼	×	Displays the reception status of the ABS operation signal received through CAN communication.
4WD FAIL SIGNAL	(On/Off)	▼	×	<ul style="list-style-type: none"> Displays the reception status of the 4WD malfunction signal received through CAN communication. It is displayed although not equipped.
4WD OPERATION SIG	(On/Off)	▼	×	<ul style="list-style-type: none"> Displays the reception status of the 4WD operation signal received through CAN communication. It is displayed although not equipped.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F11A]

Monitored item	(Unit)	Monitor item selection		Remarks
		MAIN SIG- NALS	ECU IN- PUT SIG- NALS	
4WD-TCS SIGNAL	(On/Off)	▼	×	<ul style="list-style-type: none"> Displays the reception status of the engine torque down request signal received through CAN communication. It is displayed although not equipped.
RANGE		×	▼	Displays the gear position recognized by TCM.
M GEAR POS		×	▼	Display the target gear of manual mode
G SEN SLOPE	(%)	▼	▼	Displays the gradient angle calculated from the G sensor signal voltage.
ENGBRKLVL	(On/Off)	▼	▼	Displays the setting of "ENGINE BRAKE ADJ" in "Work Support".
PVIGN VOLT	(V)	▼	×	Displays the backup voltage of TCM.
TRGT AUX GR RATIO		▼	▼	Displays the target gear ratio of the auxiliary gearbox calculated from processing of gear shift control.
G SEN CALIBRATION	(YET/DONE)	▼	▼	Displays the status of "G SENSOR CALIBRATION" in "Work Support".
N IDLE STATUS	(On/Off)	▼	▼	Displays idle neutral status.
CVT-B		▼	▼	<ul style="list-style-type: none"> Displays CVT fluid temperature count. This monitor item does not use.
CVT-A		▼	▼	<ul style="list-style-type: none"> Displays CVT fluid temperature count. This monitor item does not use.

WORK SUPPORT

Item name	Description
ENGINE BRAKE ADJ.	Although there is no malfunction on the transaxle and the CVT system, if a customer make a complaint like "I do not feel comfortable with automatic operation of the engine brake on downhill", the engine brake may be cancelled with "engine brake adjustment".
CONFORM CVTF DETERIORTN	Check the degradation level of the CVT fluid under severe conditions.
G SENSOR CALIBRATION	Compensate the G sensor.
ERASE CALIBRATION DATA	Erase the calibration data memorized by TCM.
ERASE LEARNING VALUE	Erase the learning value memorized by TCM.
ERASE MEMORY DATA	Perform "erasing of the calibration data" and "erasing of the learned value" at the same time.
CLUTCH POINT LEARNING*	Allow learning of the clutch engagement point of the auxiliary gearbox for TCM.

*: "Clutch point learning" can be selected, but do not use it.

Engine brake adjustment

ENGINE BRAKE LEVEL

- ON : Turn ON the engine brake control.
 OFF : Turn OFF the engine brake control.

Check the degradation level of the CVT fluid.

CVTF degradation level data

- 210,000 or more : Replacement of the CVT fluid is required.
 Less than 210,000 : Replacement of the CVT fluid is not required.

ECU DIAGNOSIS INFORMATION

TCM

Reference Value

INFOID:000000009268102

CONSULT DATA MONITOR STANDARD VALUE

- In CONSULT, electric shift timing or lock-up timing, i.e. operation timing of each solenoid valve, is displayed. Therefore, if there is an obvious difference between the shift timing estimated from a shift shock (or engine speed variations) and that shown on the CONSULT, the mechanism parts (including the hydraulic circuit) excluding the solenoids and sensors may be malfunctioning. In this case, check the mechanical parts following the appropriate diagnosis procedure.
- Shift point (gear position) displayed on CONSULT slightly differs from shift pattern described in Service Manual. This is due to the following reasons.
 - Actual shift pattern may vary slightly within specified tolerances.
 - While shift pattern described in Service Manual indicates start of each shift, CONSULT shows gear position at end of shift.
 - The solenoid display (ON/OFF) on CONSULT is changed at the start of gear shifting. In contrast, the gear position display is changed at the time when gear shifting calculated in the control unit is completed.

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item	Condition	Value/Status
VSP SENSOR	While driving	Almost same as the speedometer display.
ESTM VSP SIG	While driving	Almost same as the speedometer display.
PRI SPEED SEN	In driving (lock-up ON)	A value obtained from dividing engine speed by counter gear ratio
SEC REV SENSOR	Auxiliary gearbox: 1GR	Approximately twice the "VHCL/S SE (REV)"
	Auxiliary gearbox: 2GR	Almost same as the "VHCL/S SE (REV)"
VHCL/S SE (REV)	Auxiliary gearbox: 1GR	Approximately half of the "SEC REV SENSOR"
	Auxiliary gearbox: 2GR	Almost same as the "SEC REV SENSOR"
ENG SPEED SIG	Engine running	Almost same reading as tachometer
LINE PRESSURE SEN	<ul style="list-style-type: none"> • Selector lever: "N" position • At idle 	Approx. 0.88 – 0.92 V
ATF TEMP SEN	CVT fluid: Approx. 20°C (68°F)	Approx. 2.01 – 2.05 V
	CVT fluid: Approx. 50°C (122°F)	Approx. 1.45 – 1.50 V
	CVT fluid: Approx. 80°C (176°F)	Approx. 0.90 – 0.94 V
G SENSOR	Vehicle is level	Approx. 2.5 V
VIGN SEN	Ignition switch: ON	10 – 16 V
VEHICLE SPEED	While driving	Almost same as the speedometer display.
INPUT REV	In driving (lock-up ON)	Almost same as the engine speed.
PRI SPEED	In driving (lock-up ON)	A value obtained from dividing engine speed by counter gear ratio
SEC SPEED	Auxiliary gearbox: 1GR	Approximately twice the "OUTPUT REV"
	Auxiliary gearbox: 2GR	Almost same as "OUTPUT REV"
OUTPUT REV	Auxiliary gearbox: 1GR	Approximately half of "SEC SPEED"
	Auxiliary gearbox: 2GR	Almost same as "SEC SPEED"
ENG SPEED	Engine running	Almost same reading as tachometer
SLIP REV	While driving	Engine speed – Input speed

TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F11A]

Monitor item	Condition	Value/Status
TOTAL GEAR RATIO	Auxiliary gearbox: 1GR	Counter gear ratio ×Pulley ratio Auxiliary gearbox gear ratio
	Auxiliary gearbox: 2GR	Counter gear ratio ×Pulley ratio
PULLEY GEAR RATIO	In driving (forward)	Approx. 2.20 – 0.55
	In driving (reverse)	Approx. 2.20
AUX GEARBOX	Vehicle started with selector lever in "L" position	1st
	Release the accelerator pedal after the following conditions are satisfied <ul style="list-style-type: none"> • Selector lever: "D" position • Accelerator pedal position: 1/8 or less • Vehicle speed: 50 km/h (31 MPH) or more 	2nd
	In gear shifting of auxiliary gearbox	1st ↔ 2nd
G SPEED	Vehicle stopped	0.00 G
	During acceleration	The value changes to the positive side along with acceleration.
	During deceleration	The value changes to the positive side along with deceleration.
ACCEL POSI SEN 1	Accelerator pedal released	0.00 deg
	Accelerator pedal fully depressed	80.00 deg
VENG TRQ	While driving	The value changes along with acceleration/ deceleration.
PRI TRQ	While driving	The value changes along with acceleration/ deceleration.
TRQ RTO	While driving	The value changes along with acceleration/ deceleration.
LINE PRESSURE	Selector lever: "P" position	Approx. 0.575 MPa
FLUID TEMP	Ignition switch ON.	Displays the CVT fluid temperature.
DSR REV	While driving	It varies along with the driving condition.
TRGT GEAR RATIO	While driving	It varies along with the driving condition.
TGT PLY GR RATIO	In driving (forward)	Approx. 2.20 – 0.55
	In driving (reverse)	Approx. 2.20
TRGT AUX GEARBOX	Vehicle started with selector lever in "L" position	1st
	Release the accelerator pedal after the following conditions are satisfied <ul style="list-style-type: none"> • Selector lever: "D" position • Accelerator pedal position: 1/8 or less • Vehicle speed: 50 km/h (31 MPH) or more 	2nd
	In gear shifting of auxiliary gearbox	Display gear position after gear shifting
LU PRS	<ul style="list-style-type: none"> • Engine started • Vehicle is stopped. 	Approx. –0.500 MPa
	<ul style="list-style-type: none"> • Selector lever: "D" position • Accelerator pedal position: 1/8 or less • Vehicle speed: 20 km/h (12 MPH) or more 	Approx. 0.450 MPa
LINE PRS	<ul style="list-style-type: none"> • After engine warm up • Selector lever: "N" position • At idle 	Approx. 0.500 MPa
	<ul style="list-style-type: none"> • After engine warming up • Selector lever: "N" position • Depress the accelerator pedal fully 	Approx. 4.930 – 5.430 MPa
TRGT PRI PRESSURE	<ul style="list-style-type: none"> • Selector lever: "L" position • Vehicle speed: 20 km/h (12 MPH) 	Approx. 0.325 MPa

TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F11A]

Monitor item	Condition	Value/Status	
TRGT HC/RB PRESS	<ul style="list-style-type: none"> Selector lever: "L" position Vehicle speed: 20 km/h (12 MPH) 	Approx. 0.000 MPa	A
	Release the accelerator pedal after the following conditions are satisfied <ul style="list-style-type: none"> Selector lever: "D" position Accelerator pedal position: 1/8 or less Vehicle speed: 50 km/h (31 MPH) or more 	Approx. 0.400 MPa	B
TRGT LB PRESSURE	<ul style="list-style-type: none"> Selector lever: "L" position Vehicle speed: 20 km/h (12 MPH) 	Approx. 0.325 MPa	C
	Release the accelerator pedal after the following conditions are satisfied <ul style="list-style-type: none"> Selector lever: "D" position Accelerator pedal position: 1/8 or less Vehicle speed: 50 km/h (31 MPH) or more 	Approx. 0.000 MPa	TM
ISOLT1	<ul style="list-style-type: none"> Engine started Vehicle is stopped. 	Approx. 0.000 A	E
	<ul style="list-style-type: none"> Selector lever: "D" position Accelerator pedal position: 1/8 or less Vehicle speed: 20 km/h (12 MPH) or more 	Approx. 0.500 A	F
ISOLT2	<ul style="list-style-type: none"> After engine warm up Selector lever: "N" position At idle 	Approx. 0.800 – 0.900 A	G
	<ul style="list-style-type: none"> After engine warming up Selector lever: "N" position Depress the accelerator pedal fully 	Approx. 0.350 – 0.400 A	H
PRI SOLENOID	<ul style="list-style-type: none"> Selector lever: "L" position Vehicle speed: 20 km/h (12 MPH) 	Approx. 0.850 – 0.900 A	I
HC/RB SOLENOID	<ul style="list-style-type: none"> Selector lever: "L" position Vehicle speed: 20 km/h (12 MPH) 	Approx. 1.000 A	J
	Release the accelerator pedal after the following conditions are satisfied <ul style="list-style-type: none"> Selector lever: "D" position Accelerator pedal position: 1/8 or less Vehicle speed: 50 km/h (31 MPH) or more 	Approx. 0.800 – 0.850 A	K
L/B SOLENOID	<ul style="list-style-type: none"> Selector lever: "L" position Vehicle speed: 20 km/h (12 MPH) 	Approx. 0.200 – 0.250 A	L
	Release the accelerator pedal after the following conditions are satisfied <ul style="list-style-type: none"> Selector lever: "D" position Accelerator pedal position: 1/8 or less Vehicle speed: 50 km/h (31 MPH) or more 	Approx. 0.000 A	M
SOLMON1	<ul style="list-style-type: none"> Engine started Vehicle is stopped. 	Approx. 0.000 A	N
	<ul style="list-style-type: none"> Selector lever: "D" position Accelerator pedal position: 1/8 or less Vehicle speed: 20 km/h (12 MPH) or more 	Approx. 0.500 A	O
SOLMON2	<ul style="list-style-type: none"> After engine warm up Selector lever: "N" position At idle 	Approx. 0.800 – 0.900 A	P
	<ul style="list-style-type: none"> After engine warming up Selector lever: "N" position Depress the accelerator pedal fully 	Approx. 0.350 – 0.400 A	
PRI SOL MON	<ul style="list-style-type: none"> Selector lever: "L" position Vehicle speed: 20 km/h (12 MPH) 	Approx. 0.850 – 0.900 A	

TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F11A]

Monitor item	Condition	Value/Status
HC/RB SOL MON	<ul style="list-style-type: none"> • Selector lever: "L" position • Vehicle speed: 20 km/h (12 MPH) 	Approx. 1.000 A
	Release the accelerator pedal after the following conditions are satisfied <ul style="list-style-type: none"> • Selector lever: "D" position • Accelerator pedal position: 1/8 or less • Vehicle speed: 50 km/h (31 MPH) or more 	Approx. 0.800 – 0.850 A
L/B SOL MON	<ul style="list-style-type: none"> • Selector lever: "L" position • Vehicle speed: 20 km/h (12 MPH) 	Approx. 0.200 – 0.250 A
	Release the accelerator pedal after the following conditions are satisfied <ul style="list-style-type: none"> • Selector lever: "D" position • Accelerator pedal position: 1/8 or less • Vehicle speed: 50 km/h (31 MPH) or more 	Approx. 0.000 A
D POSITION SW	Selector lever: "D" position	On
	Other than the above	Off
N POSITION SW	Selector lever: "N" position	On
	Other than the above	Off
R POSITION SW	Selector lever: "R" position	On
	Other than the above	Off
P POSITION SW	Selector lever: "P" position	On
	Other than the above	Off
BRAKESW	Brake pedal is depressed	On
	Brake pedal is released	Off
L POSITION SW	Selector lever: "L" position	On
	Other than the above	Off
IDLE SW	Accelerator pedal is released	On
	Accelerator pedal is fully depressed	Off
SPORT MODE SW	Press the overdrive control switch	On
	Release the overdrive control switch	Off
STRDWNSW	Always	Off
STRUPSW	Always	Off
DOWNLVR	Always	Off
UPLVR	Always	Off
NONMMODE	Always	Off
MMODE	Always	Off
INDLRNG	Selector lever: "L" position	On
	Other than the above	Off
INDDRNG	Selector lever: "D" position	On
	Other than the above	Off
INDNRNG	Selector lever: "N" position	On
	Other than the above	Off
INDRNG	Selector lever: "R" position	On
	Other than the above	Off
INDPRNG	Selector lever: "P" position	On
	Other than the above	Off
CVT LAMP	In overdrive OFF	On
	Other than the above	Off

TCM


< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F11A]

Monitor item	Condition	Value/Status	
SPORT MODE IND	In overdrive OFF	On	A
	Other than the above	Off	
MMODE IND	Always	Off	B
VDC ON	Always	Off	
TCS ON	Always	Off	
ABS FAIL SIGNAL	When ABS malfunction signal is received	On	C
	Other than the above	Off	
ABS ON	ABS is activated	On	TM
	Other than the above	Off	
4WD FAIL SIGNAL	Always	Off	
4WD OPERATION SIG	Always	Off	E
4WD-TCS SIGNAL	Always	Off	
RANGE	Selector lever: "P" and "N" positions	N/P	F
	Selector lever: "R" position	R	
	Selector lever: "D" position (SPORT indicator lamp OFF)	D	G
	Selector lever: "D" position (SPORT indicator lamp ON)	S	
	Selector lever: "L" position	L	H
M GEAR POS	Always	1	
G SEN SLOPE	Flat road	0%	I
	Uphill gradient	The value changes to the positive side along with uphill gradient. (Maximum 40.45%)	J
	Downhill gradient	The value changes to the negative side along with downhill gradient. (Minimum - 40.45%)	
ENGBRKLVL	When the engine brake level of "ENGINE BRAKE ADJ". in "Work Support" is ON	On	K
	When the engine brake level of "ENGINE BRAKE ADJ". in "Work Support" is OFF	Off	L
PVIGN VOLT	Ignition switch: ON	10 – 16 V	
TRGT AUX GR RATIO	Vehicle started with selector lever in "L" position	1.80	M
	Release the accelerator pedal after the following conditions are satisfied • Selector lever: "D" position • Accelerator pedal position: 1/8 or less • Vehicle speed: 50 km/h (31 MPH) or more	1.00	N
G SEN CALIBRATION	When G sensor calibration is completed	DONE	O
	When G sensor calibration is not completed	YET	
N IDLE STATUS	When idle neutral control is operated	On	
	When idle neutral control is not operated	Off	
CVT-B*	—	—	P
CVT-A*	—	—	

*: These monitor items do not use.

TERMINAL LAYOUT

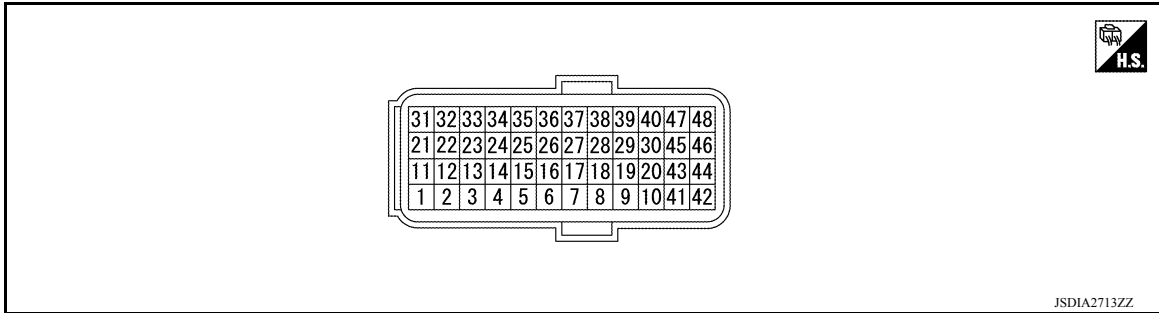







INPUT/OUTPUT SIGNAL STANDARD

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal	Input/ Output		
2 (R/B)	Ground	L range switch	Input	Ignition switch ON	Selector lever: "L" position 10 – 16 V
				Other than the above 0 V	
4 (W/B)	Ground	D range switch	Input	Ignition switch ON	Selector lever: "D" position 10 – 16 V
				Other than the above 0 V	
5 (L/B)	Ground	N range switch	Input	Ignition switch ON	Selector lever: "N" position 10 – 16 V
				Other than the above 0 V	
6 (O)	Ground	R range switch	Input	Ignition switch ON	Selector lever: "R" position 10 – 16 V
				Other than the above 0 V	
7 (Y)	Ground	P range switch	Input	Ignition switch ON	Selector lever: "P" position 10 – 16 V
				Other than the above 0 V	
11 (LG)	Ground	Sensor ground	Input	Always	0 V
12 (G/W)	Ground	CVT fluid temperature sensor	Output	Ignition switch ON	CVT fluid: Approx. 20°C 2.01 – 2.05 V
				CVT fluid: Approx. 50°C 1.45 – 1.50 V	
				CVT fluid: Approx. 80°C 0.90 – 0.94 V	
14 (G/R)	Ground	G sensor	Input	Ignition switch ON	When the vehicle stops on a flat road 2.5 V
15* (V)	—	—	—	—	—
16 (L/R)	Ground	Secondary pressure sensor	Input	• Selector lever: "N" position • At idle	0.88 – 0.92 V
21 (R/W)	—	ROM ASSY (CHIP SELECT)	—	—	—
22 (V)	—	ROM ASSY (DATA I/O)	—	—	—
23 (P)	—	CAN-L	Input/ Output	—	—
24 (BR)	Ground	Output speed sensor	Input	• Selector lever: "L" position • Vehicle speed: 20 km/h (12 MPH)	<p>Timing diagram for terminal 24. The vertical axis is 5V/div and the horizontal axis is 200 Hz. The signal is a square wave with a period of 2.5mSec/div. The diagram is labeled JSDIA1904GB.</p>

TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F11A]

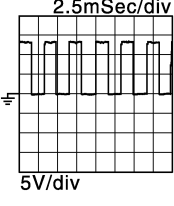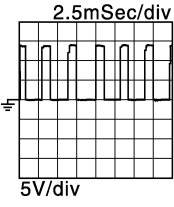
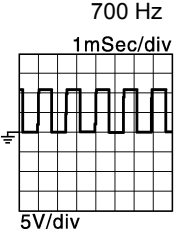
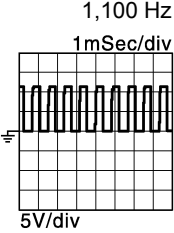
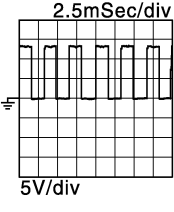
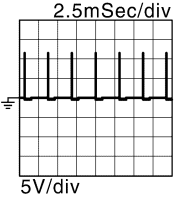
Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal	Input/ Output		
26 (O)	Ground	Sensor power supply	Output	Ignition switch: ON	5.0 V
				Ignition switch: OFF	0 V
30 (BR/B)	Ground	Line pressure solenoid valve	Output	<ul style="list-style-type: none"> After engine warming up Selector lever: "N" position At idle 	 <p style="text-align: right; font-size: small;">JSDIA1897GB</p>
				<ul style="list-style-type: none"> After engine warming up Selector lever: "N" position Depress the accelerator pedal fully 	 <p style="text-align: right; font-size: small;">JSDIA1898GB</p>
31 (L/W)	—	ROM ASSY (CLOCK)	—	—	—
33 (L)	—	CAN-H	Input/ Output	—	—
34 (W)	Ground	Secondary speed sensor	Input	<ul style="list-style-type: none"> Selector lever: "L" position Vehicle speed: 20 km/h (12 MPH) 	 <p style="text-align: right; font-size: small;">JSDIA1905GB</p>
35 (LG/R)	Ground	Primary speed sensor	Input	<ul style="list-style-type: none"> Selector lever: "L" position Vehicle speed: 20 km/h (12 MPH) 	 <p style="text-align: right; font-size: small;">JSDIA1906GB</p>
37 (BR/W)	Ground	High clutch & reverse brake solenoid valve	Output	In driving at "L" position	 <p style="text-align: right; font-size: small;">JSDIA1897GB</p>
				Release the accelerator pedal after the following conditions are satisfied <ul style="list-style-type: none"> Selector lever: "D" position Accelerator pedal position: 1/8 or less Vehicle speed: 50 km/h (31 MPH) or more 	 <p style="text-align: right; font-size: small;">JSDIA3653GB</p>

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F11A]

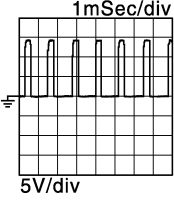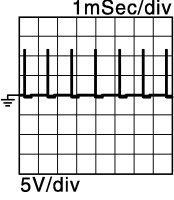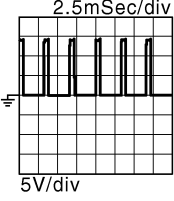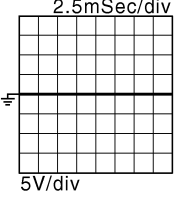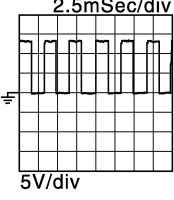Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal	Input/ Output		
38 (G)	Ground	Torque converter clutch solenoid valve	Output	<ul style="list-style-type: none"> • Selector lever: "D" position • Accelerator pedal position: 1/8 or less • Vehicle speed: 20 km/h (12 MPH) or more 	
				<ul style="list-style-type: none"> • Engine started • Vehicle is stopped 	
39 (G/B)	Ground	Low brake solenoid valve	Output	<ul style="list-style-type: none"> • Selector lever: "L" position • Vehicle speed: 20 km/h (12 MPH) 	
				Release the accelerator pedal after the following conditions are satisfied <ul style="list-style-type: none"> • Selector lever: "D" position • Accelerator pedal position: 1/8 or less • Vehicle speed: 50 km/h (31 MPH) or more 	
40 (Y/B)	Ground	Primary pressure solenoid valve	Output	<ul style="list-style-type: none"> • Selector lever: "L" position • Vehicle speed: 20 km/h (12 MPH) 	
41 (B)	Ground	Ground	Output	Always	0 V
42 (B)	Ground	Ground	Output	Always	0 V
45 (LG)	Ground	Battery power sup- ply (backup)	Input	Always	10 – 16 V
46 (LG)	Ground	Battery power sup- ply (backup)	Input	Always	10 – 16 V
47 (R)	Ground	Ignition power sup- ply	Input	Ignition switch: ON	10 – 16 V
				Ignition switch: OFF	0 V
48 (R)	Ground	Ignition power sup- ply	Input	Ignition switch: ON	10 – 16 V
				Ignition switch: OFF	0 V

*: This harness is not used.

Fail-safe

INFOID:00000009268103

TCM has a fail-safe mode. The mode functions so that operation can be continued even if the signal circuit of the main electronically controlled input/output parts is damaged.

If the vehicle shows following behaviors including "poor acceleration", a malfunction of the applicable system is detected by TCM and the vehicle may be in a fail-safe mode. At this time, check the DTC code and perform inspection and repair according to the malfunction diagnosis procedures.

Fail-safe function

DTC	Vehicle behavior	Conditions of vehicle
P062F	<ul style="list-style-type: none"> Not changed from normal driving 	—
P0705	<ul style="list-style-type: none"> Shift position indicator on combination meter is not displayed. Selector shock is large Start is slow Acceleration is slow Lock-up is not performed. 	—
P0706	<ul style="list-style-type: none"> Shift position indicator on combination meter is not displayed. Selector shock is large Start is slow Acceleration is slow Lock-up is not performed. 	—
P0711	<ul style="list-style-type: none"> Acceleration is slow 	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ (50°F)
	<ul style="list-style-type: none"> Selector shock is large Start is slow 	Engine coolant temperature when engine start: -35°C (-31°F) \leq Temp. $< 10^{\circ}\text{C}$ (50°F)
	<ul style="list-style-type: none"> Selector shock is large Start is slow 	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ (-31°F)
P0712	<ul style="list-style-type: none"> Acceleration is slow 	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ (50°F)
	<ul style="list-style-type: none"> Selector shock is large Start is slow 	Engine coolant temperature when engine start: -35°C (-31°F) \leq Temp. $< 10^{\circ}\text{C}$ (50°F)
	<ul style="list-style-type: none"> Selector shock is large Start is slow 	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ (-31°F)
P0713	<ul style="list-style-type: none"> Acceleration is slow 	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ (50°F)
	<ul style="list-style-type: none"> Selector shock is large Start is slow 	Engine coolant temperature when engine start: -35°C (-31°F) \leq Temp. $< 10^{\circ}\text{C}$ (50°F)
	<ul style="list-style-type: none"> Selector shock is large Start is slow 	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ (-31°F)
P0715	<ul style="list-style-type: none"> Selector shock is large Start is slow Acceleration is slow Vehicle speed is not increased Lock-up is not performed. 	—
P0720	<ul style="list-style-type: none"> Selector shock is large Start is slow Acceleration is slow Lock-up is not performed. 	—
P0740	<ul style="list-style-type: none"> Lock-up is not performed. 	—
P0743	<ul style="list-style-type: none"> Lock-up is not performed. 	—
P0744	<ul style="list-style-type: none"> Lock-up is not performed. 	—

TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F11A]

DTC	Vehicle behavior	Conditions of vehicle
P0746	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Vehicle speed is not increased • Lock-up is not performed. 	—
P0846	<ul style="list-style-type: none"> • Start is slow • Acceleration is slow 	—
P0847	<ul style="list-style-type: none"> • Acceleration is slow 	—
P0848	<ul style="list-style-type: none"> • Start is slow • Acceleration is slow 	—
P0863	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed. 	—
P0890	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed. 	—
P0962	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed. 	—
P0963	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed. 	—
P0965	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed. 	—
P0966	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed. 	—
P0967	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed. 	—
P0998	<ul style="list-style-type: none"> • Start is slow • Lock-up is not performed. 	—
P0999	<ul style="list-style-type: none"> • Start is slow • Lock-up is not performed. 	Wire disconnection
	<ul style="list-style-type: none"> • Start is slow • Lock-up is not performed. 	Voltage shorting
P099B	<ul style="list-style-type: none"> • Start is slow 	—
P099C	<ul style="list-style-type: none"> • Start is slow • Lock-up is not performed. 	Wire disconnection
	<ul style="list-style-type: none"> • Start is slow • Lock-up is not performed. 	Voltage shorting
P1586	<ul style="list-style-type: none"> • Not changed from normal driving 	—
P1588	<ul style="list-style-type: none"> • Not changed from normal driving 	—
P2765	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Vehicle speed is not increased • Lock-up is not performed. 	—

TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F11A]

DTC	Vehicle behavior	Conditions of vehicle
P2857	<ul style="list-style-type: none"> • Start is slow • Lock-up is not performed. 	—
P2858	<ul style="list-style-type: none"> • Vehicle speed is not increased • Lock-up is not performed. 	—
P2859	<ul style="list-style-type: none"> • Vehicle speed is not increased 	—
P285A	<ul style="list-style-type: none"> • Start is slow 	—
U0073	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed. 	—
U0100	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed. 	—
U0140	<ul style="list-style-type: none"> • Not changed from normal driving 	—
U0141	<ul style="list-style-type: none"> • Not changed from normal driving 	—
U0155	<ul style="list-style-type: none"> • Not changed from normal driving 	—
U0300	<ul style="list-style-type: none"> • Selector shock is large • Start is slow • Acceleration is slow • Lock-up is not performed. 	—
U1000	<ul style="list-style-type: none"> • Not changed from normal driving 	—
U1117	<ul style="list-style-type: none"> • Not changed from normal driving 	—

Protection Control

INFOID:000000009268104

The TCM becomes the protection control status temporarily to protect the safety when the safety of TCM and transmission is lost. It automatically returns to the normal status if the safety is secured. The TCM has the following protection control.

CONTROL FOR WHEEL SPIN

Control	When a wheel spin is detected, the engine output and gear ratio are limited and the line pressure is increased. At the 1GR, the clutch pressure is increased.
Vehicle behavior in control	If the accelerator is kept depressing during wheel spin, the engine revolution and vehicle speed are limited to a certain degree. From the 1GR, upshift to a certain gear ratio is only allowed.
Normal return condition	Wheel spin convergence returns the control to the normal control.

CONTROL WHEN FLUID TEMPERATURE IS HIGH

Control	When the CVT fluid temperature is high, the gear shift permission maximum revolution and the maximum torque are reduced than usual to prevent increase of the oil temperature.
Vehicle behavior in control	Power performance may be lowered, compared to normal control.
Normal return condition	The control returns to the normal control when CVT fluid temperature is lowered.

TORQUE IS REDUCED WHEN DRIVING WITH THE REVERSE GEAR

Control	Engine output is controlled according to a vehicle speed while reversing the vehicle.
Vehicle behavior in control	Power performance may be lowered while reversing the vehicle.
Normal return condition	Torque returns to normal by positioning the selector lever in a range other than "R" position.

REVERSE PROHIBIT CONTROL

Control	The reverse brake is controlled to avoid becoming engaged when the selector lever is set in "R" position while driving in forward direction at more than the specified speed.
Vehicle behavior in control	If the selector lever is put at "R" position when driving with the forward gear, the gear becomes neutral, not reverse.
Normal return condition	The control returns to normal control when the vehicle is driven at low speeds. (The reverse brake becomes engaged.)

DTC Inspection Priority Chart

INFOID:000000009268105

If multiple malfunction codes are detected at the same time, check each code according to the DTC check priority list below.

Priority	DTC (Diagnostic Trouble Code)	Reference
1	P0863 CONTROL UNIT (CAN)	TM-380
	U0073 COMM BUS A OFF	TM-334
	U0100 LOST COMM (ECM A)	TM-335
	U0140 LOST COMM (BCM)	TM-336
	U0141 LOST COMM (BCM A)	TM-337
	U0155 LOST COMM (IPC)	TM-338
	U0300 CAN COMM DATA	TM-339
	U1000 CAN COMM CIRC	TM-340
	U1117 LOST COMM (ABS)	TM-341
2	P0740 TORQUE CONVERTER	TM-366
	P0743 TORQUE CONVERTER	TM-368
	P0962 PC SOLENOID A	TM-382
	P0963 PC SOLENOID A	TM-384
	P0966 PC SOLENOID B	TM-387
	P0967 PC SOLENOID B	TM-389
	P0998 SHIFT SOLENOID F	TM-391
	P0999 SHIFT SOLENOID F	TM-393
	P099B SHIFT SOLENOID G	TM-395
P099C SHIFT SOLENOID G	TM-397	
3	P0890 TCM	TM-381
4	P062F EEPROM	TM-342
	P0705 T/M RANGE SENSOR A	TM-343
	P0706 T/M RANGE SENSOR A	TM-349
	P0711 FLUID TEMP SENSOR A	TM-353
	P0712 FLUID TEMP SENSOR A	TM-356
	P0713 FLUID TEMP SENSOR A	TM-358
	P0715 INPUT SPEED SENSOR A	TM-360
	P0847 FLUID PRESS SEN/SW B	TM-376
	P0848 FLUID PRESS SEN/SW B	TM-378
	P1586 G SENSOR	TM-399
	P1588 G SENSOR	TM-402
	P2765 OUTPUT SPEED SENSOR	TM-404
5	P0720 OUTPUT SPEED SENSOR	TM-363

TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F11A]

Priority	DTC (Diagnostic Trouble Code)	Reference
6	P0746 PC SOLENOID A	TM-372
	P2857 CLUTCH B PRESSURE	TM-407
	P2858 CLUTCH A PRESSURE	TM-408
	P2859 CLUTCH A PRESSURE	TM-409
	P285A CLUTCH B PRESSURE	TM-411
7	P0744 TORQUE CONVERTER	TM-370
	P0846 FLUID PRESS SEN/SW B	TM-374
	P0965 PC SOLENOID B	TM-386

DTC Index

INFOID:000000009268106

NOTE:

- If multiple malfunction codes are detected at the same time, check each code according to the “DTC check priority list”. [TM-310, "DTC Inspection Priority Chart"](#).
- The ignition counter is displayed in “FFD”. Refer to [TM-293, "CONSULT Function"](#).

DTC*1, *2		Items (CONSULT screen terms)	Trip	MIL	Reference
GST	CONSULT (TRANSMISSION)				
P062F	P062F	EEPROM	1	ON	TM-342
P0705	P0705	T/M RANGE SENSOR A	2	ON	TM-343
P0706	P0706	T/M RANGE SENSOR A	2	ON	TM-349
P0711	P0711	FLUID TEMP SENSOR A	2	ON	TM-353
P0712	P0712	FLUID TEMP SENSOR A	2	ON	TM-356
P0713	P0713	FLUID TEMP SENSOR A	2	ON	TM-358
P0715	P0715	INPUT SPEED SENSOR A	2	ON	TM-360
P0720	P0720	OUTPUT SPEED SENSOR	2	ON	TM-363
P0740	P0740	TORQUE CONVERTER	2	ON	TM-366
P0743	P0743	TORQUE CONVERTER	2	ON	TM-368
P0744	P0744	TORQUE CONVERTER	2	ON	TM-370
P0746	P0746	PC SOLENOID A	2	ON	TM-372
P0846	P0846	FLUID PRESS SEN/SW B	2	ON	TM-374
P0847	P0847	FLUID PRESS SEN/SW B	2	ON	TM-376
P0848	P0848	FLUID PRESS SEN/SW B	2	ON	TM-378
P0863	P0863	CONTROL UNIT (CAN)	1	ON	TM-380
P0890	P0890	TCM	1	ON	TM-381
P0962	P0962	PC SOLENOID A	2	ON	TM-382
P0963	P0963	PC SOLENOID A	2	ON	TM-384
P0965	P0965	PC SOLENOID B	2	ON	TM-386
P0966	P0966	PC SOLENOID B	2	ON	TM-387
P0967	P0967	PC SOLENOID B	2	ON	TM-389
P0998	P0998	SHIFT SOLENOID F	2	ON	TM-391
P0999	P0999	SHIFT SOLENOID F	2	ON	TM-393
P099B	P099B	SHIFT SOLENOID G	2	ON	TM-395
P099C	P099C	SHIFT SOLENOID G	2	ON	TM-397
—	P1586	G SENSOR	1	—	TM-399
—	P1588	G SENSOR	1	—	TM-402

TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F11A]

DTC*1, *2		Items (CONSULT screen terms)	Trip	MIL	Reference
GST	CONSULT (TRANSMISSION)				
P2765	P2765	OUTPUT SPEED SENSOR	2	ON	TM-404
P2857	P2857	CLUTCH A PRESSURE	2	ON	TM-407
P2858	P2858	CLUTCH B PRESSURE	2	ON	TM-408
P2859	P2859	CLUTCH A PRESSURE	2	ON	TM-409
P285A	P285A	CLUTCH B PRESSURE	2	ON	TM-411
U0073	U0073	COMM BUS A OFF	1	ON	TM-334
U0100	U0100	LOST COMM (ECM A)	1	ON	TM-335
—	U0140	LOST COMM (BCM)	1	—	TM-336
—	U0141	LOST COMM (BCM A)	1	—	TM-337
—	U0155	LOST COMM (IPC)	1	—	TM-338
—	U0300	CAN COMM DATA	1	—	TM-339
—	U1000	CAN COMM CIRC	1	—	TM-340
—	U1117	LOST COMM (ABS)	1	—	TM-341

*1: These numbers are specified by SAE J2012/ISO 15031-6.

*2: The DTC number of the 1st trip is the same as the DTC number.


WIRING DIAGRAM

CVT CONTROL SYSTEM

Wiring Diagram

INFOID:000000009268107

CVT CONTROL SYSTEM

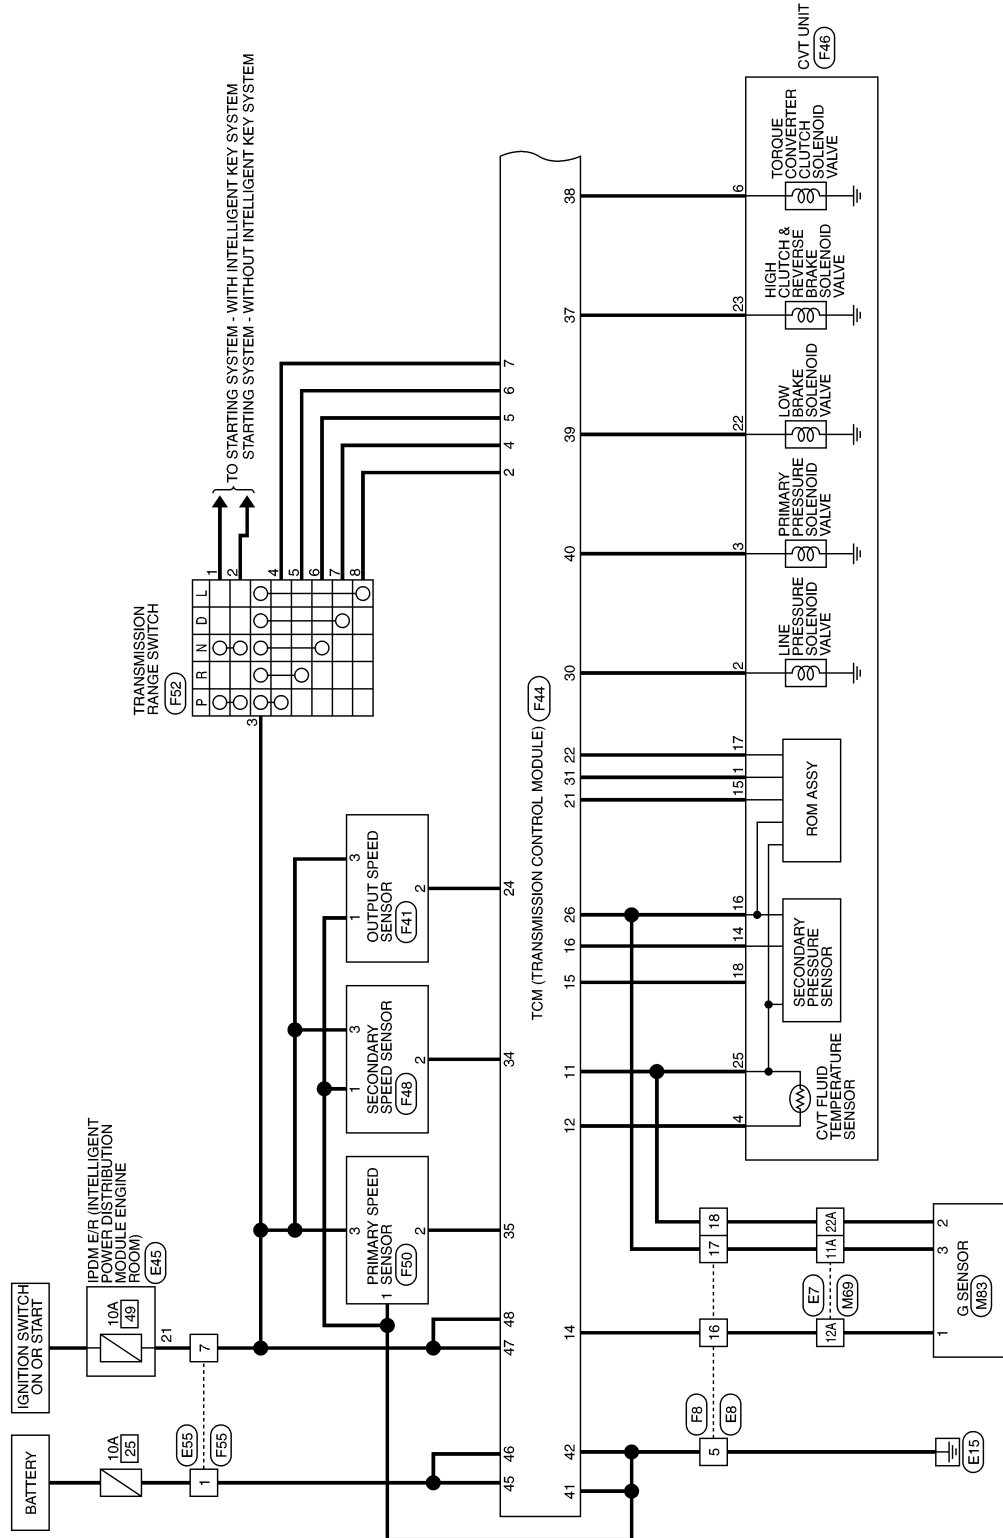


ABDWA0676GB

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

CVT CONTROL SYSTEM

< WIRING DIAGRAM >


[CVT: RE0F11A]

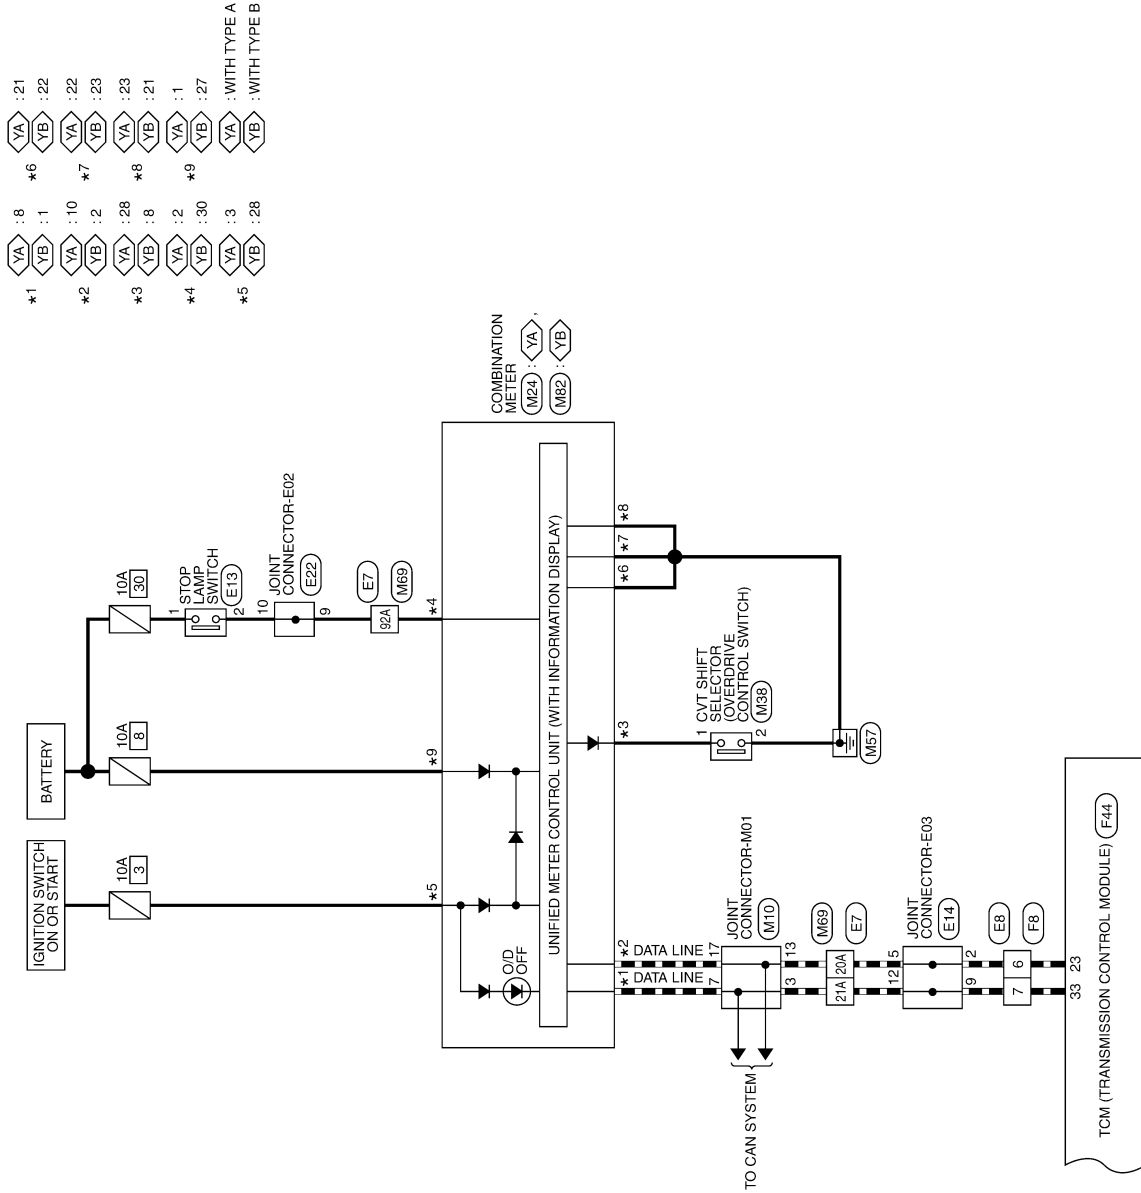

ABDWA0677GB


CVT CONTROL SYSTEM CONNECTORS

Connector No.	M10
Connector Name	JOINT CONNECTOR-M01
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
3	L	-
7	L	-
13	P	-
17	P	-


Connector No.	M24
Connector Name	COMBINATION METER (WITH TYPE A)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R	BAT
2	LG	BRAKE SW
3	GR	IGN


Terminal No.	Color of Wire	Signal Name
8	L	CAN-H
10	P	CAN-L
21	B	GND (POWER)
22	B	GND (CIRCUIT)
23	B/W	GND (ILL)
28	P	O/D OFF/SPORT SW

Connector No.	M38
Connector Name	CVT SHIFT SELECTOR
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	B/W	-

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

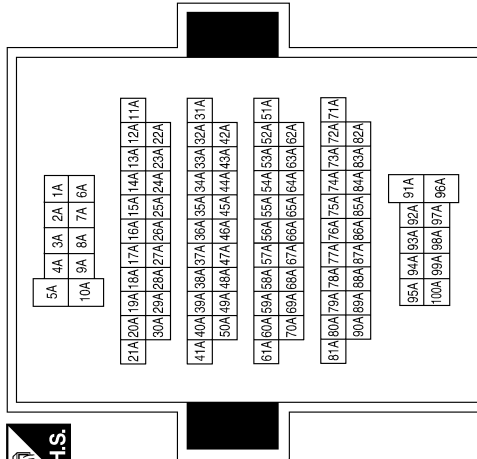

Terminal No.	Color of Wire	Signal Name
11A	W	-
12A	Y	-
20A	P	-
21A	L	-
22A	R	-
92A	LG	-


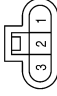
A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

CVT CONTROL SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F11A]


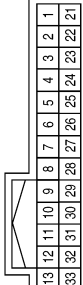
Connector No.	M83
Connector Name	G SENSOR
Connector Color	BLACK

Terminal No.	Color of Wire	Signal Name
1	Y	-
2	R	-
3	W	-

Terminal No.	Color of Wire	Signal Name
1	L	CAN-H
2	P	CAN-L
8	P	O/D OFF/SPORT SW
21	B/W	GND (ILL)
22	B	GND (POWER)
23	B	GND (CIRCUIT)
27	R	BAT
28	GR	IGN
30	LG	BRAKE SW

Connector No.	M82
Connector Name	COMBINATION METER (WITH TYPE B)
Connector Color	WHITE

20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21

Connector No.	E8
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5	B	-
6	P	-
7	L	-
16	Y	-
17	G	-
18	R	-

Terminal No.	Color of Wire	Signal Name
11A	G	-
12A	Y	-
20A	P	-
21A	L	-
22A	R	-
92A	LG	-

Connector No.	E7
Connector Name	WIRE TO WIRE
Connector Color	WHITE




11A	12A	13A	14A	15A	16A	17A	18A	19A	20A	21A
22A	23A	24A	25A	26A	27A	28A	29A	30A		
31A	32A	33A	34A	35A	36A	37A	38A	39A	40A	41A
42A	43A	44A	45A	46A	47A	48A	49A	50A		
51A	52A	53A	54A	55A	56A	57A	58A	59A	60A	61A
62A	63A	64A	65A	66A	67A	68A	69A	70A		
71A	72A	73A	74A	75A	76A	77A	78A	79A	80A	81A
82A	83A	84A	85A	86A	87A	88A	89A	90A		
91A	92A	93A	94A	95A						
96A	97A	98A	99A	100A						

ABDIA1070GB

CVT CONTROL SYSTEM

< WIRING DIAGRAM >


[CVT: RE0F11A]

Connector No.	E13
Connector Name	STOP LAMP SWITCH (WITH AT OR CVT)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	SB	-
2	LG	-

Connector No.	E14
Connector Name	JOINT CONNECTOR-E03
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
2	P	-
5	P	-
9	L	-
12	L	-

Connector No.	E22
Connector Name	JOINT CONNECTOR-E02
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
9	LG	-
10	LG	-

Connector No.	E45
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
21	R	AT ECU (WITH A/T OR CVT)

Connector No.	E55
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	P	-
7	R	-

Connector No.	F8
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5	B	-
6	P	-
7	L	-
16	G/R	-
17	O	-
18	LG	-

ABDIA1051GB

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

CVT CONTROL SYSTEM

< WIRING DIAGRAM >


[CVT: RE0F11A]

Connector No.	F41
Connector Name	OUTPUT SPEED SENSOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	B	-
2	BR	-
3	R	-

Connector No.	F44
Connector Name	TCM (TRANSMISSION CONTROL MODULE) (WITH CVT)
Connector Color	BLACK

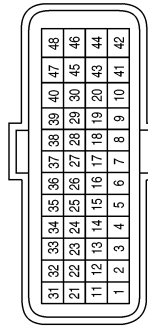

Terminal No.	Color of Wire	Signal Name
1	-	-
2	R/B	L RANGE SWITCH
3	-	-
4	W/B	D RANGE SWITCH
5	L/B	N RANGE SWITCH
6	O	R RANGE SWITCH
7	Y	P RANGE SWITCH
8	-	-
9	-	-
10	-	-
11	LG	SENSOR GROUND
12	G/W	CVT FLUID TEMPERATURE SENSOR

Terminal No.	Color of Wire	Signal Name
13	-	-
14	G/R	G SENSOR
15	V	-
16	L/R	SECONDARY PRESSURE SENSOR
17	-	-
18	-	-
19	-	-
20	-	-
21	R/W	ROM ASSY (CHIP SELECT)
22	V	ROM ASSY (DATA I/O)
23	P	CAN-L
24	BR	OUTPUT SPEED SENSOR
25	-	-
26	O	SENSOR POWER SUPPLY
27	-	-
28	-	-
29	-	-
30	BR/B	LINE PRESSURE SOLENOID VALVE
31	L/W	ROM ASSY (CLOCK)
32	-	-

Terminal No.	Color of Wire	Signal Name
33	L	CAN-H
34	W	SECONDARY SPEED SENSOR
35	LG/R	PRIMARY SPEED SENSOR
36	-	-
37	BR/W	HIGH CLUTCH & REVERSE BRAKE SOLENOID VALVE
38	G	TORQUE CONVERTER CLUTCH SOLENOID VALVE
39	G/B	LOW BRAKE SOLENOID VALVE
40	Y/B	PRIMARY PRESSURE SOLENOID VALVE
41	B	GROUND
42	B	GROUND
43	-	-
44	-	-
45	LG	POWER SUPPLY (BACKUP)
46	LG	POWER SUPPLY (BACKUP)
47	R	POWER SUPPLY
48	R	POWER SUPPLY

ABDIA1054GB

CVT CONTROL SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F11A]


Connector No.	F48
Connector Name	SECONDARY SPEED SENSOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	B	-
2	W	-
3	R	-


Terminal No.	Color of Wire	Signal Name
7	-	-
8	-	-
9	-	-
11	-	-
12	-	-
13	-	-
14	L/R	-
15	R/W	-
16	O	-
17	V	-
18	V	-
19	-	-
20	-	-
22	G/B	-
23	BR/W	-
25	LG	-

Connector No.	F46
Connector Name	CVT UNIT
Connector Color	GRAY

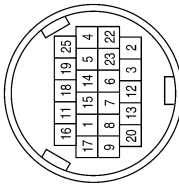


Terminal No.	Color of Wire	Signal Name
1	L/W	-
2	BR/B	-
3	Y/B	-
4	G/W	-
5	-	-
6	G	-

Connector No.	F55
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Connector No.	F52
Connector Name	TRANSMISSION RANGE SWITCH (WITH CVT)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	LG	-
7	R	-

Terminal No.	Color of Wire	Signal Name
1	R	-
2	BR	-
3	R	-
4	Y	-
5	O	-
6	L/B	-
7	W/B	-
8	R/B	-

Terminal No.	Color of Wire	Signal Name
1	B	-
2	LG/R	-
3	R	-



Connector No.	F50
Connector Name	PRIMARY SPEED SENSOR
Connector Color	BLACK

AAD1A0438GB

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

CVT SHIFT LOCK SYSTEM

< WIRING DIAGRAM >


[CVT: RE0F11A]

CVT SHIFT LOCK SYSTEM

Wiring Diagram

INFOID:000000009268108

CVT SHIFT LOCK SYSTEM

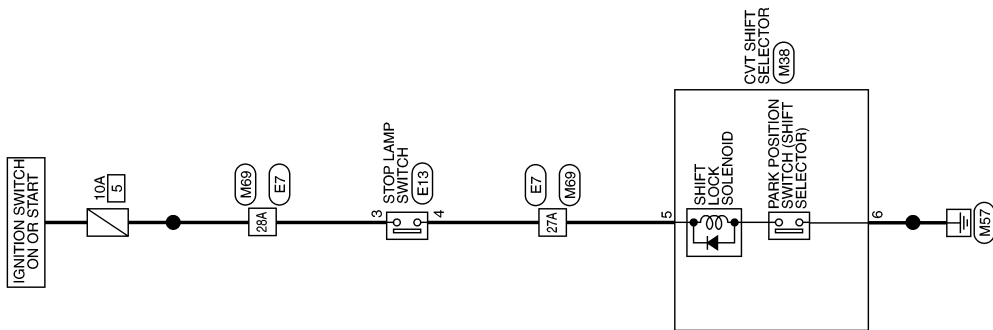

ABDWA0673GB


CVT SHIFT LOCK SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F11A]


CVT SHIFT LOCK SYSTEM CONNECTORS

Connector No.	M38
Connector Name	CVT SHIFT SELECTOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5	LG	-
6	B	-

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

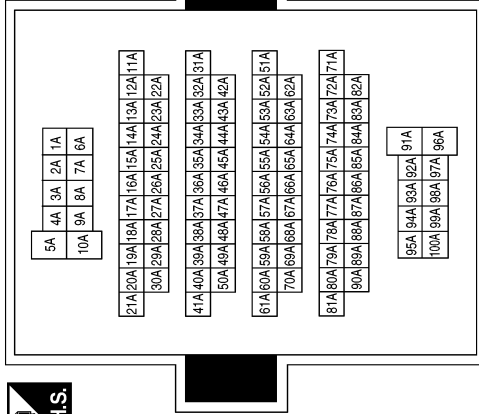

Terminal No.	Color of Wire	Signal Name
27A	LG	-
28A	L	-

Connector No.	E7
Connector Name	WIRE TO WIRE
Connector Color	WHITE

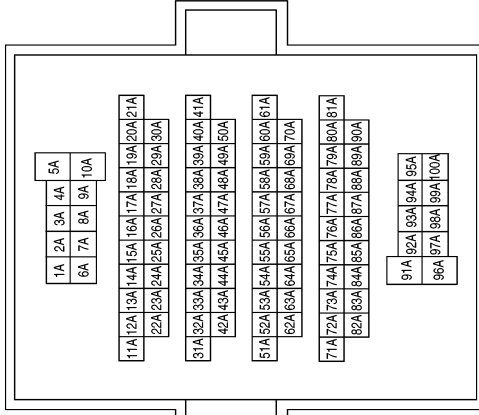

Terminal No.	Color of Wire	Signal Name
27A	P	-
28A	L	-

Connector No.	E13
Connector Name	STOP LAMP SWITCH (WITH A/T OR CVT)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	L	-
4	P	-

ABDIA1052GB

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000009268109

NOTE:

"DTC" includes DTC at the 1st trip.

1.OBTAIN INFORMATION ABOUT SYMPTOM

Refer to [TM-323, "Diagnostic Work Sheet"](#) and interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred) as much as possible when the customer brings in the vehicle.

>> GO TO 2.

2.CHECK DTC

1. Before checking the malfunction, check whether any DTC exists.
2. If DTC exists, perform the following operations.
 - Records the DTCs. (Print out using CONSULT and affix to the Work Order Sheet.)
 - Erase DTCs.
 - Check the relation between the cause found by DTC and the malfunction information from customer. [TM-421, "Symptom Table"](#) can be used effectively.
3. Check the relevant information including STI, etc.

Do malfunction information and DTC exist?

Malfunction information and DTC exist.>>GO TO 3.

Malfunction information exists but no DTC.>>GO TO 4.

No malfunction information, but DTC exists.>>GO TO 5.

3.REPRODUCE MALFUCTION SYSTEM

Check the malfunction described by the customer on the vehicle.

Check if the behavior is fail safe or normal operation. Refer to [TM-307, "Fail-safe"](#).

Interview sheet can be used effectively when reproduce malfunction conditions. Refer to [TM-323, "Diagnostic Work Sheet"](#).

Verify the relationship between the symptom and the conditions in which the malfunction described by the customer occurs.

>> GO TO 5.

4.REPRODUCE MALFUNCTION SYMPTOM

Check the malfunction described by the customer on the vehicle.

Check if the behavior is fail safe or normal operation. Refer to [TM-307, "Fail-safe"](#).

Interview sheet can be used effectively when reproduce malfunction conditions. [TM-323, "Diagnostic Work Sheet"](#).

Verify the relationship between the symptom and the conditions in which the malfunction described by the customer occurs.

>> GO TO 6.

5.PERFORM "DTC CONFIRMATION PROCEDURE"

Perform "DTC CONFIRMATION PROCEDURE" of the appropriate DTC to check if DTC is detected again.

Refer to [TM-310, "DTC Inspection Priority Chart"](#) when multiple DTCs are detected, and then determine the order for performing the diagnosis.

Is any DTC detected?

YES >> GO TO 7.

NO >> Follow [GI-45, "Intermittent Incident"](#) to check.

6.IDENTIFY MALFUNCTIONING SYSTEM WITH "DIAGNOSIS CHART BY SYMPTOM"

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[CVT: RE0F11A]

Use [TM-421, "Symptom Table"](#) from the symptom inspection result in step 4. Then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 8.

7. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the detected malfunctioning parts.

Reconnect parts or connector after repairing or replacing, and then erase DTC if necessary.

>> GO TO 8.

8. FINAL CHECK

Perform "DTC CONFIRMATION PROCEDURE" again to make sure that the repair is correctly performed.

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 3 or 4.

Is DTC or malfunction symptom reproduced?

YES-1 (DTC is reproduced.)>>GO TO 5.

YES-2 (Malfunction is reproduced.)>>GO TO 6.

NO >> Before delivering the vehicle to the customer, make sure that DTC is erased.

Diagnostic Work Sheet

INFOID:000000009268110

DESCRIPTION

There are many operating conditions that may cause a malfunction of the transmission parts. By understanding those conditions properly, a quick and exact diagnosis can be achieved.

In general, perception of a problem varies depending on individuals. Ask the customer about his/her concerns carefully. It is important to understand the phenomenon or status. To systemize all the information for the diagnosis, prepare the question sheet referring to the question points.

In some cases, multiple conditions that appear simultaneously may cause a DTC to be detected.

KEY POINTS

WHAT Vehicle & engine model
WHEN Date, Frequencies
WHERE.... Road conditions
HOW Operating conditions,
 Weather conditions,
 Symptoms

SEF907L

Worksheet Sample

Question sheet

Customer's name	MR/MS	Registration number		Initial year registration	Year	Month day
		Vehicle type		Chassis No.		
Storage date	Year	Month day	Engine	Mileage		km
Symptom		<input type="checkbox"/> Vehicle does not start. (<input type="checkbox"/> R position <input type="checkbox"/> D position <input type="checkbox"/> L position <input type="checkbox"/> M position) <input type="checkbox"/> Upshifting does not occur. <input type="checkbox"/> Downshifting does not occur. <input type="checkbox"/> Lock-up malfunction <input type="checkbox"/> Shift point is too high. <input type="checkbox"/> Shift point is too low. <input type="checkbox"/> Shift shock (<input type="checkbox"/> N→D <input type="checkbox"/> Lock-up <input type="checkbox"/> R, D, L and M position) <input type="checkbox"/> Slip (<input type="checkbox"/> N→D <input type="checkbox"/> Lock-up <input type="checkbox"/> R, D, L and M position) <input type="checkbox"/> Noise <input type="checkbox"/> Vibration When selector lever position is shifted, shift pattern does not change. <input type="checkbox"/> Other ()				
First occurrence		<input type="checkbox"/> Recently (as from month of year)				
Frequency of occurrence		<input type="checkbox"/> Always <input type="checkbox"/> Under certain conditions <input type="checkbox"/> Sometimes (time(s)/day)				

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[CVT: RE0F11A]

Question sheet

Customer's name	MR/MS	Registration number		Initial year registration	Year Month day
		Vehicle type		Chassis No.	
Storage date	Year Month day	Engine		Mileage	km
Climate conditions		Irrelevant			
Weather		<input type="checkbox"/> Clear <input type="checkbox"/> Cloud <input type="checkbox"/> Rain <input type="checkbox"/> Snow <input type="checkbox"/> Others)			
Temperature		<input type="checkbox"/> Hot <input type="checkbox"/> Warm <input type="checkbox"/> Cool <input type="checkbox"/> Cold <input type="checkbox"/> Temperature (Approx. °C)			
Relative humidity		<input type="checkbox"/> High <input type="checkbox"/> Moderate <input type="checkbox"/> Low			
Transaxle condition		<input type="checkbox"/> In cold-start <input type="checkbox"/> During warm-up (approx. °C) <input type="checkbox"/> After warm-up <input type="checkbox"/> Engine speed: rpm			
Road conditions		<input type="checkbox"/> Urban area <input type="checkbox"/> Suburb area <input type="checkbox"/> Highway <input type="checkbox"/> Mountainous road (uphill or downhill)			
Operating condition, etc.		Irrelevant <input type="checkbox"/> When engine starts <input type="checkbox"/> During idling <input type="checkbox"/> During driving <input type="checkbox"/> During acceleration <input type="checkbox"/> At constant speed driving <input type="checkbox"/> During deceleration <input type="checkbox"/> During cornering (RH curve or LH curve)			
Other conditions					

ADDITIONAL SERVICE WHEN REPLACING TCM

< BASIC INSPECTION >

[CVT: RE0F11A]

ADDITIONAL SERVICE WHEN REPLACING TCM

Description

INFOID:000000009268111

When replacing the TCM, perform the following work.

CHECK LOADING OF CALIBRATION DATA

- The TCM acquires calibration data (individual characteristic value) of each solenoid that is stored in the ROM assembly (in the control valve). This enables the TCM to perform accurate control. After the TCM is replaced, check that the TCM has correctly loaded the calibration data.

CALIBRATION OF G SENSOR

- TCM stores calibration data (inherent characteristic value) of G sensor to provide accurate control. Therefore, it is required to perform calibration of G sensor after the replacement of TCM.

CAUTION:

When replacing TCM and transaxle assembly as a set, replace transaxle assembly first and then replace TCM.

If the TCM is replaced in advance, perform “ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY” after “G sensor calibration”.

Work Procedure

INFOID:000000009268112

1. CHECK WORK CONTENTS

Replacing only the TCM>>GO TO 2.

Replacing the TCM after the transaxle assembly is replaced>>GO TO 2.

Replacing the transaxle assembly after the TCM is replaced>>GO TO 5.

2. LOADING OF CALIBRATION DATA

1. Shift the selector lever to the “P” position.
2. Turn ignition switch ON.
3. Check that “P” is displayed on shift position indicator on combination meter.

NOTE:

Displayed approximately 4 – 5 seconds after the selector lever is moved to the “P” position.

Does the shift position indicator display “P”?

YES >> GO TO 3.

NO >> GO TO 4.

3. PERFORM G SENSOR CALIBRATION

Refer to [TM-328. "Work Procedure"](#).

>> WORK END

4. DETECT MALFUNCTIONING ITEM

Check the following items:

- Harness between the TCM and the ROM assembly inside the transaxle assembly is open or shorted.
- Disconnected, loose, bent, collapsed, or otherwise abnormal connector housing terminals

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

5. PERFORM G SENSOR CALIBRATION

Refer to [TM-328. "Work Procedure"](#).

>> Perform “ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY” after “CALIBRATION OF G SENSOR”. Refer to [TM-326. "Work Procedure"](#).

ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[CVT: RE0F11A]

ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY

Description

INFOID:000000009268113

When replacing the transaxle, perform the following work.

ERASING THE CALIBRATION DATA

- The TCM acquires calibration data (individual characteristic value) of each solenoid that is stored in the ROM assembly (in the control valve). This enables the TCM to perform accurate control. For this reason, after the transaxle assembly is replaced, it is necessary to erase the calibration data that is stored in the TCM and load new calibration data.

ERASING THE LEARNED VALUE DATA

- TCM learns indicated pressure for appropriate control of the transaxle assembly and records the learned values. For this reason, the learned values stored in TCM must be erased after replacing a transaxle assembly.

ERASING CVT FLUID DEGRADATION LEVEL DATA

- TCM records the degradation level of the CVT fluid calculated from the vehicle driving status. Therefore, if the transaxle assembly is replaced, it is necessary to erase the CVT fluid degradation level data recorded by TCM.

Work Procedure

INFOID:000000009268114

1. INITIALIZE TCM

Ⓟ With CONSULT

1. Set parking brake.
2. Turn ignition switch ON.
3. Select "Work Support" in "TRANSMISSION".
4. Select "ERASE MEMORY DATA".
5. While maintaining the conditions below, touch "Start".
 - Vehicle stop status
 - With engine stopped
 - Selector lever: "R" position
 - Accelerator pedal: Depressed

NOTE:

Select "Start" and complete within approximately 20 seconds.

Is "COMPLETED" displayed?

YES >> GO TO 2.

NO >> Turn the ignition switch OFF and wait for a minimum of 10 seconds then perform the work again.

2. CHECK AFTER TCM IS INITIALIZED

Ⓟ With CONSULT

1. Turn ignition switch OFF with the selector lever in "R" position and wait for 10 seconds or more.
2. Turn ignition switch ON with the selector lever in "R" position.

CAUTION:

Never start the engine.

3. Select "Special function" in "TRANSMISSION".
4. Select "CALIB DATA".
5. Check that indicated value of "CALIB DATA" is equal to the value shown in the following table.

Item name	Display value	Item name	Display value
UNIT CLB ID1	00	MAP NO HC/RB	00
UNIT CLB ID2	00	MAP NO L/B	00
UNIT CLB ID3	00	OFFSET2 LU	0
UNIT CLB ID4	00	OFFSET2 PL	0
UNIT CLB ID5	00	OFFSET2 PRI	0
UNIT CLB ID6	00	OFFSET2 H/R	0

ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[CVT: RE0F11A]

Item name	Display value	Item name	Display value
UNIT CLB ID7	00	OFFSET2 L/B	0
UNIT CLB ID8	00	INIT OFFSET H/R A	0
UNIT CLB ID9	00	INIT OFFSET H/R B	0
UNIT CLB ID10	00	INIT OFFSET H/R C	0
UNIT CLB ID11	00	INIT OFFSET H/R D	0
GAIN LU	256	INIT OFFSET H/R E	0
GAIN PL	256	INIT OFFSET H/R F	0
GAIN PRI	256	INIT OFSET LB A	0
GAIN HC/RB	256	INIT OFSET LB B	0
GAIN L/B	256	INIT OFSET LB C	0
OFFSET LU	0	INIT OFSET LB D	0
OFFSET PL	0	INIT OFSET LB E	0
OFFSET PRI	0	INIT OFSET LB F	0
OFFSET HC/RB	0	LB INITIALIZE LEARN	-1
OFFSET L/B	0	HC INITIALIZE LEARN	-1
MAP NO LU	00	LB INITIALIZE TEMP	FF
MAP NO PL	00	LB INITIALIZE TEMP	FF
MAP NO PRI	00		

Is the indicated value of "CALIB DATA" equal to the value shown in the table?

- YES >> GO TO 3.
 NO >> GO TO 1.

3. LOADING OF CALIBRATION DATA

1. Shift the selector lever to the "P" position.
2. Check that "P" is displayed on shift position indicator on combination meter.

NOTE:

Displayed approximately 4 – 5 seconds after the selector lever is moved to the "P" position.

Does shift position indicator display "P"?

- YES >> GO TO 5.
 NO >> GO TO 4.

4. DETECT MALFUNCTIONING ITEMS

Check the following items:

- Harness between the TCM and the ROM assembly inside the transaxle assembly is open or shorted.
- Disconnected, loose, bent, collapsed, or otherwise abnormal connector housing terminals

Is the inspection result normal?

- YES >> GO TO 1.
 NO >> Repair or replace the malfunctioning parts.

5. ERASE THE CVT FLUID DEGRADATION LEVEL DATA

Ⓜ With CONSULT

1. Select "WORK SUPPORT" in "TRANSMISSION".
2. Select "CONFORM CVTF DETERIORATION".
3. Touch "Clear".

>> WORK END

CALIBRATION OF G SENSOR

Description

INFOID:000000009268115

TCM stores calibration data (inherent characteristic value) of G sensor to provide accurate control. Therefore, it is required to perform calibration of G sensor after the following work is performed.

- Removal/installation or replacement of G sensor
- Replacement of TCM

Work Procedure


INFOID:000000009268116

1. PREPARATION BEFORE CALIBRATION PROCEDURE

1. Park the vehicle on a level surface.
2. Adjust air pressure of all tires to the specified pressure. [WT-45. "Tire Air Pressure"](#).

>> GO TO 2.

2. PERFORM CALIBRATION

 With CONSULT


1. Turn ignition switch ON.
- CAUTION:**
Never start engine.
2. Select "Work Support" in "TRANSMISSION".
3. Select "G SENSOR CALIBRATION".
4. Touch "Start".

CAUTION:
Never swing the vehicle during "G sensor calibration".

Is "COMPLETED" displayed?

- YES >> GO TO 3.
NO >> Perform steps 1 and 2 again.

3. PERFORM THE SELF-DIAGNOSIS

 With CONSULT

1. Turn ignition switch OFF and wait for 10 seconds.
2. Turn ignition switch ON.
3. Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P1586" or "P1588" detected?

- YES >> Go to [TM-311. "DTC Index"](#).
NO >> Calibration end

CVT FLUID COOLER SYSTEM

Cleaning

INFOID:000000009315603

Whenever an automatic transaxle is repaired, overhauled, or replaced, the CVT fluid cooler mounted in the radiator must be inspected and cleaned.

Metal debris and friction material, if present, can be trapped or be deposited in the CVT fluid cooler. This debris can contaminate the newly serviced CVT or, in severe cases, can block or restrict the flow of CVT fluid. In either case, malfunction of the newly serviced CVT may occur.

Debris, if present, may deposit as CVT fluid enters the cooler inlet. It will be necessary to back flush the cooler through the cooler outlet in order to flush out any built up debris.


CVT FLUID COOLER CLEANING PROCEDURE

1. Position an oil pan under the transaxle's inlet and outlet cooler hoses.
2. Identify the inlet and outlet fluid cooler hoses.
3. Disconnect the fluid cooler inlet and outlet rubber hoses from the steel cooler tubes or bypass valve.

NOTE:

Replace the cooler hoses if rubber material from the hose remains on the tube fitting.

4. Allow any CVT fluid that remains in the cooler hoses to drain into the oil pan.

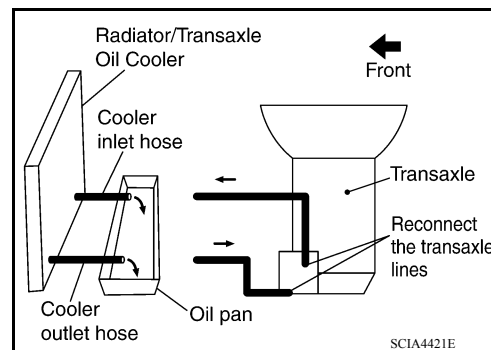


5. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

CAUTION:

- **Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.**
- **Spray Transmission Cooler Cleaner only with adequate ventilation.**
- **Avoid contact with eyes and skin.**
- **Never breath vapors or spray mist.**

6. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until CVT fluid flows out of the cooler inlet hose for 5 seconds.

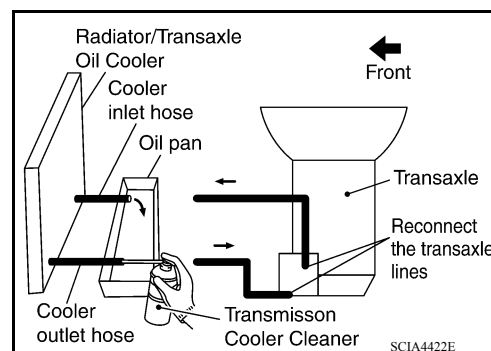

7. Insert the tip of an air gun into the end of the cooler outlet hose.

8. Wrap a shop rag around the air gun tip and end of the cooler outlet hose.

9. Blow compressed air regulated to 5 to 9 kg/cm² (70 to 130 psi) through the cooler outlet hose for 10 seconds to force out any remaining CVT fluid.

10. Repeat steps 5 through 9 three additional times.

11. Position an oil pan under the banjo bolts that connect the CVT fluid cooler steel lines to the transaxle.


12. Remove the banjo bolts.

13. Flush each steel line from the cooler side back toward the transaxle by spraying Transmission Cooler Cleaner in a continuous stream for 5 seconds.

14. Blow compressed air regulated to 5 to 9 kg/cm² (70 to 130 psi) through each steel line from the cooler side back toward the transaxle for 10 seconds to force out any remaining CVT fluid.

15. Ensure all debris is removed from the steel cooler lines.

16. Ensure all debris is removed from the banjo bolts and fittings.

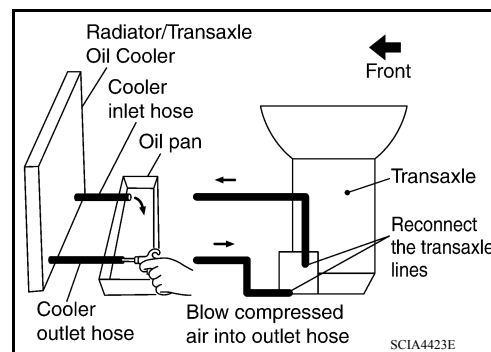

CVT FLUID COOLER SYSTEM

< BASIC INSPECTION >

[CVT: RE0F11A]

17. Perform "CVT FLUID COOLER DIAGNOSIS PROCEDURE".

CVT FLUID COOLER DIAGNOSIS PROCEDURE

NOTE:


Insufficient cleaning of the cooler inlet hose exterior may lead to inaccurate debris identification.

1. Position an oil pan under the transaxle's inlet and outlet cooler hoses.
2. Clean the exterior and tip of the cooler inlet hose.
3. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.



CAUTION:

- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
- Spray Transmission Cooler Cleaner only with adequate ventilation.
- Avoid contact with eyes and skin.
- Never breath vapors or spray mist.

4. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until CVT fluid flows out of the cooler inlet hose for 5 seconds.
5. Tie a common white, basket-type coffee filter to the end of the cooler inlet hose.

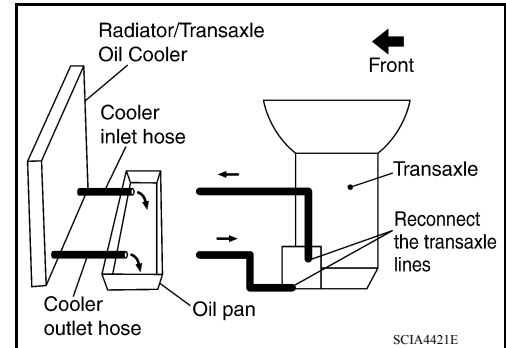


6. Insert the tip of an air gun into the end of the cooler outlet hose.
7. Wrap a shop rag around the air gun tip and end of cooler outlet hose.
8. Blow compressed air regulated to 5 to 9 kg/cm² (70 to 130 psi) through the cooler outlet hose to force any remaining CVT fluid into the coffee filter.
9. Remove the coffee filter from the end of the cooler inlet hose.
10. Perform "CVT FLUID COOLER INSPECTION PROCEDURE".

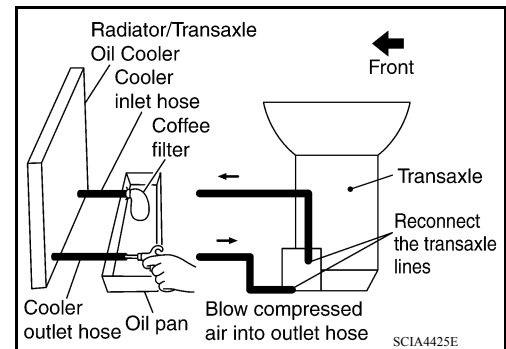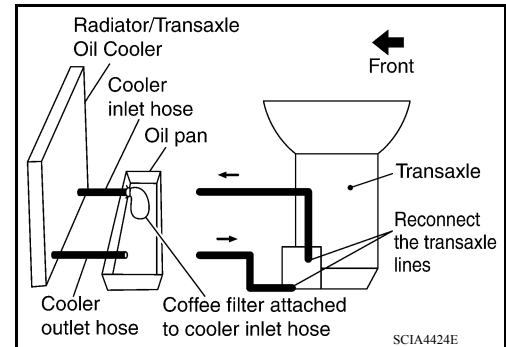

CVT FLUID COOLER INSPECTION PROCEDURE

1. Inspect the coffee filter for debris.
 - a. If small metal debris less than 1 mm (0.040 in) in size or metal powder is found in the coffee filter, this is normal. If normal debris is found, the CVT fluid cooler/radiator can be reused and the procedure is ended.

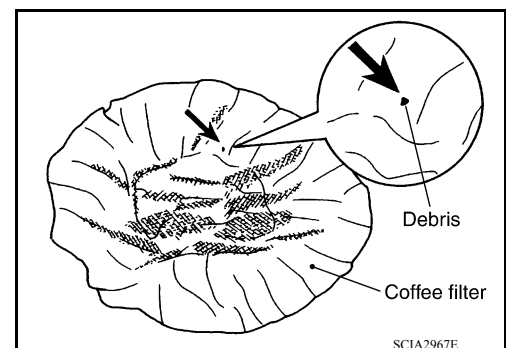


CVT FLUID COOLER SYSTEM

< BASIC INSPECTION >

[CVT: RE0F11A]

- b. If one or more pieces of debris are found that are over 1 mm (0.040 in) in size and/or peeled clutch facing material is found in the coffee filter, the fluid cooler is not serviceable. The radiator/ fluid cooler must be replaced and the inspection procedure is ended.

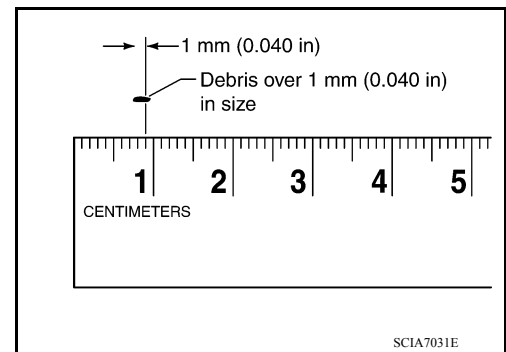

A
B
C

CVT FLUID COOLER FINAL INSPECTION

After performing all procedures, ensure that all remaining oil is cleaned from all components.

TM

E
F
G
H
I
J
K
L
M
N
O
P

STALL TEST

< BASIC INSPECTION >

[CVT: RE0F11A]

STALL TEST

Work Procedure

INFOID:000000009268119

INSPECTION

1. Check the engine oil level. Replenish if necessary.
2. Check for leak of the CVT fluid. Refer to [TM-426, "Inspection"](#).
3. Drive for about 10 minutes to warm up the vehicle so that the CVT fluid temperature is 50 to 80°C (122 to 176°F).
4. Be sure to apply the parking brake and block the tires.
5. Start the engine, depress the brake pedal and put the selector lever to the D position.
6. While depressing the brake pedal, depress the accelerator pedal gradually.
7. Read the stall speed quickly. Then, release your foot from the accelerator pedal quickly.

CAUTION:

Do not depress the accelerator pedal for 5 seconds or more during the test.

Stall speed : Refer to [TM-456, "Stall Speed"](#).

8. Place the selector lever in the N position.
9. Cool the CVT fluid.
CAUTION:
Run the engine with the idle speed for at least 1 minute.
10. Put the selector lever to the R position and perform Step 6 to Step 9 again.

NARROWING-DOWN MALFUNCTIONING PARTS

	Selector lever position		Possible cause
	D	R	
Stall speed	H	O	• Low brake
	O	H	• Reverse brake
	L	L	• Engine • Torque converter one way clutch
	H	H	• Line pressure is low. • Primary pulley • Secondary pulley • Steel belt

O: Within the stall speed standard value

H: Stall speed is higher than the standard value.

L: Stall speed is lower than the standard value.

LINE PRESSURE TEST

< BASIC INSPECTION >

[CVT: RE0F11A]

LINE PRESSURE TEST

Work Procedure

INFOID:000000009268120

INSPECTION

1. Check the engine oil level. Replenish if necessary. Refer to [LU-8, "Inspection"](#).
2. Check for CVT fluid leaks. Refer to [TM-426, "Inspection"](#).
3. Drive for about 10 minutes to warm up the vehicle so that the CVT fluid temperature is 50 to 80°C (122 to 176°F).
4. Stop the vehicle, apply the parking brake and block the tires.
5. Start the engine.
6. Select "Data Monitor" in "TRANSMISSION".
7. Select "LINE PRESSURE".
8. Measure the line pressure at both idle and the stall speed.

CAUTION:

Keep brake pedal pressed all the way down during measurement.

Line pressure : [TM-456, "Line Pressure"](#)

NARROWING-DOWN MALFUNCTIONING PARTS

Judgment		Possible cause
Idle speed	Low for all positions ("P", "R", "N", "D", "L")	Possible causes include malfunctions in the pressure supply system and low oil pump output. For example: <ul style="list-style-type: none"> • Oil pump wear • Damage of chain and sprocket • Pressure regulator valve or plug sticking or spring fatigue • Oil strainer ⇒ oil pump ⇒ pressure regulator valve passage oil leak • Engine idle speed too low
	Only low for a specific position	Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.
	High	Possible causes include a sensor malfunction or malfunction in the line pressure adjustment function. For example: <ul style="list-style-type: none"> • Accelerator pedal position signal malfunction • CVT fluid temperature sensor malfunction • Line pressure solenoid malfunction (sticking in OFF state, filter clog, cut line) • Pressure regulator valve or plug sticking
Stall speed	Line pressure does not rise higher than the line pressure for idle.	Possible causes include a sensor malfunction or malfunction in the pressure adjustment function. For example: <ul style="list-style-type: none"> • TCM malfunction • Line pressure solenoid malfunction (shorting, sticking in ON state) • Pressure regulator valve or plug sticking
	The pressure rises, but does not enter the standard position.	Possible causes include malfunctions in the pressure supply system and malfunction in the pressure adjustment function. For example: <ul style="list-style-type: none"> • Oil pump wear • Line pressure solenoid malfunction (sticking, filter clog) • Pressure regulator valve or plug sticking
	Only low for a specific position	Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.

DTC/CIRCUIT DIAGNOSIS

U0073 COMMUNICATION BUS A OFF

Description

INFOID:000000009268121

CAN (Controller Area Network) is a serial communication line for real-time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independently). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000009268122

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
U0073	Control Module Communication Bus A Off	TCM communication blockage lasts for 2 seconds or more when turning ON the ignition switch. (Communication not established.)	Harness or connector (CAN communication line is error)

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

 With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U0073" detected?

YES >> Go to [TM-334, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268123

For the diagnosis procedure, refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

U0100 LOST COMMUNICATION (ECM A)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

U0100 LOST COMMUNICATION (ECM A)

Description

INFOID:000000009268124

CAN (Controller Area Network) is a serial communication line for real-time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independently). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000009268125

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
U0100	Lost Communication With ECM/PCM A	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from ECM continuously for 2 seconds or more.	<ul style="list-style-type: none">• ECM• Harness or connector (CAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine and wait for at least 5 seconds.
2. Check the first trip DTC.

Is "U0100" detected?

- YES >> Go to [TM-335, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268126

For the diagnosis procedure, refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

U0140 LOST COMMUNICATION (BCM)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

U0140 LOST COMMUNICATION (BCM)

Description

INFOID:000000009268127

CAN (Controller Area Network) is a serial communication line for real-time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independently). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000009268128

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
U0140	Lost Communication With Body Control Module	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from BCM continuously for 2 seconds or more.	<ul style="list-style-type: none">• BCM• Harness or connector (CAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

Ⓟ With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U0140" detected?

- YES >> Go to [TM-336, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268129

For the diagnosis procedure, refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

U0141 LOST COMMUNICATION (BCM A)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

U0141 LOST COMMUNICATION (BCM A)

Description

INFOID:000000009268130

CAN (Controller Area Network) is a serial communication line for real-time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independently). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000009268131

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
U0141	Lost Communication With Body Control Module A	When the ignition switch is turned ON, TCM continues no reception of the CAN communication signal from IPDM E/R for 2 seconds or more.	<ul style="list-style-type: none">• IPDM E/R• Harness or connector (CAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

Ⓜ With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U0141" detected?

- YES >> Go to [TM-334, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268132

For the diagnosis procedure, refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

U0155 LOST COMMUNICATION (IPC)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

U0155 LOST COMMUNICATION (IPC)

Description

INFOID:000000009268133

CAN (Controller Area Network) is a serial communication line for real-time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independently). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000009268134

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
U0155	Lost Communication With Instrument Panel Cluster (IPC) Control Module	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from the combination meter continuously for 2 seconds or more.	<ul style="list-style-type: none">• Combination meter• Harness or connector (CAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

Ⓟ With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U0155" detected?

- YES >> Go to [TM-338, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268135

For the diagnosis procedure, refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

U0300 CAN COMMUNICATION DATA

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

U0300 CAN COMMUNICATION DATA

Description

INFOID:000000009268136

CAN (Controller Area Network) is a serial communication line for real-time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independently). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000009268137

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
U0300	Internal Control Module Software Incompatibility	When the ignition switch is ON, the data length transmitted from each control unit is shorter than the specified length and the status continues for 2 seconds or more.	Control unit other than TCM

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Start the engine and wait for 5 seconds or more.
2. Check the DTC.

Is "U0300" detected?

- YES >> Go to [TM-339, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268138

1. CONTROL UNIT CHECK

Check the number of control units replaced before "U0300" is detected.

Is one control unit replaced?

- YES >> The specification of the control unit replaced may be incorrect. Check the part number and the specification.
NO >> GO TO 2.

2. CONTROL UNIT CHECK

Ⓜ With CONSULT

1. Remove one of the control unit replaced.
2. Assemble the old control unit before replacement.
3. Turn ignition switch ON, and wait for 2 seconds or more.
4. Select "Self Diagnostic Results" in "TRANSMISSION".

Is "U0300" detected?

- YES >> Turn OFF the ignition switch and check other control units in the same manner.
NO >> The specification of the control unit removed may be incorrect. Check the part number and the specification.

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

U1000 CAN COMM CIRCUIT

Description

INFOID:000000009268139

CAN (Controller Area Network) is a serial communication line for real-time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independently). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000009268140

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
U1000	CAN Communication Line	When the ignition switch is ON, TCM cannot send the CAN communication signal continuously for 2 seconds or more.	Harness or connector (CAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

④ With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U1000" detected?

YES >> Go to [TM-340, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268141

For the diagnosis procedure, refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

U1117 LOST COMMUNICATION (ABS)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

U1117 LOST COMMUNICATION (ABS)

Description

INFOID:000000009268142

CAN (Controller Area Network) is a serial communication line for real-time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independently). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000009268143

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
U1117	Lost Communication With ABS	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from ABS actuator and electric unit (control unit) continuously for 2 seconds or more.	<ul style="list-style-type: none">• ABS actuator and electric unit (control unit)• Harness or connector (CAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

Ⓜ With CONSULT

1. Start the engine and wait for 5 seconds or more.
2. Check the DTC.

Is "U1117" detected?

- YES >> Go to [TM-334, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268144

For the diagnosis procedure, refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

P062F EEPROM

Description

INFOID:000000009268145

TCM compares the calculated value stored in the flash ROM with the value stored in TCM. If the calculated value does not agree with the stored value, TCM judges this as a malfunction.

DTC Logic

INFOID:000000009268146

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P062F	Internal Control Module EEPROM Error	Flash ROM error is detected when turning ON the ignition switch.	<ul style="list-style-type: none"> TCM (flash ROM) Harness or connector [TCM power supply (back-up) circuit is open or shorted]

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Check the DTC.

Is "P062F" detected?

YES >> Go to [TM-342, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268147

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-45, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace the TCM. Refer to [TM-437, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning parts.

P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0705 TRANSMISSION RANGE SENSOR A

DTC Logic

INFOID:000000009268148

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0705	Transmission Range Sensor A Circuit (PRNDL Input)	Two or more range signals simultaneously stay ON continuously for 5 seconds under the following diagnosis condition 1 and 2: • Diagnosis condition 1 (continued for 5 seconds or more) - TCM power supply voltage: More than 11 V • Diagnosis condition 2 (continued for 2 seconds or more) - Vehicle speed: Less than 3 km/h (2 MPH) - Accelerator pedal position: 0.6/8 or less - Idle switch: ON - Stop lamp switch: ON	<ul style="list-style-type: none"> • Harness or connector (Short circuit between transmission range switch and TCM) • Transmission range switch

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Maintain the following conditions.

Accelerator pedal position : 0.0/8
 Brake pedal : Depressed
 Vehicle speed : 0 km/h (0 MPH)

3. Shift the selector lever through entire positions from "P" to "L". (Hold the selector lever at each position for 10 seconds or more.)
4. Check the first trip DTC.

Is "P0705" detected?

YES >> Go to [TM-343 "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268149

1. CHECK TCM INPUT SIGNALS

④ With CONSULT

1. Turn ignition switch ON.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "D POSITION SW", "N POSITION SW", "R POSITION SW", "P POSITION SW" and "L POSITION SW".
4. Shift the selector lever through entire positions from "P" to "L" and check ON/OFF of each monitor item.

Monitor item	Test condition	Condition
D POSITION SW	Selector lever: "D" position	On
	Other than the above	Off

P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

Monitor item	Test condition	Condition
N POSITION SW	Selector lever: "N" position	On
	Other than the above	Off
R POSITION SW	Selector lever: "R" position	On
	Other than the above	Off
P POSITION SW	Selector lever: "P" position	On
	Other than the above	Off
L POSITION SW	Selector lever: "L" position	On
	Other than the above	Off

Ⓜ Without CONSULT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Turn ignition switch ON.
4. Shift the selector lever from "P" to "L" and check voltage between TCM harness connector terminals and ground.

TCM		Ground	Test condition	Voltage
Connector	Terminal			
F44	2	Ground	Selector lever: "L" position	Battery voltage
			Other than the above	Approx. 0 V
	4		Selector lever: "D" position	Battery voltage
			Other than the above	Approx. 0 V
	5		Selector lever: "N" position	Battery voltage
			Other than the above	Approx. 0 V
	6		Selector lever: "R" position	Battery voltage
			Other than the above	Approx. 0 V
	7		Selector lever: "P" position	Battery voltage
			Other than the above	Approx. 0 V

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
- NO-1 ["D POSITION SW" is "ON" when selector is not in "D" position. (Or connector terminal 4 is at power voltage.)]>>GO TO 2.
- NO-2 ["N POSITION SW" is "ON" when selector is not in "N" position. (Or connector terminal 5 is at power voltage.)]>>GO TO 4.
- NO-3 ["R POSITION SW" is "ON" when selector is not in "R" position. (Or connector terminal 6 is at power voltage.)]>>GO TO 6.
- NO-4 ["P POSITION SW" is "ON" when selector is not in "P" position. (Or connector terminal 7 is at power voltage.)]>>GO TO 8.
- NO-5 ["L POSITION SW" is "ON" when selector is not in "L" position. (Or connector terminal 2 is at power voltage.)]>>GO TO 10.

2. CHECK D POSITION SW CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

TCM		Continuity	
Connector	Terminal		
F44	4	2	Not existed
		5	
		6	
		7	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning parts.

3. CHECK D POSITION SW CIRCUIT (PART 2)

1. Disconnect transmission position switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

TCM		Ground	Voltage
Connector	Terminal		
F44	4	Ground	Approx. 0 V

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace malfunctioning parts.

4. CHECK N POSITION SW CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

TCM		Continuity	
Connector	Terminal		
F44	5	2	Not existed
		4	
		6	
		7	

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.

5. CHECK N POSITION SW CIRCUIT (PART 2)

1. Disconnect transmission position switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

TCM		Ground	Voltage
Connector	Terminal		
F44	5	Ground	Approx. 0 V

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace malfunctioning parts.

6. CHECK P POSITION SW CIRCUIT (PART 1)

1. Turn ignition switch OFF.

A
B
C

TM

E

F

G

H

I

J

K

L

M

N

O

P

P0705 TRANSMISSION RANGE SENSOR A

[CVT: RE0F11A]

< DTC/CIRCUIT DIAGNOSIS >

2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

TCM		Continuity	
Connector	Terminal		
F44	7	2	Not existed
		4	
		5	
		6	

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace malfunctioning parts.

7. CHECK P POSITION SW CIRCUIT (PART 2)

1. Disconnect transmission position switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

TCM		Ground	Voltage
Connector	Terminal		
F44	7	Ground	Approx. 0 V

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace malfunctioning parts.

8. CHECK R POSITION SW CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

TCM		Continuity	
Connector	Terminal		
F44	6	2	Not existed
		4	
		5	
		7	

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace malfunctioning parts.

9. CHECK R POSITION SW CIRCUIT (PART 2)

1. Disconnect transmission position switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

TCM		Ground	Voltage
Connector	Terminal		
F44	6	Ground	Approx. 0 V

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace malfunctioning parts.

P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

10. CHECK L POSITION SWITCH CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

TCM		Terminal	Continuity
Connector			
F44	2	4	Not existed
		5	
		6	
		7	

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace malfunctioning parts.

11. CHECK L POSITION SWITCH CIRCUIT (PART 2)

1. Disconnect transmission position switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

TCM		Ground	Voltage
Connector	Terminal		
F44	2	Ground	Approx. 0 V

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace malfunctioning parts.

12. CHECK TRANSMISSION RANGE SWITCH

Check transmission range switch. Refer to [TM-347, "Component Inspection \(Transmission Range Switch\)"](#).

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

Component Inspection (Transmission Range Switch)

INFOID:000000009268150

1. CHECK TRANSMISSION RANGE SWITCH

Check continuity between transmission range switch connector terminals.

Transmission range switch	Condition	Continuity
Terminal		
1 – 2	Manual lever: "P" and "N" positions	Existed
	Other than the above	Not existed
3 – 4	Manual lever: "P" position	Existed
	Other than the above	Not existed
3 – 5	Manual lever: "R" position	Existed
	Other than the above	Not existed
3 – 6	Manual lever: "N" position	Existed
	Other than the above	Not existed
3 – 7	Manual lever: "D" position	Existed
	Other than the above	Not existed

P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

Transmission range switch Terminal	Condition	Continuity
3 – 8	Manual lever: "L" position	Existed
	Other than the above	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> There is a malfunction of transmission range switch. Replace transaxle assembly. Refer to [TM-452. "Removal and Installation"](#).

P0706 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0706 TRANSMISSION RANGE SENSOR A

DTC Logic

INFOID:000000009268151

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0706	Transmission Range Sensor A Circuit Range/Performance	All range signals stay OFF continuously for 30 seconds under the following diagnosis condition 1 and 2: <ul style="list-style-type: none">• Diagnosis condition 1 (continued for 30 seconds or more)- TCM power supply voltage: More than 11 V• Diagnosis condition 2 (continued for 2 seconds or more)- Vehicle speed: Less than 3 km/h (2 MPH)- Accelerator pedal position: 0.6/8 or less- Idle switch: ON- Stop lamp switch: ON	<ul style="list-style-type: none">• Harness or connector (Open circuit between ignition switch and transmission range switch/open circuit between transmission range switch and TCM)• Transmission range switch• Control cable

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Maintain the following conditions.

Accelerator pedal position : 0.0/8
Brake pedal : Depressed
Vehicle speed : 0 km/h (0 MPH)

3. Shift the selector lever through entire positions from "P" to "L". (Hold the selector lever at each position for 35 seconds or more.)
4. Check the first trip DTC.

Is "P0706" detected?

YES >> Go to [TM-349, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268152

1. ADJUSTMENT OF CONTROL CABLE

Adjust control cable. Refer to [TM-430, "Inspection and Adjustment"](#).

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

Ⓜ With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Results" in "TRANSMISSION".
3. Touch "Erase".
4. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-349, "DTC Logic"](#).

Is "P0706" detected?

YES >> GO TO 3.
NO >> INSPECTION END

P0706 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

3. CHECK POWER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect transmission range switch connector.
3. Turn ignition switch ON.
4. Check voltage between transmission range switch harness connector terminal and ground.

Transmission range switch		Ground	Voltage
Connector	Terminal		
F52	3	Ground	10 – 16 V

Is the inspection result normal?

- YES >> GO TO 4.
NO >> GO TO 7.

4. CHECK CIRCUIT BETWEEN TRANSMISSION RANGE SWITCH AND TCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between transmission range switch harness connector terminals and TCM harness connector terminals.

Transmission range switch		TCM		Continuity
Connector	Terminal	Connector	Terminal	
F52	4	F44	7	Existed
	5		6	
	6		5	
	7		4	
	8		2	

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair or replace malfunctioning parts.

5. CHECK CIRCUIT BETWEEN TRANSMISSION RANGE SWITCH AND TCM (PART 2)

Check continuity between transmission range switch harness connector terminals and ground.

Transmission range switch		Ground	Continuity
Connector	Terminal		
F52	4	Ground	Not existed
	5		
	6		
	7		
	8		

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Repair or replace malfunctioning parts.

6. CHECK TRANSMISSION RANGE SWITCH

Check transmission range switch. Refer to [TM-351, "Component Inspection \(Transmission Range Switch\)"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
NO >> Repair or replace malfunctioning parts.

7. CHECK CIRCUIT BETWEEN IPDM E/R AND TRANSMISSION RANGE SWITCH (PART 1)

P0706 TRANSMISSION RANGE SENSOR A

[CVT: RE0F11A]

< DTC/CIRCUIT DIAGNOSIS >

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and transmission range switch.

IPDM E/R		Transmission range switch		Continuity
Connector	Terminal	Connector	Terminal	
E45	21	F52	3	Existed

Is the check result normal?

- YES >> GO TO 8.
 NO >> Repair or replace malfunctioning parts.

8.CHECK CIRCUIT BETWEEN IPDM E/R AND TRANSMISSION RANGE SWITCH (PART 2)

Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E45	21	Ground	Not existed

Is the check result normal?

- YES >> GO TO 9.
 NO >> Repair or replace malfunctioning parts.

9.DETECT MALFUNCTIONING ITEMS

Check the following items:

- Harness open circuit or short circuit between ignition switch and IPDM E/R. Refer to [PG-20, "Wiring Diagram — Ignition Power Supply —"](#).
- 10A fuse (No. 49, IPDM E/R). Refer to [PG-62, "IPDM E/R Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
 NO >> Repair or replace malfunctioning parts.

Component Inspection (Transmission Range Switch)

INFOID:000000009268153

1.CHECK TRANSMISSION RANGE SWITCH

Check continuity between transmission range switch connector terminals.

Transmission range switch	Condition	Continuity
Terminal		
1 – 2	Manual lever: "P" and "N" positions	Existed
	Other than the above	Not existed
3 – 4	Manual lever: "P" position	Existed
	Other than the above	Not existed
3 – 5	Manual lever: "R" position	Existed
	Other than the above	Not existed
3 – 6	Manual lever: "N" position	Existed
	Other than the above	Not existed
3 – 7	Manual lever: "D" position	Existed
	Other than the above	Not existed
3 – 8	Manual lever: "L" position	Existed
	Other than the above	Not existed

Is the inspection result normal?

- YES >> INSPECTION END

P0706 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

NO >> There is a malfunction of transmission range switch. Replace transaxle assembly. Refer to [TM-452, "Removal and Installation"](#).

P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

DTC Logic

INFOID:00000009268154

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0711	Transmission Fluid Temperature Sensor A Circuit Range/Performance	Under the following diagnosis conditions, CVT fluid temperature does not rise to 10°C (50°F) after driving for a certain period of time with the TCM-received fluid temperature sensor value between -40°C (-40°F) and 9°C (48.2°F). <ul style="list-style-type: none"> • Diagnosis condition - Selector lever: "D" position - Vehicle speed: 10 km/h (7 MPH) or more - Engine speed: 450 rpm or more - Accelerator pedal position: 1.0/8 or more - TCM power supply voltage: More than 11 V 	CVT fluid temperature sensor
		When the condition of the final judgment is satisfied after satisfying that of the provisional judgment: <ul style="list-style-type: none"> • Provisional judgment: All of the following conditions are satisfied within 2 seconds after the ignition switch is turned ON. - U0073, U0100, P0712 and P0713 are not detected. • CAN communication is normal. • TCM power supply voltage: More than 11 V • The difference between CVT fluid temperature and engine coolant temperature is 37°C (98.6°F) or more, or -27°C (-16.6°F) or less. • Final judgment: When all of the following conditions are satisfied and this state is maintained for 300 seconds: - ECM is normal. - Provisional judgment is satisfied. 	CVT fluid temperature sensor

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK CVT FLUID TEMPERATURE SENSOR FUNCTION

With CONSULT

1. Cool the engine.
2. Turn ignition switch ON.

CAUTION:

Never start the engine.

3. Select "FLUID TEMP" in "Data Monitor" in "TRANSMISSION".
4. Select "COOLANT TEMP/S" in "Data Monitor" in "ENGINE".
5. Check temperature difference between CVT fluid and engine coolant.

With GST

1. Complete engine diagnoses P0111, P0116, and P0196.
2. After starting the engine start, run the engine at idle for 5 minutes.
3. Check the DTC.

P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

Is the temperature calculated by subtracting engine coolant temperature from CVT fluid temperature more than 37°C (98.6°F) or is it less than -27°C (-16.6°F)? (With CONSULT)/Is "P0711" detected? (With GST)

YES >> Go to [TM-354, "Diagnosis Procedure"](#).

NO-1 [With CONSULT: "FLUID TEMP" is 10°C (50°F) or more]>>INSPECTION END

NO-2 [With CONSULT: "FLUID TEMP" is 9°C (48.2°F) or less]>>GO TO 3.

NO-3 (With GST)>>GO TO 3.

3.CHECK DTC DETECTION

With CONSULT

1. Select "SLCT LVR POSI", "VSP SENSOR", "ACCELE POSI SEN 1", "FLUID TEMP" in "Data Monitor" in "TRANSMISSION".
2. Record CVT fluid temperature.
3. Start the engine and wait for at least 3 minutes.
4. Drive the vehicle for the total minutes specified in the Driving time column below with the following conditions satisfied.

SLCT LVR POSI	: D
VSP SENSOR	: 10 km/h (7 MPH) or more
ACCELE POSI SEN 1	: 1.0/8 or more

CVT fluid temperature before engine start	Driving time
-40°C (-40°F) – -31°C (-23.8°F)	17 minutes or more
-30°C (-22°F) – -21°C (-5.8°F)	16 minutes or more
-20°C (-4°F) – -11°C (12.2°F)	13 minutes or more
-10°C (14°F) – -1°C (30.2°F)	9 minutes or more
0°C (32°F) – 9°C (48.2°F)	6 minutes or more

5. Perform "Self Diagnostic Results" in "TRANSMISSION".

With GST

1. Cool the engine.
2. Start the engine and wait for at least 3 minutes.
3. Drive the vehicle and maintain the following conditions for 21 minutes or more.

Selector lever	: D position
Vehicle speed	: 10 km/h (7 MPH) or more
Accelerator pedal opening	: 1.0/8 or more

4. Check the DTC.

Is "P0711" detected?

YES >> Go to [TM-354, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268155

1.CHECK CVT FLUID TEMPERATURE SENSOR

1. Turn ignition switch OFF.
2. Disconnect CVT unit connector.
3. Check CVT fluid temperature sensor. Refer to [TM-354, "Component Inspection \(CVT Fluid Temperature Sensor\)"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

Component Inspection (CVT Fluid Temperature Sensor)

INFOID:000000009268156

1.CHECK CVT FLUID TEMPERATURE SENSOR

Check resistance between CVT unit connector terminals.

P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

CVT unit Terminal	Condition	Resistance
4 – 25	CVT fluid temperature: 20°C (68°C)	Approx. 6.5 kΩ
	CVT fluid temperature: 50°C (122°C)	Approx. 2.2 kΩ
	CVT fluid temperature: 80°C (176°C)	Approx. 0.87 kΩ

Is the inspection result normal?

YES >> INSPECTION END

NO >> There is a malfunction of CVT fluid temperature sensor. Replace transaxle assembly. Refer to [TM-452. "Removal and Installation"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A

DTC Logic

INFOID:000000009268157

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0712	Transmission Fluid Temperature Sensor A Circuit Low	The CVT fluid temperature identified by the TCM is 180°C (356°F) or more continuously for 5 seconds or more under the following diagnosis conditions: <ul style="list-style-type: none">• Diagnosis conditions- Ignition switch: ON- TCM power supply voltage: More than 11 V	<ul style="list-style-type: none">• Harness or connector (CVT fluid temperature sensor circuit is shorted to ground)• CVT fluid temperature sensor

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine and wait for 10 seconds or more.
2. Check the first trip DTC.

Is "P0712" detected?

- YES >> Go to [TM-356, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268158

1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		Ground	Continuity
Connector	Terminal		
F44	12	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace malfunctioning part.

2. CHECK CVT FLUID TEMPERATURE SENSOR

Check CVT fluid temperature sensor. Refer to [TM-356, "Component Inspection \(CVT Fluid Temperature Sensor\)"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
NO >> Repair or replace malfunctioning parts.

Component Inspection (CVT Fluid Temperature Sensor)

INFOID:000000009268159

1. CHECK CVT FLUID TEMPERATURE SENSOR

Check resistance between CVT unit connector terminals.

P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

CVT unit Terminal	Condition	Resistance
4 – 25	CVT fluid temperature: 20°C (68°C)	Approx. 6.5 kΩ
	CVT fluid temperature: 50°C (122°C)	Approx. 2.2 kΩ
	CVT fluid temperature: 80°C (176°C)	Approx. 0.87 kΩ

Is the inspection result normal?

YES >> INSPECTION END

NO >> There is a malfunction of CVT fluid temperature sensor. Replace transaxle assembly. Refer to [TM-452. "Removal and Installation"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A

DTC Logic

INFOID:000000009268160

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0713	Transmission Fluid Temperature Sensor A Circuit High	The CVT fluid temperature identified by the TCM is -40°C (-40°F) or less continuously for 5 seconds or more under the following diagnosis conditions: <ul style="list-style-type: none">• Diagnosis conditions- Ignition switch: ON- Vehicle speed: More than 10 km/h (7 MPH)- TCM power supply voltage: More than 11 V	<ul style="list-style-type: none">• Harness or connector (CVT fluid temperature sensor circuit is open or shorted to power supply)• CVT fluid temperature sensor

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Maintain the following condition for 10 seconds or more.

Vehicle speed : 20 km/h (12 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0713" detected?

YES >> Go to [TM-356, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268161

1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminals and CVT unit harness connector terminals.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F44	12	F46	4	Existed
	11		25	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning part.

2. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 2)

1. Turn ignition switch ON.
2. Check voltage between TCM harness connector terminal and ground.

P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

TCM		Ground	Voltage
Connector	Terminal		
F44	12	Ground	Approx. 0 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning part.

3.CHECK CVT FLUID TEMPERATURE SENSOR

Check CVT fluid temperature sensor. Refer to [TM-359, "Component Inspection \(CVT Fluid Temperature Sensor\)"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

Component Inspection (CVT Fluid Temperature Sensor)

INFOID:000000009268162

1.CHECK CVT FLUID TEMPERATURE SENSOR

Check resistance between CVT unit connector terminals.

CVT unit Terminal	Condition	Resistance
4 – 25	CVT fluid temperature: 20°C (68°C)	Approx. 6.5 kΩ
	CVT fluid temperature: 50°C (122°C)	Approx. 2.2 kΩ
	CVT fluid temperature: 80°C (176°C)	Approx. 0.87 kΩ

Is the inspection result normal?

YES >> INSPECTION END

NO >> There is a malfunction of CVT fluid temperature sensor. Replace transaxle assembly. Refer to [TM-452, "Removal and Installation"](#).

P0715 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0715 INPUT SPEED SENSOR A

DTC Logic

INFOID:000000009268163

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0715	Input/Turbine Speed Sensor A Circuit	The primary speed sensor value is less than 150 rpm continuously for 5 seconds or more under the following diagnosis conditions: <ul style="list-style-type: none"> • Diagnosis conditions - Secondary pulley speed: 1,000 rpm or more - TCM power supply voltage: More than 11 V 	<ul style="list-style-type: none"> • Harness or connector (Primary speed sensor circuit is open or shorted) • Primary speed sensor
		The primary speed sensor value is 240 rpm or less continuously for 500 msec or more under the following diagnosis conditions: <ul style="list-style-type: none"> • Diagnosis conditions - 10-msec-ago primary pulley speed: 1,000 rpm or more - TCM power supply voltage: More than 11 V 	

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

Selector lever : "L" POSITION
 Vehicle speed : 40 km/h (25 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0715" detected?

YES >> Go to [TM-360, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268164

1. CHECK PRIMARY SPEED SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect primary speed sensor connector.
3. Turn ignition switch ON.
4. Check voltage between primary speed sensor harness connector terminal and ground.

Primary speed sensor		Ground	Voltage
Connector	Terminal		
F50	3	Ground	10 – 16 V

Is the inspection result normal?

YES >> GO TO 2.

P0715 INPUT SPEED SENSOR A

[CVT: RE0F11A]

< DTC/CIRCUIT DIAGNOSIS >

NO >> GO TO 6.

2.CHECK PRIMARY SPEED SENSOR GROUND CIRCUIT

Check continuity between primary speed sensor harness connector terminal and ground.

Primary speed sensor		Ground	Continuity
Connector	Terminal		
F50	1	Ground	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning parts.

3.CHECK CIRCUIT BETWEEN PRIMARY SPEED SENSOR AND TCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between primary speed sensor harness connector terminal and TCM harness connector terminal.

Primary speed sensor		TCM		Continuity
Connector	Terminal	Connector	Terminal	
F50	2	F44	35	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace malfunctioning parts.

4.CHECK CIRCUIT BETWEEN PRIMARY SPEED SENSOR AND TCM (PART 2)

Check continuity between primary speed sensor harness connector terminal and ground.

Primary speed sensor		Ground	Continuity
Connector	Terminal		
F50	2	Ground	Not existed


Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.

5.CHECK TCM INPUT SIGNALS

1. Connect all of disconnected connectors.
2. Lift the vehicle.
3. Start the engine.
4. Check frequency of primary speed sensor.

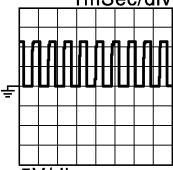TCM		Ground	Condition	Data
Connector	Terminal			
F44	35	Ground	<ul style="list-style-type: none"> • Selector lever: "L" position • Vehicle speed: 20 km/h (12 MPH) 	<p>Approx. 1,100 Hz</p>  <p>5V/div</p> <p>JSDIA1906GB</p>

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Replace primary speed sensor. [TM-442, "Removal and Installation"](#).

P0715 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

6. CHECK CIRCUIT BETWEEN IPDM E/R AND PRIMARY SPEED SENSOR (PART 1)

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector terminal and primary speed sensor harness connector terminal.

IPDM E/R		Primary speed sensor		Continuity
Connector	Terminal	Connector	Terminal	
E45	21	F50	3	Existed

Is the check result normal?

- YES >> GO TO 7.
NO >> Repair or replace malfunctioning parts.

7. CHECK CIRCUIT BETWEEN IPDM E/R AND PRIMARY SPEED SENSOR (PART 2)

Check continuity between IPDM E/R harness connector terminal and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E45	21	Ground	Not existed

Is the check result normal?

- YES >> GO TO 8.
NO >> Repair or replace malfunctioning parts.

8. DETECT MALFUNCTIONING ITEMS

Check the following items:

- Harness open circuit or short circuit between ignition switch and IPDM E/R. Refer to [PG-20, "Wiring Diagram — Ignition Power Supply —"](#).
- 10A fuse (No.49, IPDM E/R). Refer to [PG-62, "IPDM E/R Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
NO >> Repair or replace malfunctioning parts.

P0720 OUTPUT SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0720 OUTPUT SPEED SENSOR

DTC Logic

INFOID:000000009268165

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0720	Output Speed Sensor Circuit	<p>The output speed sensor value is less than 150 rpm continuously for 10 seconds or more under the following diagnosis conditions:</p> <ul style="list-style-type: none">• Diagnosis conditions- Selector lever: "D", "L" or "R" position- Auxiliary gearbox shifting is not in progress.- When the "D" position switch, "L" position switch or "R" position switch is ON, the output speed has not experienced 250 rpm or more.- After shifting the selector lever, the input speed has experienced less than 300 rpm.- Secondary pulley speed: 1,500 rpm or more- TCM power supply voltage: More than 11 V <p>The output speed sensor value is 90 rpm or less continuously for 500 msec or more under the following diagnosis conditions:</p> <ul style="list-style-type: none">• Diagnosis conditions- 10-msec-ago output speed: 730 rpm or more- TCM power supply voltage: More than 11 V	<ul style="list-style-type: none">• Harness or connector (Output speed sensor circuit is open or shorted)• Output speed sensor

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position
Vehicle speed : 55 km/h (34 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0720" detected?

YES >> Go to [TM-363, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268166

1. CHECK OUTPUT SPEED SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect output speed sensor connector.
3. Turn ignition switch ON.
4. Check voltage between output speed sensor harness connector terminal and ground.

P0720 OUTPUT SPEED SENSOR

[CVT: RE0F11A]

< DTC/CIRCUIT DIAGNOSIS >

Output speed sensor		Ground	Voltage
Connector	Terminal		
F41	3	Ground	10 – 16 V

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 6.

2.CHECK OUTPUT SPEED SENSOR GROUND CIRCUIT

Check continuity between output speed sensor harness connector terminal and ground.

Output speed sensor		Ground	Continuity
Connector	Terminal		
F41	1	Ground	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning parts.

3.CHECK CIRCUIT BETWEEN OUTPUT SPEED SENSOR AND TCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between output speed sensor harness connector terminal and TCM harness connector terminal.

Output speed sensor		TCM		Continuity
Connector	Terminal	Connector	Terminal	
F41	2	F44	24	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace malfunctioning parts.

4.CHECK CIRCUIT BETWEEN OUTPUT SPEED SENSOR AND TCM (PART 2)

Check continuity between output speed sensor harness connector terminal and ground.

Output speed sensor		Ground	Continuity
Connector	Terminal		
F41	2	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.


5.CHECK TCM INPUT SIGNALS

1. Connect all of disconnected connectors.
2. Lift the vehicle.
3. Start the engine.
4. Check frequency of output speed sensor.

P0720 OUTPUT SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

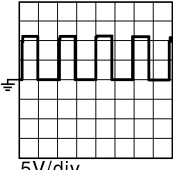TCM		Ground	Condition	Data
Connector	Terminal			
F44	24	Ground	<ul style="list-style-type: none"> • Selector lever: "L" position • Vehicle speed: 20 km/h (12 MPH) 	<p>Approx. 200 Hz 2.5mSec/div</p>  <p>5V/div JSDIA1904GB</p>

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45. "Intermittent Incident"](#).
 NO >> Replace output speed sensor. Refer to [TM-444. "Removal and Installation"](#).

6. CHECK CIRCUIT BETWEEN IPDM E/R AND OUTPUT SPEED SENSOR (PART 1)

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector terminal and output speed sensor harness connector terminal.

IPDM E/R		Output speed sensor		Continuity
Connector	Terminal	Connector	Terminal	
E45	21	F41	3	Existed

Is the check result normal?

- YES >> GO TO 7.
 NO >> Repair or replace malfunctioning parts.

7. CHECK CIRCUIT BETWEEN IPDM E/R AND OUTPUT SPEED SENSOR (PART 2)

Check continuity between IPDM E/R harness connector terminal and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E45	21	Ground	Not existed

Is the check result normal?

- YES >> GO TO 8.
 NO >> Repair or replace malfunctioning parts.

8. DETECT MALFUNCTIONING ITEMS

Check the following items:

- Harness open circuit or short circuit between ignition switch and IPDM E/R. Refer to [PG-20. "Wiring Diagram — Ignition Power Supply —"](#).
- 10A fuse (No.49, IPDM E/R). Refer to [PG-62. "IPDM E/R Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-45. "Intermittent Incident"](#).
 NO >> Repair or replace malfunctioning parts.

P0740 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0740 TORQUE CONVERTER

DTC Logic

INFOID:000000009268167

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0740	Torque Converter Clutch Circuit/Open	The TCM torque converter clutch solenoid valve current monitor reading is 200 mA or less continuously for 5 seconds or more under the following diagnosis conditions: <ul style="list-style-type: none">• Diagnosis conditions- Solenoid valve output current: 750 mA or more- GND short diagnosis of the solenoid valve circuit is not satisfied.- TCM power supply voltage: More than 11 V	<ul style="list-style-type: none">• Harness or connector (Torque converter clutch solenoid valve circuit is open or shorted to power supply)• Torque converter clutch solenoid valve

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE OPERATION (PART 1)

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PREPARATION BEFORE OPERATION (PART 2)

Ⓟ With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Confirm that the CVT fluid temperature is in the following range.

FLUID TEMP : 10°C (50°F) or more

Ⓢ With GST

1. Start the engine.
2. Set the CVT fluid to 10°C (50°F) or more.

NOTE:

When the ambient temperature is 20°C (68°F), the CVT fluid usually increases to 50 to 80°C (122 to 176°F) with driving in an urban area for approximately 10 minutes.

Is the CVT fluid 10°C (50°F) or more?

- YES >> GO TO 3.
NO >> 1. Warm the transaxle.
2. GO TO 3.

3. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position
Vehicle speed : 40 km/h (25 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0740" detected?

- YES >> Go to [TM-367, "Diagnosis Procedure"](#).
NO >> INSPECTION END

P0740 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

Diagnosis Procedure

INFOID:000000009268168

1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and CVT unit harness connector terminal.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F44	38	F46	6	Existed

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace malfunctioning parts.

2. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE

Check torque converter clutch solenoid valve. Refer to [TM-367, "Component Inspection \(Torque Converter Clutch Solenoid Valve\)"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
NO >> Repair or replace malfunctioning parts.

Component Inspection (Torque Converter Clutch Solenoid Valve)

INFOID:000000009268169

1. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE

Check resistance between CVT unit connector terminal and ground.

CVT unit Terminal	Ground	Condition	Resistance
6	Ground	CVT fluid temperature: 20°C (68°F)	Approx. 6.1 Ω
		CVT fluid temperature: 50°C (122°F)	Approx. 6.9 Ω
		CVT fluid temperature: 80°C (176°F)	Approx. 7.7 Ω

Is the inspection result normal?

- YES >> INSPECTION END
NO >> There is a malfunction of torque converter clutch solenoid valve. Replace transaxle assembly. Refer to [TM-452, "Removal and Installation"](#).

P0743 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0743 TORQUE CONVERTER

DTC Logic

INFOID:000000009268170

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0743	Torque Converter Clutch Circuit Electrical	The TCM torque converter clutch solenoid valve current monitor reading is 200 mA or less continuously for 480 msec or more under the following diagnosis conditions: <ul style="list-style-type: none">• Diagnosis conditions- Solenoid valve output current: 750 mA or more- GND short circuit diagnosis occurs in the solenoid valve drive circuit.- TCM power supply voltage: More than 11 V	<ul style="list-style-type: none">• Harness or connector (Torque converter clutch solenoid valve circuit is shorted to ground)• Torque converter clutch solenoid valve

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE OPERATION (PART 1)

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PREPARATION BEFORE OPERATION (PART 2)

Ⓟ With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Confirm that the CVT fluid temperature is in the following range.

FLUID TEMP : 10°C (50°F) or more

Ⓢ With GST

1. Start the engine.
2. Set the CVT fluid to 10°C (58°F) or more.

NOTE:

When the ambient temperature is 20°C (68°F), the CVT fluid usually increases to 50 to 80°C (122 to 176°F) with driving in an urban area for approximately 10 minutes.

Is the CVT fluid 10°C (58°F) or more?

- YES >> GO TO 3.
NO >> 1. Warm the transaxle.
2. GO TO 3.

3. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 5 seconds or more.

Selector lever : "D" position
Vehicle speed : 40 km/h (25 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0743" detected?

- YES >> Go to [TM-369, "Diagnosis Procedure"](#).
NO >> INSPECTION END

P0743 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

Diagnosis Procedure

INFOID:000000009268171

1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		Ground	Continuity
Connector	Terminal		
F44	38	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace malfunctioning parts.

2. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE

Check torque converter clutch solenoid valve. Refer to [TM-369, "Component Inspection \(Torque Converter Clutch Solenoid Valve\)"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
NO >> Repair or replace malfunctioning parts.

Component Inspection (Torque Converter Clutch Solenoid Valve)

INFOID:000000009268172

1. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE

Check resistance between CVT unit connector terminal and ground.

CVT unit Terminal	Ground	Condition	Resistance
6	Ground	CVT fluid temperature: 20°C (68°F)	Approx. 6.1 Ω
		CVT fluid temperature: 50°C (122°F)	Approx. 6.9 Ω
		CVT fluid temperature: 80°C (176°F)	Approx. 7.7 Ω

Is the inspection result normal?

- YES >> INSPECTION END
NO >> There is a malfunction of torque converter clutch solenoid valve. Replace transaxle assembly.
Refer to [TM-452, "Removal and Installation"](#).

P0744 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0744 TORQUE CONVERTER

DTC Logic

INFOID:000000009268173

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0744	Torque converter clutch circuit intermittent	The torque converter slip speed is at or above a set value (40 rpm + (Vehicle speed / 2) continuously for 30 seconds or more under the following diagnosis conditions: <ul style="list-style-type: none">• Diagnosis conditions- Selector lever: "D" position- Accelerator pedal position: 1.0/8 or more- Vehicle speed: 10 km/h (6 MPH) or more- Engine speed: 450 rpm or more- CVT fluid temperature: 20°C (68°F) ≤ CVT fluid temperature ≤ 180°C (356°F)- Lockup command is being given (except for slip lockup).- LU PRS: More than 0.2 MPa- TCM power supply voltage: More than 11 V	<ul style="list-style-type: none">• Torque converter clutch solenoid valve• Control valve assembly• Torque converter

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE OPERATION 1

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PREPARATION BEFORE OPERATION 2

With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Confirm that the CVT fluid temperature is in the range below.

FLUID TEMP : 20°C (68°F) or more

With GST

1. Start the engine.
2. Set the CVT fluid to 20°C (68°F) or more.

NOTE:

When the ambient temperature is 20°C (68°F), the CVT fluid usually increases to 50 to 80°C (122 to 176°F) with driving in an urban area for approximately 10 minutes.

Is the CVT fluid 20°C (68°F) or more?

YES >> GO TO 3.

NO >> 1. Warm the transaxle.
2. GO TO 3.

3. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 40 seconds or more.

Selector lever : "D" position
Accelerator pedal position : 1.0/8 or more
Vehicle speed : 40 km/h (25 MPH) or more

P0744 TORQUE CONVERTER

[CVT: RE0F11A]

< DTC/CIRCUIT DIAGNOSIS >

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0744" detected?

- YES >> Go to [TM-371. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268174

1. CHECK LINE PRESSURE

Perform line pressure test. Refer to [TM-333. "Work Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunction items.

2. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE

1. Turn ignition switch OFF.
2. Disconnect CVT unit connector.
3. Check torque converter clutch solenoid valve. Refer to [TM-371. "Component Inspection \(Torque Converter Clutch Solenoid Valve\)"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace the malfunction items.

3. CHECK INTERMITTENT INCIDENT

Refer to [GI-45. "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace the transaxle assembly. Refer to [TM-452. "Removal and Installation"](#).
NO >> Repair or replace the malfunction items.

Component Inspection (Torque Converter Clutch Solenoid Valve)

INFOID:000000009268175

1. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE

Check resistance between CVT unit connector terminal and ground.

CVT unit Terminal	Ground	Condition	Resistance
6	Ground	CVT fluid temperature: 20°C (68°F)	Approx. 6.1 Ω
		CVT fluid temperature: 50°C (122°F)	Approx. 6.9 Ω
		CVT fluid temperature: 80°C (176°F)	Approx. 7.7 Ω

Is the inspection result normal?

- YES >> INSPECTION END
NO >> There is a malfunction of torque converter clutch solenoid valve. Replace transaxle assembly. Refer to [TM-452. "Removal and Installation"](#).

P0746 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0746 PRESSURE CONTROL SOLENOID A

DTC Logic

INFOID:000000009268176

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0746	Pressure Control Solenoid A Performance/Stuck Off	<p>The detecting condition A or detection condition B is detected twice or more (1 second or more later after detection of the first) in the same DC under the following diagnosis conditions:</p> <ul style="list-style-type: none"> • Diagnosis conditions <ul style="list-style-type: none"> - After the ignition switch is ON, 500 msec or more have passed. - Selector lever: Other than "P" and "N" positions - Idle is not being detected. - Engine speed: 600 rpm or more - Primary pulley speed: 500 rpm or more - Auxiliary gearbox shifting is not in progress. - Acceleration/deceleration speed: -0.05 G or more - The primary pulley speed experienced 306 rpm or more and the secondary pulley speed experienced 230 rpm or more at least once. - The output speed is 107 rpm or less or the secondary pulley speed exceeds 61 rpm. • Detection condition A <ul style="list-style-type: none"> - Status with the shifting ratio of the primary pulley speed/secondary pulley ratio exceeding 2.55 is 200 msec or more continuously. • Detection condition B <ul style="list-style-type: none"> - Status with the shifting ratio of the primary pulley speed/secondary pulley ratio exceeding 3.35 is 100 msec or more continuously. 	<ul style="list-style-type: none"> • Line pressure solenoid valve • Control valve assembly

NOTE:

DC stands for "DRIVING CYCLE" and indicates a series of driving cycle of "Ignition switch OFF → ON → driving → OFF".

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

- Selector lever : "D" position
- Accelerator pedal position : 0.1/8 or more
- Vehicle speed : 40 km/h (25 MPH) or more

P0746 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0746" detected?

- YES >> Go to [TM-373. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268177

1. CHECK LINE PRESSURE SOLENOID VALVE

1. Turn ignition switch OFF.
2. Disconnect CVT unit connector.
3. Check line pressure solenoid valve. Refer to [TM-373. "Component Inspection \(Line Pressure Solenoid Valve\)"](#)

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace malfunctioning parts.

2. CHECK LINE PRESSURE

Perform line pressure test. Refer to [TM-333. "Work Procedure"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45. "Intermittent Incident"](#).
NO >> Repair or replace malfunctioning parts.

Component Inspection (Line Pressure Solenoid Valve)

INFOID:000000009268178

1. CHECK LINE PRESSURE SOLENOID VALVE

Check resistance between CVT unit connector terminal and ground.

CVT unit Terminal	Ground	Condition	Resistance
2	Ground	CVT fluid temperature: 20°C (68°F)	Approx. 5.3 Ω
		CVT fluid temperature: 50°C (122°F)	Approx. 6.0 Ω
		CVT fluid temperature: 80°C (176°F)	Approx. 6.7 Ω

Is the inspection result normal?

- YES >> INSPECTION END
NO >> There is a malfunction of line pressure solenoid valve. Replace transaxle assembly. Refer to [TM-452. "Removal and Installation"](#).

P0846 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0846 TRANSMISSION FLUID PRESSURE SEN/SW B

DTC Logic

INFOID:000000009268179

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0846	Transmission Fluid Pressure Sensor/Switch B Circuit Range/Performance	<p>The detection conditions continuously for 5 seconds or more under the following diagnosis conditions:</p> <ul style="list-style-type: none">• Diagnosis conditions<ul style="list-style-type: none">- Selector lever: "D" position- The primary pulley speed experienced 306 rpm or more and the secondary pulley speed experienced 230 rpm or more at least once.- Wheel spin is not being detected.- The rate of change in pulley ratio: Between -0.09 and +0.09 inclusive- Solenoid valve output current: 750 mA or more- GND short diagnosis of the solenoid valve circuit is not satisfied.- TCM power supply voltage: More than 11 V• Detection conditions<ul style="list-style-type: none">- After the value of "Actual secondary pressure – Target secondary pressure" exceeds 0.675 MPa:<ul style="list-style-type: none">• The rate of change in vehicle speed [km/h (MPH)]: Between -49 (-30) and +49 (+30) inclusive• The rate of change in accelerator pedal angle: Between -1.3/8 and +1.3/8 inclusive	<ul style="list-style-type: none">• Secondary pressure sensor• Control valve assembly

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Shift the selector lever to "D" position.
3. Drive the vehicle at a constant velocity of 40 km/h (25 MPH) at least for 10 seconds.

CAUTION:

At the same time, the accelerator pedal angle must be maintained constant.

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0846" detected?

- YES >> Go to [TM-374, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268180

1. CHECK TCM INPUT SIGNAL

1. Start the engine.
2. Check voltage between TCM connector terminal and ground.

P0846 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

TCM		Ground	Condition	Voltage
Connector	Terminal			
F44	16	Ground	<ul style="list-style-type: none">• Selector lever: "N" position• At idle	Approx. 0.88 – 0.92 V

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> There is a malfunction of secondary pressure sensor value. Replace transaxle assembly. Refer to [TM-452, "Removal and Installation"](#).

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

P0847 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0847 TRANSMISSION FLUID PRESSURE SEN/SW B

DTC Logic

INFOID:000000009268181

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0847	Transmission Fluid Pressure Sensor/Switch B Circuit Low	The secondary pressure sensor voltage is 0.09 V or less continuously for 5 seconds or more under the following diagnosis conditions: <ul style="list-style-type: none">• Diagnosis conditions- CVT fluid temperature: -20°C (-4°F) or more- TCM power supply voltage: More than 11 V	<ul style="list-style-type: none">• Harness or connector (Secondary pressure sensor circuit is open or shorted to ground)• Secondary pressure sensor• Control valve assembly

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Maintain the following conditions for 10 seconds or more.

FLUID TEMP : -19°C (-2.2°F) or more

5. Check the first trip DTC.

With GST

1. Start the engine and wait for at least 10 seconds.

CAUTION:

When the ambient temperature is -20°C (-4°F) or less and the engine is cold, warm up the engine for approximately 5 minutes.

2. Check the first trip DTC.

Is "P0847" detected?

YES >> Go to [TM-376, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268182

1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminals and CVT unit harness connector terminals.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F44	11	F46	25	Existed
	16		14	
	26		16	

Is the inspection result normal?

P0847 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

- YES >> GO TO 2.
NO >> Repair or replace malfunctioning parts.

2.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 2)

Check continuity between TCM harness connector terminals and ground.

TCM		Ground	Continuity
Connector	Terminal		
F44	16	Ground	Not existed
	26		

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace malfunctioning parts.

3.CHECK TCM INPUT SIGNALS

1. Connect all connectors removed.
2. Start the engine.
3. Check voltage between TCM harness connector terminal and ground.

TCM		Ground	Condition	Voltage
Connector	Terminal			
F44	16	Ground	<ul style="list-style-type: none">• Selector lever: "N" position• At idle	Approx. 0.88 – 0.92 V

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
NO >> There is malfunction of secondary pressure sensor. Replace transaxle assembly. Refer to [TM-452, "Removal and Installation"](#).

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

P0848 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0848 TRANSMISSION FLUID PRESSURE SEN/SW B

DTC Logic

INFOID:000000009268183

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0848	Transmission Fluid Pressure Sensor/Switch B Circuit Low	The secondary pressure sensor voltage is 4.7 V or more continuously for 5 seconds or more under the following diagnosis conditions: <ul style="list-style-type: none">• Diagnosis conditions- CVT fluid temperature: -20°C (-4°F) or more- Secondary pressure target value: 5.7 MPa or less- TCM power supply voltage: More than 11 V	<ul style="list-style-type: none">• Harness or connector (Secondary pressure sensor circuit is shorted to power supply)• Secondary pressure sensor• Control valve assembly

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, the ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Maintain the following conditions for 10 seconds or more.

FLUID TEMP : -19°C (-2.2°F) or more

5. Check the first trip DTC.

With GST

1. Start the engine and wait for at least 10 seconds.

CAUTION:

When the ambient temperature is -20°C (-4°F) or less and the engine is cold, warm up the engine for approximately 5 minutes.

2. Check the first trip DTC.

Is "P0848" detected?

YES >> Go to [TM-378, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268184

1. CHECK SECONDARY PRESSURE SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect CVT unit connector.
3. Turn ignition switch ON.
4. Check voltage between CVT unit harness connector terminal and ground.

CVT unit		Ground	Voltage
Connector	Terminal		
F46	16	Ground	Approx. 5.0 V

Is the inspection result normal?

YES >> GO TO 2.

P0848 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

NO >> Repair or replace malfunctioning parts.

2.CHECK SECONDARY PRESSURE SENSOR SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

TCM			Continuity
Connector	Terminal		
F46	16	Other than 16	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning parts.

3.CHECK TCM INPUT SIGNALS

1. Connect all connectors removed.
2. Start the engine.
3. Check voltage between TCM harness connector terminal and ground.

TCM		Ground	Condition	Voltage
Connector	Terminal			
F46	16	Ground	<ul style="list-style-type: none">• Selector lever: "N" position• At idle	Approx. 0.88 – 0.92 V

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-45. "Intermittent Incident"](#).

NO >> There is a malfunction of secondary pressure sensor. Replace transaxle assembly. Refer to [TM-452. "Removal and Installation"](#).

P0863 TCM COMMUNICATION

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0863 TCM COMMUNICATION

DTC Logic

INFOID:000000009268185

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0863	TCM Communication Circuit	An error is detected at the initial CAN diagnosis of TCM.	TCM

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓟ With CONSULT

1. Turn ignition switch ON.
2. Check the DTC.

Is "P0863" detected?

- YES >> Go to [TM-380, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268186

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-45, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace TCM. Refer to [TM-437, "Removal and Installation"](#).
NO >> Repair or replace malfunctioning parts.

P0890 TCM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0890 TCM

DTC Logic

INFOID:000000009268187

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0890	Transmission control module power relay sense circuit low	The battery voltage supplied to the TCM is less than 8.4 V continuously for 200 msec or more under the following diagnosis condition: <ul style="list-style-type: none"> • Diagnosis condition - TCM power supply voltage: More than 11 V 	Harness or connector (TCM power supply (back-up) circuit is open or shorted.)

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the DTC.

Is "P0890" detected?

- YES >> Go to [TM-381, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268188

1. CHECK TCM POWER SUPPLY (BACK-UP) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check voltage between TCM harness connector terminals and ground.

TCM		Ground	Voltage
Connector	Terminal		
F44	45	Ground	10 – 16 V
	46		

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
 NO >> GO TO 2.

2. DETECT MALFUNCTIONING ITEMS

Check the following items:

- Open or short circuit of harness between battery positive terminal and TCM connectors terminals 45 and 46.
- 10A fuse (No.25, fuse and fusible link block). Refer to [PG-61, "Terminal Arrangement"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
 NO >> Repair or replace malfunctioning parts.

P0962 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0962 PRESSURE CONTROL SOLENOID A

DTC Logic

INFOID:000000009268189

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0962	Pressure Control Solenoid A Control Circuit Low	The line pressure solenoid valve current is 200 mA or less continuously for 200 msec or more under the following diagnosis conditions: <ul style="list-style-type: none"> • Diagnosis conditions - Solenoid output current: 750 mA or more - GND short diagnosis of the solenoid drive circuit is satisfied. - TCM power supply voltage: More than 11 V 	<ul style="list-style-type: none"> • Harness or connector (Line pressure solenoid valve circuit is shorted to ground) • Line pressure solenoid valve

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0962" detected?

- YES >> Go to [TM-382, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268190

1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		Ground	Continuity
Connector	Terminal		
F44	30	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace malfunctioning parts.

2. CHECK LINE PRESSURE SOLENOID VALVE

Check line pressure solenoid valve. Refer to [TM-382, "Component Inspection \(Line Pressure Solenoid Valve\)"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
 NO >> Repair or replace malfunctioning parts.

Component Inspection (Line Pressure Solenoid Valve)

INFOID:000000009268191

1. CHECK LINE PRESSURE SOLENOID VALVE

Check resistance between CVT unit connector terminal and ground.

P0962 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

CVT unit Terminal	Ground	Condition	Resistance
2	Ground	CVT fluid temperature: 20°C (68°F)	Approx. 5.3 Ω
		CVT fluid temperature: 50°C (122°F)	Approx. 6.0 Ω
		CVT fluid temperature: 80°C (176°F)	Approx. 6.7 Ω

Is the inspection result normal?

YES >> INSPECTION END

NO >> There is a malfunction of line pressure solenoid valve. Replace transaxle assembly. Refer to [TM-452. "Removal and Installation"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

P0963 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0963 PRESSURE CONTROL SOLENOID A

DTC Logic

INFOID:000000009268192

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0963	Pressure Control Solenoid A Control Circuit High	The line pressure solenoid valve current is 200 mA or less continuously for 200 msec or more under the following diagnosis conditions: <ul style="list-style-type: none"> • Diagnosis conditions - Solenoid output current: 750 mA or more - GND short diagnosis of the solenoid drive circuit is not satisfied. - TCM power supply voltage: More than 11 V 	<ul style="list-style-type: none"> • Harness or connector (Line pressure solenoid valve circuit is open or shorted to power supply) • Line pressure solenoid valve

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0963" detected?

- YES >> Go to [TM-384, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268193

1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and CVT unit harness connector terminal.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F44	30	F46	2	Existed

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace malfunctioning parts.

2. CHECK LINE PRESSURE SOLENOID VALVE

Check line pressure solenoid valve. Refer to [TM-384, "Component Inspection \(Line Pressure Solenoid Valve\)"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
 NO >> Repair or replace malfunctioning parts.

Component Inspection (Line Pressure Solenoid Valve)

INFOID:000000009268194

1. CHECK LINE PRESSURE SOLENOID VALVE

Check resistance between CVT unit connector terminal and ground.

P0963 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

CVT unit Terminal	Ground	Condition	Resistance
2	Ground	CVT fluid temperature: 20°C (68°F)	Approx. 5.3 Ω
		CVT fluid temperature: 50°C (122°F)	Approx. 6.0 Ω
		CVT fluid temperature: 80°C (176°F)	Approx. 6.7 Ω

Is the inspection result normal?

YES >> INSPECTION END

NO >> There is a malfunction of line pressure solenoid valve. Replace transaxle assembly. Refer to [TM-452. "Removal and Installation"](#).

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

P0965 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0965 PRESSURE CONTROL SOLENOID B

DTC Logic

INFOID:000000009268195

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0965	Pressure control solenoid B control circuit range performance	The detection conditions continuously for 5 seconds or more under the following diagnosis conditions: <ul style="list-style-type: none">• Diagnosis conditions<ul style="list-style-type: none">- Selector lever: Other than "P" and "N" positions- Auxiliary gearbox shifting is not in progress.- Engine speed: More than 500 rpm• Detection condition A<ul style="list-style-type: none">- Actual primary pulley ratio: 2.0 – 2.4- Target primary pulley ratio: Less than 1.2• Detection condition B<ul style="list-style-type: none">- Actual primary pulley ratio: 0.35 – 0.75- Target primary pulley ratio: More than 1.55	Primary pressure solenoid valve

DTC CONFIRMATION PROCEDURE

CAUTION:

- Be sure to perform "[TM-386, "Diagnosis Procedure"](#)" and then perform "DTC CONFIRMATION PROCEDURE".
- Never perform "DTC CONFIRMATION PROCEDURE" before the repairs. Doing so may result in a secondary malfunction.
- Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 20 seconds or more.

Vehicle speed : 20 km/h (13 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0965" detected?

- YES >> Go to [TM-386, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268196

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-45, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace transaxle assembly. Refer to [TM-452, "Removal and Installation"](#).
NO >> Repair or replace malfunctioning parts.

P0966 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0966 PRESSURE CONTROL SOLENOID B

DTC Logic

INFOID:000000009268197

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0966	Pressure control solenoid B control circuit low	The primary pressure solenoid valve current is 200 mA or less continuously for 480 msec or more under the following diagnosis conditions: <ul style="list-style-type: none"> • Diagnosis conditions - Solenoid valve output current: 750 mA or more - GND short circuit diagnosis occurs in the solenoid valve drive circuit. - TCM power supply voltage: More than 11 V 	<ul style="list-style-type: none"> • Harness or connector (Primary pressure solenoid valve circuit shorted to ground) • Primary pressure solenoid valve

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0966" detected?

- YES >> Go to [TM-387, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268198

1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		Ground	Continuity
Connector	Terminal		
F44	40	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace malfunctioning parts.

2. CHECK PRIMARY PRESSURE SOLENOID VALVE

Check primary pressure solenoid valve. Refer to [TM-387, "Component Inspection \(Primary Pressure Solenoid Valve\)"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
 NO >> Repair or replace malfunctioning parts.

Component Inspection (Primary Pressure Solenoid Valve)

INFOID:000000009268199

1. CHECK PRIMARY PRESSURE SOLENOID VALVE

Check resistance between CVT unit connector terminal and ground.

P0966 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

CVT unit Terminal	Ground	Condition	Resistance
3	Ground	CVT fluid temperature: 20°C (68°F)	Approx. 5.3 Ω
		CVT fluid temperature: 50°C (122°F)	Approx. 6.0 Ω
		CVT fluid temperature: 80°C (176°F)	Approx. 6.7 Ω

Is the inspection result normal?

YES >> INSPECTION END

NO >> There is a malfunction of primary pressure solenoid valve. Replace transaxle assembly. Refer to [TM-452. "Removal and Installation"](#).

P0967 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0967 PRESSURE CONTROL SOLENOID B

DTC Logic

INFOID:000000009268200

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0967	Pressure control solenoid B control circuit high	The primary pressure solenoid valve current is 200 mA or less continuously for 200 msec or more under the following diagnosis conditions: <ul style="list-style-type: none"> • Diagnosis conditions - Solenoid valve output current: 750 mA or more - GND short diagnosis of the solenoid valve circuit is not satisfied. - TCM power supply voltage: More than 11 V 	<ul style="list-style-type: none"> • Harness or connector (Primary pressure solenoid valve circuit open or shorted to power supply) • Primary pressure solenoid valve

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0967" detected?

- YES >> Go to [TM-389, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268201

1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and CVT unit harness connector terminal.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F44	40	F46	3	Existed

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace malfunctioning parts.

2. CHECK PRIMARY PRESSURE SOLENOID VALVE

Check primary pressure solenoid valve. Refer to [TM-389, "Component Inspection \(Primary Pressure Solenoid Valve\)"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
 NO >> Repair or replace malfunctioning parts.

Component Inspection (Primary Pressure Solenoid Valve)

INFOID:000000009268202

1. CHECK PRIMARY PRESSURE SOLENOID VALVE

Check resistance between CVT unit connector terminal and ground.

P0967 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

CVT unit Terminal	Ground	Condition	Resistance
3	Ground	CVT fluid temperature: 20°C (68°F)	Approx. 5.3 Ω
		CVT fluid temperature: 50°C (122°F)	Approx. 6.0 Ω
		CVT fluid temperature: 80°C (176°F)	Approx. 6.7 Ω

Is the inspection result normal?

YES >> INSPECTION END

NO >> There is a malfunction of primary pressure solenoid valve. Replace transaxle assembly. Refer to [TM-452. "Removal and Installation"](#).

P0998 SHIFT SOLENOID F

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0998 SHIFT SOLENOID F

DTC Logic

INFOID:000000009268203

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0998	Shift solenoid F control circuit low	<p>The TCM low brake solenoid valve current monitor reading is 200 mA or less continuously for 480 msec or more under the following diagnosis conditions:</p> <ul style="list-style-type: none"> • Diagnosis conditions - Solenoid valve output current: 750 mA or more - GND short circuit diagnosis occurs in the solenoid valve drive circuit. - TCM power supply voltage: More than 11 V 	<ul style="list-style-type: none"> • Harness or connector (Low brake solenoid valve circuit shorted to ground) • Low brake solenoid valve

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Shift the selector lever to "D" position and wait for 5 seconds or more.
3. Check the first trip DTC.

Is "P0998" detected?

- YES >> Go to [TM-391, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268204

1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		Ground	Continuity
Connector	Terminal		
F44	39	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace malfunctioning parts.

2. CHECK LOW BRAKE SOLENOID VALVE

Check low brake solenoid valve. Refer to [TM-391, "Component Inspection \(Low Brake Solenoid Valve\)"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
 NO >> Repair or replace malfunctioning parts.

Component Inspection (Low Brake Solenoid Valve)

INFOID:000000009268205

1. CHECK LOW BRAKE SOLENOID VALVE

P0998 SHIFT SOLENOID F

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

Check resistance between CVT unit connector terminal and ground.

CVT unit Terminal	Ground	Condition	Resistance
22	Ground	CVT fluid temperature: 20°C (68°F)	Approx. 5.3 Ω
		CVT fluid temperature: 50°C (122°F)	Approx. 6.0 Ω
		CVT fluid temperature: 80°C (176°F)	Approx. 6.7 Ω

Is the inspection result normal?

YES >> INSPECTION END

NO >> There is a malfunction of low brake solenoid valve. Replace transaxle assembly. Refer to [TM-452. "Removal and Installation"](#).

P0999 SHIFT SOLENOID F

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P0999 SHIFT SOLENOID F

DTC Logic

INFOID:000000009268206

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0999	Shift solenoid F control circuit high	<p>The TCM low brake solenoid valve current monitor reading is 200 mA or less continuously for 200 msec or more under the following diagnosis conditions:</p> <ul style="list-style-type: none"> • Diagnosis conditions - Solenoid valve output current: 750 mA or more - GND short diagnosis of the solenoid valve circuit is not satisfied. - TCM power supply voltage: More than 11 V 	<ul style="list-style-type: none"> • Harness or connector (Low brake solenoid valve circuit is open or shorted to power supply) • Low brake solenoid valve

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Shift the selector lever to "D" position and wait for 5 seconds or more.
3. Check the first trip DTC.

Is "P0999" detected?

- YES >> Go to [TM-393, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268207

1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and CVT unit harness connector terminal.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F44	39	F46	22	Existed

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace malfunctioning parts.

2. CHECK LOW BRAKE SOLENOID VALVE

Check low brake solenoid valve. Refer to [TM-393, "Component Inspection \(Low Brake Solenoid Valve\)"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
 NO >> Repair or replace malfunctioning parts.

Component Inspection (Low Brake Solenoid Valve)

INFOID:000000009268208

1. CHECK LOW BRAKE SOLENOID VALVE

P0999 SHIFT SOLENOID F

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

Check resistance between CVT unit connector terminal and ground.

CVT unit Terminal	Ground	Condition	Resistance
22	Ground	CVT fluid temperature: 20°C (68°F)	Approx. 5.3 Ω
		CVT fluid temperature: 50°C (122°F)	Approx. 6.0 Ω
		CVT fluid temperature: 80°C (176°F)	Approx. 6.7 Ω

Is the inspection result normal?

YES >> INSPECTION END

NO >> There is a malfunction of low brake solenoid valve. Replace transaxle assembly. Refer to [TM-452. "Removal and Installation"](#).

P099B SHIFT SOLENOID G

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P099B SHIFT SOLENOID G

DTC Logic

INFOID:000000009268209

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P099B	Shift solenoid G control circuit low	<p>The TCM high clutch & reverse brake solenoid valve current monitor reading is 200 mA or less continuously for 200 msec or more under the following diagnosis conditions:</p> <ul style="list-style-type: none"> • Diagnosis conditions - Solenoid valve output current: 750 mA or more - GND short circuit diagnosis occurs in the solenoid valve drive circuit. - TCM power supply voltage: More than 11 V 	<ul style="list-style-type: none"> • Harness or connector (High & clutch reverse brake solenoid valve circuit shorted to ground) • High clutch & reverse brake solenoid valve

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P099B" detected?

- YES >> Go to [TM-395, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268210

1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		Ground	Continuity
Connector	Terminal		
F44	37	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace malfunctioning parts.

2. CHECK HIGH CLUTCH & REVERSE BRAKE SOLENOID VALVE

Check high clutch & reverse brake solenoid valve. Refer to [TM-395, "Component Inspection \(High Clutch & Reverse Brake Solenoid Valve\)"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
 NO >> Repair or replace malfunctioning parts.

Component Inspection (High Clutch & Reverse Brake Solenoid Valve)

INFOID:000000009268211

1. CHECK HIGH CLUTCH & REVERSE BRAKE SOLENOID VALVE

P099B SHIFT SOLENOID G

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

Check resistance between CVT unit connector terminal and ground.

CVT unit Terminal	Ground	Condition	Resistance
23	Ground	CVT fluid temperature: 20°C (68°F)	Approx. 5.3 Ω
		CVT fluid temperature: 50°C (122°F)	Approx. 6.0 Ω
		CVT fluid temperature: 80°C (176°F)	Approx. 6.7 Ω

Is the inspection result normal?

YES >> INSPECTION END

NO >> There is a malfunction of high & reverse brake solenoid valve. Replace transaxle assembly.
Refer to [TM-452, "Removal and Installation"](#).

P099C SHIFT SOLENOID G

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P099C SHIFT SOLENOID G

DTC Logic

INFOID:000000009268212

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P099C	Shift solenoid G control circuit high	The TCM high clutch & reverse brake solenoid valve current monitor reading is 200 mA or less continuously for 200 msec or more under the following diagnosis conditions: <ul style="list-style-type: none"> • Diagnosis conditions - Solenoid valve output current: 750 mA or more - GND short diagnosis of the solenoid valve circuit is not satisfied. - TCM power supply voltage: More than 11 V 	<ul style="list-style-type: none"> • Harness or connector (High clutch & reverse brake solenoid valve circuit is open or shorted to power supply) • High clutch & reverse brake solenoid valve

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more
2. Check the first trip DTC.

Is "P099C" detected?

- YES >> Go to [TM-397, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268213

1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and CVT unit harness connector terminal.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F44	37	F46	23	Existed

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace malfunctioning parts.

2. CHECK HIGH CLUTCH & REVERSE BRAKE SOLENOID VALVE

Check high clutch & reverse brake solenoid valve. Refer to [TM-397, "Component Inspection \(High Clutch & Reverse Brake Solenoid Valve\)"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
 NO >> Repair or replace malfunctioning parts.

Component Inspection (High Clutch & Reverse Brake Solenoid Valve)

INFOID:000000009268214

1. CHECK HIGH CLUTCH & REVERSE BRAKE SOLENOID VALVE

P099C SHIFT SOLENOID G

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

Check resistance between CVT unit connector terminal and ground.

CVT unit Terminal	Ground	Condition	Resistance
23	Ground	CVT fluid temperature: 20°C (68°F)	Approx. 5.3 Ω
		CVT fluid temperature: 50°C (122°F)	Approx. 6.0 Ω
		CVT fluid temperature: 80°C (176°F)	Approx. 6.7 Ω

Is the inspection result normal?

YES >> INSPECTION END

NO >> There is a malfunction of high & reverse brake solenoid valve. Replace transaxle assembly.
Refer to [TM-452, "Removal and Installation"](#).

P1586 G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P1586 G SENSOR

DTC Logic

INFOID:000000009268215

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P1586	G Sensor Circuit Electrical	When the following diagnosis conditions are satisfied and the detection conditions are satisfied twice in the same DC: <ul style="list-style-type: none">• Diagnosis conditions- While driving- TCM power supply voltage: More than 11 V• Detection condition- The G sensor detection voltage is 0.7 V or less continuously for 5 seconds or more.	<ul style="list-style-type: none">• Harness or connector (G sensor circuit)• G sensor
		When the following diagnosis conditions are satisfied and the detection conditions are satisfied twice in the same DC: <ul style="list-style-type: none">• Diagnosis conditions- While driving- TCM power supply voltage: More than 11 V• Detection condition- The G sensor detection voltage is 3.2 V or more continuously for 5 seconds or more.	

NOTE:

DC stands for "DRIVING CYCLE" and indicates a series of driving cycle of "Ignition switch OFF → ON → driving → OFF".

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

④ With CONSULT

1. Start the engine.
2. Drive the vehicle for 10 seconds or more.
3. Stop the vehicle.

CAUTION:

Never stop the engine.

4. Repeat step 2 through 3.
5. Check the DTC.

Is "P1586" detected?

YES >> Go to [TM-399, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268216

1. CHECK G SENSOR SIGNAL

④ With CONSULT

1. Park the vehicle on a level surface.
2. Turn ignition switch ON.
3. Select "Data Monitor" in "TRANSMISSION".

P1586 G SENSOR

[CVT: RE0F11A]

< DTC/CIRCUIT DIAGNOSIS >

4. Select "G SEN SLOPE".
5. Swing the vehicle and check if value varies between -40.45% and 40.45%.

Monitor item	Condition	Standard
G SEN SLOPE	Flat road	0%
	Uphill	Positive value (Maximum 40.45%)
	Downhill	Negative value (Minimum -40.45%)

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 3.

2. G SENSOR CALIBRATION (PART 1)

Ⓟ With CONSULT

1. Select "Self Diagnostic Results" in "TRANSMISSION".
2. Touch "Erase".

>> Perform "G SENSOR CALIBRATION". Refer to [TM-328. "Work Procedure"](#).

3. CHECK SENSOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect G sensor connector.
3. Turn ignition switch ON.
4. Check voltage between G sensor harness connector terminal and ground.

G sensor		Ground	Voltage
Connector	Terminal		
M83	3	Ground	Approx. 5.0 V

Is the inspection result normal?

- YES >> GO TO 4.
NO >> GO TO 8.

4. CHECK CIRCUIT BETWEEN TCM AND G SENSOR (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals and G sensor harness connector terminals.

TCM		G sensor		Continuity
Connector	Terminal	Connector	Terminal	
F44	11	M83	2	Existed
	14		1	

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair or replace malfunctioning parts.

5. CHECK CIRCUIT BETWEEN TCM AND G SENSOR (PART 2)

Check continuity between TCM harness connector terminals and ground.

TCM		Ground	Continuity
Connector	Terminal		
F44	14	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 6.

P1586 G SENSOR

[CVT: RE0F11A]

< DTC/CIRCUIT DIAGNOSIS >


NO >> Repair or replace malfunctioning parts.

6. CHECK G SENSOR

1. Remove G sensor. [TM-439, "Removal and Installation"](#).
2. Connect the all connectors.
3. Turn ignition switch ON.
4. Check voltage between TCM harness connector terminal and ground.

← : Direction of gravitational force

TCM		Ground	Test condition	Voltage
Connector	Terminal			
F44	14	Ground	Vertical (-1G) (A)	Approx. 1.17 V
			Horizontal (B)	Approx. 2.5 V
			Vertical (1G) (C)	Approx. 3.83 V

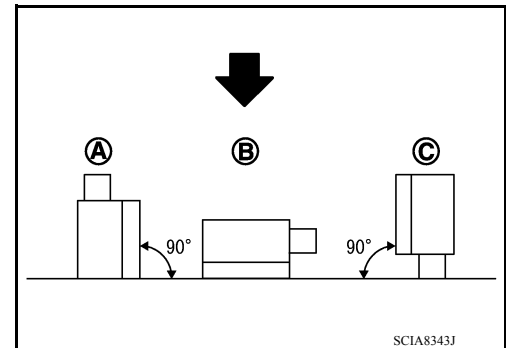

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace G sensor. [TM-439, "Removal and Installation"](#).

7. G SENSOR CALIBRATION (PART 2)

Ⓜ With CONSULT

1. Install G sensor. [TM-439, "Removal and Installation"](#).
2. Select "Self Diagnostic Results" in "TRANSMISSION".
3. Touch "Erase".

>> Perform "G SENSOR CALIBRATION". Refer to [TM-328, "Work Procedure"](#).

8. CHECK SENSOR POWER SUPPLY CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminal and G sensor harness connector terminal.

TCM		G sensor		Continuity
Connector	Terminal	Connector	Terminal	
F44	26	M83	3	Existed

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace malfunctioning parts.

9. CHECK SENSOR POWER SUPPLY CIRCUIT (PART 2)

Check continuity between TCM harness connector terminal and ground.

TCM		Ground	Continuity
Connector	Terminal		
F44	26	Ground	Not existed

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

P1588 G SENSOR

DTC Logic

INFOID:000000009268217

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P1588	G Sensor Circuit Range/Performance	When the following diagnosis conditions are satisfied and the detection conditions are satisfied twice in the same DC: • Diagnosis condition (1 second or more) - The rate of change in G sensor detection value (mV): Between -15 and +15 inclusive • Detection condition - The rate of change in acceleration/deceleration stays +0.0273 G or more/-0.0273 or less at least for 5 seconds or more.	G sensor

NOTE:

DC stands for "DRIVING CYCLE" and indicates a series of driving cycle of "Ignition switch OFF → ON → driving → OFF".

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "G SPEED".
4. Drive the vehicle.
5. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position
 G SPEED : 0.05 G or more

6. Stop the vehicle.
7. Repeat steps 4 through 6.
8. Check the DTC.

CAUTION:
Never stop the engine.

Is "P1588" detected?

- YES >> Go to [TM-402, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268218

1. CHECK G SENSOR SIGNAL

Ⓜ With CONSULT

1. Park the vehicle on a level surface.
2. Turn ignition switch ON.
3. Select "Data Monitor" in "TRANSMISSION".
4. Select "G SEN SLOPE".

P1588 G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

5. Swing the vehicle and check if value varies between -40.45% and 40.45%.

Monitor item	Condition	Standard
G SEN SLOPE	Flat road	0%
	Uphill	Positive value (Maximum 40.45%)
	Downhill	Negative value (Minimum -40.45%)

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 3.

2. G SENSOR CALIBRATION (PART 1)

Ⓜ With CONSULT

1. Select "Self Diagnostic Results" in "TRANSMISSION".
2. Touch "Erase".


>> Perform "G SENSOR CALIBRATION". Refer to [TM-328, "Work Procedure"](#).

3. CHECK G SENSOR

1. Remove G sensor. [TM-439, "Removal and Installation"](#).
2. Connect the all connectors.
3. Turn ignition switch ON.
4. Check voltage between TCM harness connector terminal and ground.

← : Direction of gravitational force

TCM		Ground	Test condition	Voltage
Connector	Terminal			
F44	14	Ground	Vertical (-1G) (A)	Approx. 1.17 V
			Horizontal (B)	Approx. 2.5 V
			Vertical (1G) (C)	Approx. 3.83 V

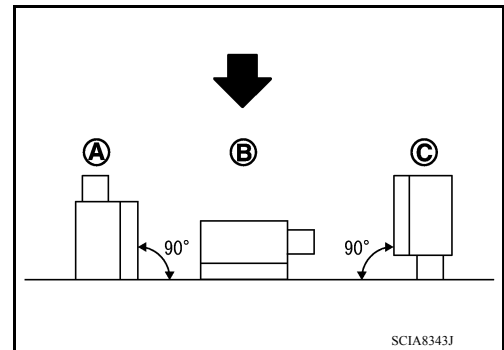

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace G sensor. [TM-439, "Removal and Installation"](#).

4. G SENSOR CALIBRATION (PART 2)

Ⓜ With CONSULT

1. Install G sensor. [TM-439, "Removal and Installation"](#).
2. Select "Self Diagnostic Results" in "TRANSMISSION".
3. Touch "Erase".

>> Perform "G SENSOR CALIBRATION". Refer to [TM-328, "Work Procedure"](#).

P2765 CLUTCH B SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P2765 CLUTCH B SPEED SENSOR

DTC Logic

INFOID:000000009268219

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P2765	Input/Turbine Speed Sensor B Circuit	<p>The secondary speed sensor value is less than 150 rpm continuously for 5 seconds or more under the following diagnosis conditions:</p> <ul style="list-style-type: none"> • Diagnosis conditions - Primary pulley speed: 1,000 rpm or more - TCM power supply voltage: More than 11 V <p>The secondary pulley speed sensor value is 240 rpm or less continuously for 500 msec or more under the following diagnosis conditions:</p> <ul style="list-style-type: none"> • Diagnosis condition - 10-msec-ago secondary pulley speed: 1,000 rpm or more - TCM power supply voltage: More than 11 V 	<ul style="list-style-type: none"> • Harness or connector (Secondary speed sensor circuit is open or shorted) • Secondary speed sensor

DTC CONFIRMATION PROCEDURE

CAUTION:

Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position
 Vehicle speed : 55 km/h (34 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P2765" detected?

YES >> Go to [TM-404, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268220

1. CHECK SECONDARY SPEED SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect secondary speed sensor connector.
3. Turn ignition switch ON.
4. Check voltage between secondary speed sensor harness connector terminal and ground.

Secondary speed sensor		Ground	Voltage
Connector	Terminal		
F48	3	Ground	10 – 16 V

Is the inspection result normal?

YES >> GO TO 2.

P2765 CLUTCH B SPEED SENSOR

[CVT: RE0F11A]

< DTC/CIRCUIT DIAGNOSIS >

NO >> GO TO 6.

2. CHECK SECONDARY SPEED SENSOR GROUND CIRCUIT

Check continuity between of primary speed sensor harness connector terminal and ground.

Secondary speed sensor		Ground	Continuity
Connector	Terminal		
F48	1	Ground	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning parts.

3. CHECK CIRCUIT BETWEEN SECONDARY SPEED SENSOR AND TCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between secondary speed sensor harness connector terminal and TCM harness connector terminal.

Secondary speed sensor		TCM		Continuity
Connector	Terminal	Connector	Terminal	
F48	2	F44	34	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace malfunctioning parts.

4. CHECK CIRCUIT BETWEEN SECONDARY SPEED SENSOR AND TCM (PART 2)

Check continuity between secondary speed sensor harness connector terminal and ground.

Secondary speed sensor		Ground	Continuity
Connector	Terminal		
F48	2	Ground	Not existed


Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.

5. CHECK TCM INPUT SIGNALS

1. Connect all of disconnected connectors.
2. Lift the vehicle.
3. Start the engine.
4. Check frequency of secondary speed sensor.

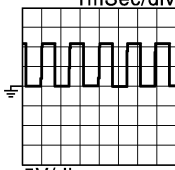TCM		Ground	Condition	Data
Connector	Terminal			
F44	34	Ground	<ul style="list-style-type: none"> • Selector lever: "L" position • Vehicle speed: 20 km/h (12 MPH) 	<p>Approximately 700 Hz</p>  <p>5V/div</p> <p>1mSec/div</p> <p>JSDIA1905GB</p>

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Replace secondary speed sensor. [TM-443, "Removal and Installation"](#).

P2765 CLUTCH B SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

6. CHECK CIRCUIT BETWEEN IPDM E/R AND SECONDARY SPEED SENSOR (PART 1)

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector terminal and secondary speed sensor harness connector terminal.

IPDM E/R		Secondary speed sensor		Continuity
Connector	Terminal	Connector	Terminal	
E45	21	F48	3	Existed

Is the check result normal?

- YES >> GO TO 7.
NO >> Repair or replace malfunctioning parts.

7. CHECK CIRCUIT BETWEEN IPDM E/R AND SECONDARY SPEED SENSOR (PART 2)

Check continuity between IPDM E/R harness connector terminal and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E45	21	Ground	Not existed

Is the check result normal?

- YES >> GO TO 8.
NO >> Repair or replace malfunctioning parts.

8. DETECT MALFUNCTIONING ITEMS

Check the following items:

- Harness open circuit or short circuit between ignition switch and IPDM E/R. Refer to [PG-20, "Wiring Diagram — Ignition Power Supply —"](#).
- 10A fuse (No.49, IPDM E/R). Refer to [PG-62, "IPDM E/R Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
NO >> Repair or replace malfunctioning parts.

P2857 CLUTCH A PRESSURE

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P2857 CLUTCH A PRESSURE

DTC Logic

INFOID:000000009268221

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P2857	Clutch A pressure engagement performance	The auxiliary gearbox gear ratio is 2.232 or more for the auxiliary gearbox 1GR ratio continuously for 5 seconds or more under the following diagnosis conditions: <ul style="list-style-type: none">• Diagnosis conditions<ul style="list-style-type: none">- Selector lever: Other than "P", "R" and "N" positions- Accelerator pedal position: 0.7/8 or more- Engine speed: More than 550 rpm- Output speed: More than 300 rpm- Secondary pulley speed: More than 300 rpm- Command for the 1GR of auxiliary gearbox is in progress.- Auxiliary gearbox shifting is not in progress.- TCM power supply voltage: More than 11 V	<ul style="list-style-type: none">• Low brake solenoid valve• Control valve assembly

DTC CONFIRMATION PROCEDURE

CAUTION:

- Be sure to perform "[TM-407, "Diagnosis Procedure"](#)" and then perform "DTC CONFIRMATION PROCEDURE".
- Never perform "DTC CONFIRMATION PROCEDURE" before the repairs. Doing so may result in a secondary malfunction.
- Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

Selector lever : "L" POSITION
Accelerator pedal position : 0.7/8 or more
Vehicle speed : 10 km/h (6 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P2857" detected?

YES >> Go to [TM-407, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268222

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-45, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace transaxle assembly. Refer to [TM-452, "Removal and Installation"](#).
NO >> Repair or replace malfunctioning parts.

P2858 CLUTCH B PRESSURE

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P2858 CLUTCH B PRESSURE

DTC Logic

INFOID:000000009268223

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P2858	Clutch B pressure engagement performance	The auxiliary gearbox gear ratio is 2.232 or more for the auxiliary gearbox 2GR ratio continuously for 5 seconds or more under the following diagnosis conditions: <ul style="list-style-type: none">• Diagnosis conditions<ul style="list-style-type: none">- Selector lever: Other than "P", "R" and "N" positions- Accelerator pedal position: 0.7/8 or more- Engine speed: More than 550 rpm- Output speed: More than 300 rpm- Secondary pulley speed: More than 300 rpm- Command for the 2GR of auxiliary gearbox is in progress.- Auxiliary gearbox shifting is not in progress.- TCM power supply voltage: More than 11 V	<ul style="list-style-type: none">• High clutch & reverse brake solenoid valve• Control valve assembly

DTC CONFIRMATION PROCEDURE

CAUTION:

- Be sure to perform "[TM-408, "Diagnosis Procedure"](#)" and then perform "DTC CONFIRMATION PROCEDURE".
- Never perform "DTC CONFIRMATION PROCEDURE" before the repairs. Doing so may result in a secondary malfunction.
- Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" POSITION
Accelerator pedal position : 0.7/8 or more
Vehicle speed : 45 km/h (28 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P2858" detected?

YES >> Go to [TM-408, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268224

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-45, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace transaxle assembly. Refer to [TM-452, "Removal and Installation"](#).
NO >> Repair or replace malfunctioning parts.

P2859 CLUTCH A PRESSURE

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P2859 CLUTCH A PRESSURE

DTC Logic

INFOID:00000009268225

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P2859	Clutch A pressure disengagement performance	<p>The detection conditions continuously for 200 msec or more under the following diagnosis conditions:</p> <ul style="list-style-type: none"> • Diagnosis conditions - Selector lever: Other than "P", "R" and "N" positions - Vehicle speed: 10 km/h (6 MPH) or more - Engine speed: More than 550 rpm - Output speed: More than 300 rpm - Secondary pulley speed: More than 300 rpm - A lapse of 500 msec or more after the stop lamp switch is turned from ON to OFF. - Command for the 2GR of auxiliary gearbox is in progress. - Auxiliary gearbox shifting is not in progress. - TCM power supply voltage: More than 11 V • Detection conditions - Acceleration/deceleration: Less than -0.05 G - Actual auxiliary gearbox gear ratio – Auxiliary gearbox 2GR ratio \geq 50% <p>The auxiliary gearbox gear ratio is \pm10% or less for the auxiliary gearbox 1GR ratio continuously for 500 msec or more under the following diagnosis conditions:</p> <ul style="list-style-type: none"> • Diagnosis conditions - Selector lever: Other than "P", "R" and "N" positions - Accelerator pedal position: 0.7/8 or more - Engine speed: More than 550 rpm - Secondary pulley speed: More than 300 rpm - Output speed: More than 300 rpm - Command for the 2GR of auxiliary gearbox is in progress. - Auxiliary gearbox shifting is not in progress. - TCM power supply voltage: More than 11 V 	<ul style="list-style-type: none"> • Low brake solenoid valve • Control valve assembly

DTC COFIRMATION PROCEDURE

CAUTION:

- Be sure to perform "[TM-410, "Diagnosis Procedure"](#)" and then perform "DTC CONFIRMATION PROCEDURE".
- Never perform "TC CONFIRMATION PROCEDURE" before the repairs. Doing so may result in a secondary malfunction.
- Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.

P2859 CLUTCH A PRESSURE

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

Selector lever	: "D" position
Accelerator pedal position	: 0.7/8 or more
Vehicle speed	: 45 km/h (28 MPH) or more

4. Stop the vehicle
5. Check the first trip DTC.

Is "P2859" detected?

YES >> Go to [TM-410, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268226

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-45, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace transaxle assembly. Refer to [TM-452, "Removal and Installation"](#).
NO >> Repair or replace malfunctioning parts.

P285A CLUTCH B PRESSURE

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

P285A CLUTCH B PRESSURE

DTC Logic

INFOID:00000009268227

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P285A	Clutch B pressure disengagement performance	<p>The detection conditions continuously for 200 msec or more under the following diagnosis conditions:</p> <ul style="list-style-type: none"> • Diagnosis conditions - Selector lever: Other than "P", "R" and "N" positions - Vehicle speed: 10 km/h (6 MPH) or more - Engine speed: More than 550 rpm - Output speed: More than 300 rpm - Secondary pulley speed: More than 300 rpm - Command for the 1GR of auxiliary gearbox is in progress. - Auxiliary gearbox shifting is not in progress. - TCM power supply voltage: More than 11 V • Detection conditions - Acceleration/deceleration: Less than -0.05 G - Actual auxiliary gearbox gear ratio – Auxiliary gearbox 1GR ratio \geq 50% <p>The auxiliary gearbox gear ratio is \pm10% or less for the auxiliary gearbox 2GR ratio continuously for 500 msec or more under the following diagnosis conditions:</p> <ul style="list-style-type: none"> • Diagnosis conditions - Selector lever: Other than "P", "R" and "N" positions - Accelerator pedal position: 0.7/8 or more - Engine speed: More than 550 rpm - Secondary pulley speed: More than 300 rpm - Output speed: More than 300 rpm - Command for the 1GR of auxiliary gearbox is in progress. - Auxiliary gearbox shifting is not in progress. - TCM power supply voltage: More than 11 V 	<ul style="list-style-type: none"> • High clutch & reverse brake solenoid valve • Control valve assembly

DTC CONFIRMATION PROCEDURE

CAUTION:

- Be sure to perform "[TM-412, "Diagnosis Procedure"](#)" and then perform "DTC CONFIRMATION PROCEDURE".
- Never perform "DTC CONFIRMATION PROCEDURE" before the repairs. Doing so may result in a secondary malfunction.
- Be careful of the driving speed.

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

P285A CLUTCH B PRESSURE

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

Selector lever : "L" POSITION
Accelerator pedal position : 0.7/8 or more
Vehicle speed : 10 km/h (6 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P285A" detected?

YES >> Go to [TM-412, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009268228

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-45, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace transaxle assembly. Refer to [TM-452, "Removal and Installation"](#).
NO >> Repair or replace malfunctioning parts.

MAIN POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

MAIN POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:00000009268229

1. CHECK TCM POWER CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check voltage between TCM harness connector terminals and ground.

TCM		Ground	Voltage
Connector	Terminal		
F44	45	Ground	10 – 16 V
	46		

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 4.

2. CHECK TCM POWER CIRCUIT (PART 2)

Check voltage between TCM harness connector terminals and ground.

TCM		Ground	Condition	Voltage
Connector	Terminal			
F44	47	Ground	Ignition switch ON	10 – 16 V
			Ignition switch OFF	Approx. 0 V
	48		Ignition switch ON	10 – 16 V
			Ignition switch OFF	Approx. 0 V

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 5.

3. CHECK TCM GROUND CIRCUIT

Check continuity between TCM harness connector terminals and ground.

TCM		Ground	Continuity
Connector	Terminal		
F44	41	Ground	Existed
	42		

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
NO >> Repair or replace malfunctioning parts.

4. DETECT MALFUNCTION ITEMS (PART 1)

Check the following items:

- Open or short circuit of harness between battery positive terminal and TCM connectors terminals 45 and 46.
- 10A fuse (No.33, fuse and fusible link block). Refer to [PG-61, "Terminal Arrangement"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
NO >> Repair or replace malfunctioning parts.

5. CHECK CIRCUIT BETWEEN IPDM E/R AND TCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.

A
B
C
E
F
G
H
I
J
K
L
M
N
O
P

TM

MAIN POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

3. Check continuity between IPDM E/R harness connector terminal and TCM harness connector terminals.

IPDM E/R harness connector		TCM harness connector		Continuity
Connector	Terminal	Connector	Terminal	
E45	21	F44	47	Existed
			48	

Is the check result normal?

YES >> GO TO 6.

NO >> Repair or replace malfunctioning parts.

6. CHECK CIRCUIT BETWEEN IPDM E/R AND TCM (PART 2)

Check continuity between IPDM E/R harness connector terminal and ground.

IPDM E/R harness connector		Ground	Continuity
Connector	Terminal		
E45	21	Ground	Not existed

Is the check result normal?

YES >> GO TO 7.

NO >> Repair or replace malfunctioning parts.

7. DETECT MALFUNCTIONING ITEMS (PART 2)

Check the following items:

- Harness open circuit or short circuit between ignition switch and IPDM E/R. Refer to [PG-20, "Wiring Diagram — Ignition Power Supply —"](#).
- 10A fuse (No.49, IPDM E/R). Refer to [PG-62, "IPDM E/R Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

OVERDRIVE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

OVERDRIVE CONTROL SWITCH

Component Function Check

INFOID:000000009268230

1.CHECK OD OFF INDICATOR LAMP FUNCTION

Check OD OFF indicator lamp turns ON for approx. 2 seconds when ignition switch turns ON.

Is the inspection results normal?

YES >> GO TO 2.

NO >> Go to [TM-417, "Diagnosis Procedure"](#).

2.CHECK OVERDRIVE CONTROL SWITCH FUNCTION

1. Shift the selector lever to "D" position.
2. Check that OD OFF indicator lamp turns ON/OFF when overdrive control switch is operated.

Is the inspection results normal?

YES >> INSPECTION END

NO >> Go to [TM-415, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009268231

1.CHECK OVERDRIVE CONTROL SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect CVT shift selector connector.
3. Turn ignition switch ON.
4. Check voltage between CVT shift selector harness connector terminals.

Connector	CVT shift selector		Voltage
	+	-	
M38	1	2	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

2.CHECK OVERDRIVE CONTROL SWITCH

Check overdrive control switch. Refer to [TM-416, "Component Inspection \(Overdrive Control Switch\)"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning parts.

3.CHECK GROUND CIRCUIT

Check continuity between CVT shift selector harness connector terminal and ground.

Connector	CVT shift selector		Ground	Continuity
	Terminal			
M38	2	Ground	Existed	

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace malfunctioning parts.

4.CHECK CIRCUIT BETWEEN COMBINATION METER AND CVT SHIFT SELECTOR (PART 1)

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between combination meter harness connector terminal and CVT shift selector harness connector terminal.

OVERDRIVE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

Combination meter		CVT shift selector		Continuity
Connector	Terminal	Connector	Terminal	
M82*1	8	M38	1	Existed
M24*2	28			Existed

*1: TYPE A (Refer to [MWI-55, "Information"](#).)

*2: TYPE B (Refer to [MWI-5, "Information"](#).)

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.

5. CHECK CIRCUIT BETWEEN COMBINATION METER AND CVT SHIFT SELECTOR (PART 2)

Check continuity between combination meter harness connector terminal and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M82*1	8	Ground	Not existed
M24*2	28		

*1: TYPE A (Refer to [MWI-55, "Information"](#).)

*2: TYPE B (Refer to [MWI-5, "Information"](#).)

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace malfunctioning parts.

6. CHECK COMBINATION METER INPUT SIGNAL

1. Connect all of disconnected connectors.
2. Turn ignition switch ON.
3. Select "Data Monitor" in "METER/M&A".
4. Select "O/D OFF SW".
5. Check that "O/D OFF SW" turns ON/OFF when overdrive control switch is operated. Refer to [MWI-22, "Reference Value"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> Replace combination meter. Refer to [MWI-53, "Removal and Installation"](#).

Component Inspection (Overdrive Control Switch)

INFOID:000000009268232

1. CHECK OVERDRIVE CONTROL SWITCH


Check continuity between wires of selector lever knob (1)

Condition	Continuity
Overdrive control switch is depressed	Existed
Overdrive control switch is not depressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace selector lever knob. Refer to [TM-429, "Removal and Installation"](#).

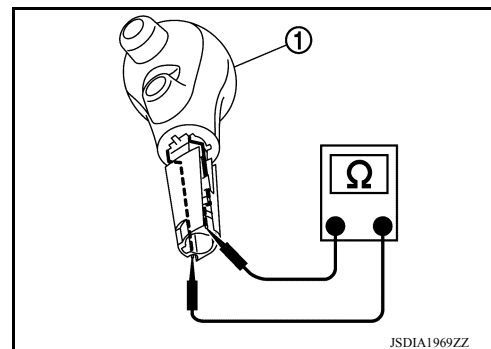

JSDIA1969ZZ

OD OFF INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

OD OFF INDICATOR LAMP

Component Function Check

INFOID:000000009268233

1.CHECK OD OFF INDICATOR LAMP FUNCTION

Check OD OFF indicator lamp turns ON for approx. 2 seconds when ignition switch turns ON.

Is the inspection results normal?

- YES >> INSPECTION END
- NO >> Go to [TM-417, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009268234

1.CHECK DTC (TCM)

ⓂWith CONSULT

1. Turn ignition switch ON.
2. Check "Self Diagnostic Results" in "TRANSMISSION".

Is any DTC detected?

- YES >> Check DTC detected item. Refer to [TM-311, "DTC Index"](#).
- NO >> GO TO 2.

2.CHECK DTC (COMBINATION METER)

ⓂWith CONSULT

Check "Self Diagnostic Results" in "METER/M&A".

Is any DTC detected?

- YES >> Check DTC detected item. Refer to [MWI-25, "DTC Index"](#).
- NO >> GO TO 3.

3.CHECK COMBINATION METER INPUT SIGNAL

ⓂWith CONSULT

1. Shift the selector lever to "D" position.
2. Select "Data Monitor" in "METER/M&A".
3. Select "O/D OFF IND".
4. Check that "O/D OFF IND" turns ON/OFF when overdrive control switch is operated. Refer to [MWI-22, "Reference Value"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-53, "Removal and Installation"](#).
- NO >> GO TO 4.

4.CHECK TCM INPUT/OUTPUT SIGNAL

ⓂWith CONSULT

1. Select "Data Monitor" in "TRANSMISSION".
2. Select "SPORT MODE SW".
3. Check that "SPORT MODE SW" turns ON/OFF when overdrive control switch is operated. Refer to [TM-299, "Reference Value"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-53, "Removal and Installation"](#).
- NO >> Check overdrive control switch. Refer to [TM-415, "Diagnosis Procedure"](#).

SHIFT POSITION INDICATOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

SHIFT POSITION INDICATOR CIRCUIT

Component Parts Function Inspection

INFOID:000000009268235

1. CHECK SHIFT POSITION INDICATOR

1. Start the engine.
2. Shift selector lever.
3. Check that the selector lever position and the shift position indicator on the combination meter are identical.

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Go to [TM-418, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009268236

1. CHECK TCM INPUT/OUTPUT SIGNAL

Ⓟ With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "RANGE".
4. Shift selector lever.
5. Check that selector lever position, "RANGE" on CONSULT screen, and shift position indicator display on combination meter are identical.

Is the check result normal?

- YES >> INSPECTION END
NO-1 ("RANGE" is changed but is not displayed on shift position indicator.)>>Check "Self Diagnostic Result" in "TRANSMISSION".
NO-2 ("RANGE" and shift position indicator are different.)>>Check "Self Diagnostic Result" in "TRANSMISSION".
NO-3 (Specific "RANGE" is not displayed on shift position indicator.)>>Check "Self Diagnostic Result" in "METER/M&A".

SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

SHIFT LOCK SYSTEM

Component Function Check

INFOID:000000009268237

1. CHECK SHIFT LOCK OPERATION (BRAKE PEDAL RELEASED)

1. Ignition switch ON.
2. Attempt to shift selector lever to any position other than "P" position with brake pedal released.

Can the selector lever be shifted?

- YES >> Go to [TM-419, "Diagnosis Procedure"](#).
NO >> GO TO 2.

2. CHECK SHIFT LOCK OPERATION (BRAKE PEDAL APPLIED)

Attempt to shift the selector lever to any position other than "P" position with brake pedal applied.

Can the selector lever be shifted?

- YES >> Inspection End.
NO >> Go to [TM-419, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009268238

1. CHECK STOP LAMP SWITCH

1. Ignition switch ON.
2. Check voltage between stop lamp switch connector E13 terminal 4 and ground.

Stop lamp switch		Ground	Brake pedal	Voltage
Connector	Terminal			
E13	4	Ground	Applied	Battery voltage
			Released	0V

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 4.

2. CHECK CVT SHIFT SELECTOR

Check voltage between CVT shift selector connector M38 terminal 6 and ground.

CVT shift selector		Ground	Brake pedal	Shift selector	Voltage
Connector	Terminal				
M38	6	Ground	Applied	Park	Battery voltage
				Others	0V

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 5.

3. CHECK GROUND CIRCUIT

1. Ignition switch OFF.
2. Disconnect CVT shift selector connector.
3. Check continuity between CVT shift selector connector M38 terminal 6 and ground.

CVT shift selector		Ground	Continuity
Connector	Terminal		
M38	6	Ground	Yes

Is the inspection result normal?

- YES >> Replace CVT shift selector. Refer to [TM-429, "Removal and Installation"](#).
NO >> Repair or replace ground circuit.

SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F11A]

4. CHECK STOP LAMP SWITCH POWER CIRCUIT

Check voltage between stop lamp switch connector E13 terminal 3 and ground.

Stop lamp switch		Ground	Voltage
Connector	Terminal		
E13	3	Ground	Battery voltage

Is the inspection result normal?

YES >> Replace stop lamp switch.

NO >> Repair or replace power circuit.

5. CHECK CVT SHIFT SELECTOR POWER CIRCUIT

Check voltage between CVT shift selector connector M38 terminal 5 and ground.

CVT shift selector		Ground	Brake pedal	Voltage
Connector	Terminal			
M38	5	Ground	Applied	Battery voltage

Is the inspection result normal?

YES >> Replace CVT shift selector. Refer to [TM-429, "Removal and Installation"](#).

NO >> Repair or replace power circuit.

CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F11A]

SYMPTOM DIAGNOSIS

CVT CONTROL SYSTEM

Symptom Table

INFOID:000000009268239

The diagnosis item number indicates the order of check. Start checking in the order from 1.

Symptom diagnosis chart 1-1

Symptom	Check under on board condition (repair and part replacement)							Replace the transaxle assembly.														
	Engine system							Electric system														
	EC-117	TM-427	TM-332	TM-430	TM-299	TM-415	TM-311	EC-117	TM-427	TM-332	TM-430	TM-299	TM-415	TM-311	EC-117	TM-427	TM-332	TM-430	TM-299	TM-415	TM-311	
Driving is not possible.	The engine speed increases in "D", "L", or "R" position, but the vehicle cannot start.	1	1	1	1	1		1	1			1	2		1			1	1	2		
	Engine stall occurs in "D", "L", or "R" position and the vehicle does not start.				1	1		1	1			1	1	1	1			1	1	2		
	Acceleration at start is not sufficient in "D", "L", or "R" position.	1		2		1		1	1	1	2	2	1	1	2			1	1	1		
	The engine speed increases suddenly in "D", "L", or "R" position during driving.		1	1											2	1	1		1	1		
	Engine brake is suddenly applied in "D" or "R" position during driving.	1		1												1	1		1	1		

CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F11A]

Symptom		Check under on board condition (repair and part replacement)										Replace the transaxle assembly.							
												Electric system							
												EC-117	TM-427	TM-332	TM-430	TM-299	TM-415	TM-311	
Shifting is not possible.	The engine races when the auxiliary gearbox is shifted from 1GR ⇔ 2GR.	2		1										1		1			
	Engine braking is not effective in "L" position.			1	1	1			1	1		1		2	1	1		1	
	Shifting does not occur with OD OFF.					1	1	1	1	1		1	1						
	Engine stall occurs immediately before stop at deceleration in "D" or "L" position.													1					
	During driving in "D" position, slippage occurs in lockup or lockup is not possible.					1		1	1	1	1		2	1	1	1			1

CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F11A]

Symptom diagnosis chart 1-2

Symptom		Replace the transaxle assembly.												
		Oil pressure control		Power transmission										
		Valve body, control valve	Oil pump	Torque converter	Pulley, steel belt	Low brake	High clutch	Reverse brake	Bearings	Counter gear	Planetary gear	Reduction gear	Final gear, differential gear	Parking mechanism
		TM-452												
Driving is not possible.	The engine speed increases in "D", "L", or "R" position, but the vehicle cannot start.	1	1		1	1 (In "D" or "L")		1 (In "R")		1	1	1	1	
	Engine stall occurs in "D", "L", or "R" position and the vehicle does not start.	1							1	1	1	1	1	
	Acceleration at start is not sufficient in "D", "L", or "R" position.	1		1		1 (In "D" or "L")		1 (In "R")						
	The engine speed increases suddenly in "D", "L", or "R" position during driving.	1	1		1	1 (In "D" or "L")	1 (In "D" or "L")	1 (In "R")						
	Engine brake is suddenly applied in "D" or "R" position during driving.	1				1 (In "D" or "L")	1 (In "D" or "L")	1 (In "R")						
Shifting is not possible.	The engine races when the auxiliary gearbox is shifted from 1GR ⇔ 2GR.	1	1		2	1	1							
	Engine braking is not effective in "L" position.	1	2	1	2	1	1							
	Shifting does not occur with OD OFF.													
	Engine stall occurs immediately before stop at deceleration in "D" or "L" position.	1		1										
	During driving in "D" position, slippage occurs in lockup or lockup is not possible.	1		1										

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F11A]

Symptom diagnosis chart 2-1

Symptom		Check under on board condition (repair and part replacement)										Replace the transaxle assembly.										
												Electric system										
												Engine system	Incorrect adjustment of CVT fluid level	Line pressure is out of the standard value.	Control cable	TCM	Overdrive control switch	Primary speed sensor (P0715)	Secondary speed sensor (P2765)	Output speed sensor (P0720)	Transmission position switch (P0705, P0706)	Secondary pressure sensor (P0846, P0847, P0848)
<u>EC-117</u>	<u>TM-427</u>	<u>TM-332</u>	<u>TM-430</u>	<u>TM-299</u>	<u>TM-415</u>						<u>TM-311</u>											
Shock vibration Noise	Shock at start is large in "D", "L", or "R" position.			1								2	1	1								
	Shock is large when the auxiliary gearbox is shifted from 1GR → 2GR.	2		1		2							2	2		1	1					
	Shock in lockup is large during driving in "D" or "L" position.					1									1							
	Shock is large when the lever is shifted from "N" → "D" and "N" → "R" positions.	1		1		2		1	1		1			1	1	1	1	1		1	1	
	Shock is large when the lever is shifted from "D" → "L" position.																					
	Vibration occurs in "D", "L", or "R" position during driving.	1	1	1		1						1		2			1	1	1			
	Noise occurs during driving.			1																		
	Noise occurs in idling.	1	1																			
Other	Starter operates in "D", "L", or "R" position.				1	1					1											
	Starter does not operate in "P" or "N" position.				1	1					1											
	Engine stall occurs in "D", "L", or "R" position during stop.	1				1						1				1						
	Engine stall occurs in "P" or "N" position during stop.	1				1						1				1						
	Parking lock does not operate in "P" position.				1								1									
	Parking lock cannot be cancelled when the selector lever is shifted from "P" position to other position.				1								1									

CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F11A]

Symptom diagnosis chart 2-2

Symptom		Replace the transaxle assembly.												
		Oil pressure control		Power transmission										
		Valve body, control valve	Oil pump	Torque converter	Pulley, steel belt	Low brake	High clutch	Reverse brake	Bearings	Counter gear	Planetary gear	Reduction gear	Final gear, differential gear	Parking mechanism
		TM-452												
Shock vibration Noise	Shock at start is large in "D", "L", or "R" position.	1			1	1 (In "D" or "L")		1 (In "R")		2	2	2	2	
	Shock is large when the auxiliary gearbox is shifted from 1GR → 2GR.	1				1	1							
	Shock in lockup is large during driving in "D" or "L" position.	1		1										
	Shock is large when the lever is shifted from "N" → "D" and "N" → "R" positions.	1				1 ("N" → "D")		1 ("N" → "D")						
	Shock is large when the lever is shifted from "D" → "L" position.	1				1	1							
	Vibration occurs in "D", "L", or "R" position during driving.	1	1	1	1	1 (In "D" or "L")	1 (In "D" or "L")	1 (In "R")	1	1	1	1	1	
	Noise occurs during driving.	1	1		1					1	1	1	1	1
	Noise occurs in idling.	1	1		1					1	1	1		
Other	Starter operates in "D", "L", or "R" position.													
	Starter does not operate in "P" or "N" position.													
	Engine stall occurs in "D", "L", or "R" position during stop.	1		1										
	Engine stall occurs in "P" or "N" position during stop.													
	Parking lock does not operate in "P" position.													1
	Parking lock cannot be cancelled when the selector lever is shifted from "P" position to other position.													1

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

PERIODIC MAINTENANCE


CVT FLUID

Inspection

INFOID:000000009268240

FLUID LEAKAGE

- Check transaxle surrounding area (oil seal and plug etc.)for fluid leakage.
- If anything is found, repair or replace damaged parts and adjust CVT fluid level. Refer to [TM-427, "Adjustment"](#).

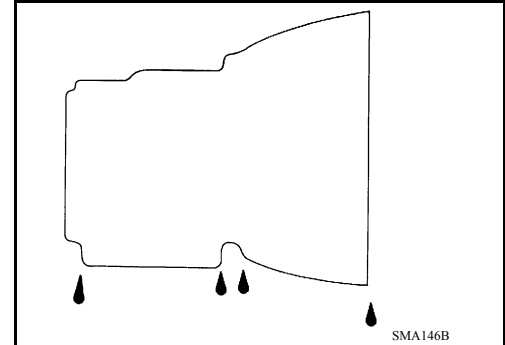

Replacement

INFOID:000000009268117

- CVT fluid** : Refer to [TM-456, "General Specification"](#).
- Fluid capacity** : Refer to [TM-456, "General Specification"](#).

CAUTION:

- Use only Genuine NISSAN CVT Fluid NS-3. Using transmission fluid other than Genuine NISSAN CVT Fluid NS-3 will damage the CVT, which is not covered by the (NISSAN new vehicle limited) warranty.
- Always use shop paper. Never use shop cloth.
- Replace a drain plug gasket with new ones at the final stage of the operation when installing.
- Use caution when looking into the drain hole as there is a risk of dripping fluid entering the eye.
- After replacement, always perform CVT fluid leakage check.

1. Select "Data Monitor" in "TRANSMISSION" using CONSULT.
2. Select "FLUID TEMP" and confirm that the CVT fluid temperature is 40°C (104°F) or less.
3. Check that the selector lever is in the "P" position, then completely engage the parking brake.
4. Lift up the vehicle.
5. Remove the drain plug and overflow tube and drain the CVT fluid from the oil pan. [TM-440, "Removal and Installation"](#).

6. Install the charging pipe set (KV311039S0) (A) into the drain hole.

CAUTION:

Tighten the charging pipe by hand.

7. Install the ATF changer hose (B) to the charging pipe.

CAUTION:

Press the ATF changer hose all the way onto the charging pipe until it stops.


8. Fill approximately 3 liter (2-5/8 Imp qt) of the CVT fluid.
9. Remove the ATF changer hose and charging pipe, then install the drain plug.

NOTE:

Perform this work quickly because CVT fluid leaks.

10. Lift down the vehicle.
11. Start the engine.
12. While depressing the brake pedal, shift the selector lever to the entire position from "P" to "L", and shift it to the "P" position.

NOTE:

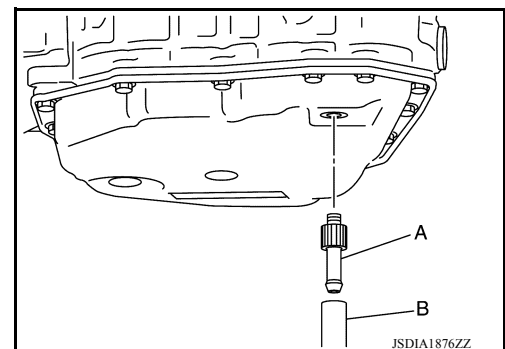

CVT FLUID

< PERIODIC MAINTENANCE >

[CVT: RE0F11A]

Hold the lever at each position for 5 seconds.

13. Check that the CONSULT "Data monitor" in "FLUID TEMP" is 35°C (95°F) to 45°C (113°F).
14. Stop the engine.
15. Lift up the vehicle.
16. Remove the drain plug, and then drain CVT fluid from oil pan.
17. Repeat steps 6 to 16 (one time).
18. Install the overflow tube. Refer to [TM-440, "Removal and Installation"](#).

CAUTION:

Be sure to tighten to the specified torque. If it is not tightened to the specified torque, the tube may be damaged.

19. Install the charging pipe set (KV311039S0) (A) into the drain hole.

CAUTION:

Tighten the charging pipe by hand.

20. Install the ATF changer hose (B) to the charging pipe.

CAUTION:

Press the ATF changer hose all the way onto the charging pipe until it stops.

21. Fill approximately 3 liter (2-5/8 Imp qt) of the CVT fluid.
22. Remove the ATF changer hose and charging pipe, then install the drain plug.

NOTE:

Perform this work quickly because CVT fluid leaks.

23. Lift down the vehicle.
24. Start the engine.
25. While depressing the brake pedal, shift the selector lever to the entire position from "P" to "L", and shift it to the "P" position.

NOTE:

Hold the lever at each position for 5 seconds.

26. Check that the CONSULT "Data monitor" in "FLUID TEMP" is 35°C (95°F) to 45°C (113°F).
27. Lift up the vehicle.
28. Remove the drain plug and confirm that the CVT fluid is drained from the overflow tube.

CAUTION:

Perform this work with the vehicle idling.

NOTE:

If the CVT fluid is not drained, refer to "Adjustment" and refill with the CVT fluid.

29. When the flow of CVT fluid slows to a drip, tighten the drain plug to the specified torque. [TM-440, "Removal and Installation"](#).

CAUTION:

Never reuse drain plug gasket.

30. Lift down the vehicle.
31. Select "Work Support" in "TRANSMISSION" using CONSULT.
32. Select "CONFORM CVTF DETERIORATION".
33. Select "Erase".
34. Stop the engine.


Adjustment

CVT fluid : Refer to [TM-456, "General Specification"](#).

Fluid capacity : Refer to [TM-456, "General Specification"](#).

CAUTION:

- Use only Genuine NISSAN CVT Fluid NS-3. Using transmission fluid other than Genuine NISSAN CVT Fluid NS-3 will damage the CVT, which is not covered by the (NISSAN new vehicle limited) warranty.

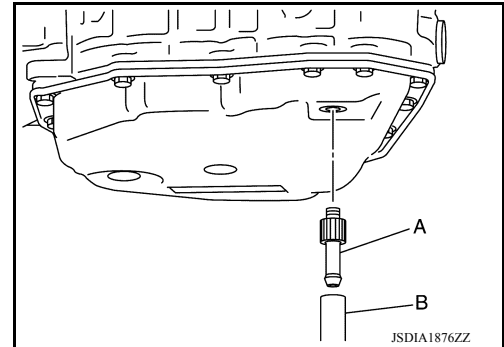

CVT FLUID

< PERIODIC MAINTENANCE >

[CVT: RE0F11A]

- During adjustment of the CVT fluid level, check CONSULT so that the oil temperature may be maintained from 35 to 45°C (95 to 113°F).
- Use caution when looking into the drain hole as there is a risk of dripping fluid entering the eye.

1. Check that the selector lever is in the "P" position, then completely engage the parking brake.
2. Start the engine.
3. Adjust the CVT fluid temperature to be approximately 40°C (104°F).

NOTE:

The CVT fluid is largely affected by temperature. Therefore be sure to use CONSULT and check the "FLUID TEMP" under "TRANSMISSION" in "Data Monitor" while adjusting.

4. While depressing the brake pedal, shift the selector lever to the entire position from "P" to "L", and shift it to the "P" position.

NOTE:

Hold the lever at each position for 5 seconds.

5. Lift up the vehicle.
6. Check that there is no CVT fluid leakage.
7. Remove the drain plug. Refer to [TM-440. "Removal and Installation"](#).

8. Install the charging pipe set (KV311039S0) (A) into the drain plug hole.

CAUTION:

Tighten the charging pipe by hand.

9. Install the ATF changer hose (B) to the charging pipe.

CAUTION:

Press the ATF changer hose all the way onto the charging pipe until it stops.

10. Fill approximately 0.5 liter (1/2 Imp qt) of the CVT fluid.
11. Remove the ATF changer hose from the charging pipe, and check that the CVT fluid drains out from the charging pipe. If it does not drain out, perform charging again.

CAUTION:


Perform this work with the vehicle idling.

12. When the flow of CVT fluid slows to a drip, remove the charging pipe from the oil pan.
13. Tighten the drain plug to the specified torque. Refer to [TM-440. "Removal and Installation"](#).

CAUTION:

Never reuse drain plug gasket.

14. Lift down the vehicle.
15. Stop the engine.

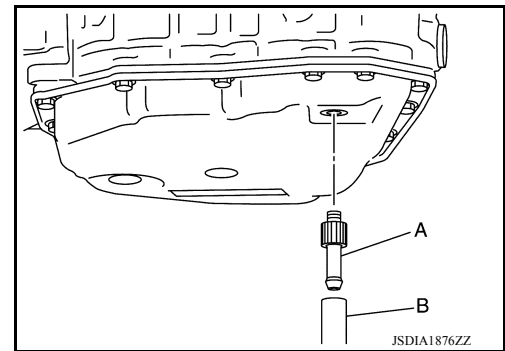

CVT SHIFT SELECTOR

< REMOVAL AND INSTALLATION >


[CVT: RE0F11A]

REMOVAL AND INSTALLATION

CVT SHIFT SELECTOR

Exploded View

INFOID:000000009268241

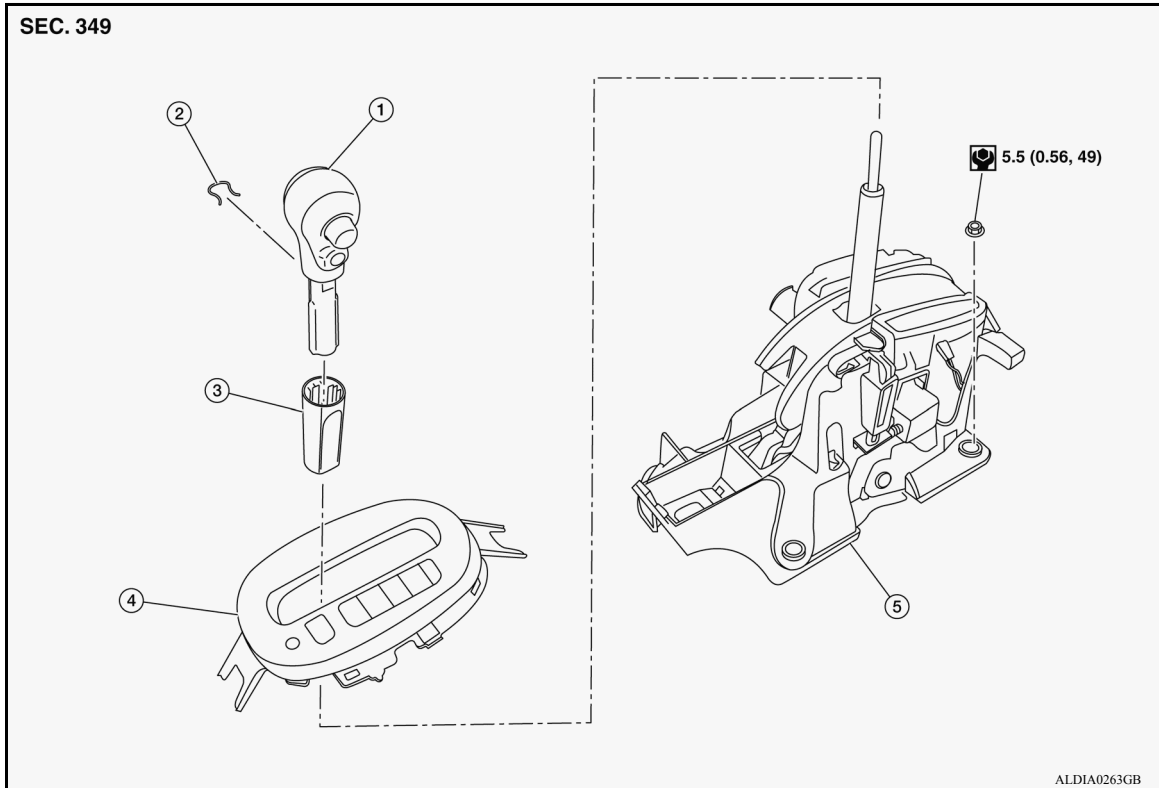

- | | | |
|------------------------------|--------------------------------|--------------------------------|
| 1. Shift selector handle | 2. Lock pin | 3. Shift selector handle cover |
| 4. Position indication panel | 5. CVT shift selector assembly | |

Removal and Installation

INFOID:000000009268242

CAUTION:

Always apply the parking brake before performing removal and installation.

REMOVAL

1. Move the shift selector to the "N" position.
2. Remove the shift selector handle. Refer to [TM-430, "Disassembly and Assembly"](#).
3. Remove the center console. Refer to [IP-23, "Removal and Installation"](#).
4. Disconnect the harness connectors from CVT shift selector.
5. Move the shift selector to the "P" position.
6. Remove the key interlock cable from the CVT shift selector assembly. Refer to [TM-435, "Exploded View"](#).
7. Remove the control cable from the CVT shift selector assembly. Refer to [TM-432, "Exploded View"](#).
8. Remove the CVT shift selector assembly.

INSTALLATION


Installation is in the reverse order of removal.

CVT SHIFT SELECTOR

< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

- When connecting the control cable (1) to the CVT shift selector assembly (2), face the grooved surface of the rib (A) up and insert the control cable until it stops.

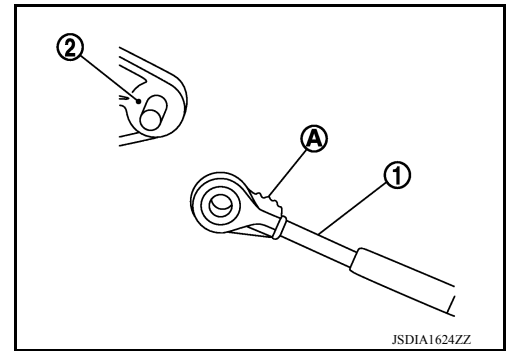


Disassembly and Assembly


INFOID:000000009268243

DISASSEMBLY

1. Slide the shift selector handle cover (1) down.
CAUTION:
Do not damage the shift selector handle cover.
2. Pull out the lock pin (2).
3. Pull the shift selector handle (3) and shift selector handle cover upward to remove.
4. Remove the position lamp.

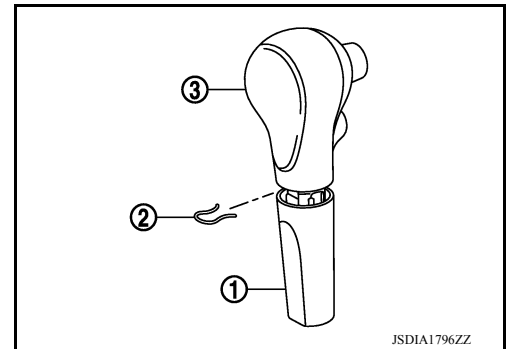


5. Disengage the hooks (A) (4 locations), and lift up the position indication panel (1) to separate it from the CVT shift selector assembly (2).
CAUTION:
Do not damage the CVT shift selector assembly.

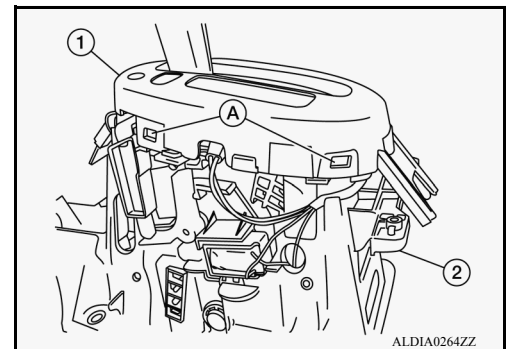

ASSEMBLY

Assembly is in the reverse order of disassembly.

- Follow the procedure below to install the shift selector handle.
- 1. Install the lock pin (2) onto the shift selector handle (3).
- 2. Install the shift selector handle cover (1) onto the shift selector handle.
- 3. Press the shift selector handle onto the shift selector until it clicks.
CAUTION:
 - When pressing the shift selector handle onto the shift selector, do not press the shift selector handle button.
 - Do not strike the shift selector handle to install it.

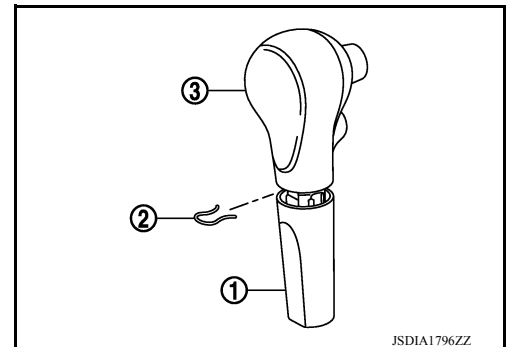

Inspection and Adjustment

INFOID:000000009268244


INSPECTION

CVT SHIFT SELECTOR

< REMOVAL AND INSTALLATION >


[CVT: RE0F11A]

1. Turn ON the ignition switch with the shift selector in the "P" position.
2. Press the shift selector handle button with the brake pedal depressed, and confirm that the shift selector can be moved from the "P" position. Also confirm that shift selector will not move from the "P" position without depressing the brake pedal.
3. Move the shift selector and check for "excessive effort," "sticking," "noise" or "rattle".
4. Confirm that shift selector stops at each position with the feel of engagement when it is moved through all the positions. Check whether or not the actual position the shift selector is in matches the position shown by the transaxle body.
5. The method of operating the shift selector to individual positions correctly should be as shown.
 - (A): Press shift selector button to operate shift selector, while depressing the brake pedal.
 - (B): Press shift selector button to operate shift selector.
 - (C): Shift selector can be operated without pressing shift selector button.
6. When the shift selector handle button is pressed without applying forward/backward force to the shift selector at "P", "R", "N" and "D" positions, there should be no "sticking" of the button.
7. Confirm the back-up lamps illuminate only when shift selector is placed in the "R" position. Confirm the back-up lamps do not illuminate when the shift selector is pushed toward the "R" position side when shift selector is in the "P" or "N" position.
8. Check that the engine can be started only when the shift selector is in the "P" and "N" positions.
9. Check that the transaxle is locked when the shift selector is in the "P" position.

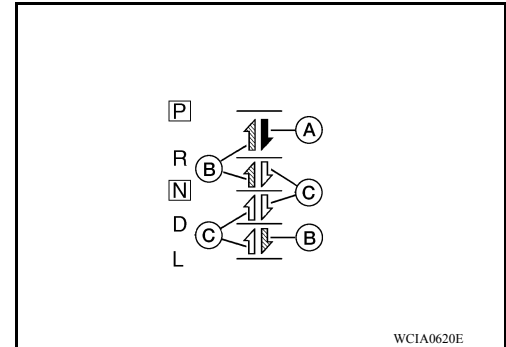

ADJUSTMENT

1. Move the shift selector to the "P" position.
CAUTION:
Rotate the wheels at least a quarter turn and be certain the transaxle is locked in the "P" position.
2. Remove nut (A) and set manual lever (B) to the "P" position.
CAUTION:
Do not apply force to the manual lever.
3. Tighten nuts to the specified torque. Refer to [TM-432, "Exploded View"](#).
CAUTION:
Do not move the manual lever when tightening.

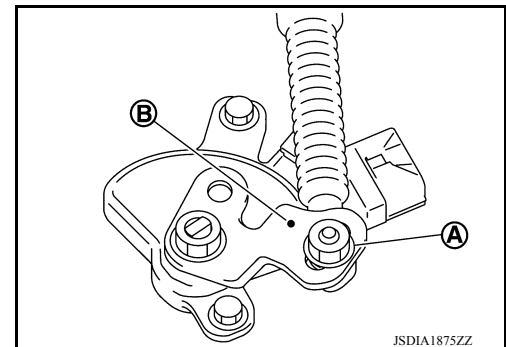

CONTROL CABLE


< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

CONTROL CABLE

Exploded View

INFOID:000000009268245

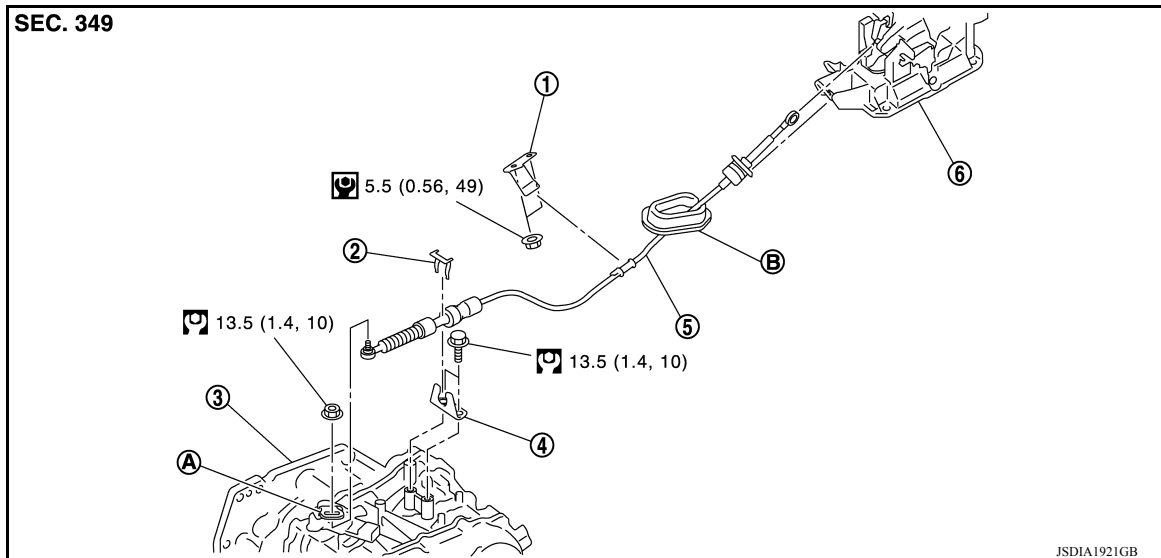

- | | | |
|-----------------|------------------|--------------------------------|
| 1. Bracket B | 2. Lock plate | 3. Transaxle assembly |
| 4. Bracket A | 5. Control cable | 6. CVT shift selector assembly |
| A: Manual lever | B: Grommet | |

Removal and Installation


INFOID:000000009268246

CAUTION:

Always apply the parking brake before performing removal and installation.

REMOVAL

1. Remove the battery. Refer to [PG-63, "Removal and Installation"](#).
2. Remove the TCM and bracket. Refer to [TM-437, "Removal and Installation"](#).
3. Remove the IPDM E/R. Refer to [PCS-56, "Removal and Installation"](#).
4. Remove the battery tray and bracket.
5. Remove the center console. Refer to [IP-23, "Removal and Installation"](#).
6. Remove the control cable from the CVT shift selector assembly.
7. Disengage the pawls (B) of the grommet (A), and pull downward to remove.
8. Remove the control cable nut from the manual lever.

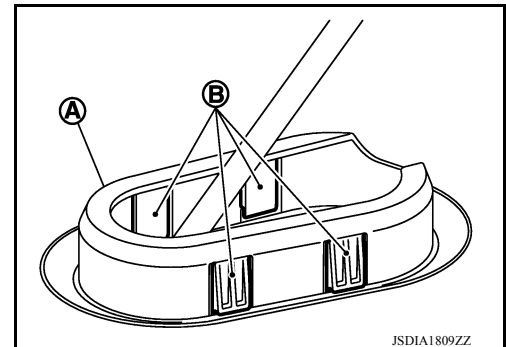


CONTROL CABLE

< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]


9. Remove the lock plate (1).

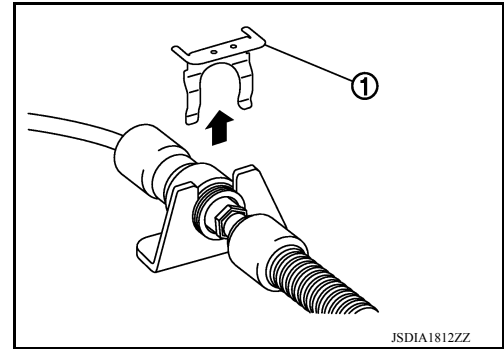

10. Lift up the heat plate.

11. Remove the control cable (1) from the bracket (2).

⇐ Front

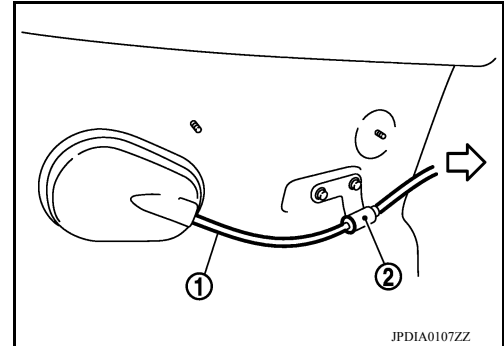

12. Remove the control cable from the vehicle.

13. Remove bracket.


INSTALLATION

Installation is in the reverse order of removal.

- From below the vehicle, press the grommet (A) into place until the pawls (B) make a click sound.


CAUTION:

Check that pulling down on the grommet does not disconnect it.

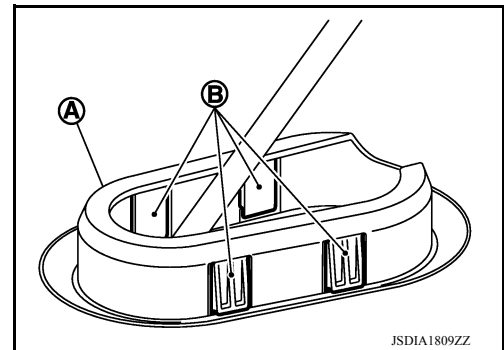

- Pay attention to the following when connecting the control cable to the CVT shift selector.

1. When connecting the control cable (1) to the CVT shift selector assembly (2), face the grooved surface of the rib (A) up and insert the control cable until it stops.

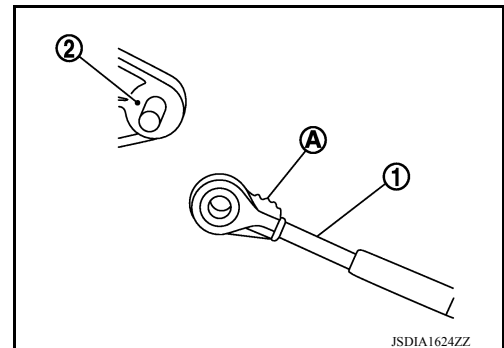

CONTROL CABLE


< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

2. Install the socket (A) onto the CVT shift selector assembly.

CAUTION:

- Insert the socket into the CVT shift selector assembly, then push it firmly in place.
- Check that pulling on the socket does not disconnect it.

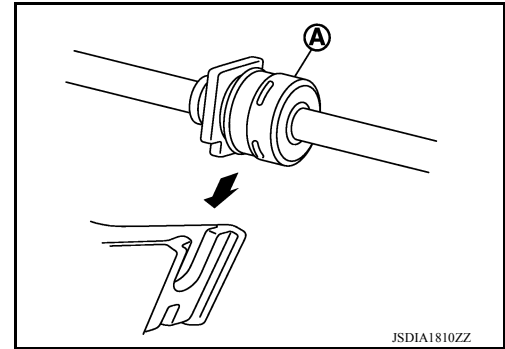

Inspection

INFOID:000000009268247

INSPECTION AFTER INSTALLATION

Check the CVT position. If a malfunction is found, adjust the CVT position. Refer to [TM-430. "Inspection and Adjustment"](#).

KEY INTERLOCK CABLE


< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

KEY INTERLOCK CABLE

Exploded View

INFOID:00000009268248

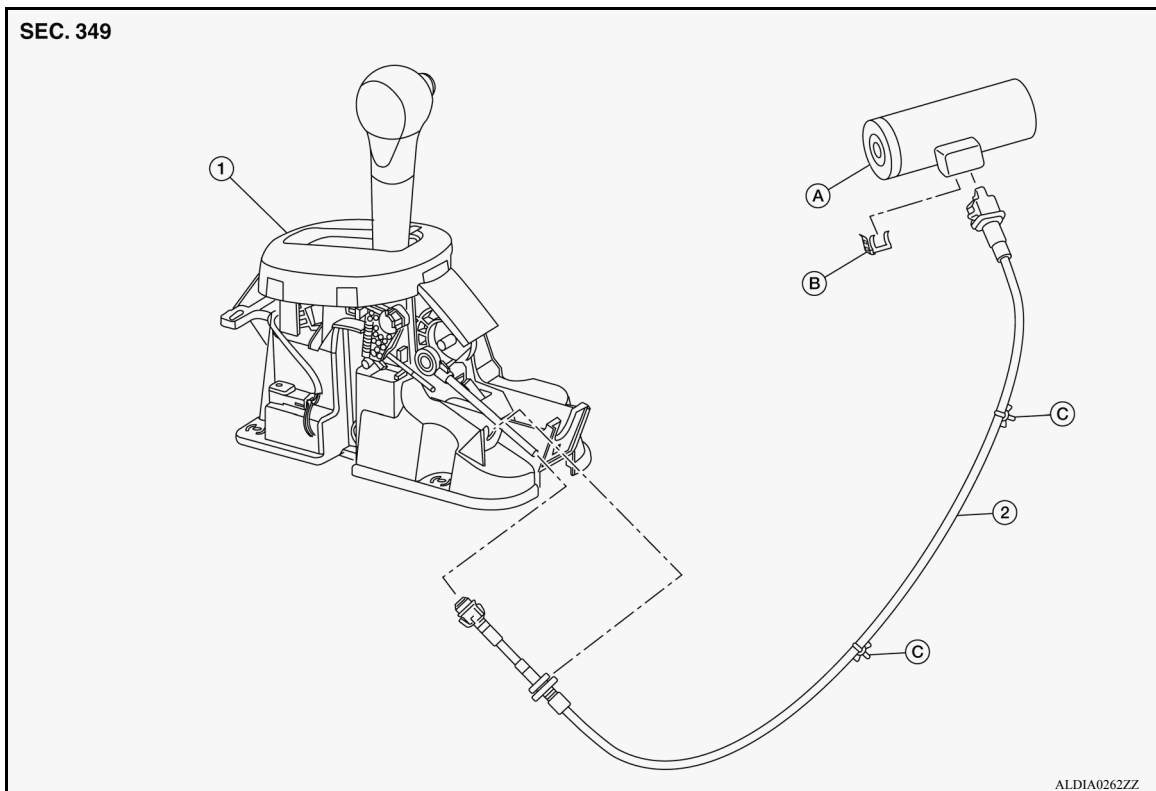

- | | | |
|--------------------------------|------------------------|---------|
| 1. CVT shift selector assembly | 2. Key interlock cable | |
| A: Key cylinder | B: Lock plate | C: Clip |

Removal and Installation

INFOID:00000009268249

REMOVAL


CAUTION:

Always apply the parking brake before performing removal and installation.

1. Move the shift selector to the "N" position.
2. Remove the shift selector handle. Refer to [TM-430, "Disassembly and Assembly"](#).
3. Remove the center console. Refer to [IP-23, "Removal and Installation"](#).
4. Move the shift selector to the "P" position.
5. Press the pawls (B) of the key interlock cable slider (A) while sliding it in the direction of the casing cap (C), and separate the adjusting holder (D) and slider.

(E) :Key interlock rod

6. Remove the key interlock cable from the CVT shift selector assembly.
7. Remove the instrument lower panel LH. Refer to [IP-20, "Removal and Installation"](#).
8. Remove the steering column upper and lower covers. Refer to [IP-18, "Removal and Installation"](#).
9. Remove the center console lower. Refer to [IP-25, "Removal and Installation"](#).

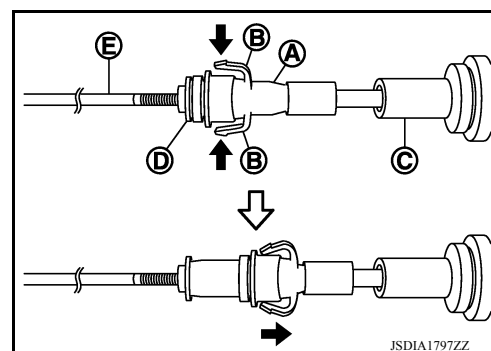

JSDIA1797ZZ

KEY INTERLOCK CABLE


< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

10. Lift lock plate (A) in the direction of the arrow (←C) and remove in the direction of the arrow (←D).

- (1) :Key interlock cable
(B) :Key cylinder

11. Remove the key interlock cable from the key cylinder.
12. Disengage the clips and remove the key interlock cable from the vehicle.

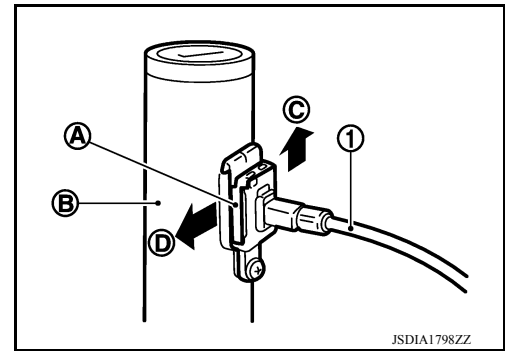


INSTALLATION

Installation is in the reverse order of removal.

- Temporarily install the adjust holder (A) to the key interlock rod (B).
- Install the casing cap (C) to the cable bracket (D) on the CVT shift selector assembly.

CAUTION:


- Do not bend or twist key interlock cable excessively when installing.
- After installing key interlock cable to cable bracket (D) on CVT shift selector assembly, make sure casing caps (C) is firmly secured in cable bracket (D) on CVT shift selector assembly.
- If casing cap (C) is loose [less than 39.2 N (4.0 kg, 8.8 lb) removing force], replace key interlock cable.

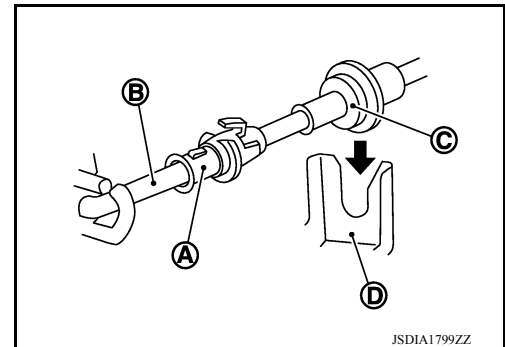

- Slide the slider (A) toward the key interlock rod (D) while pressing the pull lock (B) down to securely connect the adjust holder (C) with the key interlock rod (D).

CAUTION:

- Do not press tabs when holding slider (A).
- Do not apply any side to side force to key interlock rod (D) when sliding slider (A).

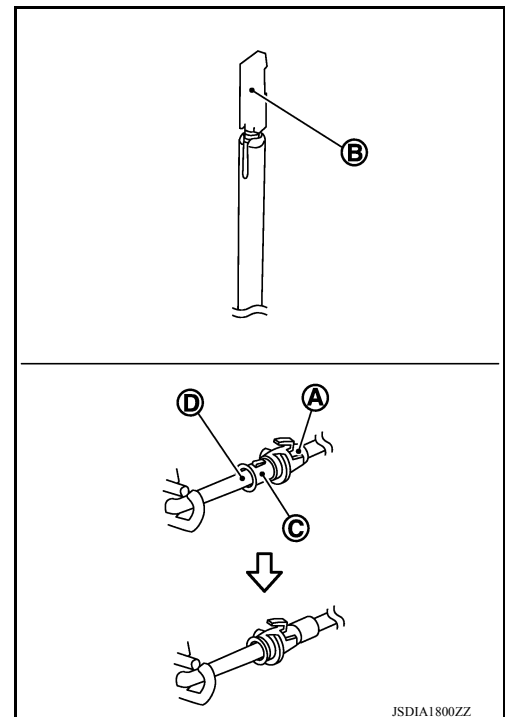

Inspection

INFOID:000000009268250


INSPECTION AFTER INSTALLATION

- Check the CVT operation. If a malfunction is found, adjust the CVT position. Refer to [TM-430. "Inspection and Adjustment"](#).
- Make sure the key can be removed only when the shift selector is in the "P" position.
- Make sure the ignition switch will not turn to LOCK position when the shift selector is not in the "P" position.

TCM

Exploded View

INFOID:000000009268251

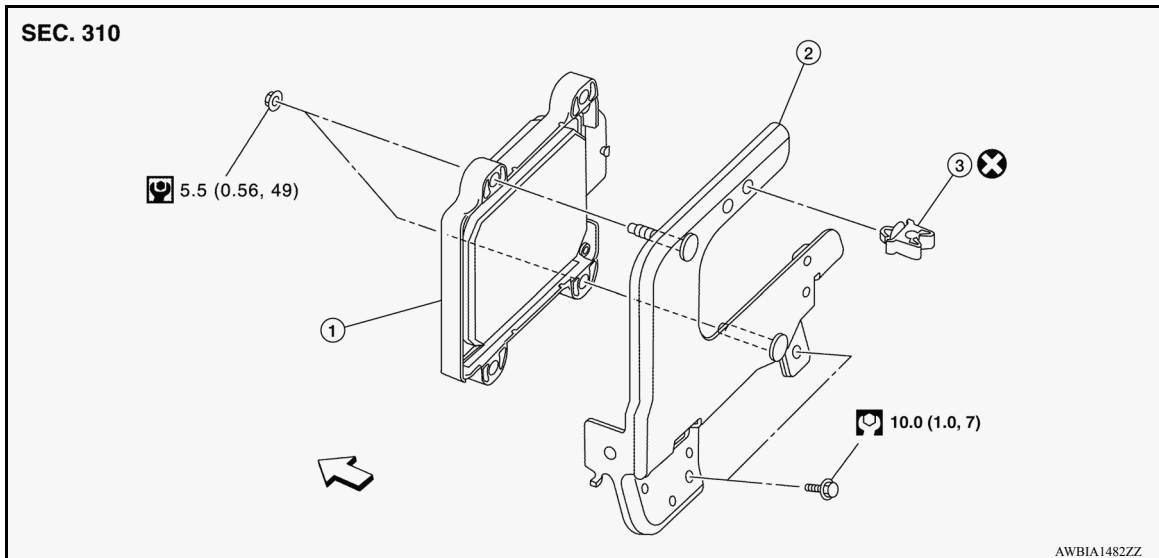

1. TCM
 ⇐ Front

2. Bracket

3. Clip

Removal and Installation

INFOID:000000009268252

CAUTION:

When replacing TCM, note the "CVTF DETERIORATION DATE" value displayed on CONSULT "CONFORM CVTF DETERIORATION" in MAINTENANCE BOOKLET, before starting the operation.

NOTE:

When replacing the TCM and transaxle assembly as a set, replace the transaxle assembly first and then replace the TCM. Refer to [TM-325, "Description"](#).

REMOVAL

1. Remove the battery. Refer to [PG-63, "Removal and Installation"](#).
2. Disconnect the harness connector from the TCM.
3. Remove the TCM and bracket as an assembly.
4. Remove the TCM from the bracket, if necessary.

INSTALLATION

Installation is in the reverse order of removal.

Adjustment

INFOID:000000009268253

ADJUSTMENT AFTER INSTALLATION

Perform "ADDITIONAL SERVICE WHEN REPLACING TCM". Refer to [TM-325, "Description"](#).

AIR BREATHER HOSE

< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

AIR BREATHER HOSE

Removal and Installation

INFOID:000000009268254

REMOVAL


1. Remove air duct (inlet). Refer to [EM-25, "Exploded View"](#).
2. Remove air breather hose from transaxle assembly.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Check that air breather hose is not collapsed or blocked due to folding or bending when installed.
- Be sure to insert air breather hose (1) fully until it reaches the base of the transaxle tube (A).

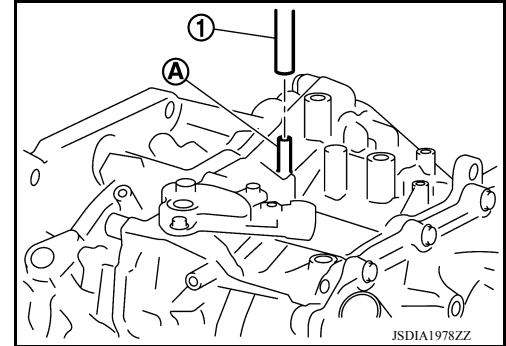

JSDIA1978ZZ

G SENSOR


< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

G SENSOR

Exploded View

INFOID:000000009268255

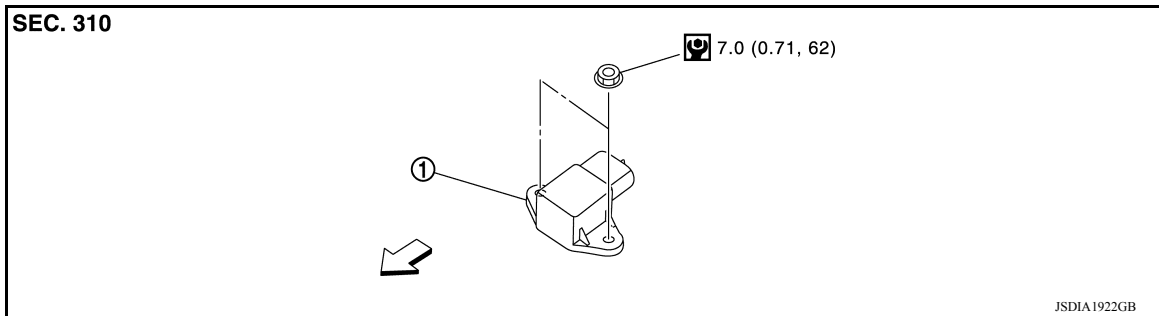

1. G sensor

← Front

Removal and Installation

INFOID:000000009268256

CAUTION:

- Do not drop or strike G sensor, because it may be damaged by impact.
- Do not use a power tool.

REMOVAL

1. Disconnect the battery negative terminal. Refer to [PG-63, "Removal and Installation"](#).
2. Remove center console. Refer to [IP-23, "Removal and Installation"](#).
3. Disconnect the harness connector from G sensor.
4. Remove G sensor.

INSTALLATION

Installation is in the reverse order of removal.

Adjustment

INFOID:000000009268257

ADJUSTMENT AFTER INSTALLATION

Perform "G SENSOR CALIBRATION". Refer to [TM-328, "Description"](#).

OIL PAN


< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

OIL PAN

Exploded View

INFOID:000000009268258

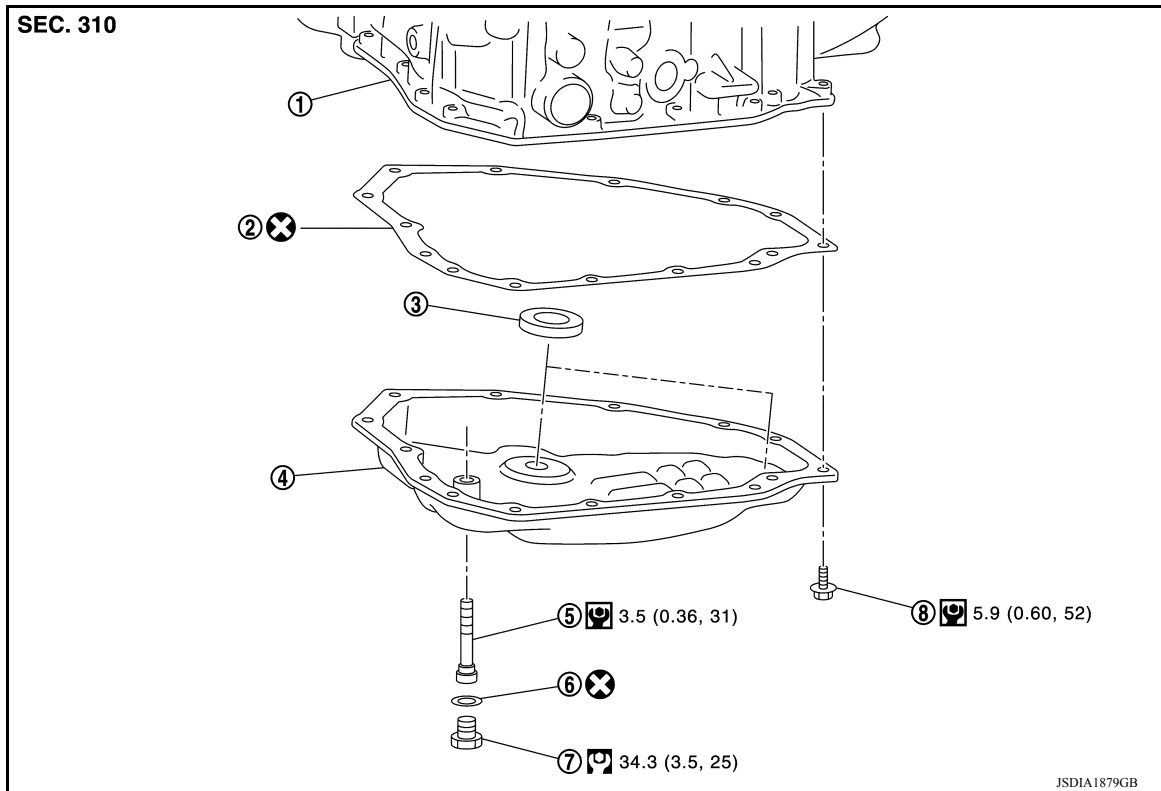

- | | | |
|-----------------------|-------------------------|----------------------|
| 1. Transaxle assembly | 2. Oil pan gasket | 3. Magnet |
| 4. Oil pan | 5. Overflow tube | 6. Drain plug gasket |
| 7. Drain plug | 8. Oil pan fitting bolt | |

Removal and Installation

INFOID:000000009268259

REMOVAL

1. Remove the drain plug and overflow tube, and then drain the CVT fluid.


WARNING:

CVT fluid can splash when draining, use safety glasses to protect eyes.

2. Remove the drain plug gasket from the drain plug.
3. Remove the oil pan bolts (←), and then remove the oil pan and oil pan gasket.

← : Front

4. Remove the magnets from the oil pan.

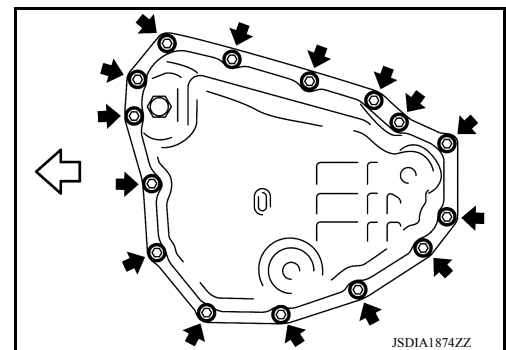

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Do not reuse oil pan gasket and drain plug gasket.


OIL PAN

< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

- Do not reuse oil pan bolts.
- Completely remove all moisture, oil and old gasket, etc. from the oil pan gasket mating surface of transaxle case and oil pan.
- When installing the overflow tube, be sure to tighten to the specified torque. If it is not tightened to the specified torque, the tube may be damaged.
- When the oil pan is installed, temporarily tighten oil pan bolts, then tighten the oil pan bolts to specification in the order shown.

← : Front

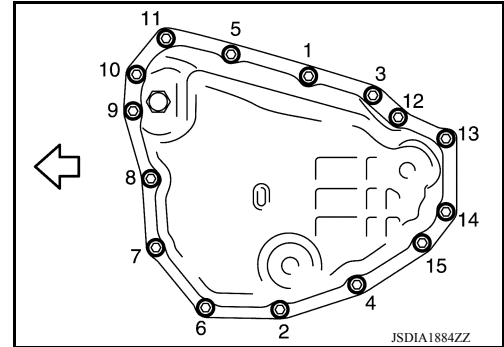

INFOID:000000009268260

Inspection and Adjustment

INSPECTION AFTER REMOVAL

Check oil pan for foreign material.

- If a large amount of worn material is found, clutch plate may be worn.
 - If iron powder is found, bearings, gears, or clutch plates may be worn.
 - If aluminum powder is found, bushing may be worn, or chips or burrs of aluminum casting parts may enter.
- Check points where wear is found in all cases.

INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-426, "Inspection"](#).

ADJUSTMENT AFTER INSTALLATION

Check the CVT fluid level. Refer to [TM-427, "Adjustment"](#).

PRIMARY SPEED SENSOR


< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

PRIMARY SPEED SENSOR

Exploded View

INFOID:000000009268261

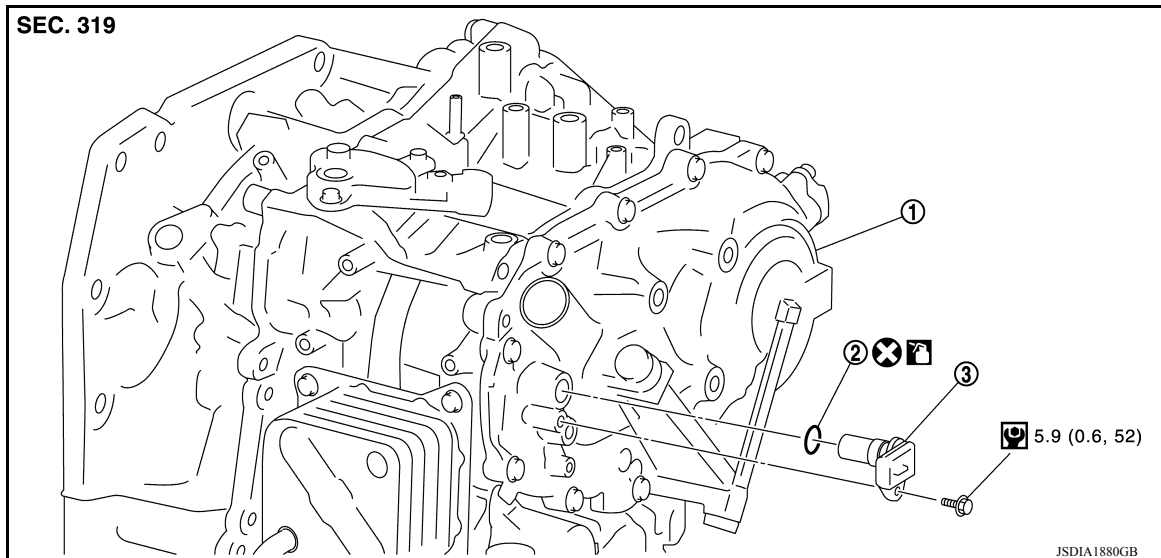

1. Transaxle assembly

2. O-ring

3. Primary speed sensor

⇐ Front

: Genuine NISSAN CVT Fluid NS-3

Removal and Installation

INFOID:000000009268262

REMOVAL

1. Remove the front LH wheel and tire. Refer to [WT-39, "Adjustment"](#).
2. Remove the LH fender protector. Refer to [EXT-26, "Removal and Installation"](#).
3. Disconnect the harness connector from primary speed sensor.
4. Remove the primary speed sensor.
5. Remove the O-ring from the primary speed sensor.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Do not reuse O-ring.
- Apply Genuine NISSAN CVT Fluid NS-3 to the O-ring.

Inspection and Adjustment

INFOID:000000009268263

INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-426, "Inspection"](#).

ADJUSTMENT AFTER INSTALLATION

Adjust the CVT fluid level. Refer to [TM-427, "Adjustment"](#).

SECONDARY SPEED SENSOR


< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

SECONDARY SPEED SENSOR

Exploded View

INFOID:000000009268264

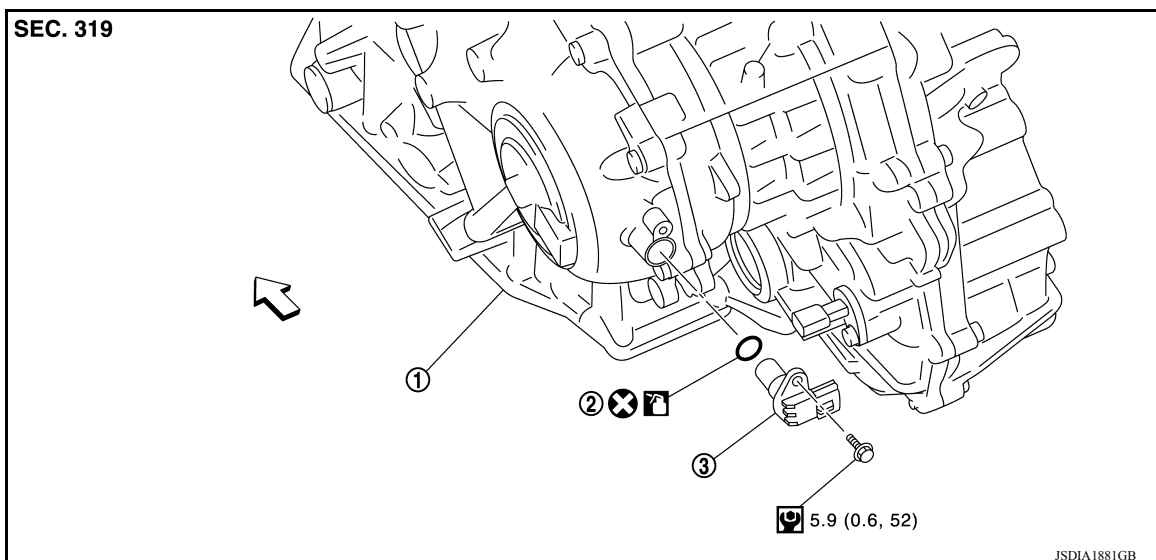

1. Transaxle assembly

2. O-ring

3. Secondary speed sensor

⇐ Front

: Genuine NISSAN CVT Fluid NS-3

Removal and Installation

INFOID:000000009268265

REMOVAL

1. Remove the front LH wheel and tire. Refer to [WT-39, "Adjustment"](#).
2. Remove the fender protector (LH). Refer to [EXT-26, "Removal and Installation"](#).
3. Disconnect the harness connector from secondary speed sensor.
4. Remove the secondary speed sensor.
5. Remove the O-ring from the secondary speed sensor.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Do not reuse O-ring.
- Apply Genuine NISSAN CVT Fluid NS-3 to the O-ring.

Inspection and Adjustment

INFOID:000000009268266

INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-426, "Inspection"](#).

ADJUSTMENT AFTER INSTALLATION

Adjust the CVT fluid level. Refer to [TM-427, "Adjustment"](#).

OUTPUT SPEED SENSOR


< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

OUTPUT SPEED SENSOR

Exploded View

INFOID:000000009268267

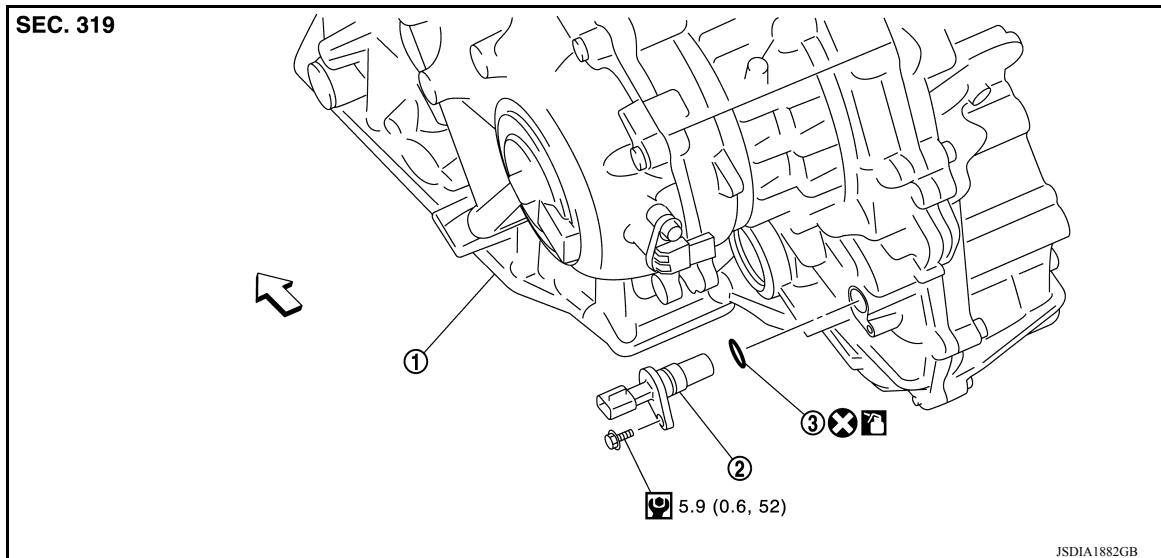

1. Transaxle assembly

2. Output speed sensor

3. O-ring

⇐ Front

 Genuine NISSAN CVT Fluid NS-3

Removal and Installation

INFOID:000000009268268

REMOVAL

1. Disconnect the harness connector from output speed sensor.
NOTE:
Lift up the vehicle and perform the work from rear of the transaxle assembly.
2. Remove the output speed sensor.
3. Remove the O-ring from the output speed sensor.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Do not reuse O-ring.
- Apply Genuine NISSAN CVT Fluid NS-3 to the O-ring.

Inspection and Adjustment

INFOID:000000009268269

INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-426, "Inspection"](#).

ADJUSTMENT AFTER INSTALLATION

Check the CVT fluid level. Refer to [TM-427, "Adjustment"](#).

DIFFERENTIAL SIDE OIL SEAL


< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

DIFFERENTIAL SIDE OIL SEAL

Exploded View

INFOID:000000009268270

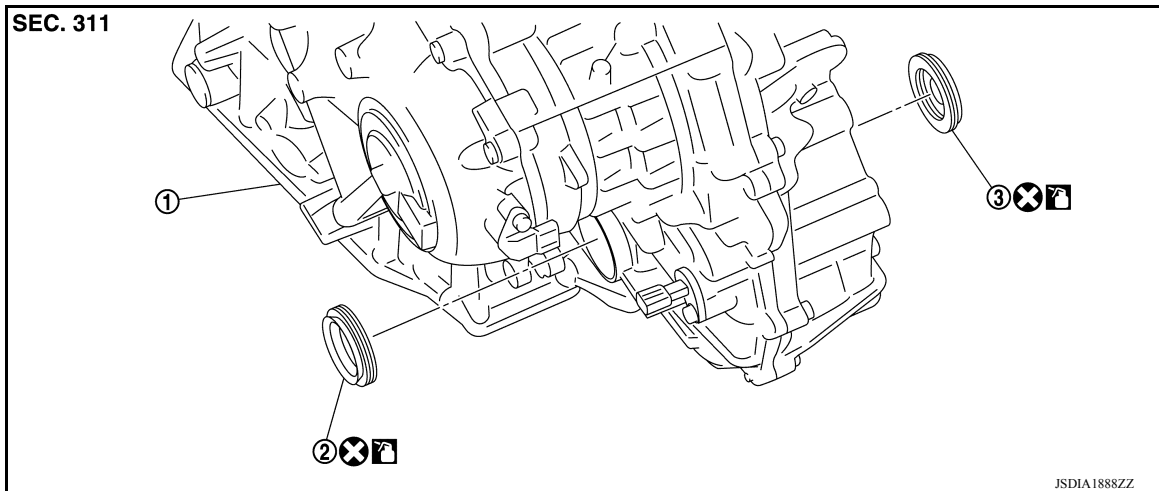

1. Transaxle assembly
 2. Differential side oil seal (left side)
 3. Differential side oil seal (right side)
- ⇐ Front
- Genuine NISSAN CVT Fluid NS-3

Removal and Installation

INFOID:000000009268271

NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

REMOVAL

1. Remove the front drive shaft from the transaxle assembly. Refer to [FAX-15, "Removal and Installation"](#)
2. Remove the differential side oil seal using suitable tool.

CAUTION:

When removing the differential side oil seal, be careful not to scratch the oil seal mating surfaces of the transaxle case and converter housing.

INSTALLATION


1. Drive the differential side oil seal into the transaxle case side (A) and converter housing side (B) using suitable tool to the specified dimension.

CAUTION:

- Be careful not to scratch the lip of the differential side oil seal when press-fitting it.
- Do not reuse differential side oil seal.
- Apply Genuine NISSAN CVT Fluid NS-3 to the differential side oil seal lip and around the oil seal.

Dimension (C) : 1.8 ± 0.5 mm (0.071 ± 0.020 in).

Dimension (D) : 1.8 ± 0.5 mm (0.071 ± 0.020 in).

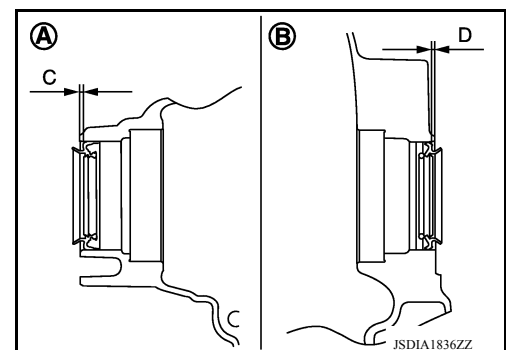

2. Install the front drive shaft. Refer to [FAX-15, "Removal and Installation"](#).

Inspection and Adjustment

INFOID:000000009268272

INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-426, "Inspection"](#).

ADJUSTMENT AFTER INSTALLATION

DIFFERENTIAL SIDE OIL SEAL

< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

Adjust the CVT fluid level. Refer to [TM-427. "Adjustment"](#).

WATER HOSE


< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

WATER HOSE

Exploded View

INFOID:00000009268273

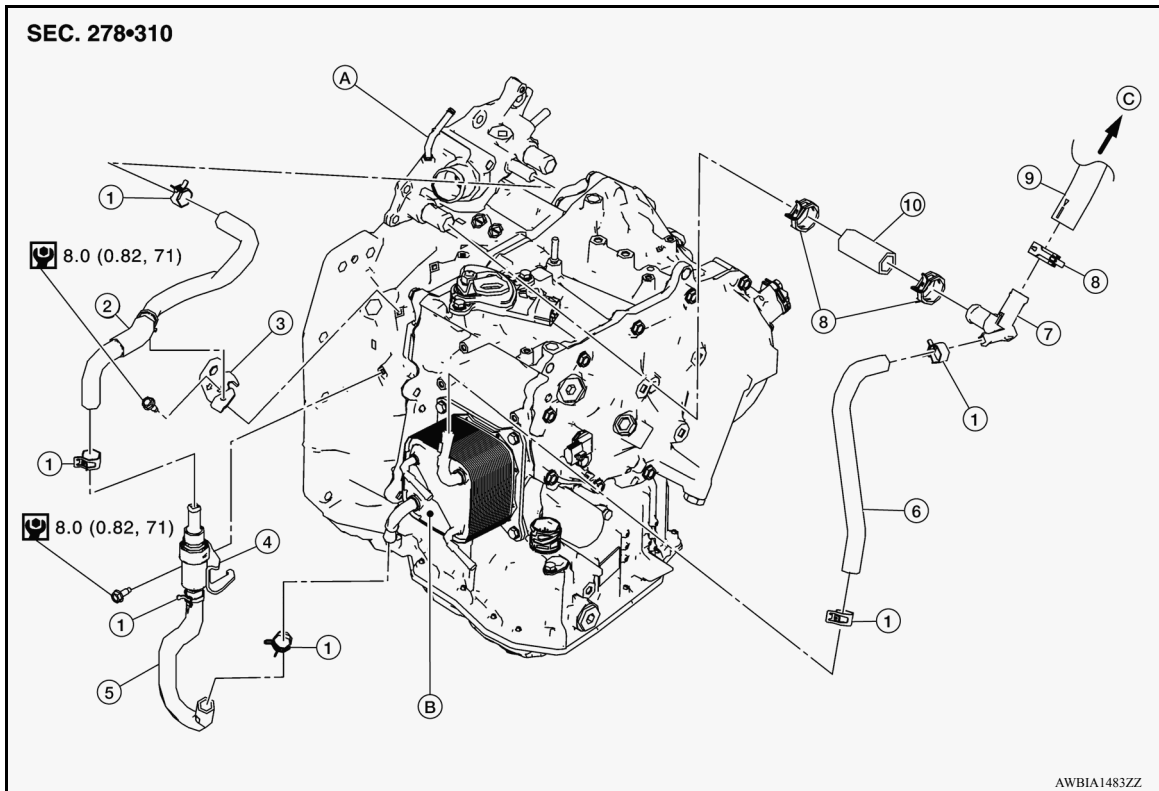

- | | | |
|----------------------|-----------------|-----------------|
| 1. Hose clamp | 2. Water hose A | 3. Bracket |
| 4. Heater thermostat | 5. Water hose B | 6. Water hose C |
| 7. Water bypass pipe | 8. Hose clamp | 9. Heater hose |
| 10. Water hose D | A. Water outlet | B. Oil warmer |
| C. To heater core | | |

Removal and Installation

INFOID:00000009268274

REMOVAL

WARNING:

Do not remove the radiator cap when the engine is hot. Serious burns could occur from high pressure coolant escaping from the radiator.

CAUTION:

Perform these steps after the coolant temperature has cooled sufficiently.

1. Remove the hose clamp and pull out the water hose A.
2. Remove the hose clamp and pull out the water hose B.
3. Remove the hose clamp and pull out the water hose C.
4. Pull out the heater hose and remove the water bypass pipe.
5. Remove the heater thermostat assembly.
6. Remove the bracket.

INSTALLATION


Installation is in the reverse order of removal.

WATER HOSE

< REMOVAL AND INSTALLATION >


[CVT: RE0F11A]

- To install bracket to the CVT assembly, face the front arrow (A) of the bracket toward front of vehicle.

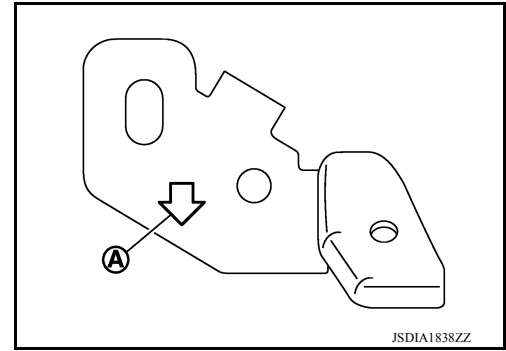

- Refer to the following when installing water hoses.

Water hose (1)	Installation side tube (2)	Direction of paint mark	Hose insertion depth (L)
Water hose A	Water outlet	Align with the mark on the water outlet side	(A): 27 mm (1.06 in) (End reaches the 2-stage bulge.)
	Heater thermostat	Frontward	(B): 27 mm (1.06 in) (Hose end reaches the 2-stage bulge.)
Water hose B	Heater thermostat	Frontward	
	Water hose C	CVT oil warmer	Frontward
CVT oil warmer		Align with the mark on the CVT oil warmer side	(A): 27 mm (1.06 in) (End reaches the 2-stage bulge.)
Water hose D	Water bypass pipe	Align with the mark on the water bypass pipe side	
	Water outlet	Align with the mark on the water outlet side	

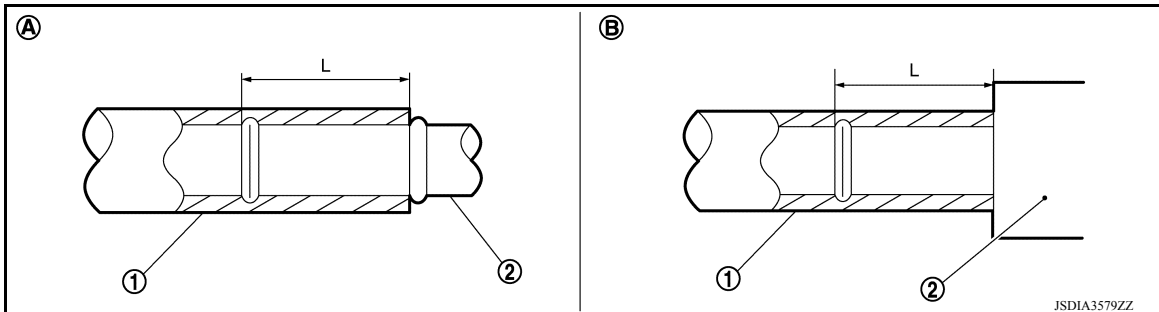

- Refer to the following when installing hose clamp.

CAUTION:


Hose clamp should not interfere with the bulge of fluid cooler tube.

WATER HOSE

< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

Water hose (1)	Installation side tube (2)	Hose clamp (3)	
		Dieection of tab	Clamping position
Water hose A	Water outlet	Upward	5 - 7 mm (0.20 - 0.25 in) (A) from hose end
	Heater thermostat	Frontward	5 mm (0.20 in) (A) from hose end
Water hose B	Heater thermostat	Frontward	5 - 7 mm (0.20 - 0.25 in) (A) from hose end
	CVT oil warmer	Frontward	
Water hose C	CVT oil warmer	Frontward	
	Water bypass pipe	Rightward	
Water hose D	Water bypass pipe	Upward and 45° frontward	
	Water outlet	Upward and 45° frontward	

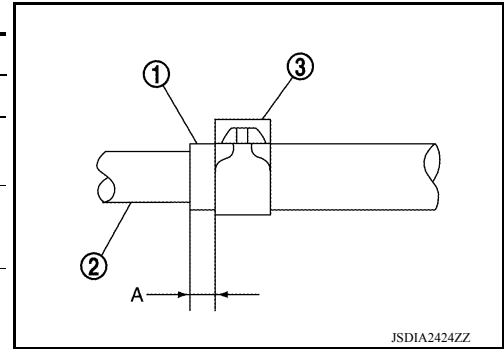


Inspection

INFOID:000000009268275

INSPECTION AFTER REMOVAL

Heater Thermostat


1. Fully immerse the heater thermostat (1) in a container (A) filled with water. Continue heating the water while stirring.
2. Continue heating the heater thermostat for 5 minutes or more after bringing the water to a boil.

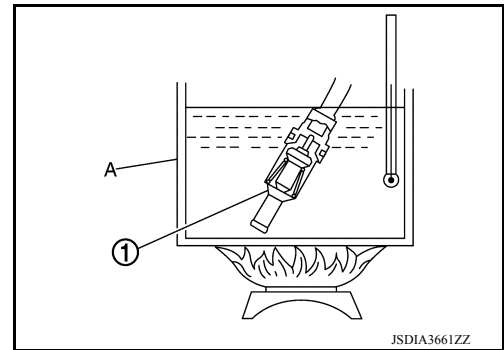

3. Quickly take the heater thermostat out of the hot water, measure the heater thermostat within 10 seconds.
 - Place dial indicator (A) on the pellet (B) and measure the elongation from the initial state.

Standard : Refer to [TM-457, "Heater Thermostat"](#).

4. If out of standard, replace heater thermostat.

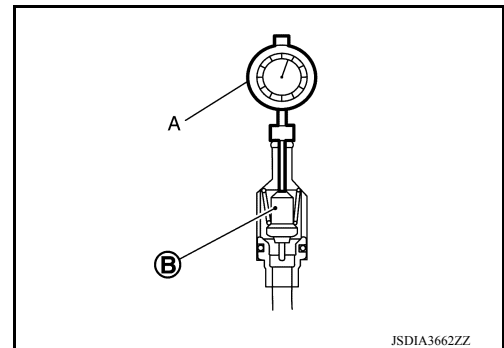

INSPECTION AFTER INSTALLATION

Start the engine, and check the joints for coolant leakage.

FLUID COOLER HOSE

< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

Exploded View

INFOID:000000009315566

Removal and Installation

INFOID:000000009315567

Inspection and Adjustment

INFOID:000000009315568

INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-426. "Inspection"](#).

ADJUSTMENT AFTER INSTALLATION

Adjust the CVT fluid level. Refer to [TM-427. "Adjustment"](#).

PLUG

< REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

PLUG


Description

INFOID:000000009268276

Replace the O-ring if oil leakage or exudes from the plug.

Exploded View

INFOID:000000009268277

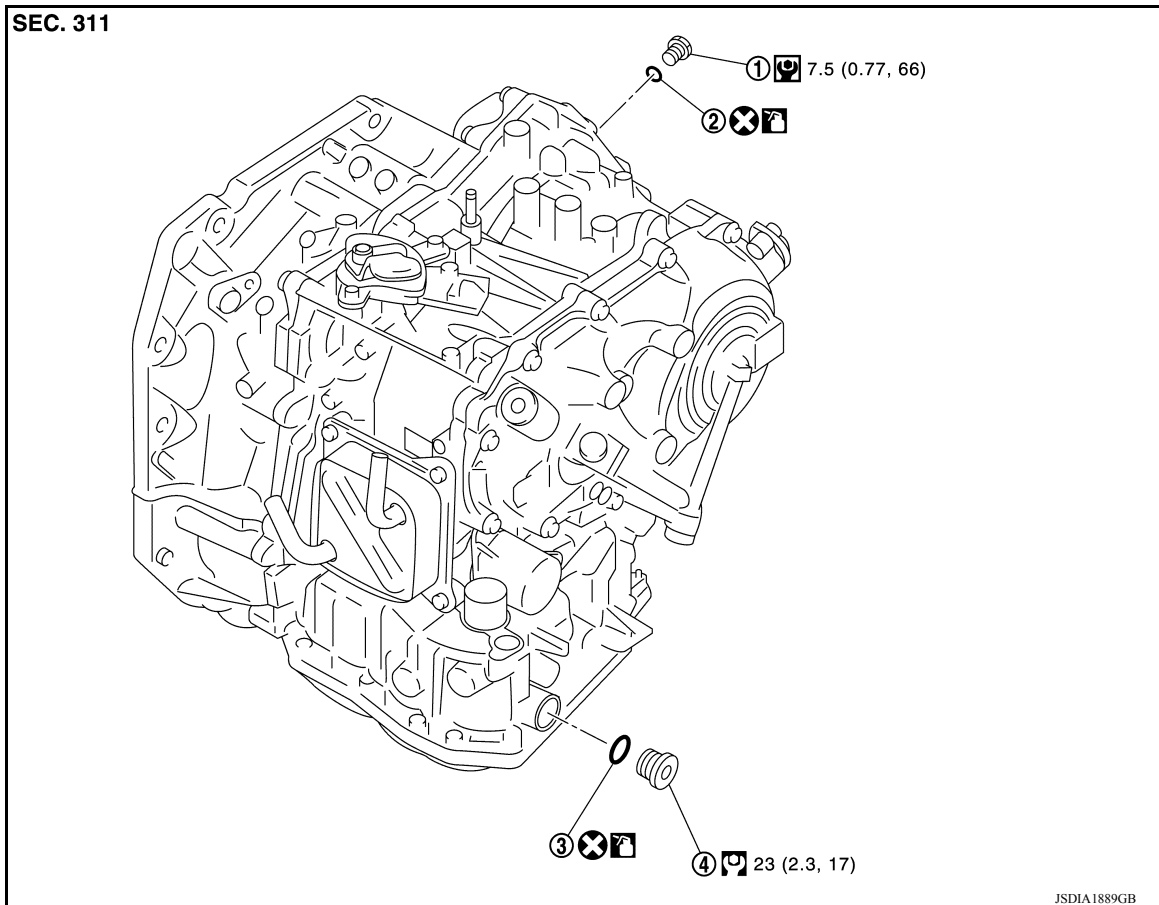

1. Plug

2. O-ring

3. O-ring

4. Plug

 Genuine NISSAN CVT Fluid NS-3

Removal and Installation

INFOID:000000009268278

REMOVAL

Remove the plugs and O-rings.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Do not reuse O-rings.
- Apply Genuine NISSAN CVT Fluid NS-3 to O-rings.

Inspection and Adjustment

INFOID:000000009268279

INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-426, "Inspection"](#).

ADJUSTMENT AFTER INSTALLATION


Adjust the CVT fluid level. Refer to [TM-427, "Adjustment"](#).

UNIT REMOVAL AND INSTALLATION

TRANSMISSION ASSEMBLY

Exploded View

INFOID:000000009268280

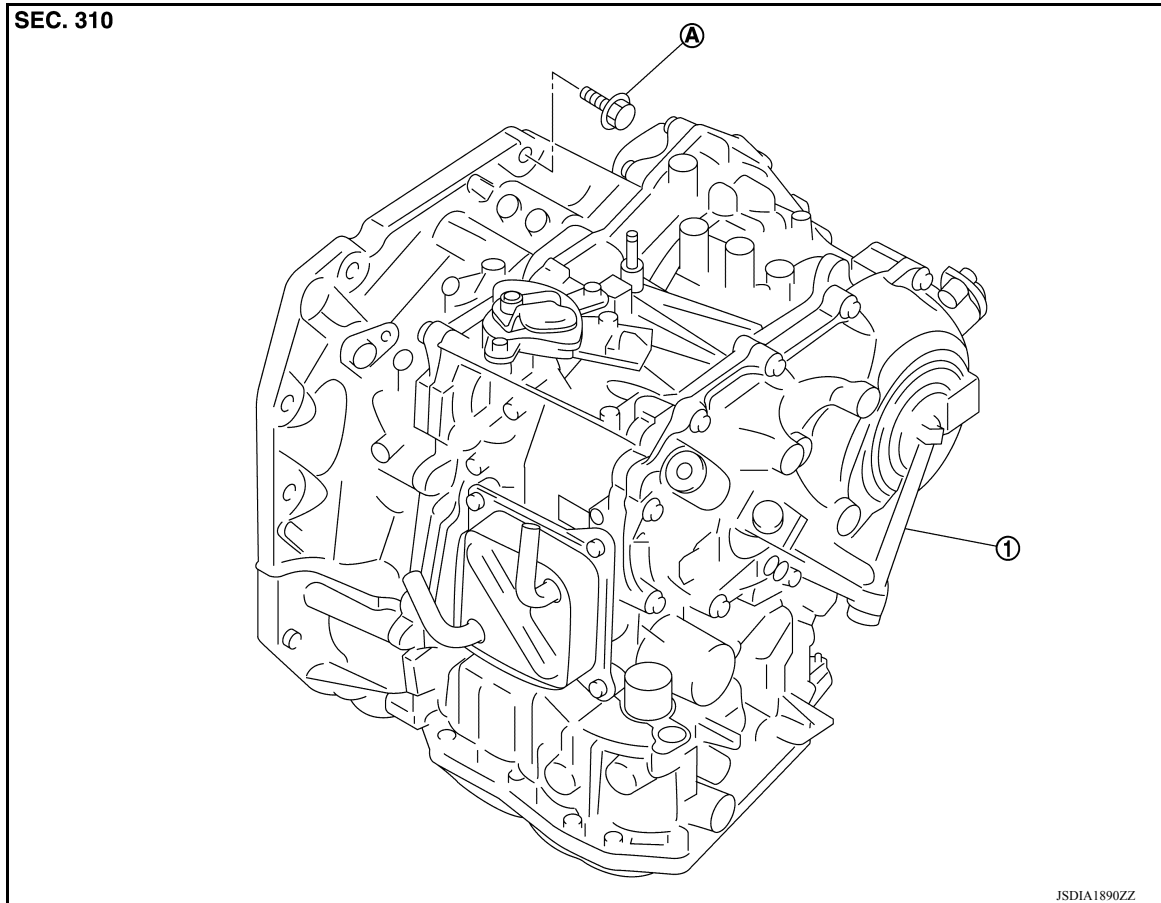

1. Transaxle assembly

A : For the tightening torque, refer to [TM-452. "Removal and Installation"](#).

Removal and Installation

INFOID:000000009268281

WARNING:

- Do not open the radiator cap or drain plug when the engine is hot. Hot liquid may spray out, causing serious injury.
- Perform these steps after the coolant temperature has cooled sufficiently.

NOTE:

- When replacing the TCM and transaxle assembly as a set, replace the transaxle assembly first and then replace the TCM. Refer to [TM-325. "Description"](#).
- When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

REMOVAL

1. Remove the battery. Refer to [PG-63. "Removal and Installation"](#).
2. Remove the TCM. Refer to [TM-437. "Removal and Installation"](#).
3. Remove the battery plate.
4. Remove the air duct and air cleaner case. Refer to [EM-25. "Removal and Installation"](#).
5. Disconnect the harness connectors from the following components and remove the harness from the transaxle.

TRANSMISSION ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[CVT: RE0F11A]


- CVT unit. Refer to [TM-258, "Removal and Installation Procedure for CVT Unit Connector"](#).
 - Transmission range switch
 - Primary speed sensor
 - Secondary speed sensor
 - Output speed sensor
 - Crankshaft position sensor. Refer to [EM-94, "Exploded View"](#).
 - Ground
6. Disconnect the control cable from the transaxle assembly. Refer to [TM-432, "Exploded View"](#).
 7. Disconnect the CVT water hose A and water hose C from engine side. [TM-447, "Removal and Installation"](#).
 8. Disconnect the heater hose from the water bypass pipe.
 9. Remove the left and right drive shafts. Refer to [FAX-15, "Removal and Installation"](#).
 10. Remove the drive shaft heat insulator.
 11. Remove starter motor. Refer to [STR-31, "Removal and Installation"](#).
 12. Remove the right and left fender protectors. Refer to [EXT-26, "Removal and Installation"](#).
 13. Rotate the crankshaft and remove the nuts that secure the drive plate to the torque converter.
CAUTION:
Rotate crankshaft clockwise (as viewed from the front of the engine).
 14. Remove the rear torque rod. Refer to [EM-82, "Exploded View"](#).
 15. Set a transmission jack under the transaxle assembly.
CAUTION:
Be careful not to contact the drain plug when setting the transmission jack.
 16. Set a transmission jack under the engine assembly.
CAUTION:
Be careful not to contact the drain plug when setting the transmission jack.
 17. Remove the left engine mounting insulator. Refer to [EM-82, "Exploded View"](#).
 18. Remove the left engine mounting bracket (LH). Refer to [EM-82, "Exploded View"](#).
 19. Remove the bolts that fasten the transaxle assembly and engine assembly.
 20. Remove the transaxle assembly from the vehicle.
CAUTION:
Do not drop the torque converter.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- **Do not reuse O-rings.**
- **Apply Genuine NISSAN CVT Fluid NS-3 to the O-rings.**
- When installing the transaxle assembly onto the engine assembly, check the engagement of the dowel pins (←).

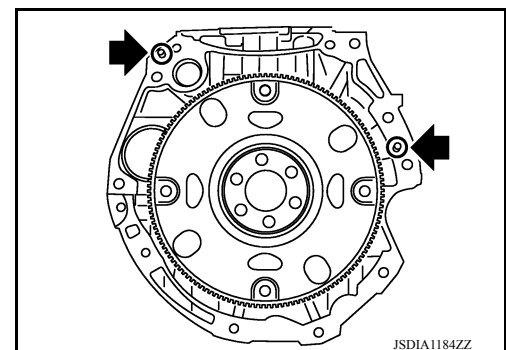


TRANSMISSION ASSEMBLY

[CVT: RE0F11A]

< UNIT REMOVAL AND INSTALLATION >


- When using suitable tool (A) for alignment, install it to the alignment stud bolt used to align the torque converter to the drive plate.

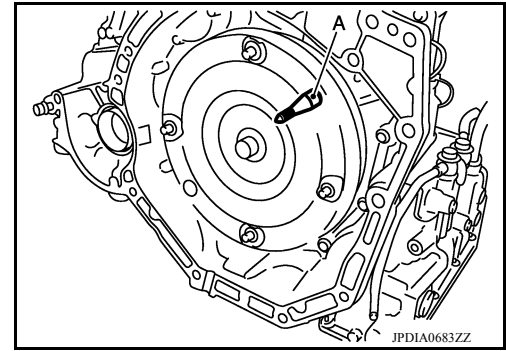

- Rotate the crankshaft so that the alignment hole (A) of drive plate aligns with the position of the torque converter alignment stud bolt.

CAUTION:

- Rotate the crankshaft clockwise (as viewed from the front of the engine).
- Be careful that torque converter stud bolts are aligned to the drive plate holes. Otherwise the stud bolts contact the drive plate.
- Insert the alignment stud bolt of torque converter into the alignment hole of the drive plate, aligning the drive plate holes with the torque converter stud bolts.

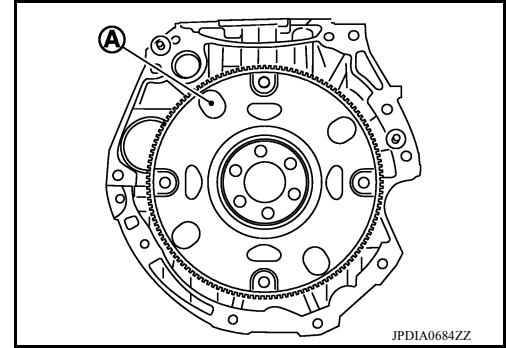

CAUTION:


Be careful not to strike the drive plate with the torque converter stud bolts.

- When installing the torque converter nuts, temporarily tighten the nuts. Then, after installing the engine and transaxle assembly bolts tighten the nuts to the specified torque.

Tightening torque : 51 N·m (5.2 kg-m, 38 ft-lb)

CAUTION:

- Rotate the crankshaft clockwise (as viewed from the front of the engine).
- Check the tightening torque for the crankshaft pulley bolts after the bolts fastening the drive plate and torque converter have been tightened and the crankshaft pulley bolts have been secured. Refer to [EM-47, "Removal and Installation"](#).
- Install the transaxle assembly and engine assembly bolts according to the following standards.

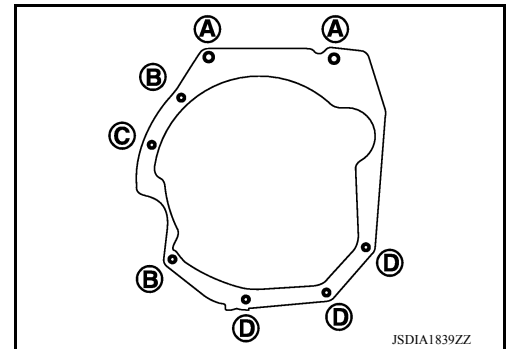

Bolt position	A	B	C	D
Direction of insertion	Transaxle assembly ⇒ Engine assembly	Engine assembly ⇒ Transaxle assembly		
Quantity	2	2	1	3
Nominal length [mm (in)]	40 (1.57)	44 (1.73)	69 (2.72)	49 (1.93)
Tightening torque N·m (kg-m, ft-lb)	48.0 (4.9, 35)			

Inspection and Adjustment

INFOID:000000009268282

INSPECTION BEFORE INSTALLATION

TRANSMISSION ASSEMBLY


< UNIT REMOVAL AND INSTALLATION >

[CVT: RE0F11A]

Check the distance (A) between the converter housing and torque converter.

- B : Scale
- C : Straightedge

Dimension (A) : [TM-457, "Torque Converter"](#)

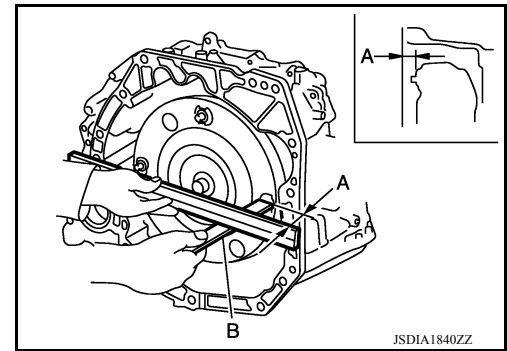

INSPECTION AFTER INSTALLATION

Check the following items:

- For CVT position, refer to [TM-430, "Inspection and Adjustment"](#).
- Before starting engine, check oil/fluid levels including engine coolant and engine oil. If less than required quantity, fill to the specified level. Refer to [MA-12, "Fluids and Lubricants"](#).
- Use procedure below to check for fuel leakage.
- Turn ignition switch ON (with engine stopped). With fuel pressure applied to fuel piping, check for fuel leakage at connection points.
- Start engine. With engine speed increased, check again for fuel leakage at connection points.
- Run engine to check for unusual noise and vibration.

NOTE:

If hydraulic pressure inside timing chain tensioner drops after removal and installation, slack in the guide may generate a pounding noise during and just after engine start. However, this is normal. Noise will stop after hydraulic pressure rises.

- Warm up engine thoroughly to make sure there is no leakage of fuel, exhaust gas, or any oils/fluids including engine oil and engine coolant.
- Bleed air from passages in lines and hoses, such as in cooling system.
- After cooling down engine, again check oil/fluid levels including engine oil and engine coolant. Refill to specified level, if necessary.
- Summary of the inspection items:

Item		Before starting engine	Engine running	After engine stopped
Engine coolant		Level	Leakage	Level
Engine oil		Level	Leakage	Level
Transmission/transaxle fluid	A/T and CVT Models	Leakage	Level/Leakage	Leakage
	M/T Models	Level/Leakage	Leakage	Level/Leakage
Other oils and fluids*		Level	Leakage	Level
Fuel		Leakage	Leakage	Leakage
Exhaust gas		—	Leakage	—

*Power steering fluid, brake fluid, etc.

ADJUSTMENT AFTER INSTALLATION

- Adjust the CVT fluid level. [TM-427, "Adjustment"](#).
- Perform "ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY". Refer to [TM-326, "Description"](#).

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[CVT: RE0F11A]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specification

INFOID:000000009268283

Transaxle model		RE0F11A
Stall torque ratio		1.91 : 1
Pulley ratio	Forward	2.200 – 0.550
	Reverse	2.200
Auxiliary gearbox gear ratio	1GR	1.821
	2GR	1.000
	Reverse	1.714
Counter gear		0.967
Final drive		3.882
Recommended fluid		Genuine NISSAN CVT Fluid NS-3*1
Fluid capacity		Approx. 6.9 liter (7-1/4 US qt, 6-1/8 Imp qt)*2

CAUTION:

- Use only Genuine NISSAN CVT Fluid NS-3. Do not mix with other fluid.
- Use only Genuine NISSAN CVT Fluid NS-3. Using transmission fluid other than Genuine NISSAN CVT Fluid NS-3 will damage the CVT, which is not covered by the (NISSAN new vehicle limited) warranty.

*1: Refer to [MA-12, "Fluids and Lubricants"](#).

*2: The CVT fluid capacity is the reference value.

Shift Characteristics

INFOID:000000009268284

Unit: rpm

Throttle position	Shift pattern	Engine speed	
		At 40 km/h (25 MPH)	At 60 km/h (37 MPH)
2/8	"D" position (Overdrive control OFF)	1,400 – 2,700	1,500 – 3,100
	"D" position (Overdrive control ON)	1,500 – 2,700	2,400 – 3,200
	"L" position	2,800 – 3,600	3,800 – 4,600
8/8	"D" position (Overdrive control OFF)	3,900 – 4,700	4,500 – 5,300
	"D" position (Overdrive control ON)	3,900 – 4,700	4,500 – 5,300
	"L" position	3,900 – 4,700	4,500 – 5,300

CAUTION:

Lock-up is engaged at the vehicle speed of approximately 10 km/h (11 MPH) to 90 km/h (56 MPH).

Stall Speed

INFOID:000000009268285

Unit: rpm

Stall speed	2,400 – 2,770
-------------	---------------

Line Pressure

INFOID:000000009268286

Unit: MPa (kg/cm², psi)

Shift selector position	Engine speed	Line pressure
"P" and "N"	At idle	0.50 (5.1, 72.5)
	At stall	4.93 (50.3, 714.9) – 5.43 (55.4, 787.4)
"R" and "D"	At idle	0.50 (5.1, 72.5) – 1.51 (15.4, 219)
	At stall	4.93 (50.3, 714.9) – 5.43 (55.4, 787.4)

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[CVT: RE0F11A]

Torque Converter

INFOID:000000009268287

Distance (A) between the converter housing and torque converter	16.2 mm
---	---------

Heater Thermostat

INFOID:000000009268288

Standard

Valve lift	More than 5.0 mm (0.197 in)
------------	-----------------------------

Reference value

Valve opening temperature	71°C (160°F)
Minimum valve lift	5.0 mm/85°C (0.197 in/203°F)

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P